

3.0GHz Spectrum Analyzer

GSP-830

USER MANUAL

GW INSTEK PART NO. 82SP-83000MH1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Good Will Instrument Co., Ltd.

No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

| | |
|-------------------------------------|-----------|
| SAFETY INSTRUCTIONS | 6 |
| Safety Symbols | 6 |
| Safety Guidelines | 6 |
| GETTING STARTED | 9 |
| GSP-830 Characteristics | 10 |
| Package Contents | 11 |
| Front Panel Overview | 13 |
| Rear Panel Overview | 16 |
| Display Overview | 18 |
| Tilt Stand & Power Up | 20 |
| Error Check | 22 |
| Functionality Check | 23 |
| QUICK REFERENCE | 25 |
| Operation Shortcuts | 26 |
| Menu Tree | 31 |
| Preset Contents | 40 |
| FREQUENCY/SPAN | 41 |
| View Signal (Center and Span) | 42 |
| View Signal (Start and Stop) | 44 |
| Full/Zero Span | 46 |
| Recall the Last Span Setting | 47 |
| AMPLITUDE | 48 |
| Set Vertical Scale | 49 |
| Amplitude Correction | 52 |
| Use Pre-Amplifier (Optional) | 56 |
| Set Input Impedance | 57 |
| AUTOSET | 58 |
| How Autoset Works | 59 |
| Run Autoset | 60 |
| Limit vertical search range | 61 |
| Limit horizontal view range | 61 |
| MARKER | 62 |
| Activate/de-activate marker | 63 |
| Move marker | 65 |
| Show Markers in Table | 67 |

| | |
|---|------------|
| PEAK SEARCH | 68 |
| Search Signal Peak | 69 |
| Show Peak Table | 71 |
| TRACE | 73 |
| View traced waveform | 74 |
| Move Marker to Trace | 76 |
| Run Trace Math | 78 |
| Select Signal Detection Mode | 80 |
| POWER MEASUREMENT | 82 |
| ACPR Measurement | 83 |
| OCBW Measurement | 86 |
| N dB Measurement | 88 |
| Phase Jitter Measurement | 89 |
| LIMIT LINE | 90 |
| Edit Limit Line | 91 |
| Run Pass/Fail test | 94 |
| BANDWIDTH | 95 |
| Select RBW (Resolution BandWidth) | 96 |
| Select VBW (Video BandWidth) | 98 |
| RBW/VBW Auto Mode Contents | 99 |
| Set Sweep time | 101 |
| Average Waveform | 101 |
| TRIGGER | 103 |
| Select Trigger Type | 104 |
| Select Trigger Mode | 105 |
| Set Trigger Delay | 106 |
| DISPLAY | 107 |
| Change Display Brightness | 108 |
| Activate Display Line | 108 |
| Enter Display Title | 109 |
| Use Split Display | 110 |
| Use VGA Output | 111 |
| Save Display Image to USB Flash Drive | 111 |
| FILE | 113 |
| File Location and File Type | 114 |
| Copy File | 115 |
| Delete File | 118 |
| Rename File | 120 |






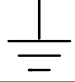
| | |
|---|------------|
| Save Display Image to USB Flash Drive | 121 |
| PRESET | 123 |
| SYSTEM | 124 |
| Save/Recall Panel Setting | 125 |
| Configure Communication Interface | 126 |
| View System Information | 128 |
| Set Date/Time | 132 |
| Synchronize GSP-830 with Other Devices..... | 133 |
| Select Language | 135 |
| Use Auxiliary Signal | 135 |
| Enter Service Operation | 135 |
| SEQUENCE | 136 |
| Edit Sequence | 137 |
| Run Sequence | 140 |
| TRACKING GENERATOR | 142 |
| DEMODULATOR | 144 |
| EMI FILTER | 146 |
| BATTERY / DC OPERATION | 148 |
| Battery Operation..... | 148 |
| DC Operation | 149 |
| PC SOFTWARE | 150 |
| Install Software | 151 |
| Connect Software | 152 |
| Use Software | 154 |
| REMOTE CONTROL | 157 |
| Configure Interface | 158 |
| Command Syntax | 160 |
| Status Registers | 161 |
| Command Set | 165 |
| FAQ | 176 |
| Appendix | 177 |
| GSP-830 Specifications | 177 |
| Optional Items Specifications..... | 179 |
| Declaration of Conformity..... | 181 |
| INDEX | 182 |

S SAFETY INSTRUCTIONS


This chapter contains important safety instructions that you must follow when operating the GSP-830 and when keeping it in storage. Read the following before operating this instrument to ensure your safety and to keep the GSP-830 in best condition.

Safety Symbols

These safety symbols may appear in this manual or on the GSP-830.

| | | |
|---|----------------|--|
|  | WARNING | Warning: Identifies conditions or practices that could result in injury or loss of life. |
|  | CAUTION | Caution: Identifies conditions or practices that could result in damage to the GSP-830 or to other properties. |
|  | DANGER | High Voltage |
|  | | Attention Refer to the Manual |
|  | | Protective Conductor Terminal |
|  | | Earth (ground) Terminal |

Safety Guidelines

- General Guideline
- | | |
|---|--|
|  <p>CAUTION</p> | <ul style="list-style-type: none"> • Make sure that the RF input level and the Tracking Generator output reversed power level do not exceed +30dBm. • Do not supply an input signal to the Tracking Generator output. • Do not place any heavy object on the GSP-830. • Avoid severe impacts or rough handling that leads to damaging the GSP-830. • Do not discharge static electricity onto the GSP-830. • Use only mating connectors, not bare wires, for the terminals. • Do not block or obstruct the cooling fan vent opening. • Do not perform measurement at a power generating source or building installation site (Note below). • Do not disassemble the GSP-830 unless you are technically qualified. |
|---|--|

(Note) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The GSP-830 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.

Power Supply



WARNING

- AC Input voltage: 100 to 240 V AC, 50/60Hz, 90W maximum
- DC Input voltage: 12V DC, 40W maximum
- The power supply voltage should not fluctuate more than 10%.
- Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.

Battery



CAUTION

- Rating: 11.1V lithium-ion battery pack x 2
- Turn off the main power switch before installing or taking out the battery packs.

Fuse



WARNING

- Fuse type: T1.6A/ 250V, time-delay, 5x20mm glass
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before fuse replacement.
- Make sure the cause of fuse blowout is fixed before fuse replacement.

Cleaning the GSP-830

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the GSP-830.
- Do not use chemicals or cleaners containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: < 90%
- Altitude: < 2000m
- Temperature: 18°C to 28°C

Storage Environment

- Location: indoor
- Relative humidity: < 85%
- Temperature: 0°C to 40°C

(Note) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. The GSP-830 falls under degree 2. Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Power cord for the United Kingdom

When using the GSP-830 in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead / appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth

Blue: Neutral

Brown: Live (Phase)



As the colours of the wires in mains leads may not correspond with the colour markings identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with the letter E or by the earth symbol \oplus or coloured Green or Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, cable of 0.75mm^2 should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any moulded mains connector that requires removal /replacement must be destroyed by removal of any fuse & fuse carrier and disposed of immediately, as a plug with bared wires is hazardous if engaged in live socket. Any re-wiring must be carried out in accordance with the information detailed on this label.

G ETTING STARTED

This chapter describes the GSP-830 in a nutshell, including its main features, package contents, and front / rear / display panel introduction. After going through the overview, follow the Power-up sequence and Functionality check section to properly setup the GSP-830.



| | | |
|---------------------------|-------------------------------|----|
| GSP-830 package | GSP-830 Characteristics | 10 |
| | Package Contents | 11 |
| Panel introduction | Front Panel Overview | 13 |
| | Rear Panel Overview | 16 |
| | Display Overview | 18 |
| | Status Icon overview | 19 |
| Setup | Tilt stand | 20 |
| | Power Up | 20 |
| | Error Check | 22 |
| | Functionality Check | 23 |

GSP-830 Characteristics


The GSP-830 is a mid-to-high range digital storage spectrum analyzer suitable for a wide variety of applications, such as production testing, research, and field verification.

| | |
|---|--|
| Performance | <ul style="list-style-type: none"> • Low noise floor: typical -117dBm @1GHz, 3k RBW • Fast sweep: 50ms to 25.6s • Compact size: 330(W) x 170(H) x 340(D) mm • Light weight: approx. 6kg |
| Features | <ul style="list-style-type: none"> • Autoset • 5 markers with delta marker and peak functions • 3 traces • Power measurements: ACPR, OCBW, N-dB, Phase Jitter • Pass/fail test with limit line editing • Split windows with separate settings • Sequence programming (user-defined macro) • 6.4" TFT color LCD, 640 x 480 resolution • Phone output (available in the optional Demodulator) • AC/DC/battery multi-mode power operation |
| Interface | <ul style="list-style-type: none"> • USB host for storage device connection • USB slave/RS232/GPIB(optional) for PC software connection and remote control • Direct VGA display image output • Reference signal input/output for synchronization • External trigger signal input |
| Optional Items (complete list on the next page) | <ul style="list-style-type: none"> • Tracking Generator • Pre-amplifier GAP-801 (10dB typical, 9kHz to 6GHz) • Pre-amplifier GAP-802 (20dB typical, 9kHz to 3GHz) • ± 1ppm stability module • EMI filter with 9kHz/120kHz RBW and 6-dB bandwidth • Battery pack • Demodulator • 300Hz/10kHz/100kHz RBW • GPIB interface |

Package Contents

Contact your dealer in case of missing items. The detailed specifications are listed from page 177.

GSP-830

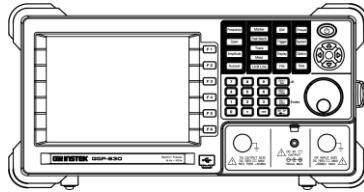

Standard accessories

- Power cord
- USB cable (Type A to Type B) for PC connection
- User Manual (this document)

Optional items

Option01 Tracking Generator (factory installed)

Option02 Battery Pack

Option03 ± 1 ppm Stability Module (factory installed)

Option04 300Hz RBW (factory installed)

Option05 9kHz & 120kHz RBW (also called EMI Filter, factory installed)

Option06 10kHz & 100kHz RBW (factory installed)

Option07 Demodulator (factory installed)

Option08 GPIB Interface (factory installed)

Note: Among Option 05, 06, and 07, only one can be installed at a time.

Optional accessories

ADP-001 BNC(J/F) to N(P/M) Adaptor

ADP-002 SMA(J/F) to N(P/M) Adaptor

ADP-101 BNC(J/F)75 Ω to BNC(P/M)50 Ω Adaptor

ATA-001 BNC Antenna

ATN-100 10dB Attenuator N(J/F)-N(P/M)

GAK-001 Terminator 50 Ω N(P/M)

GAK-002 Cap with Chain N(P/M)

GAP-801 Pre-Amplifier, 9kHz to 6GHz, 10dB typical

GAP-802 Pre-Amplifier, 9kHz to 3GHz, 20dB typical

GKT-001 General Kit Set

ADP-002: SMA (J/F) to N (P/M) Adaptor x 2

ATN-100: 10dB Attenuator x 1

GTL-303: RF Cable Assembly (RD316, SMA(P),60cm) x2

GSC-002: Kit box

GKT-002 CATV Kit Set

ADP-001: BNC (J/F) to N (P/M) Adaptor x 2

ADP-101: BNC(P/M) 50Ω to BNC(J/F) 75Ω adaptor x2

GTL-304: RF Cable Assembly (RG223,N(P)-N(J),30cm) x2

GSC-003: Kit box

GKT-003 RLB Kit Set

GAK-001: Termination, N(P), 50Ω x 1

GAK-002: Cap with Chain, N(P) x 1

GTL-302: RF Cable Assembly (RG223, N(P), 30cm) x2

GSC-004: Kit box

GKT-006 EMI Probe Set

ADP-01: Adaptor, BNC(J/F) - N(P/M) x 1

ADP-02: Adaptor, SMA(J/F) – N(P/M) x 1

ANT-01: 6cm Loop, H-Field Probe x 1

ANT-02: 3cm Loop, H-Field Probe x 1

ANT-03: 6mm Loop, H-Field Probe x 1

PR-03: Touch Passive Probe, < 3GHz x 1

Test Lead: RF Cable Assembly BNC(P/M)-BNC(P/M)x1

Test Lead: RF Cable Assembly SMA(P/M)-SMA(P/M)x1

GRA-404 19 Inch Rack Adaptor Panel, 4U

GSC-001 Soft Carrying Case

GTL-301 RF Cable Assembly, RG223, N(P/M), 1000mm

GTL-302 RF Cable Assembly, RG223, N(P/M), 300mm


GTL-303 RF Cable Assembly, RD316, SMA(P/J), 600mm

GTL-304 RF Cable Assembly, RG223, N(P/M) to N(J/F),
300mm

GTL-401 DC Power Line with Lighter Plug, 5A

RLB-001 Return Loss Bridge

Front Panel Overview

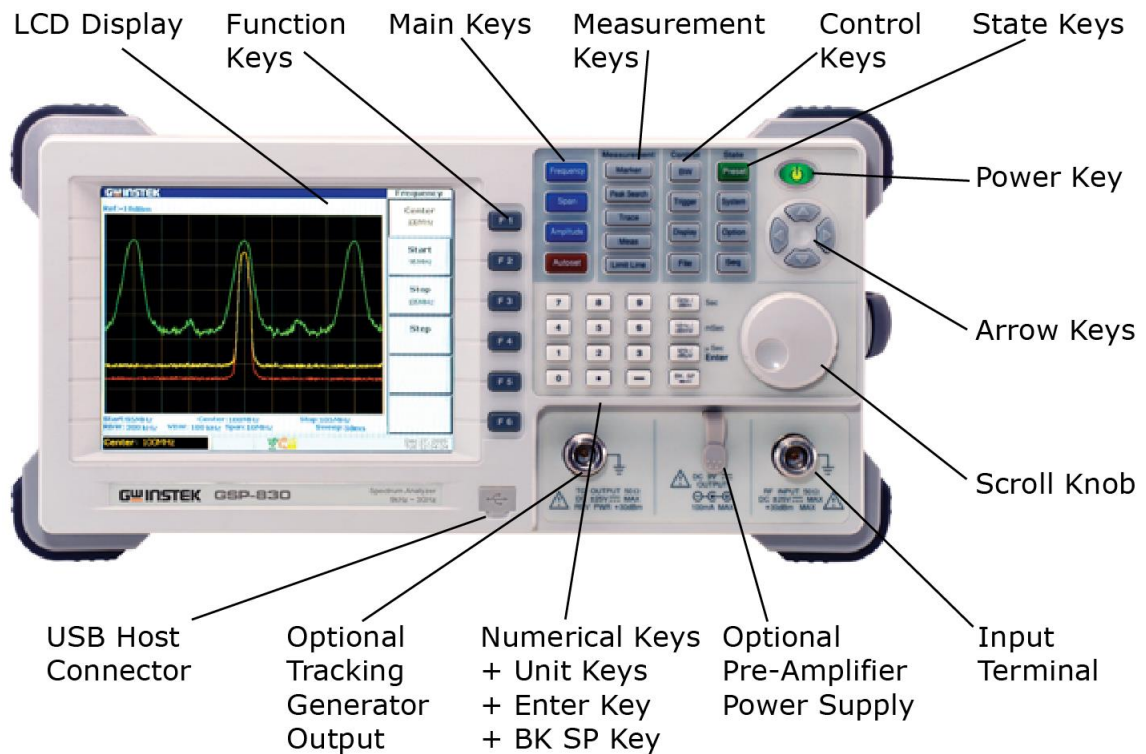

LCD Display TFT Color display, 640x480 resolution. For display setting details, see page107.

F1 to F6 Function Keys **F 1** to **F 6** Soft keys linked to the menu that appears on the right side of the display.

Main Keys

- Frequency** **Frequency key** (page41), together with **Span key**, configures the horizontal (frequency) scale.
- Span** **Amplitude key** (page48) configures the vertical (amplitude) scale and input impedance.
- Amplitude** **Autoset key** (page58) automatically searches the peak signal with maximum amplitude and displays it with appropriate horizontal and vertical scales.
- Autoset**

Measurement keys




Marker key (page62) activates markers and places them on specified locations.
Peak Search key (page68) searches peak signals and configures peak ranges/orders.
Trace key (page73) activates trace signals, configures them, and runs trace math operations.
Measurement key (page82) configures and runs 4 types of Power Measurements: ACPR, OCBW, N-dB, and Phase Jitter.
Limit Line key (page90) configures high/low limit lines and runs the pass/fail test.

Control keys




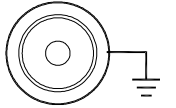
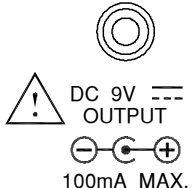


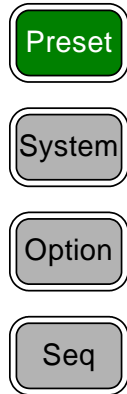


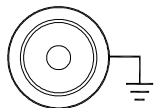
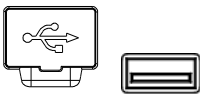


BW key (page95) configures the RBW/VBW width, sweep time length, and waveform averaging number.
Trigger key (page103) selects the trigger type, sets the trigger running mode / delay / frequency, and activates the external trigger input.
Display key (page107) configures the LCD dimmer, edits and shows the display line and title, and activates split windows.
File key (page113) saves/recalls/deletes the trace waveform, limit line, amplitude correction, sequence, and panel settings. Display images may be saved to a storage device via the front panel USB port.


State Keys



Preset key (page40or123) resets the GSP-830 to a predefined state.
System key configures the date/time (page132), GPIB/RS232C interface (page126), and language (page135). It also shows the system information (page128) and self test result (page131), and saves/recalls panel settings (page125).
Option key configures the Tracking Generator (page142), Demodulator (page144), battery (page148), and external reference frequency (page133).
Seq key (page136) edits and runs sequences (user-defined macro).

| | | |
|--|---|---|
| <p>Power Key</p> |  | <p>Power key selects the power state between the standby mode (Red LED on) and power on mode (Green LED on). To turn on/off the main power, use the power switch on the rear panel. See page20 for the power up sequence.</p> |
| <p>Arrow Keys</p> |  | <p>Arrow keys select parameters in various occasions; Up/Right for increasing, Down/Left for decreasing.</p> |
| <p>Scroll Knob</p> |  | <p>Scroll knob sets or selects parameters in various occasions. In many cases, it works in tandem with the Arrow keys.</p> |
| <p>Input Terminal</p> |  <p>RF INPUT 50 Ω DC ±25V --- MAX +30dBm MAX</p> | <p>Input terminal accepts RF input signals.</p> <ul style="list-style-type: none"> • Maximum +30dBm • Input impedance 50Ω |
| <p>Pre-Amplifier Power Supply Terminal</p> |  <p>DC 9V --- OUTPUT 100mA MAX.</p> | <p>Pre-amplifier power supply terminal provides power for the optional GAP-801 or GAP-802 pre-amplifier. For details, see page56.</p> |
| <p>Numerical Keys Unit Keys</p> | <p>Numerical keys set various parameters. In many cases, they work in tandem with the Arrow keys and Scroll knob.</p> | |
| <p>Enter Key BK SP key</p> | <p>Example</p> | <p>Key sequence</p> |
| | <p>9kHz</p> |  |
| | <p>-3.8dB</p> |  |
| | <p>1.0mS</p> |  |
| | <p>9 + Enter</p> |  |
| | <p>Correction</p> |  |
| <p>Optional TG Output Terminal</p> |  <p>TG OUTPUT 50 Ω DC ±25V --- MAX</p> | <p>Outputs the optional Tracking Generator signal. Reversed power should not exceed +30dBm. For details, see page142.</p> |
| <p>USB Host Connector</p> |  | <p>Via the USB port (typeA male), display images may be saved to or recalled from USB flash drives For details, see page113.</p> |

Rear Panel Overview

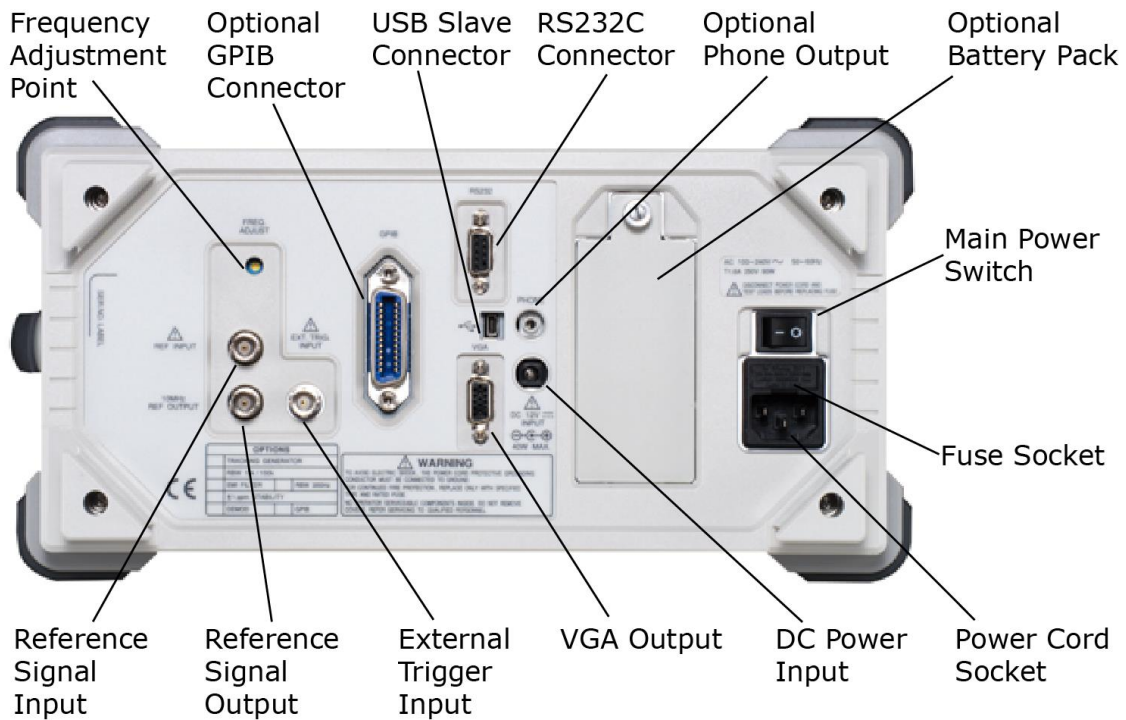


Frequency Adjustment Point




Adjusts the internal reference signal frequency; for service operation only.

 GPIB Connector (Optional)




Optional 24 pin female GPIB connector for remote control (page157). For interface setting details, see page127.

 USB Connector



Type B mini connector for PC software connection (page150) and remote control (page157). For interface setting details, see page126.

 RS232C Connector




9 pin female connector for PC software connection (page150) and remote control (page157). For interface setting details, see page126.

Phone Output (Optional)




3.5mm phone jack for audio output. Available when the optional Demodulator is installed. For details, see page144.

 Battery Pack
(Optional)




Stores the optional battery packs for portable usage. For details, see page148.

Main Power
Switch,
Fuse Socket,
Power Cord
Socket

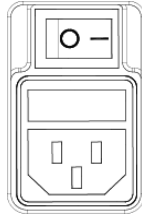


The main power switch turns on/off the GSP-830 main power. For the power up sequence, see page20.
The fuse socket stores the main fuse, T1.6A 250V, time-delay, 5x20mm glass.
The power cord socket accepts the AC power cord, 100 to 240V, 50/60Hz.
For power and fuse related safety instructions, see page6.

 DC Power Input




DC power input, 12V, 40W max rating. Accepts a standard 2.1mm DC plug or the optional GTL-401 DC power cord. For details, see page149.

 VGA Output




15pin, female VGA connector which outputs 640 x 480 resolution display image to an external monitor. For details, see page111.

External Trigger
Input

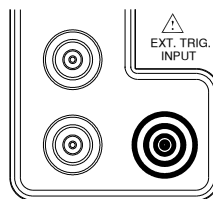


Accepts a trigger signal from an external device. For details, see page103.

Reference Output

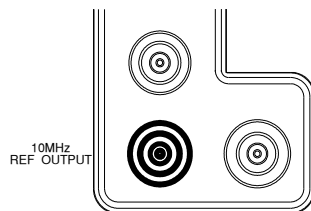


Outputs +5V TTL, 10MHz reference signal used for synchronizing the GSP-830 with an external device. For details, see page133.

Reference Input

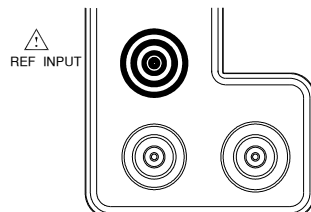

Accepts a TTL signal from an external device, used for synchronization with the GSP-830. For details, see page134.



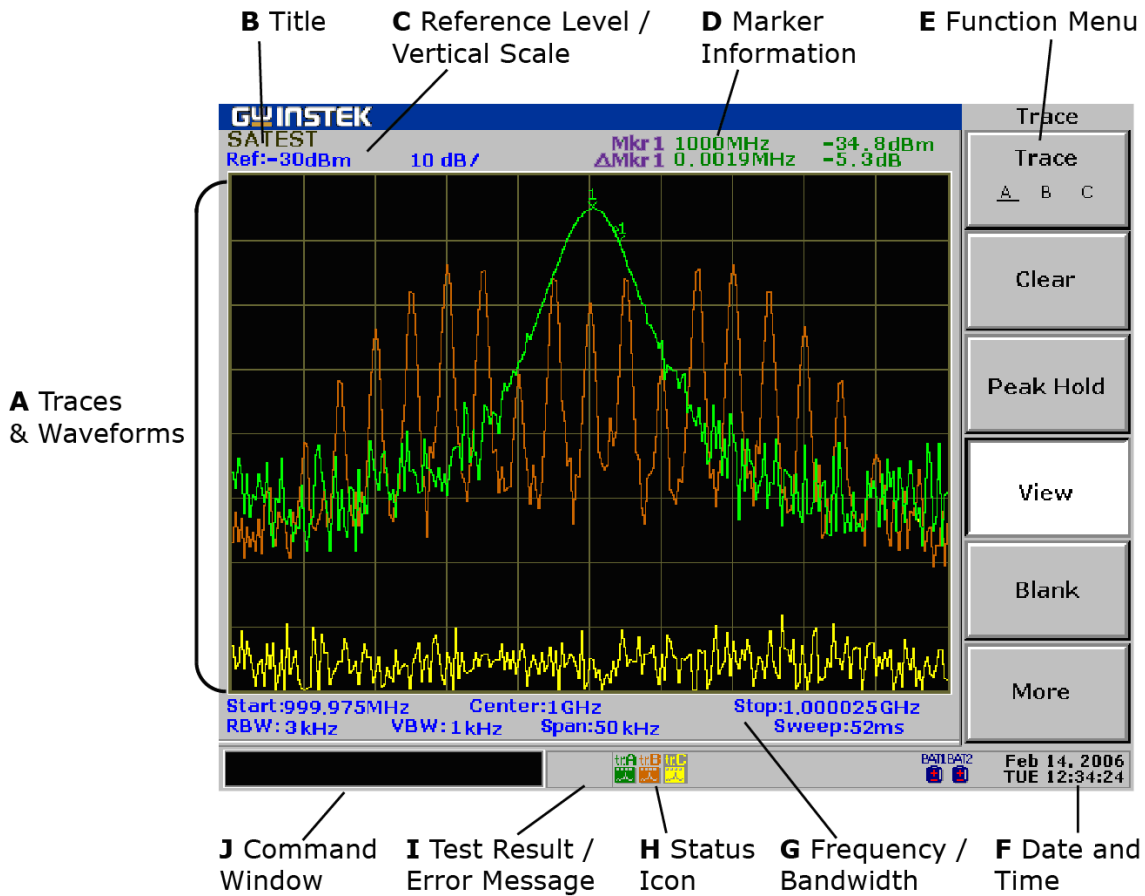



















Display Overview



| | | |
|---|-----------------------|---|
| A | Traces & Waveforms | Input signals and traces that appear within the main display area. Input signal & TraceA: Green, TraceB: Red, TraceC: Yellow. For trace details, see page73. |
| B | Title | The title of the current display. For details, see page109. |
| C | Reference Level/Scale | The reference amplitude level and vertical scale. For amplitude details, see page48. |
| D | Marker Information | The frequency and amplitude for the active marker / delta marker. For marker details, see page62. |
| E | Function Menu | The menu associated with F1 to F6 function keys on the right side of the display. |
| F | Date and Time | Current date and time. For setup details, see page132. |
| G | Frequency/Bandwidth | Upper line: shows the start/stop frequency (page44) and center frequency (page42). Lower line: shows the VBW (video bandwidth - page98), RBW (resolution bandwidth - page96), frequency span (page42), and sweep time (page101). |

| | | |
|---|-------------------------------|--|
| H | Status Icon | The icons showing various system conditions. See the below Status Icon overview for details. |
| I | Test Result/ Error Message | The result of the pass/fail test using limit lines (page94) or the system error messages (page128). |
| J | Command Window | Shows the current status of the selected menu or the entered parameters such as frequency and amplitude. |




Status Icon overview

| | | |
|----------------------------|---|--|
| Amplitude (page48) |  | External gain on, amplitude correction on, Input impedance 75Ω, Input impedance calibration on |
| Peak Search (page68) |  | Peak track on |
| Trace (page73) |  TraceA:green,  B:red,  C:yellow | |
| |  | Clear mode |
| |  | Average on |
| |  | Peak hold mode |
| |  | View mode, trace math |
| BW (page95) |  | RBW, VBW manual mode |
| |  | Sweep time manual mode |
| Trigger (page103) |  | Video trigger mode |
| |  | External trigger signal on |
| Battery level (page148) |  | Fully charged |
| |  | 50% to 25% |
| |  | 75% to 50% |
| |  | Less than 25% |
| Options |  | TG normalization activated (page142) |
| |  | External reference signal used (page133) |
| |  | ±1ppm stability module installed (page133) |
| Sequence(page136) |  | Sequence currently running |
| USB |  | USB flash drive is detected (page114), or USB remote control connection is detected (page158) |




Tilt Stand & Power Up

Tilt stand

Low angle

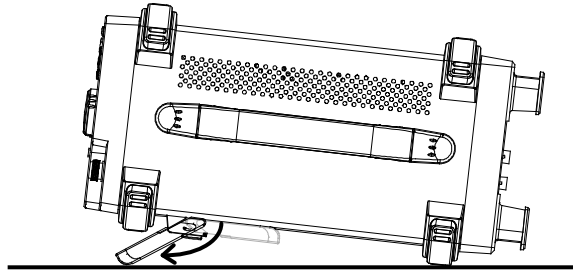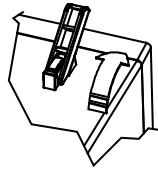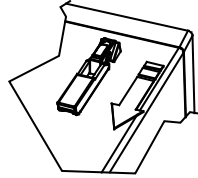


High angle

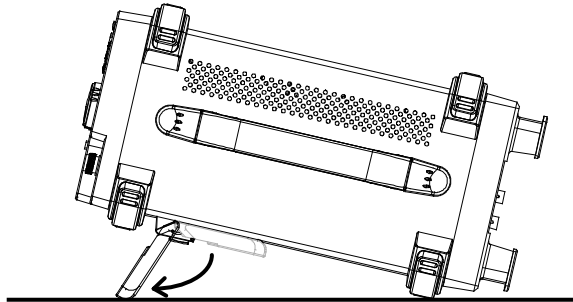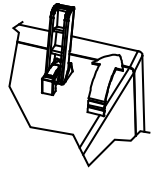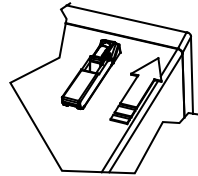


Power Up

 1. Connect the power cord to the rear panel socket.



 2. Turn on the main power switch.



3. The ON/STBY key on the front panel turns red.



4. Press the ON/STBY key. Its color turns green and the display becomes active.



Last Stored Settings

At the initial state, only the F3 menu “Last stored state” becomes available. For details of storing the panel settings, see page125.




To recall the last stored panel settings:

Press F3. One of the panel settings from S1 – S10, which was stored the last time, will be recalled.

To use the GSP-830 without recalling the last stored panel settings:

Press any other function keys (see below).

List of function keys

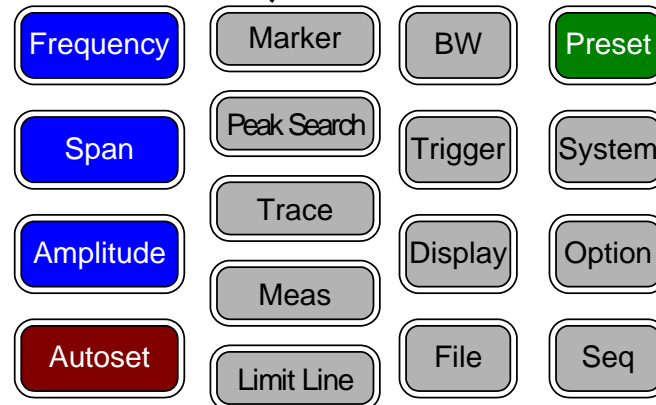

Note

Ignore the error message that might appear at the bottom of the display when powering up the GSP-830. The message indicates that internal configurations are ongoing. For error message details, see page22.

Error Check

This section assumes that the GSP-830 is already powered up (page20).

1. Check system error Check for error messages at the bottom of the display, next to the command window.

Center : 1.5GHz **EXT Unlock** (EXT Unlock)

Contact the service center if any of the following messages remains in the display.

- | | |
|-------------------|--|
| Amp Uncal | <ul style="list-style-type: none"> Inappropriate RBW or VBW is selected. Frequency is less than 15MHz and amplitude is less than -30dBm. |
| EXT Unlock | External reference input is not working properly. |
| LO1 Unlock | Local oscillator 1 is not working properly. |
| LO3 Unlock | Local oscillator 3 is not working properly. |
| Med Unlock | ±1ppm stability signal is not working properly. Appears only when the optional ±1ppm stability module is installed. |
| Ref Unlock | Internal reference signal is not working properly. |

2. Check self test result View the GSP-830's self-diagnosis test result. Press the System key → F6 (More) → F2 (Self Test).



The test automatically runs at each power-up. The underline shows the result, pass or fail. Contact the service center if any of the items fails.

- | | | |
|----------------------------------|------------|--|
| GPIB <u>Pass</u> Fail | F 1 | GPIB module connectivity (available only when installed) |
| Flash <u>Pass</u> Fail | F 2 | Internal Flash memory for storing the system code/data |

| | | |
|---------------------------|------------|--|
| SDRAM <u>Pass</u> Fail | F 3 | Internal SDRAM for running the system code |
|---------------------------|------------|--|

| | | |
|-------------------------|------------|--|
| RTC <u>Pass</u> Fail | F 4 | Internal real time clock for configuring the date and time |
|-------------------------|------------|--|


Functionality Check

- This section assumes that the GSP-830 is already powered up (page20).
- Before operating the GSP-830 in a new environment, run these steps to make sure it is functionally stable.

1. Feed a signal Input a signal to check if the GSP-830 correctly shows the waveform on the display. There are two ways to feed an input signal.


Feeding the DUT signal

If the DUT is already available, connect the output signal to the RF input terminal. The signal amplitude must be less than +30dBm.

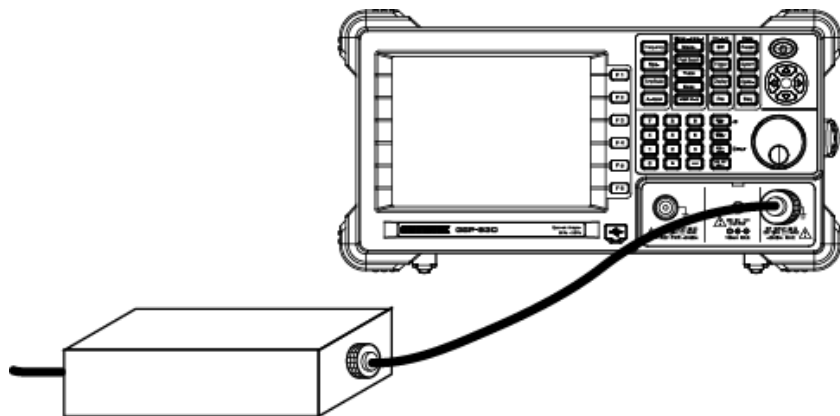

Feeding the internal auxiliary signal

 You can also use the internal auxiliary signal, 100MHz/-30dBm. No cable connection is required in this case. Activate the signal by pressing the System key → F4 (Aux Sig On).



2. View the signal

Press the Autoset key → F1 (Autoset).




The GSP-830 automatically configures the horizontal and vertical scales and shows the signal on the display.

Check the peak frequency and amplitude that appear on the top right corner of the display. To move the marker, use the

Scroll knob  or Left/Right keys .

Internal auxiliary signal, -30dBm @ 100MHz

Peak frequency/amplitude

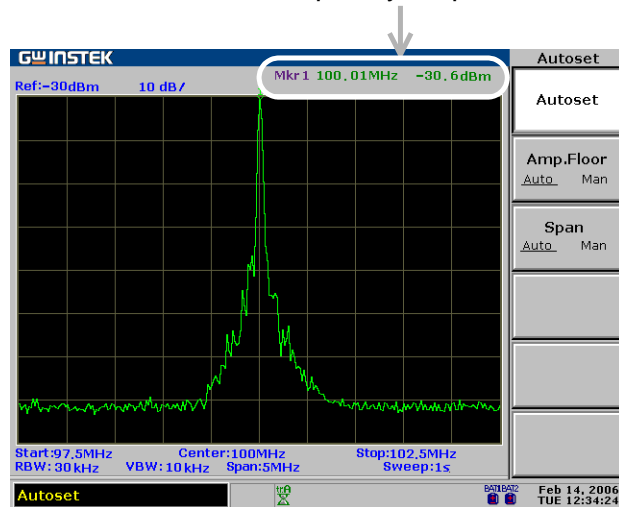

If the displayed value does not match the actual signal, contact the service center.

QUICK REFERENCE

| | |
|------------------|---|
| Shortcuts | Power-on screen.....26 |
| | Frequency and Span26 |
| | Amplitude.....26 |
| | Autoset.....26 |
| | Marker.....26 |
| | Peak Search27 |
| | Trace.....27 |
| | Power Measurement.....27 |
| | Limit Line28 |
| | Bandwidth28 |
| | Trigger28 |
| | Display29 |
| | File29 |
| | System.....29 |
| | Option.....30 |
| | Sequence.....30 |
| Menu Tree | Power-on screen.....31 |
| | Frequency, Span, Autoset, Amplitude(1 of 2)31 |
| | Amplitude (2 of 2), Marker.....32 |
| | Peak Search, Trace.....33 |
| | Measurement, Limit Line34 |
| | BW, Trigger, Display.....35 |
| | File (1 of 2)36 |
| | System.....38 |
| | Option, Sequence.....39 |
| Preset | Preset Contents40 |

Operation Shortcuts

Here is the list of available operations and their shortcuts.

Power-on screen

| | |
|---------------------------------|----|
| Recall the last stored settings | F3 |
|---------------------------------|----|

Frequency and Span

| | |
|----------------------------------|-------------------------------|
| Set Center Frequency and Span | Frequency→F1→Span→F1 |
| Set Start and Stop Frequency | Frequency→F2(Start), F3(Stop) |
| Set Frequency Step | Frequency→F4 |
| Activate Full Span (3.0GHz) | Span→F2 |
| Activate Zero Span (Time Domain) | Span→F3 |
| Recall Last Span | Span→F4 |

Amplitude

| | |
|-----------------------------------|-----------------------|
| Set Reference Level | Amplitude→F1 |
| Select Vertical Scale | Amplitude→F2 |
| Select Unit (dBm/dBmV/dBuV) | Amplitude→F3→F1 to F3 |
| Set External Gain | Amplitude→F4 |
| Activate Amplitude Correction | Amplitude→F5→F2 |
| Select Amplitude Correction Set | Amplitude→F5→F1→F1 |
| Delete Amplitude Correction Item | Amplitude→F5→F1→F2 |
| Delete Amplitude Correction Set | Amplitude→F5→F1→F3→F2 |
| Undo Correction Item/Set Deletion | Amplitude→F5→F1→F4 |
| Save Amplitude Correction Set | Amplitude→F5→F1→F5 |
| Select Input Impedance (50Ω/75Ω) | Amplitude→F6→F1 |
| Set Input Impedance Offset | Amplitude→F6→F2 |

Autoset

| | |
|-------------------------|------------|
| Run Autoset | Autoset→F1 |
| Set Amplitude Floor | Autoset→F2 |
| Set Frequency View Span | Autoset→F3 |

Marker

| | |
|------------------------|--------------|
| Activate Normal Marker | Marker→F1→F2 |
|------------------------|--------------|

| | |
|----------------------------------|--------------------------------|
| Activate Delta Marker | Marker→F1→F2→F3 |
| Activate All Normal Markers | Marker→F6→F3 |
| Move Marker to Peak | Marker→F4 or Peak Search |
| Move Marker and Peak to Center | Marker→F4→F5 or Peak Search→F5 |
| Track Marker on Peak | Peak Search→F6→F4 |
| Move Marker to Various Locations | Marker→F6→F4→F1 to F5 |
| Show Marker Table | Marker→F6→F2 |
| Put Marker on Trace | Marker→F6→F1 |

Peak Search

| | |
|--------------------------------|--------------------------------|
| Search Peak Signal | Peak Search or Marker→F4 |
| Search Next Peak | Peak Search→F2 |
| Search Next Peak to Right | Peak Search→F3 |
| Search Next Peak to Left | Peak Search→F4 |
| Search Peak and Move to Center | Peak Search→F5 or Marker→F4→F5 |
| Track Marker on Peak | Peak Search→F6→F4 |
| Search Minimum Amplitude | Peak Search→F6→F5 |
| Show Peak Table | Peak Search→F6→F1 |
| Sort Peaks in Peak Table | Peak Search→F6→F2 |
| Set Peak Threshold | Peak Search→F6→F3 |

Trace

| | |
|-----------------------------------|----------------------|
| Activate Trace | Trace→F1 |
| Clear Trace (Update in Real-Time) | Trace→F2 |
| View Peak Hold Trace | Trace→F3 |
| Freeze Trace | Trace→F4 |
| Hide Trace | Trace→F5 |
| View Averaged Trace | Trace→F6→F1 or BW→F4 |
| Run Trace Math | Trace→F6→F2→F1 to F5 |
| Select Signal Detection Mode | Trace→F6→F3→F1 to F5 |

Power Measurement

| | |
|----------------------------------|----------------------|
| Activate ACPR | Meas→F2 |
| Set ACPR Channel Bandwidth | Meas→F1→F1 |
| Set ACPR Channel Space | Meas→F1→F2 |
| Set ACPR Adjacent Channel Offset | Meas→F1→F4→F2 and F4 |

| | |
|------------------------------|--------------------------------|
| Set ACPR Adjacent Channel BW | Meas→F1→F4→F1 and F3 |
| Move ACPR Channel Up | Meas→F4 |
| Move ACPR Channel Down | Meas→F5 |
| Activate OCBW | Meas→F3 |
| Set OCBW Channel Bandwidth | Meas→F1→F1 |
| Set OCBW Channel Space | Meas→F1→F2 |
| Set OCBW % | Meas→F1→F3 |
| Move OCBW Channel Up | Meas→F4 |
| Move OCBW Channel Down | Meas→F5 |
| Activate N dB | Meas→F6→F1 |
| Set N dB Value | Meas→F6→F2 |
| Activate Phase Jitter | Meas→F6→F3 |
| Set Phase Jitter Offset | Meas→F6→F4→F1(Start), F2(Stop) |

Limit Line

| | |
|--------------------------------|--------------------------------|
| Activate Limit Line | Limit Line→F1 (High), F2 (Low) |
| Select Limit Line for Edit | Limit Line→F3→F1 |
| Activate Limit Line Edit Table | Limit Line→F3→F2 |
| Delete Limit Line Table Item | Limit Line→F3→F3 |
| Delete All Table Item | Limit Line→F3→F4→F2 |
| Undo Last Deletion | Limit Line→F3→F5 |
| Run Pass/Fail Test | Limit Line→F4 |
| Select Pass/Fail Condition | Limit Line→F5 |

Bandwidth

| | |
|-----------------------------|----------------------|
| Select RBW | BW→F1 |
| Select VBW | BW→F2 |
| Set Sweep Time | BW→F3 |
| Set Trace Average Number | BW→F4 or Trace→F6→F1 |
| Reset RBW/VBW/Sweep to Auto | BW→F5 |

Trigger

| | |
|-------------------------------|------------|
| Select Free Run (Default) | Trigger→F1 |
| Select Video/External Trigger | Trigger→F2 |
| Select Trigger Mode | Trigger→F3 |
| Set Trigger Delay | Trigger→F4 |

| | |
|------------------------------------|------------|
| Set Trigger Frequency | Trigger→F5 |
| Run Trigger (in Single/Continuous) | Trigger→F6 |

Display

| | |
|-------------------------------------|-----------------------------------|
| Change Dimmer Level | Display→F1 |
| Show Display Line | Display→F2 |
| Clear Title | Display→F3→F1 |
| Enter Title | Display→F3→F2 to F4 |
| Show Title | Display→F3→F5 |
| Activate Split Window | Display→F4→F1 (Upper), F2 (Lower) |
| Alternate Upper/Lower Sweep | Display→F4→F3 |
| Switch Split Display to Full Screen | Display→F4→F4 |

File

| | |
|-----------------------------------|---|
| Select Copy Source File | File→F1→F1→F1 to F5 |
| Select Copy Destination File | F2→F1 to F5 (After Selecting Source) |
| Edit Copied File Name | F3 (After Selecting Destination) |
| Copy Selected File | F4 (After Selecting Source/Destination) |
| Select File for Deletion | File→F2→F1→F1 to F5 |
| Delete Selected File | F2 (After Selecting File) |
| Rename File | File→F3→F1 |
| Confirm New File Name | F2 (After Renaming File) |
| Save Display Image to USB Drive | File→F4→F1→F2 |
| Rename File in USB Drive | File→F4→F1→F1 |
| Select System Code for Update | File→F5→F1→F1 |
| Select Language for Update | File→F5→F1→F2 |
| Update System File from USB Drive | F2 (After Selecting File) |

Preset

| | |
|-----------------------------------|--------|
| Recall Factory Installed Settings | Preset |
|-----------------------------------|--------|

System

| | |
|----------------------------|-----------------------|
| Save Setup | System→F1→F1 or F2→F3 |
| Recall Setup | System→F1→F1 or F2→F4 |
| Select GPIB Address | System→F2 |
| Show RS-232C Configuration | System→F3→F1 to F4 |
| Activate Auxiliary Signal | System→F4 |

| | |
|---------------------------|--------------------------|
| Set Date | System→F6→F1→F1→F1 to F4 |
| Set Time | System→F6→F1→F2→F1 to F3 |
| Activate Clock Display | System→F6→F1→F3 |
| View Self Test Result | System→F6→F2 |
| View System Configuration | System→F6→F4 |
| Select Language | System→F6→F5→F1 |

Option

| | |
|-------------------------------------|-----------------|
| Activate Tracking Generator | Option→F1→F1 |
| Set Tracking Generator Amplitude | Option→F1→F2 |
| Normalize Tracking Generator | Option→F1→F3→F2 |
| Activate Normalized TG | Option→F1→F4 |
| Set Ref Level for TG Normalization | Option→F1→F5 |
| Activate FM Demodulator | Option→F2→F1 |
| Activate AM Demodulator | Option→F2→F2 |
| Activate Phone Output | Option→F2→F3 |
| Set Phone Output Volume | Option→F2→F4 |
| Set Squelch Level | Option→F2→F5 |
| View Battery Level | Option→F3 |
| Set Ext. Reference Signal Frequency | Option→F4 |

Sequence

| | |
|-------------------------------|-------------------------|
| Select Sequence Set | Sequence→F1, F2 |
| Start Sequence Edit | Sequence→F3→F1 |
| Insert 100ms Delay | Sequence→F3→F2 |
| Insert Pause in Sequence | Sequence→F3→F3 |
| Insert Another Sequence Set | Sequence→F3→F4→F1 to F2 |
| Stop Sequence Edit | Sequence→F3→F5 |
| Insert Item to Sequence Set | Sequence→F3→F6→F1 |
| Save Sequence Set | Sequence→F3→F6→F2 |
| Delete Sequence Item | Sequence→F3→F6→F3 |
| Delete Sequence Set | Sequence→F3→F6→F4→F2 |
| Undo Sequence Item/Set Delete | Sequence→F3→F6→F5 |
| Select Sequence Run Mode | Sequence→F4→F1 |
| Run Sequence | Sequence→F4→F2 |
| Delete All Sequence Set | Sequence→F5→F2 |

Menu Tree

Power-on screen

| | |
|-------------------|-----|
| Last stored state | F 3 |
|-------------------|-----|

Frequency, Span, Autoset, Amplitude(1 of 2)

Frequency

| | |
|----------------|-----|
| Center 1.5 GHz | F 1 |
| Start 0 kHz | F 2 |
| Stop 3 GHz | F 3 |
| Step 1 MHz | F 4 |

Span

| | |
|------------|-----|
| Span 3 GHz | F 1 |
| Full Span | F 2 |
| Zero Span | F 3 |
| Last Span | F 4 |



Autoset

| | |
|------------------------------|-----|
| Autoset | F 1 |
| Amp.Floor <u>Auto</u> Man | F 2 |
| Span <u>Auto</u> Man | F 3 |

Amplitude


| | | | | |
|-----------------------|-----|---|--------|-----|
| Ref.Level 0 dBm | F 1 | } | dBm | F 1 |
| Scale dB/Div 10 5 2 1 | F 2 | | dBmV | F 2 |
| Units... | F 3 | | dBuV | F 3 |
| Ext.Gain 0dB | F 4 | | | |
| Corrections.. | F 5 | | | |
| More | F 6 | | Return | F 6 |

Amplitude (2 of 2), Marker

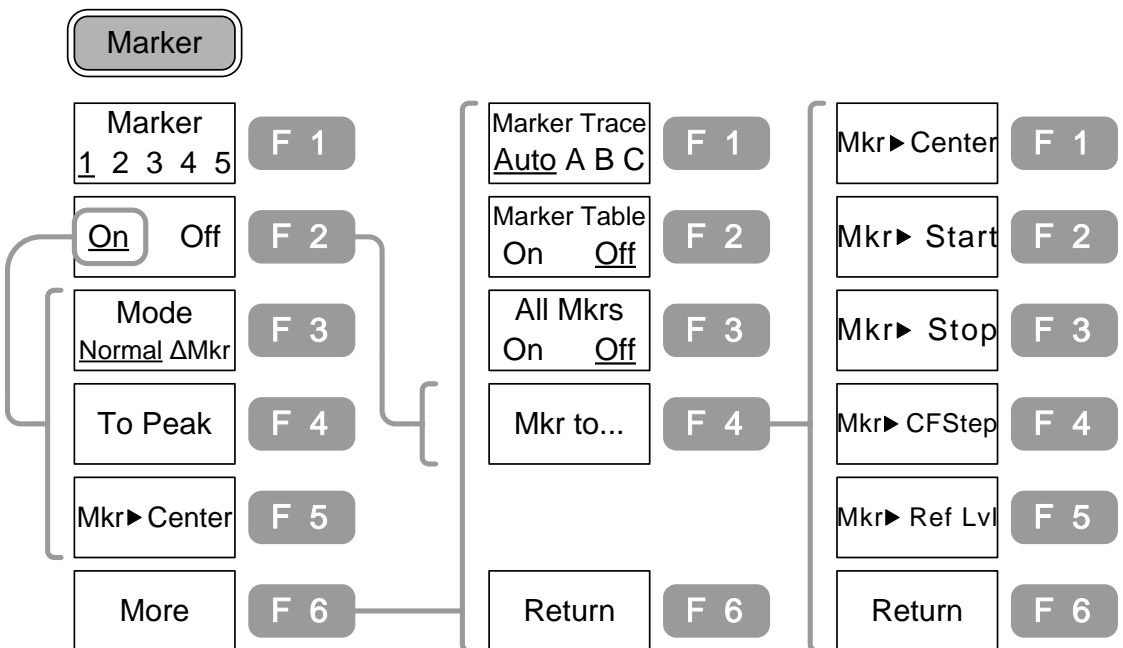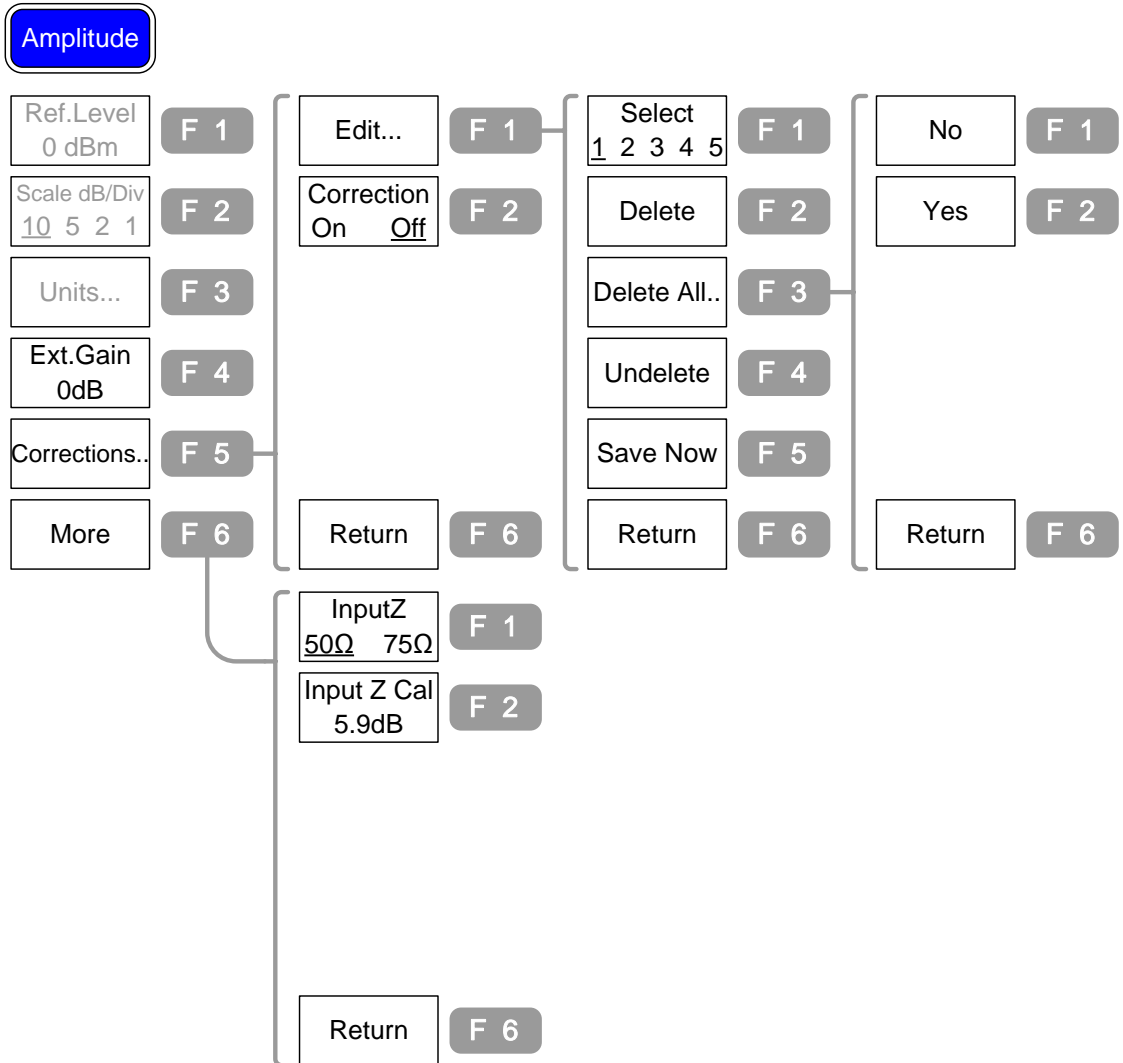


Peak Search, Trace


Peak Search

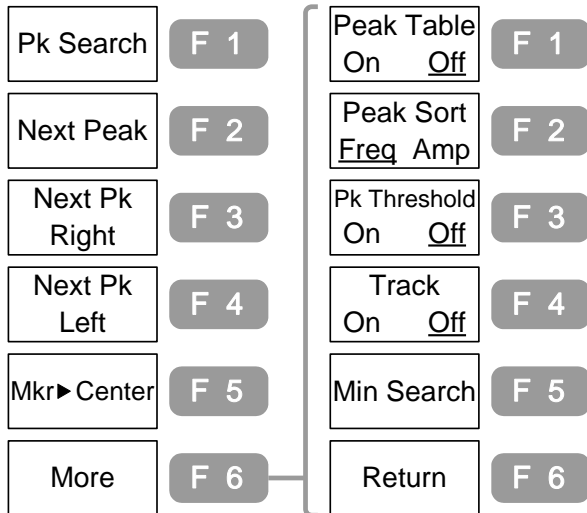

Trace

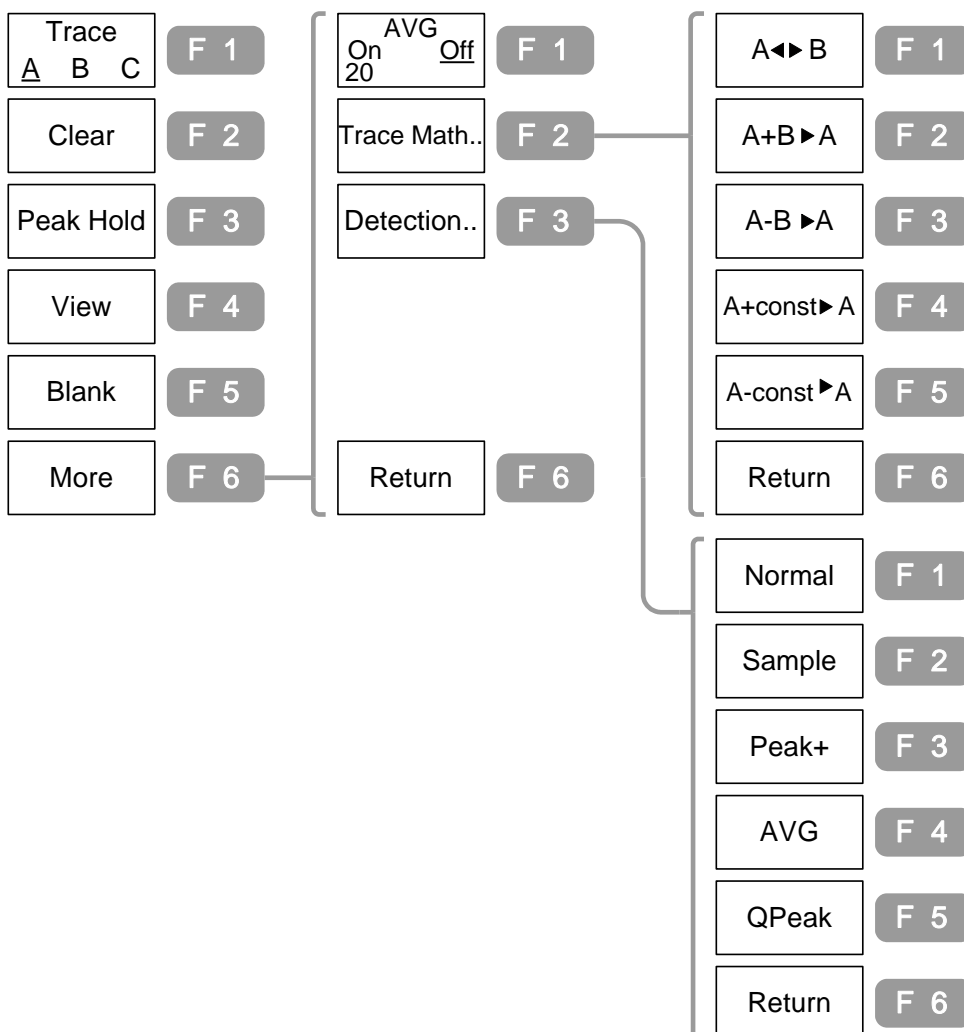

Measurement, Limit Line

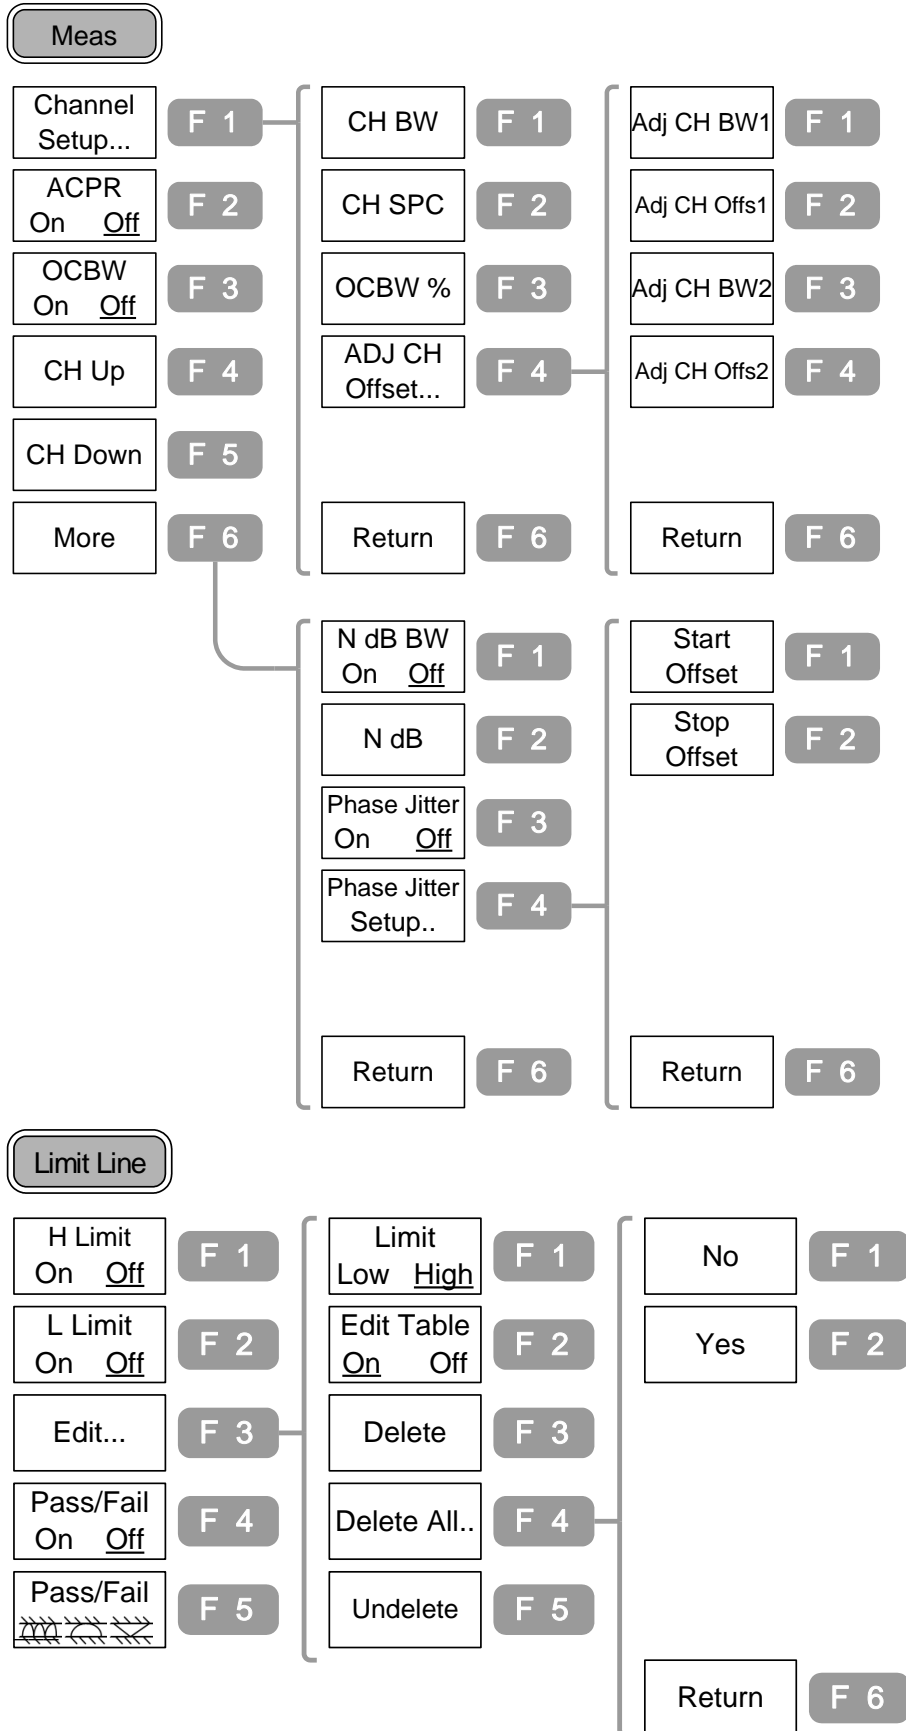

BW, Trigger, Display

BW

RBW
Auto Man F 1

VBW
Auto Man F 2

Swp Tm
Auto Man F 3

AVG
On 20 Off F 4

All Auto F 5

Trigger

Free Run F 1

Trigger Condition
Video Ext. F 2

Trigger Mode
Nor. Sgl. Cont. F 3

Trigger Delay
50ms F 4

Trigger Freq
1.5GHz F 5

Run Now F 6

Display

LCD Dimmer F 1

Display Line
On Off F 2

Title... F 3

Split Window... F 4

Clear Title F 1

(Capital Letter) F 2

(Small Letter) F 3

(Symbol) F 4

Show Title F 5

Return F 6

Upper F 1


Lower F 2

Alternate Sweep F 3


Full Screen F 4

Return F 6

File (1 of 2)

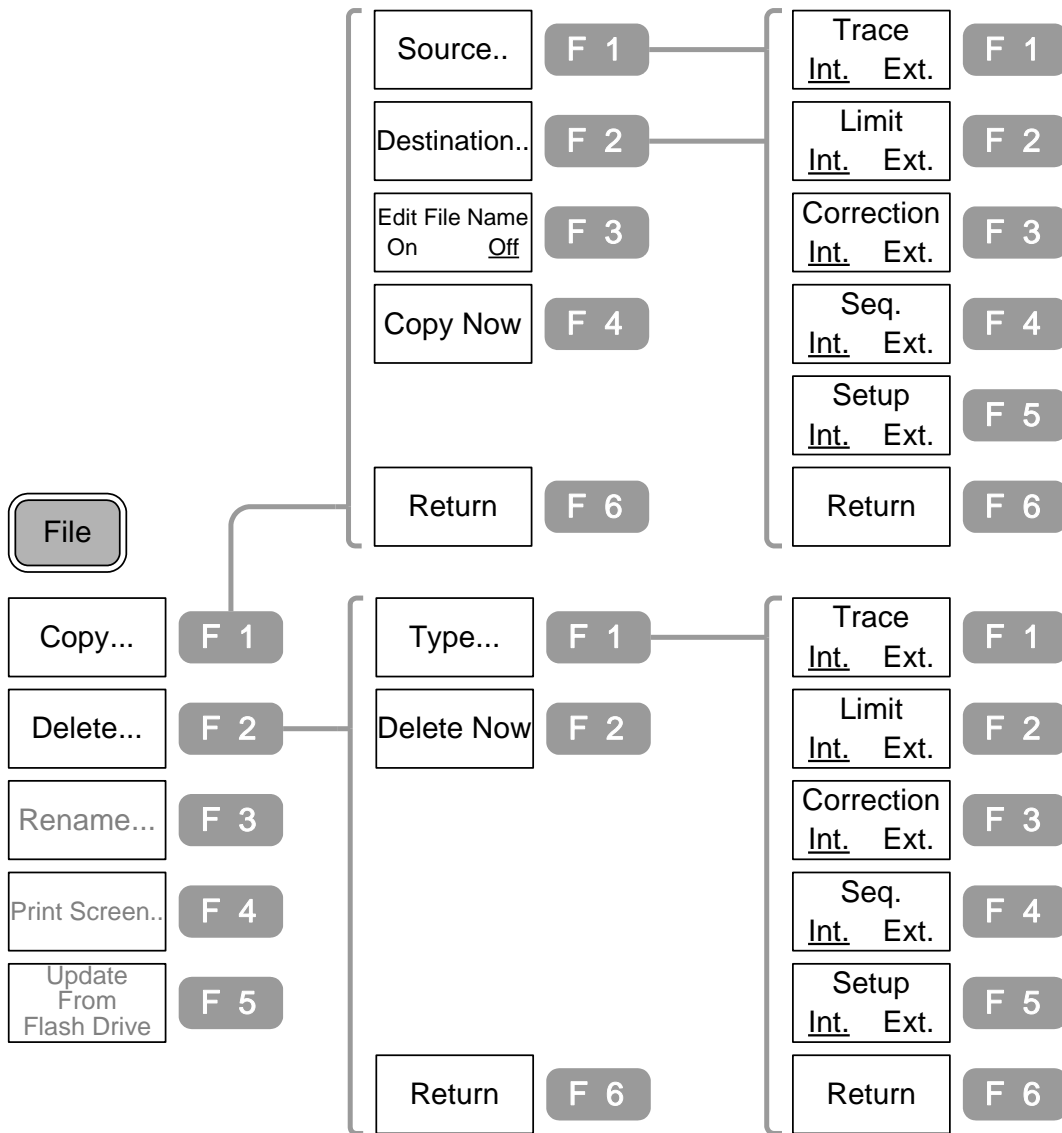

File (2 of 2)

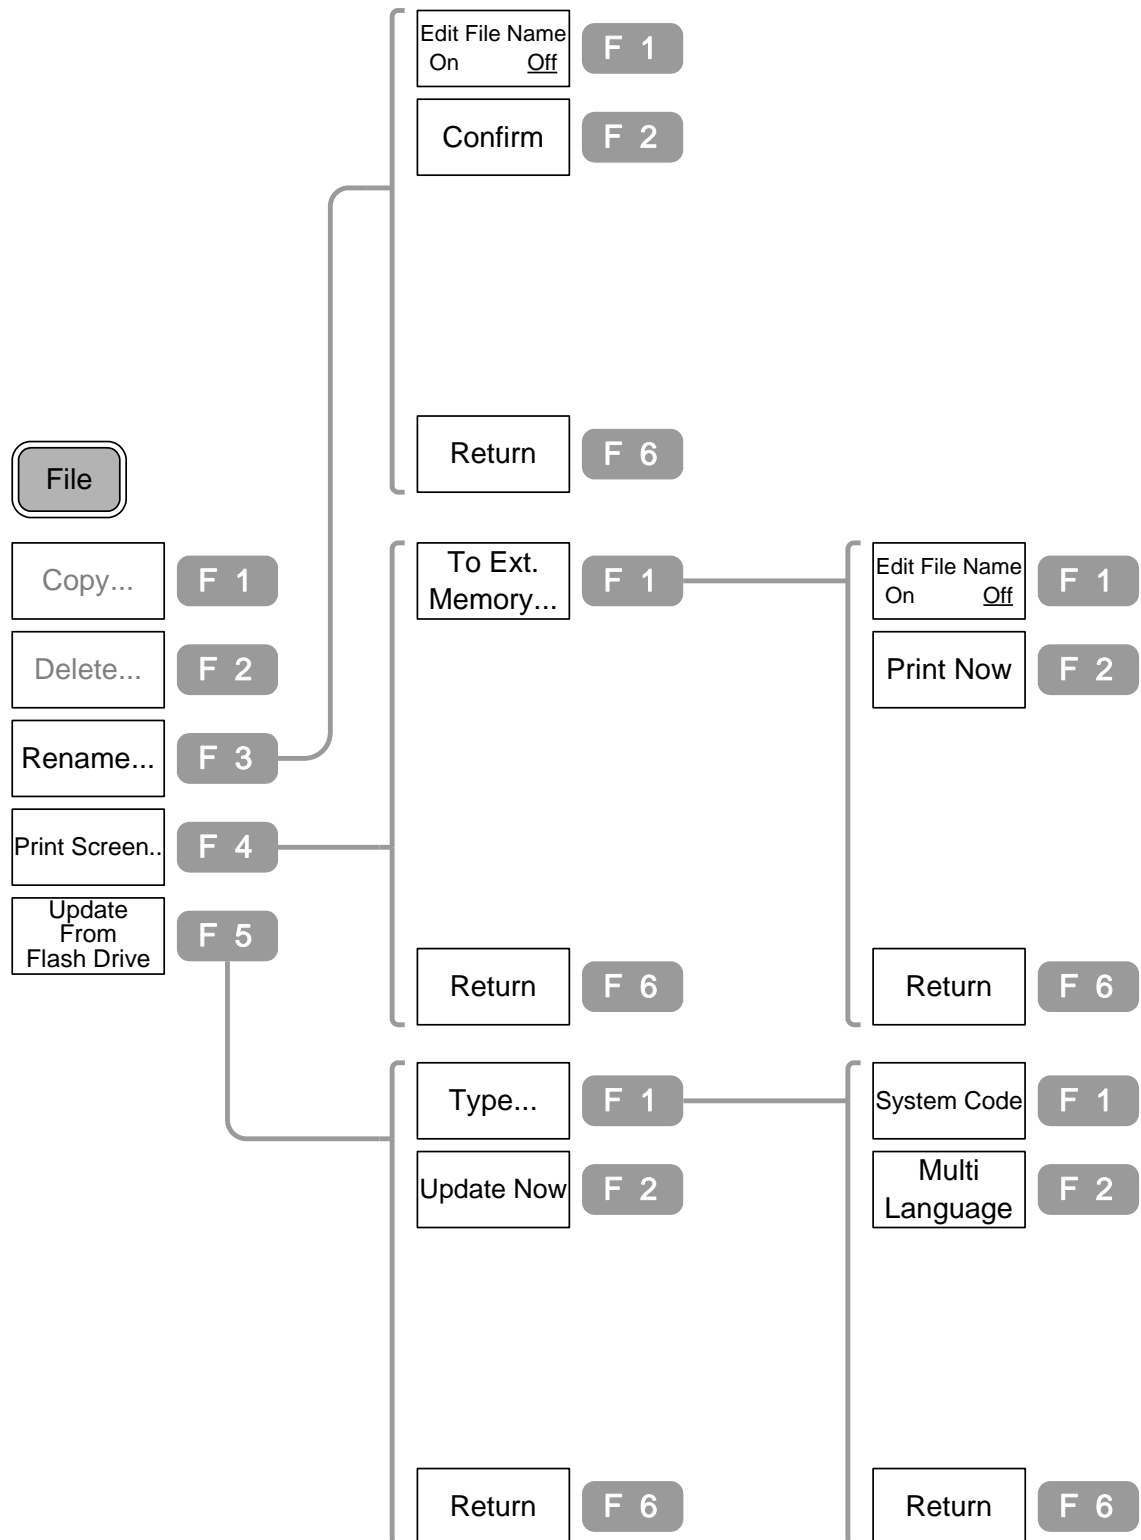


Preset



(No menu item)


System

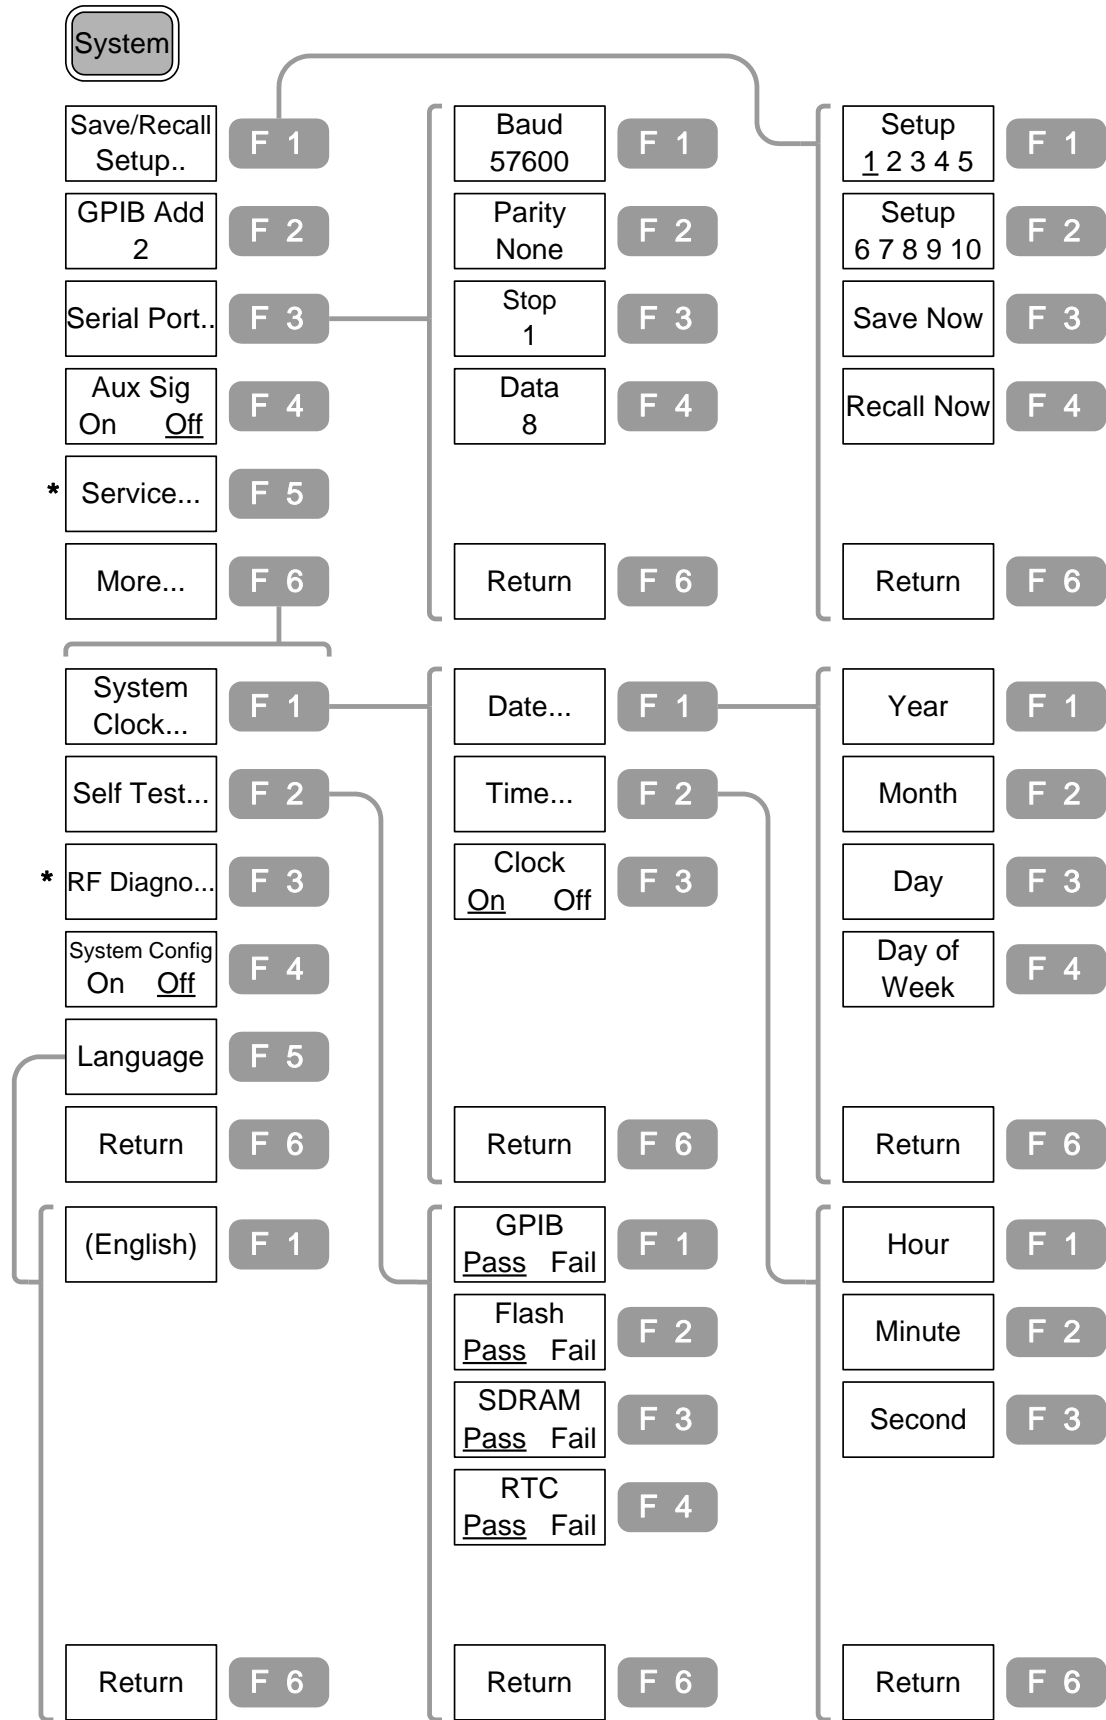


* Submenu only for service personnel

Option, Sequence


Option

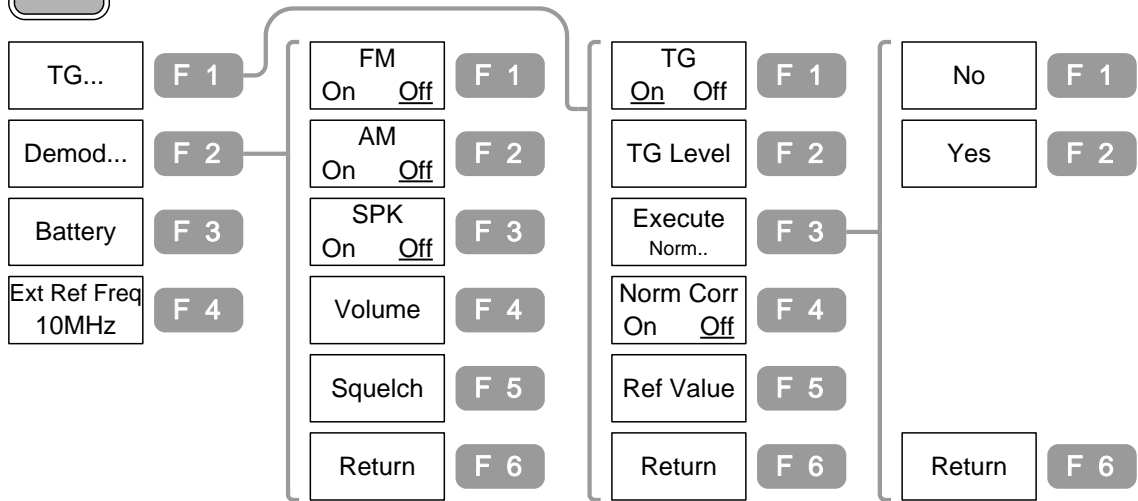

Seq

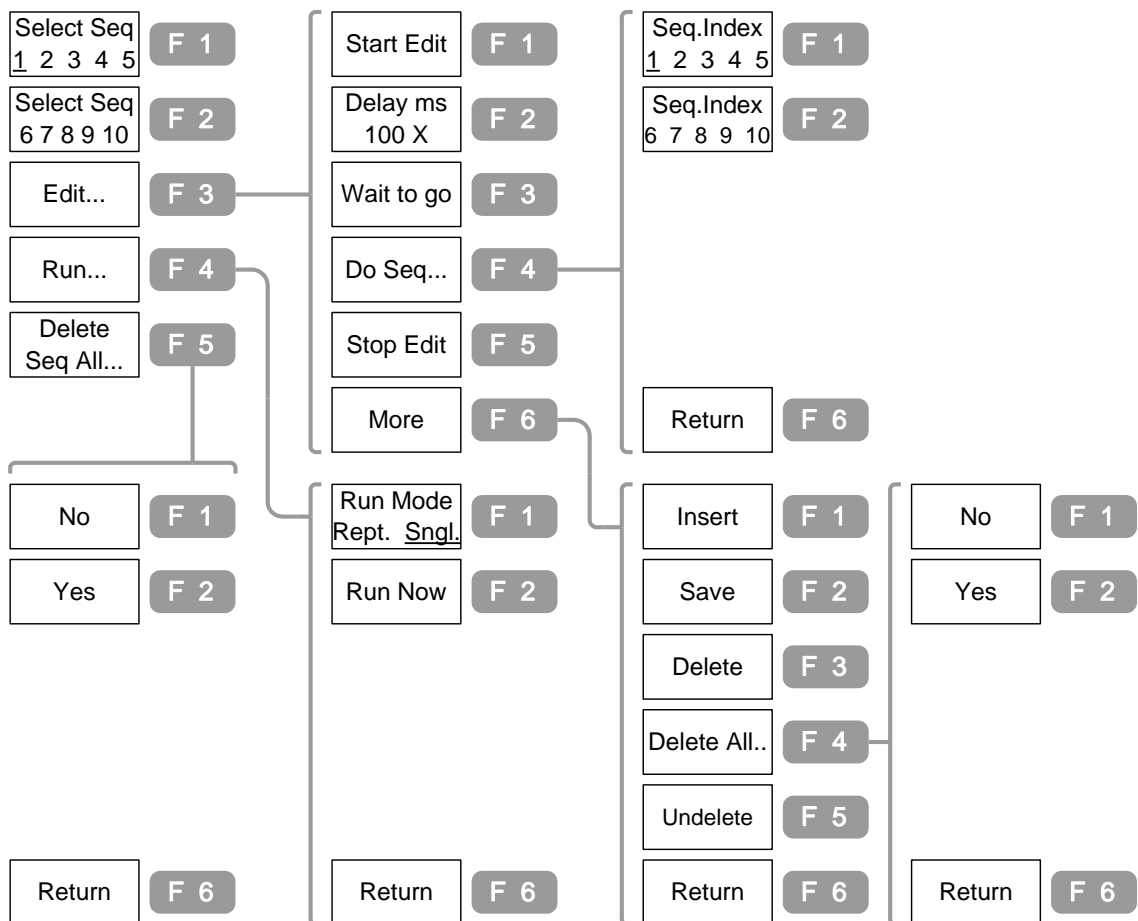



Preset Contents

These are the settings that appear when pressing the Preset key .

| | | |
|-------------|---|---|
| Frequency | Center: 1.5GHz Start: 0Hz | Stop: 3GHz Step: 1MHz |
| Span | 3GHz | |
| Amplitude | Ref.level: 0dBm Unit: dBm Scale: 10dB/ | External Gain: 0dB Input Z: 50Ω |
| Autoset | Amplitude Floor: Auto | Span: Auto |
| Marker | Marker: Off Marker Table: Off | Marker Trace: Auto All Marker: Off |
| Peak Search | Peak Table: Off Peak Threshold: Off | Peak Sort: Freq Peak Track: Off |
| Trace | Trace: A Average: Off, 20 | Mode: Clear Detection: Normal |
| Meas | ACPR: Off CH SPC: 0 CH BW: 600MHz OCBW %: 0 N dB: Off | OCBW: Off Adj CH Offs: 0MHz Adj CH BWs: 0MHz Phase Jitter: Off |
| Limit Line | H & L Limit: Off | Pass/ Fail: Off |
| BW | RBW: Auto SwpTime: Auto | VBW: Auto Average: Off, 20 |
| Trigger | Trigger Delay: 50ms Trigger Mode: Normal | Trigger Freq: 1.5GHz |
| Display | LCD Dimmer: 5 Split Window: Off | Display Line: Off Display Title: Off |
| File | Copy Type: Int. Trace Rename Type: Ext. Trace | Delete Type: Int. Trace |
| System | GPIO Add: 2 Aux Sig: Off | System Config: Off Clock: On |
| Option | External Ref Freq: 10MHz TG Norm Corr: Off Demod AM: Off | TG Output: Off TG Ref Value: 0dBm Demod FM: Off |
| Sequence | Sequence: 1 | Run Mode: Single |

FREQUENCY/SPAN

The **Frequency** key, together with **Span** key, sets the frequency scale. Two methods are available. Center-and-Span method defines the center point and surrounding frequency range. Start-and-Stop method defines the beginning and end of the frequency range. Special span settings are available at full and zero spans. The last span setting may also be recalled.

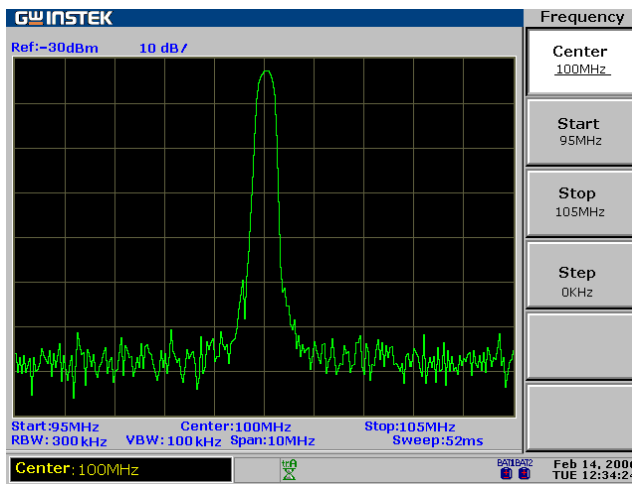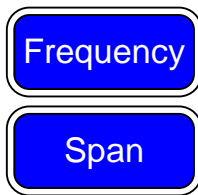





| | | |
|------------------------|--|----|
| Center and Span | Set frequency adjustment step | 42 |
| | Set center frequency | 42 |
| | Set frequency span | 43 |
| Start and Stop | Set frequency adjustment Step | 44 |
| | Set start frequency | 44 |
| | Set stop frequency | 45 |
| Span | Display full frequency span (3GHz) | 46 |
| | Display zero span (time domain) | 46 |
| | Recall the Last Span Setting | 47 |


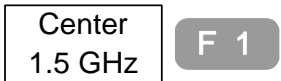
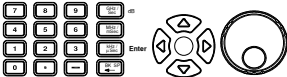
View Signal (Center and Span)

Center-and-Span method defines the center frequency and the left/right bandwidth (span) to locate the signal.


Set frequency adjustment step
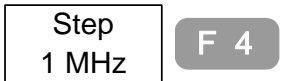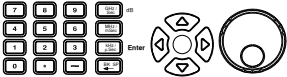
| | | |
|-----------------|--|---|
| Background | Frequency adjustment step defines the Arrow keys resolution for center, start, and stop frequency. |  |
| Panel operation | <ol style="list-style-type: none"> 1. Press the Frequency key. |  |
| | <ol style="list-style-type: none"> 2. Press F4 (Step). |  |
| | <ol style="list-style-type: none"> 3. Enter the value using the Numerical and Unit keys, Arrow keys, and Scroll knob. |  |
| Range | 0kHz to 3GHz * Arrow keys and Scroll knob resolution: 1/10 of Span | |

Set center frequency

| | | |
|-----------------|---|---|
| Panel operation | <ol style="list-style-type: none"> 1. Press the Frequency key. |  |
| | <ol style="list-style-type: none"> 2. Press F1 (Center). |  |
| | <ol style="list-style-type: none"> 3. Enter the value using the Numerical and Unit keys, Arrow keys, or Scroll knob. |  |
| Range | 0kHz to 3GHz Arrow keys and Scroll knob resolution: step value | |
| Note | Center frequency and span settings automatically change according to start and stop frequency settings, and vice versa. | |

Display

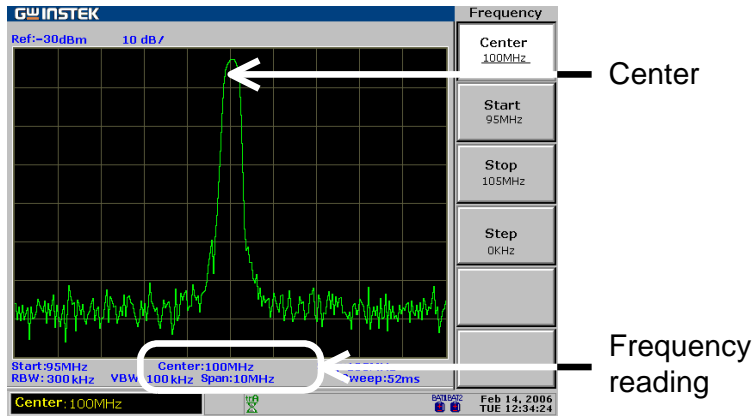


Set frequency span

Panel operation


1. Press the Span key.



 2. Press F1 (Span).



 3. Enter the value using the Numerical and Unit keys, Arrow keys, and Scroll knob.




Range

2kHz to 3GHz

* Arrow keys & Scroll knob resolution: 1-2-5 sequence (0 [zero span], 2kHz, 5kHz, 10kHz, 20kHz, 50kHz,1GHz, 2GHz, 3GHz)

Display

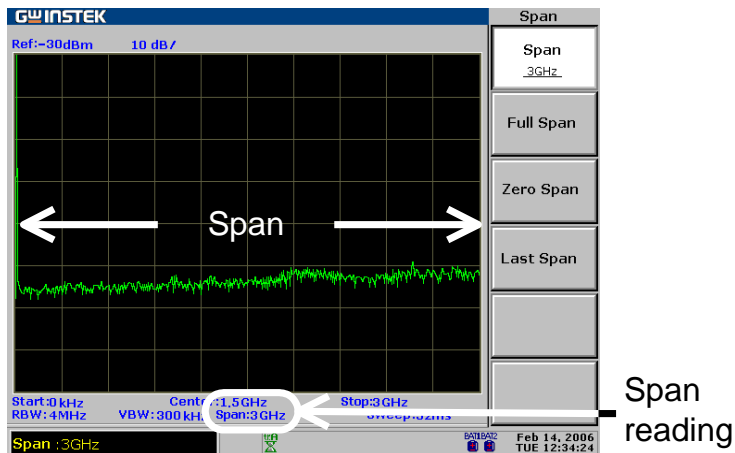





Note

- Center frequency and span settings automatically change according to start and stop frequency settings, and vice versa.
- If the span becomes smaller than the CHBW (channel bandwidth) in the ACPR or OCBW measurement (page 82), the warning “Span is less than CHBW!” appears in the command window.




View Signal (Start and Stop)

Start-and-Stop method defines the beginning (start) and the end (stop) of the frequency range.

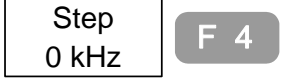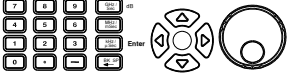
Set frequency adjustment Step

| | | |
|-----------------|--|---|
| Background | Frequency adjustment step defines the Arrow keys resolution for Center, Start, and Stop frequency. |  |
| Panel operation | <ol style="list-style-type: none"> 1. Press the Frequency key. |  |
| | <ol style="list-style-type: none"> 2. Press F4 (Step). |  |
| | <ol style="list-style-type: none"> 3. Enter the value using the Numerical and Unit keys, Arrow keys, and Scroll knob. |  |
| Range | 0.0kHz to 3.0GHz * Arrow keys and Scroll knob resolution: 1/10 of span | |

Set start frequency
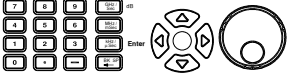
| | | |
|-----------------|--|---|
| Panel operation | <ol style="list-style-type: none"> 1. Press the Frequency key. |  |
| | <ol style="list-style-type: none"> 2. Press F2 (Start). |  |
| | <ol style="list-style-type: none"> 3. Enter the value using the Numerical and Unit keys, Arrow keys, and Scroll knob. |  |
| Range | 0kHz to 3GHz (start frequency ≤ stop frequency) Arrow keys and Scroll knob resolution: step value | |
| Note | Center frequency and span settings automatically change according to start and stop frequency settings, and vice versa. | |

Display

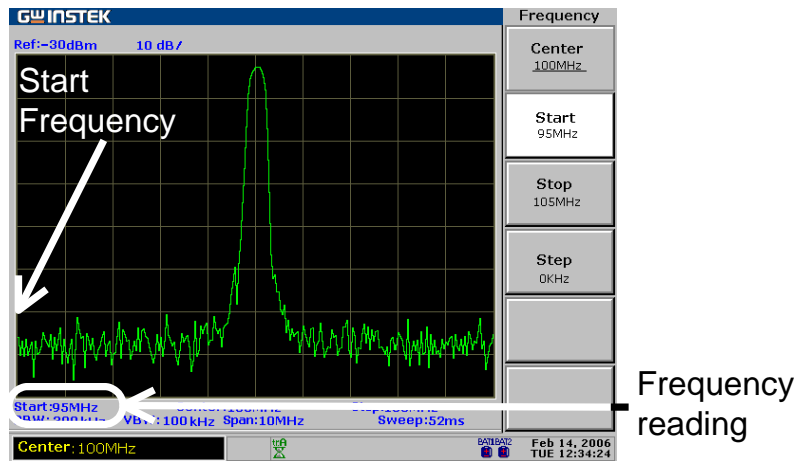


Set stop frequency

Panel operation


1. Press the Frequency key.



 2. Press F3 (Stop).



 
3. Enter the value using the Numerical and Unit Keys, Arrow keys, and Scroll knob.



Range

0.0kHz to 3.0GHz (start frequency \leq stop frequency)
 * Arrow keys and Scroll knob resolution: step value

Display

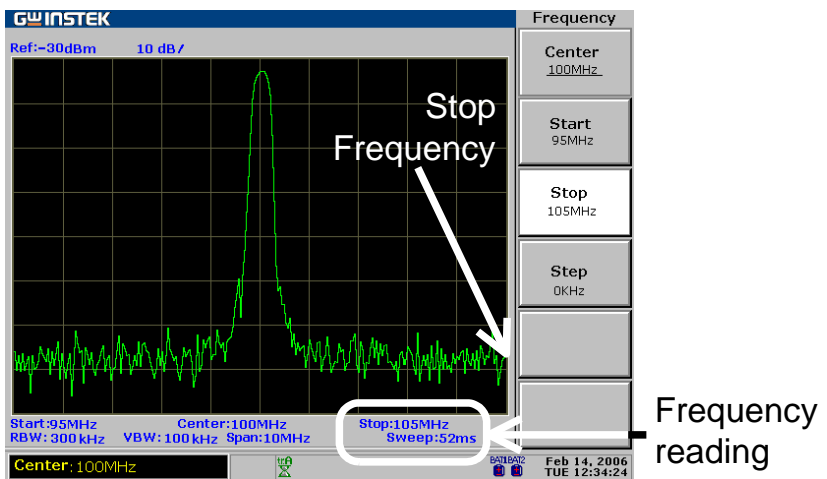




Note

Center frequency and span settings automatically change according to start and stop frequency settings, and vice versa.


Full/Zero Span

Full or zero span setting sets the span to extreme values: 3GHz (full) or 0kHz (zero). They provide faster ways to view signals in certain situations, such as in time domain (zero span) for viewing modulation or in full span for viewing signals with unknown frequencies.




Display full frequency span (3GHz)

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Span key. |  |
| | 2. Press F2 (Full Span). |   |
| Range | 3GHz (fixed) | |
| | Full span also sets these parameters to fixed values. | |
| | <ul style="list-style-type: none"> • Center frequency: 1.5GHz • Start frequency: 0.0kHz • Stop frequency: 3.0GHz | |

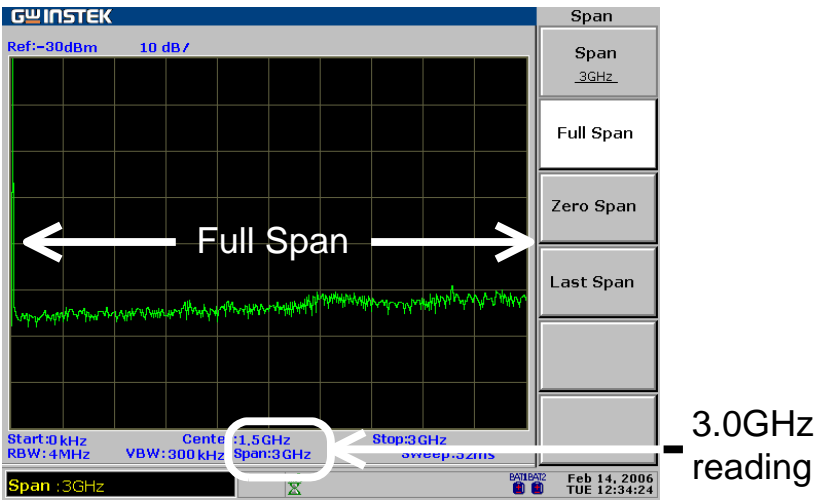Display



Display zero span (time domain)


| | | |
|-----------------|--------------------------|---|
| Panel operation | 1. Press the Span key. |  |
| | 2. Press F3 (Zero Span). |   |
| Range | Center frequency (fixed) | |

Zero span also sets these parameters to fixed values.

- Start frequency: same as the center frequency
- Stop frequency: same as the center frequency

Display

The diagram shows an example of observing the amplitude modulation of the input signal.

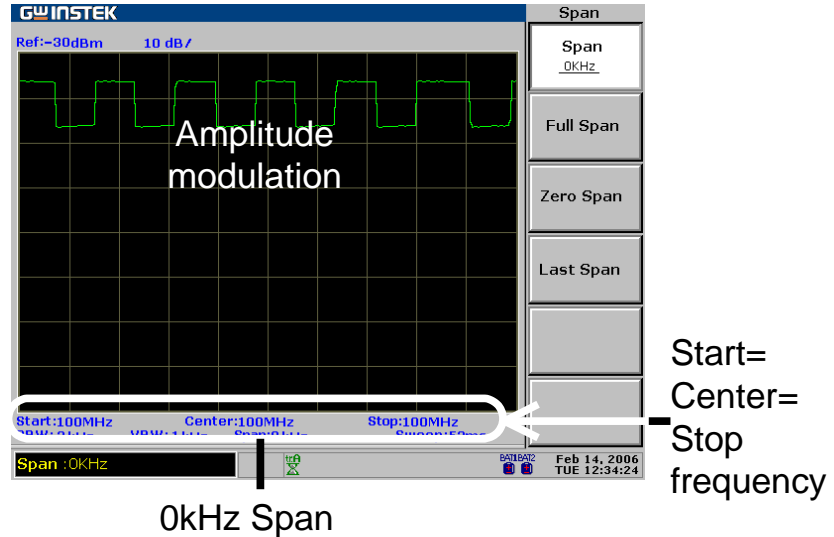

Note

When using zero span for viewing amplitude modulation, make sure that the RBW setting is large enough. For RBW setting details, see page 96.

Recall the Last Span Setting

Panel operation

1. Press the Span key.



2. Press F4 (Last Span).




3. The span setting goes back to the previous one.

Nesting level

1 level

AMPLITUDE

The **Amplitude** key sets the vertical attribute of the display, including the upper limit (reference level), vertical range (amplitude scale), vertical unit, and compensation for external gain or loss (external offset). Amplitude correction adjusts the frequency response distortion caused by external networks. The optional pre-amplifier GAP-801 and GAP-802 boosts the level of a weak input signal before it enters the GSP-830. The input impedance can also be adjusted according to the application needs.

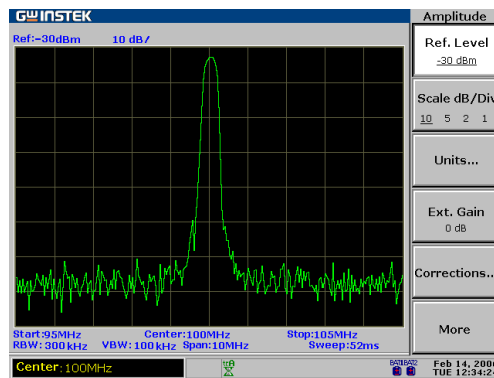




| | | |
|-------------------------------|--|----|
| Vertical Scale Setting | Set reference amplitude..... | 49 |
| | Select amplitude scale..... | 50 |
| | Select amplitude unit | 50 |
| | Set external offset level | 51 |
| Amplitude Correction | Correct amplitude step by step..... | 52 |
| | Delete entire correction set data | 55 |
| | Recall existing correction set..... | 55 |
| | Save/copy/delete/rename correction file..... | 56 |
| Pre-Amplifier | Use Pre-Amplifier (Optional)..... | 56 |
| Input Impedance | Select input impedance (50Ω/75Ω)..... | 57 |
| | Set impedance offset (75Ω only) | 57 |

Set Vertical Scale

Vertical display scale is defined by the reference amplitude, amplitude range, measurement unit, and external gain/loss.

Set reference amplitude

The reference level defines the amplitude at the top of the displayed range (see below screen snapshot).

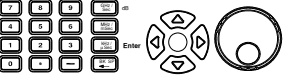
- | | | |
|-----------------|--|---|
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F1 (Ref.Level). |  |
| | 3. Enter the value using the Numerical and Unit keys, Arrow keys, and Scroll knob. |  |
- *Arrow keys and Scroll knob resolution: vertical scale

| | | |
|-------|------|--|
| Range | dBm | -110 to +20 dBm, 0.1dB resolution |
| | dBmV | -63.01 to +66.99 dBmV, 0.01dB resolution |
| | dBuV | -3.01 to +126.99 dBuV, 0.01dB resolution |


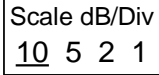

See page50 for selecting amplitude units.

Display


Reference Level Reading

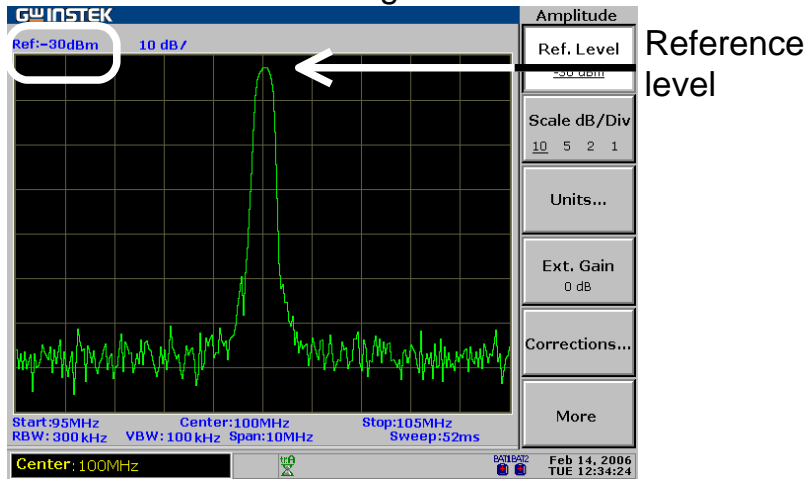


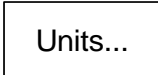

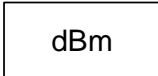

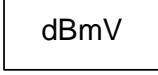

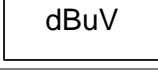

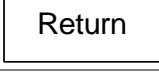

Select amplitude scale

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F2 (Scale dB/Div) repeatedly to select the scale. |   |
| Range | 10, 5, 2, 1 dB/Div | |

Display

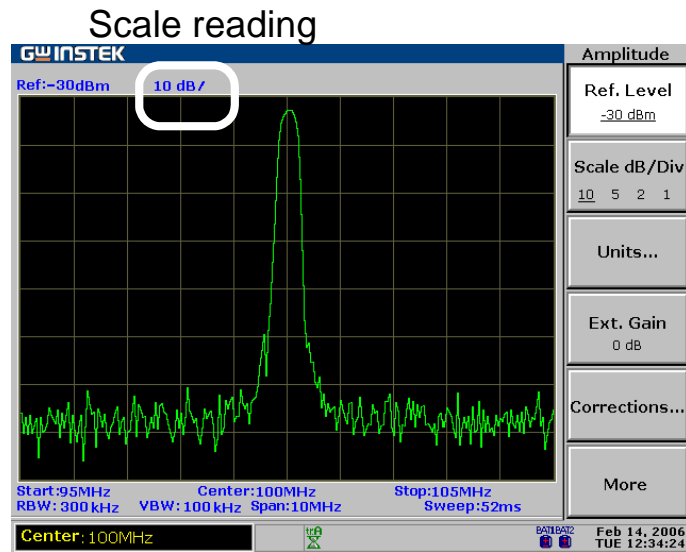




Select amplitude unit

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F3 (Units). |   |
| | 3. Select and press the unit from F1 (dBm), F2 (dBmV), and F3 (dBuV). |       |
| | 4. Press F6 (Return) to go back to the previous menu. |   |


| | | |
|-------|------|-----------------------|
| Range | dBm | -110 to +20 dBm |
| | dBmV | -63.01 to +26.99 dBmV |
| | dBuV | -3.01 to +126.99 dBuV |

Set external offset level


Background External offset compensates the amplitude gain or loss caused by an external network or device.

- Panel operation**
1. Press the Amplitude key. 
 2. Press F4 (Ext.Gain). 
 3. Enter the value using the Numerical keys and dB or Enter key. 

Range -20.0dB to +20.0dB, 0.1dB resolution


Icon  The amplitude icon appears at the bottom of the display when the external offset changes.

Example
Before (offset: 0dB)

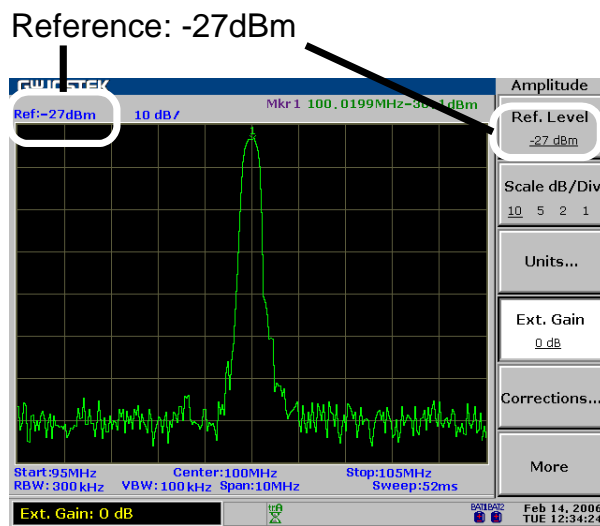

Offset: 0dB

After (offset: -3dB)

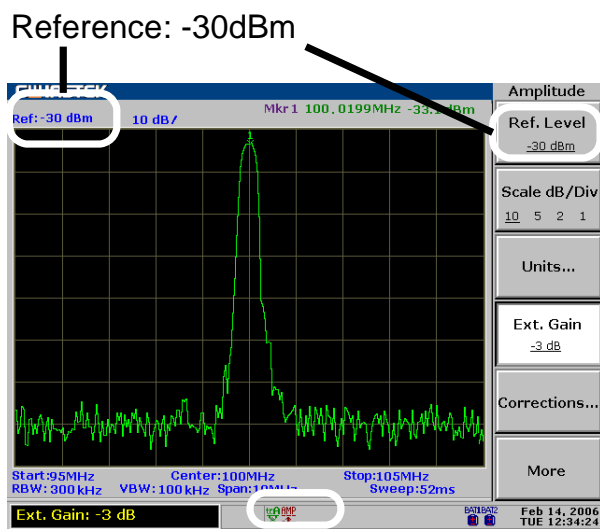


Offset: -3dB

Icon

Amplitude Correction


Overview

| | | |
|------------|--|--|
| Background | Amplitude correction adjusts the GSP-830's frequency response by changing amplitudes for specific frequencies. | |
| Range | Correction set | 5 sets, 30 correction points each |
| | Amplitude | -40 to +40dB per correction point, 0.1dB resolution |
| | Frequency | 9kHz to 3GHz, 1kHz resolution |
| Icon |  | The amplitude icon appears at the bottom of the display when amplitude correction is on. |

Correct amplitude step by step

| | |
|---------------------|---|
| Example description | In this example, the network between the GSP-830 and DUT distorts the waveform and pushes the amplitude down at around 2.4GHz. Amplitude correction can bring the amplitude back to its original level. |
| Correction level | In this example the amplitude around 2.4GHz is boosted by +1 to +3dB as shown below. |
| | 2.2GHz +2.5dB |
| | 2.3GHz +1.3dB |
| | 2.4GHz +2.8dB |
| | 2.5GHz +2.5dB |
| | 2.6GHz +1.2dB |

Waveform (before correction) The frequency response is distorted (non-flat) and the level is attenuated by 2 to 3dB.

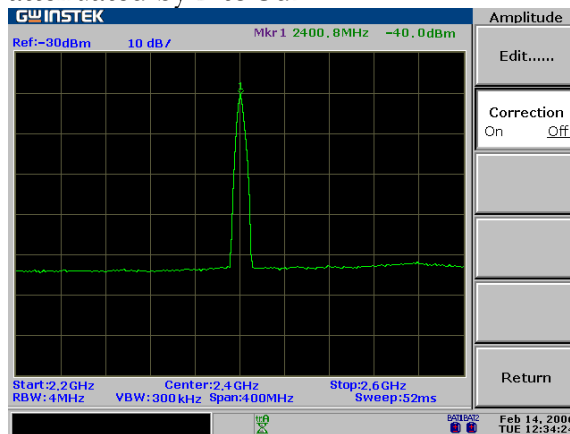


1. Enter correction edit mode



1. Press the Amplitude key.



 2. Press F5 (Corrections).




 3. Press F1 (Edit). The display shows the correction sets.

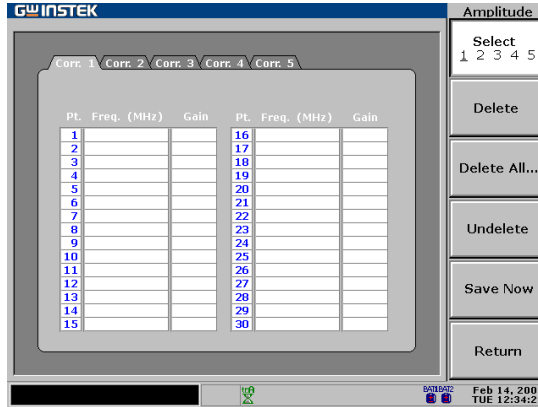


2. Select correction set

 Press F1 (Select) repeatedly to select the correction set. 5 sets, 30 points each, are selectable.




Example: correction set 3 selected

 

3a. Add correction point

1. Make sure that the cursor is pointing to the first empty frequency point.

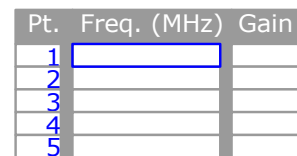


2. If necessary, move the cursor using the Up/Down keys.



3. Enter the frequency using the Numerical and Unit keys: 9kHz to 3GHz.



4. The cursor automatically moves to the Gain side. Enter the gain using the Numerical keys and dB key. Range: -40dB to +40dB.

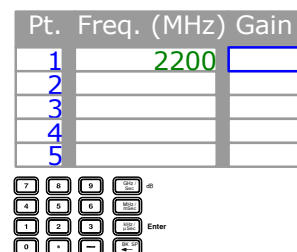

5. Repeat the above procedure for all correction data. The points are automatically sorted by frequency (low → high).

3b. Modify correction point

1. Move the cursor using the Arrow keys.



2. Enter the new frequency or gain using the Numerical keys and Unit keys or dB key.

| Pt. | Freq. (MHz) | Gain |
|-----|-------------|------|
| 1 | 2200 | 2.5 |
| 2 | 2300 | 1.3 |
| 3 | 2400 | 2.8 |
| 4 | 2500 | 1.8 |
| 5 | 2600 | 1.2 |



3c. Delete correction point

1. Move the cursor to the target using the Arrow keys.



2. Press F2 (Delete). The frequency and gain are deleted together.



3. To undo the last deletion, press F4 (Undelete).



Example: point 3 deleted


| Pt. | Freq. (MHz) | Gain | | Pt. | Freq. (MHz) | Gain |
|-----|-------------|------|---|-----|-------------|------|
| 1 | 2200 | 2.5 | → | 1 | 2200 | 2.5 |
| 2 | 2300 | 1.3 | | 2 | 2300 | 1.3 |
| 3 | 2400 | 2.8 | | 3 | 2500 | 1.8 |
| 4 | 2500 | 1.8 | | 4 | 2600 | 1.2 |
| 5 | 2600 | 1.2 | | 5 | | |

4. Save correction set

1. Press F5 (Save Now). The edited data is saved internally.




 2. Press F6 (Return) to go back to the previous menu.



5. Activate correction

 1. Press F2 (Correction On) to turn on the correction.




2. The amplitude icon appears at the bottom of the display.


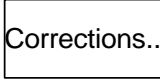



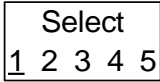




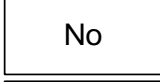

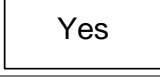

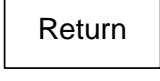


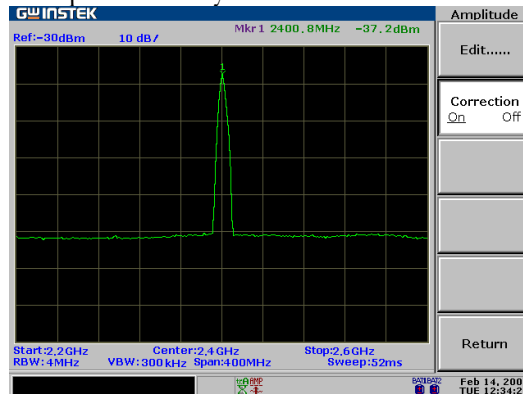

After correction


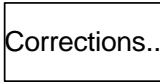



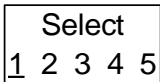


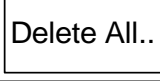

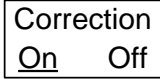

Frequency response becomes linear (original), and the gain is compensated by +2 to +3dB.








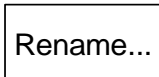

Delete entire correction set data
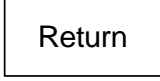
| | | |
|-----------------|--|--|
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F5 (Corrections). |   |
| | 3. Press F1 (Edit). The display shows the correction sets. |   |
| | 4. Press F1 (Select) repeatedly to select the correction set. |    |
| | 5. Press F3 (Delete All). |   |
| | 6. Press F2 (Yes). The whole data in the specified correction set is deleted. To cancel deletion, press F1 (No). |     |
| | 7. Press F6 (Return) repeatedly to go back to previous menus. |    |

Recall existing correction set


| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F5 (Corrections). |   |
| | 3. Press F1 (Edit). The display shows the correction sets. |   |
| | 4. Press F1 (Select) repeatedly to select the correction set. |    |
| | 5. Press F6 (Return) to go back to the previous menu. |   |
| | 6. Press F2 (Correction On) to activate the correction data. |   |

Save/copy/delete/rename correction file


| | | |
|------------|--|---|
| Background | Correction files can be saved, copied, deleted, or renamed using the file utilities. Press the File key to access each function. |  |
| Save/Copy | Press F1 (Copy). For detailed steps, see page115. |   |
| Delete | Press F2 (Delete). For detailed steps, see page118. |   |
| Rename | Press F3 (Rename). For detailed steps, see page120. |   |

Use Pre-Amplifier (Optional)

| | | |
|------------|---|----------------------------|
| Background | The optional pre-amplifier GAP-801 or GAP-802 boosts weak input signals such as in EMI testing to levels that are easy to handle, over the entire frequency range. | |
| Range | GAP-801 | 9kHz to 6GHz, 10dB typical |
| | GAP-802 | 9kHz to 3GHz, 20dB typical |
| Connection | <ol style="list-style-type: none"> 1. Connect the pre-amplifier between the input terminal and DUT signal output. 2. Connect the pre-amplifier power input to the GSP-830 DC 9V output. | |

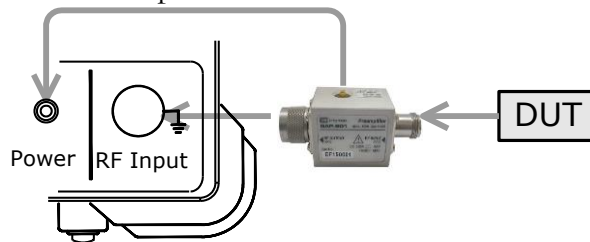


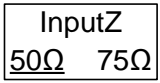


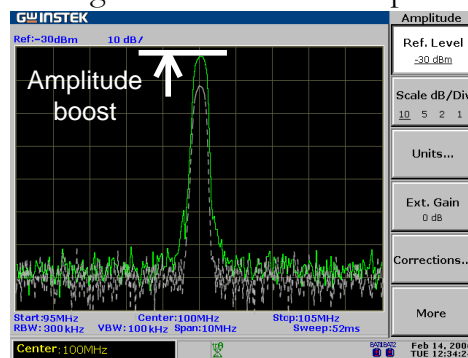

3. The signal level becomes amplified.


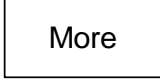

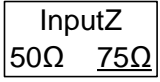

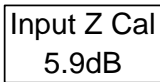




Set Input Impedance

Select input impedance (50Ω/75Ω)


| | | |
|-----------------|---|---|
| Background | In most cases, the default 50Ω is appropriate. Use 75Ω when specifically required, such as in cable TV signals. | |
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F1 (Input Z 50Ω/75Ω) to select the impedance. |   |
| | 4. When 75Ω is selected, the amplitude icon appears at the bottom of the display. |  |

Set impedance offset (75Ω only)

| | | |
|-----------------|--|---|
| Background | Impedance transformation to 75 Ω is also available through external devices such as impedance converter module (optional accessory ADP-101). In these cases an external loss will be induced. Impedance offset can compensate this effect. | |
| Panel operation | 1. Press the Amplitude key. |  |
| | 2. Press F6 (More). |   |
| | 3. Make sure 75Ω is selected in F1 (Input Z). |   |
| | 4. Press F2 (Input Z Cal). |   |
| | 5. Enter the offset using the Numerical keys and dB or Enter key. |  |
| Range | -10dB to +10dB, 0.1dB resolution | |

AUTOSET

The **Autoset** function checks input signal characteristics and automatically searches the maximum peak signal, then sets up the suitable horizontal and vertical scale. The amplitude floor (which limits the search range) and frequency observation span (which limits the viewing range) are configurable according to the application needs.

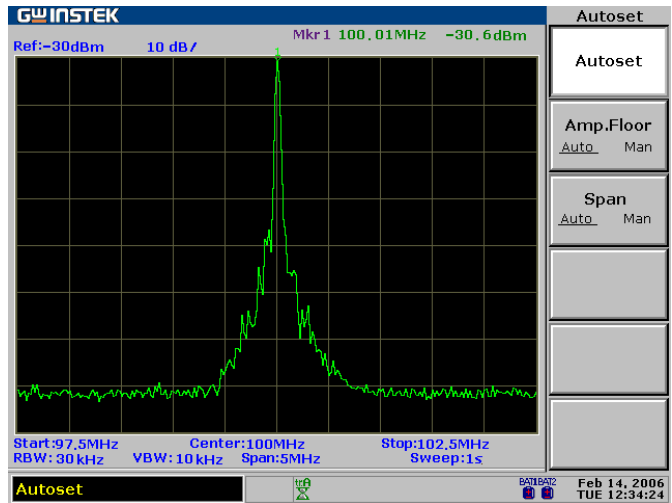


| | | |
|--------------------|-----------------------------------|----|
| Overview | How Autoset Works | 59 |
| Run | Run Autoset..... | 60 |
| Limit Range | Limit vertical search range..... | 61 |
| | Limit horizontal view range | 61 |

How Autoset Works

Description The Autoset function searches the peak signals in two stages (full span & 0Hz - 100MHz limited span), picks up the signal peak with the maximum amplitude, and then shows it in the display. The following flowchart graphically shows the simplified procedures.

Flowchart

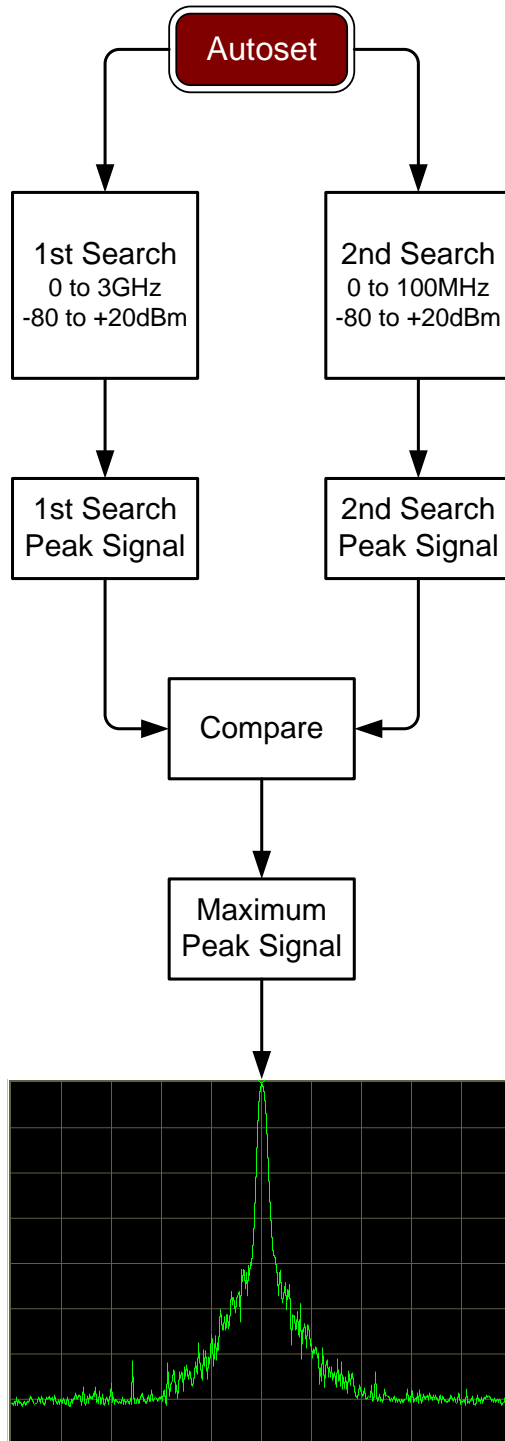

Run Autoset

Panel operation

1. Press the Autoset key.



2. Press F1 (Autoset).



Search range


| | | |
|-----------|------|---------------------|
| Amplitude | dBm | -80 to +20dBm |
| | dBmV | -33.01to+66.99dBmV |
| | dBuV | +26.99to+126.99dBuV |

Frequency 0kHz to 3.0GHz

* These ranges are applicable when both Amplitude floor (F2) and Span limit (F3) are set to Auto.


Example: before Autoset

| | |
|--------------------------|-------------------------|
| Start frequency: 0kHz | Stop frequency: 3GHz |
| Span: 3GHz | Signal peak: 100MHz |
| Center frequency: 1.5GHz | Reference level: -30dBm |

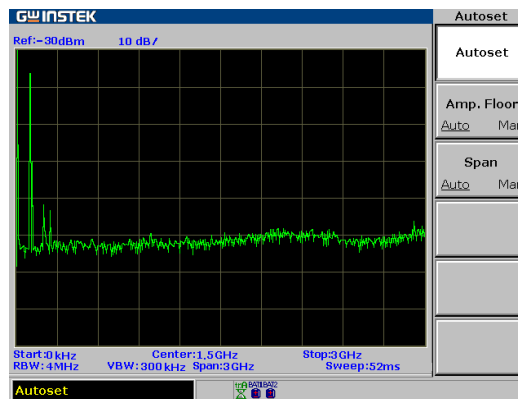

Example: after Autoset

| | |
|--------------------------|--------------------------|
| Start frequency: 97.5MHz | Stop frequency: 102.5MHz |
| Span: 5MHz | Signal peak: 100MHz |
| Center frequency: 100MHz | Reference level: -30dBm |

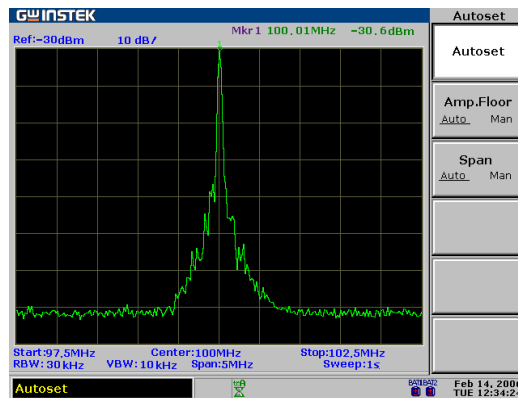




RBW/VBW/Sweep after Autoset All the three BW related parameters, RBW, VBW, and Sweep, will be reset to Auto mode when using Autoset, regardless of their previous settings.



Limit vertical search range




Background You can set the amplitude floor so that the signals lower than the setting will be ignored by the Autoset search.

- Panel operation**
1. Press the Autoset key. 
 2. Press F2 (Amp. Floor) to switch the range from Auto (whole range) to manual (limited range). 
 3. Enter the amplitude in dB using the Numerical keys and dB or Enter key. The Command window shows the setting. 

| | | |
|---|-------------|--|
| Range | dBm | -80 to +20dBm, 0.1dB resolution |
| | dBmV | -33.01 to +66.99dBmV, 0.01dB resolution |
| | dBuV | +26.99 to +126.99dBuV, 0.01dB resolution |
| See page50 for selecting amplitude units. | | |

Limit horizontal view range

Background You can change the frequency span limit in the display to get a better view of the Autoset result. By default, the frequency span after Autoset is set at 3MHz (Auto).


- Panel operation**
1. Press the Autoset key. 
 2. Press F3 (Span) to switch the range between Auto (3MHz fixed limit) to Manual. 
 3. Enter the frequency using the Numerical and Unit keys. 

| | |
|--------------|--|
| Range | Zero span, 2kHz to 3GHz (Manual) 3MHz fixed (Auto) |
|--------------|--|

M ARKER

A **Marker** shows the frequency and amplitude of a waveform point. The GSP-830 can activate up to 5 markers or marker pairs simultaneously. The marker table helps editing and viewing multiple markers in a single display. You can also enable/disable all markers at once. A delta marker shows the frequency and amplitude differences between the reference marker. The GSP-830 can automatically move a marker to various locations including peak signal, center frequency, and start/stop frequency. More marker operations regarding signal peaks are also available in the **Peak Search** function.

Marker

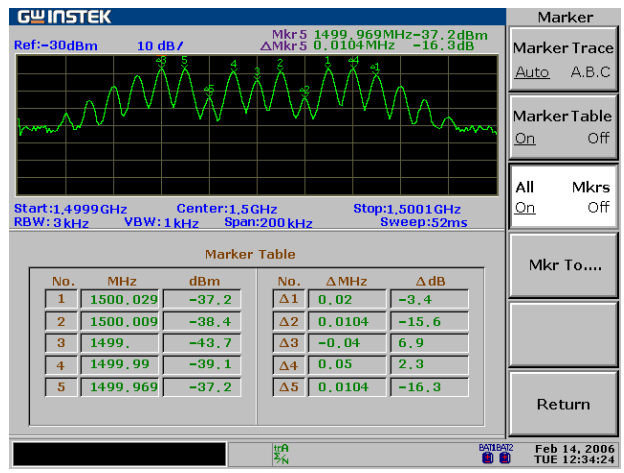
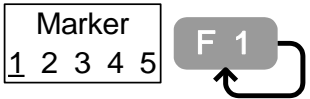
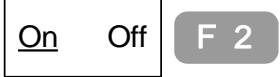
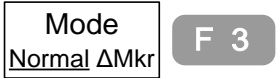


| | | |
|---------------------------|---|----|
| Activate Marker(s) | Activate normal marker | 63 |
| | Activate all 5 normal markers at once | 64 |
| | Activate delta marker | 64 |
| Move Marker(s) | Move marker manually | 65 |
| | Move marker to highest peak | 65 |
| | Move marker and highest peak to center..... | 66 |
| | Move marker to various locations | 66 |
| | Move marker to trace | 67 |
| Marker Table | Show Markers in Table..... | 67 |


Activate/de-activate marker

| | | |
|-----------|---|---------|
| Range | Normal marker | 5 |
| | Delta marker | 5 pairs |
| Amplitude | -120 to +20dBm, 0.1dB resolution -73.01 to +66.99dBmV, 0.01dB resolution -13.01 to +126.99dBuV, 0.01dB resolution | |
| Frequency | 0kHz to 3GHz | |




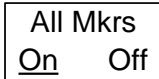

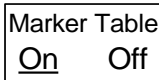

Activate normal marker

- Panel operation
1. Press the Marker key. 
 2. Press F1 (Marker) repeatedly to select the marker ID from 1 to 5. 
 3. Press F2 (On) and turn On the selected marker. 
 4. Make sure Normal is selected in F3. If necessary, press F3 and select it. 
 5. Repeat the above steps for the number of markers required.

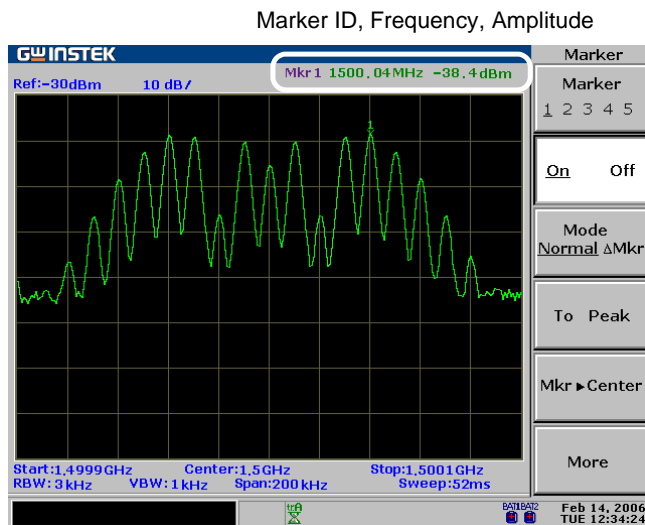
Display The upper right corner of the display shows the active marker.




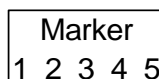

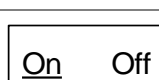

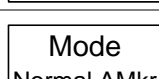

Activate all 5 normal markers at once

- Panel operation
1. Press the Marker key. 
 2. Press F6 (More).  
 3. Press F3 (All Mkrs On) to turn On all 5 normal markers.  
 4. To view all marker status, press F2 (Marker Table On). The frequency and the amplitude of the markers appear in table list.  

Display The marker table shows all 5 marker frequencies and amplitudes.

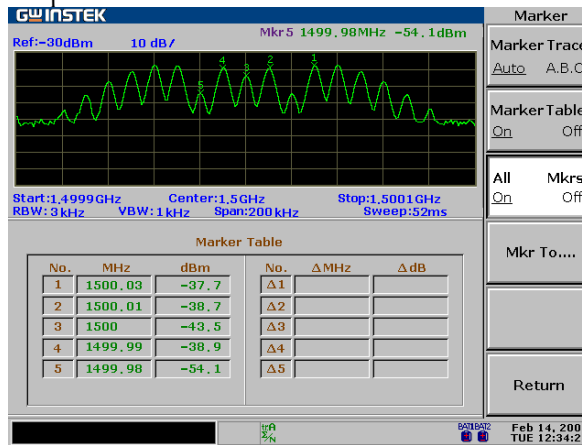

Activate delta marker



- Panel operation
1. Press the Marker key. 
 2. Press F1 (Marker) repeatedly to select the marker ID from 1 to 5.  
 3. Press F2 (On) and turn on the selected marker.  
 4. Make sure Δ Mkr is selected in F3. If necessary, press F3 and select Δ Mkr.  
 5. Repeat the above steps for the number of markers required.

Display The upper right corner of the display shows the active delta marker pair.








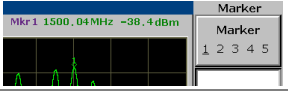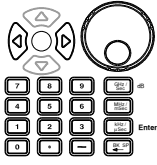

Move marker

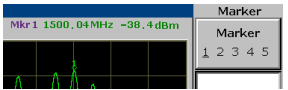This section assumes at least one marker is already activated (page63). Marker frequency positions can be set manually, or can be automatically positioned at specific locations using the menu shortcuts.







Move marker manually

| | | |
|-----------------|--|---|
| Panel operation | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Move the marker using the Left/Right keys and Scroll knob, or directly enter the frequency using the Numerical and Unit keys. |  |



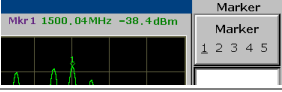






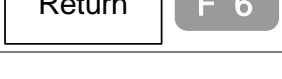
Move marker to highest peak

| | | |
|---------------------------------------|---|---|
| Method 1 | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F4 (To Peak). |  |
| Method 2 | 1. Alternatively, press the Peak Search key. |  |
| | 2. Press F1 (Pk Search). |  |
| Method 3 (marker tracked to the peak) | 1. Another method moves marker to the peak and also tracks it. Press the Peak Search key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F4 and select Track On. The marker is tracked to the peak. |  |
| | 4. The peak tracking icon appears at the bottom of the display. |  |





Move marker and highest peak to center

| | | |
|----------|--|---|
| Method 1 | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F4 (To Peak). The marker moves to the signal peak. |  |
| | 4. Press F5 (Mkr→Center). The signal peak moves to the center. |  |
| Method 2 | 1. Alternatively, press the Peak Search key. |  |
| | 2. Press F5 (Mkr→Center). The signal peak moves to the peak, then to the display center. |  |





Move marker to various locations
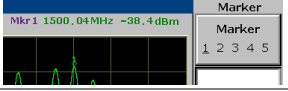
| | | |
|-----------------|--|---|
| Panel operation | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F6 (More). |  |
| | 4. Press F4 (Mkr to...) |  |
| | 5. Select the destination and press F1 (Center) to F5 (Ref Lvl). |      |
| | 6. Press F6 (Return) to go back to the previous menu. |  |


Move marker to trace

| | | |
|-----------------|--|---|
| Panel operation | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F6 (More). |  |
| | 4. Press F1 (Marker Trace). |  |
| Range | Auto | The marker moves to the active signal/trace. |
| | TraceA | The marker moves to TraceA. |
| | TraceB | The marker moves to TraceB. |
| | TraceC | The marker moves to TraceC. |

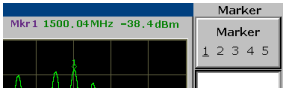Show Markers in Table

| | | |
|-----------------|---|---|
| Panel operation | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F6 (More). |  |
| | 4. Press F2 (Marker Table On). |  |
| | 5. The marker ID, frequency, and amplitude list appears in the lower half of the display, updated in real time. | |

Display

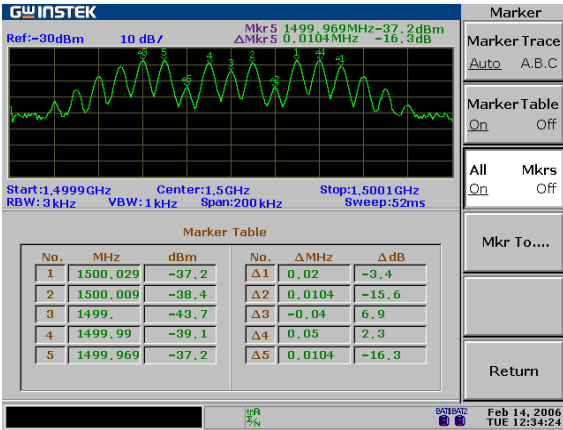


| No. | MHz | dBm | No. | ΔMHz | ΔdB |
|-----|----------|-------|-----|--------|-------|
| 1 | 1500.029 | -37.2 | Δ1 | 0.02 | -3.4 |
| 2 | 1500.009 | -38.4 | Δ2 | 0.0104 | -15.6 |
| 3 | 1499. | -43.7 | Δ3 | -0.04 | 6.9 |
| 4 | 1499.99 | -39.1 | Δ4 | 0.05 | 2.3 |
| 5 | 1499.969 | -37.2 | Δ5 | 0.0104 | -16.3 |

PEAK SEARCH

The **Peak search** function automatically locates signal peaks in various conditions, such as in next highest peak and minimum peak. The Peak Search overlaps its feature with the **Marker** function, and it is best to use the two together. All peaks can be viewed at once using the peak table, with configurable amplitude threshold and sorting order.


Peak Search

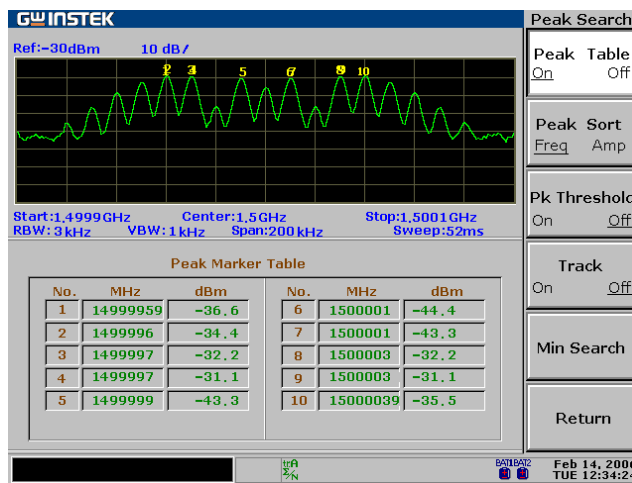


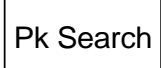







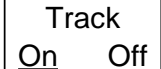

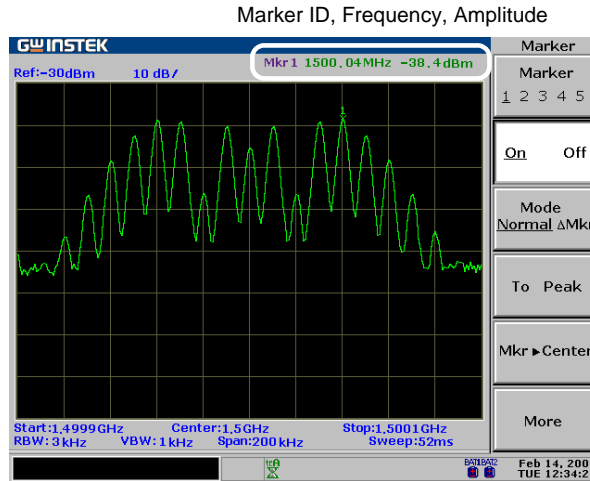
| | | |
|----------------------------|--|----|
| Search Signal Peaks | Search signal peak..... | 69 |
| | Search next highest peak | 70 |
| | Search highest peak and move to center | 70 |
| | Search minimum amplitude | 71 |
| Show Peak Table | Activate peak table..... | 71 |
| | Set peak threshold | 72 |
| | Sort peak | 72 |

Search Signal Peak

Peak Search puts a marker on the target signal peak. If no marker has been activated, the GSP-830 automatically activates marker 1. The peak signal frequency and amplitude appear at the top right corner of the display.

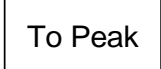

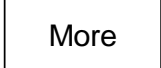Search signal peak

| | | |
|---------------------------------------|---|---|
| Method 1 | 1. Press the Peak Search key. |  |
| | 2. Press F1 (Pk Search). |   |
| Method 2 | 1. Make sure that the marker is already activated. If not, press the Marker key. |  |
| | 2. Press F4 (To Peak). |   |
| Method 3 (marker tracked to the peak) | 1. Another method continuously tracks the peak signal. Press the Peak Search key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F4 (Track On). The marker is tracked to the peak signal. |   |
| | 4. The peak tracking icon appears at the bottom of the display. |  |

Search next highest peak


The marker keeps moving to the next highest peak, in descending order.

Panel operation


1. Press the Peak Search key.



2. Press F2 to F4 repeatedly.
Next Peak moves the marker to the next highest peak.
Next Pk Right moves the marker to the next highest peak on the right side (higher frequency).
Next Pk Left moves the marker to the next highest peak on the left side (lower frequency).

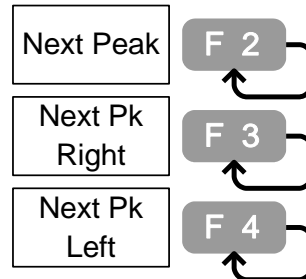

Display

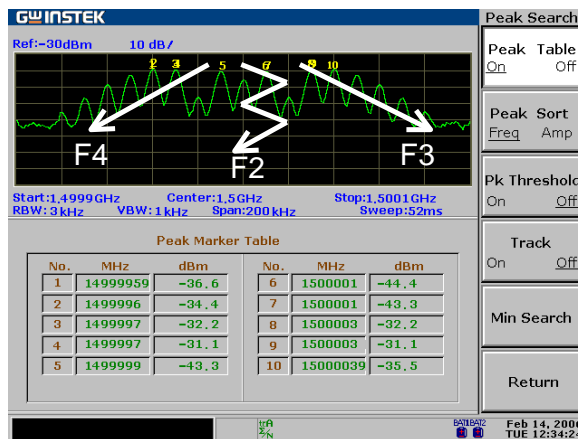

Search highest peak and move to center

Method 1

1. Press the Peak Search key.



2. Press F1 (Pk Search).





Method 2

1. Make sure that the marker is already activated. If not, press the Marker key.
2. Press F4 (To Peak).
3. Press F5 (Mkr to Center).



Search minimum amplitude



 
- Panel operation
1. Press the Peak Search key.
 2. Press F6 (More).
 3. Press F5 (Min Search). The active marker moves to the deepest valley in the trace.

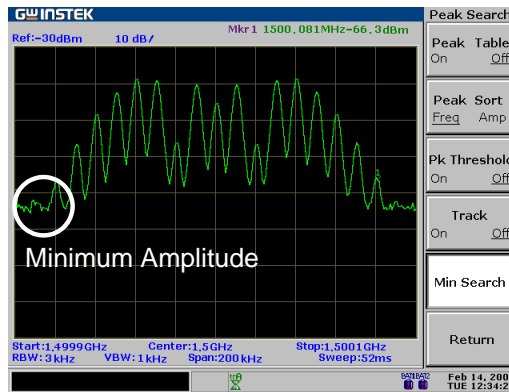

Show Peak Table

  Activate peak table


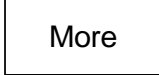


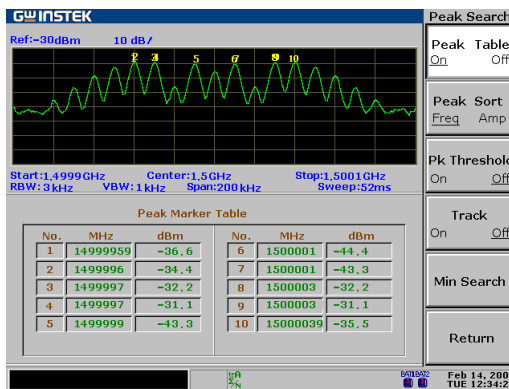
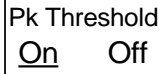



- Panel operation
1. Press the Peak Search key.
 2. Press F6 (More).
 3. Press F1 (Peak Table On). The peak table appears in the lower half of the display.



Range 10 peaks maximum


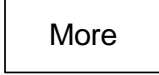

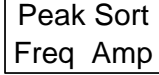

Set peak threshold

Only the peaks below the threshold amplitude will be listed in the table.


- | | | |
|-----------------|---|---|
| Panel operation | 1. Press the Peak Search key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F1 (Peak Table On). |   |
| | 4. Press F3 (Pk Threshold On). |   |
| | 5. A horizontal line appears on the display. The GSP-830 searches and lists the peaks below this threshold amplitude. | |
| | 6. Use the Arrow keys or the Scroll knob to move the threshold line. |   |

Sort peak

The peaks are sorted in ascending frequency or descending amplitude order.

- | | | |
|-----------------|--|---|
| Panel operation | 1. Press the Peak Search key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F2 (Peak Sort) to switch between frequency and amplitude sorting. |   |



Example: amplitude sort

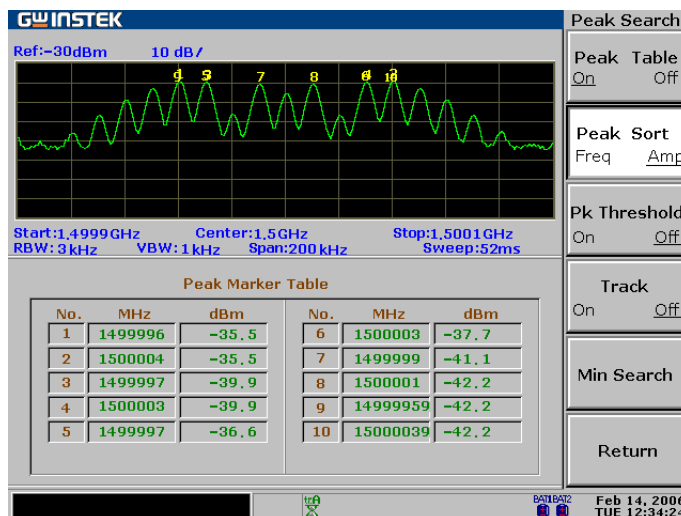

T RACE

 A **Trace** keeps track of waveform variants. Three traces, A, B, and C, are available for accumulating the peak level, freezing the current waveform shape, and averaging the waveform. Trace math operations are available using trace A and B.


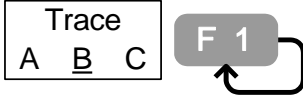
Detection modes configure the way the GSP-830 samples the input analog signal for digitizing.

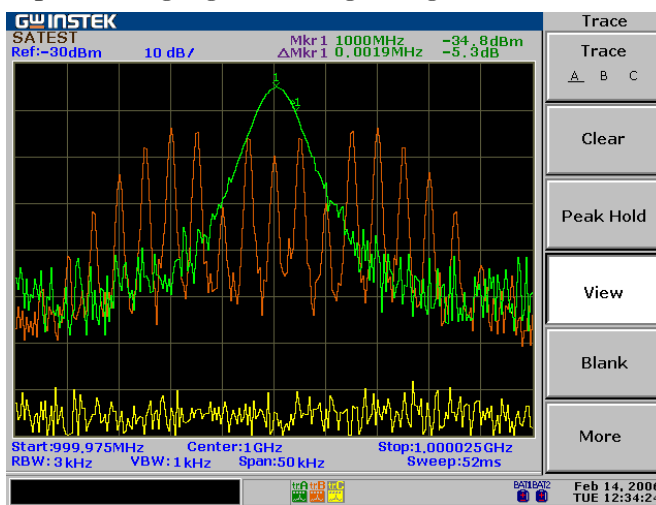




| | | |
|-----------------------|--|----|
| View Trace | Select (activate) trace | 74 |
| | View real-time updated trace (default) | 74 |
| | View peak-hold trace | 74 |
| | Freeze trace | 75 |
| | Hide trace | 75 |
| Move Trace | View averaged trace | 75 |
| | Move Marker to Trace | 76 |
| Trace Math | Save/copy/delete/rename trace file | 77 |
| | Run Trace Math | 78 |
| Detection Mode | Select Signal Detection Mode | 80 |

View traced waveform




Select (activate) trace

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F1 (Trace) repeatedly to select the trace. |  |
| Range | A (green) | The default trace which is always activated. Together with trace B, runs trace math operation (page78). |
| | B (amber) | Together with trace A, runs trace math operation (page78). |
| | C (yellow) | |


View real-time updated trace (default)

| | | |
|-----------------|---|---|
| Background | The trace is updated at every sweep. The old trace is cleared up and a new trace is drawn on the display according to the latest measurement. | |
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F2 (Clear). |  |
| | 3. The clear mode icon appears at the bottom of the display. |  |

View peak-hold trace


| | | |
|-----------------|--|---|
| Background | In the peak hold mode, the amplitude of the new trace is compared with the last one at each sweep. Only the higher amplitude replaces old trace points, thus holding the highest (peak) value. | |
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F3 (Peak Hold). |  |
| | 3. The peak hold trace icon appears at the bottom of the display. |  |

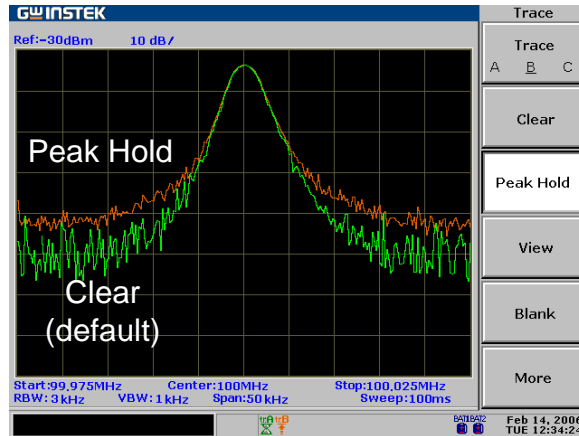

Display




Freeze trace

Panel operation


1. Press the Trace key. 



2. Press F4 (View). The trace shape and location becomes fixed.  



3. The view mode (freeze) icon appears at the bottom of the display. 

Hide trace

Panel operation


1. Press the Trace key. 



2. Press F5 (Blank). The trace disappears from the display.  



3. To bring back the trace again, press F2 (Clear).  


View averaged trace





Panel operation (Method1)

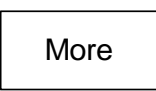1. Press the Trace key. 

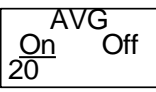
2. Press F6 (More).  

3. Press F1 (AVG On) to turn on the average mode.  



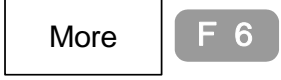

4. The average mode icon appears at the bottom of the display. 
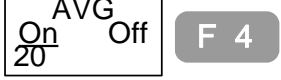
| | | |
|---------------------------|---|---|
| | 5. Enter the average number using the Numerical keys and Enter key. |  |
| Panel operation (Method2) | 1. Press the BW key. |  |
| | 2. Press F4 (AVG On) to turn on averaging. |  |
| | 3. Enter the average time using the numerical keys and Enter key. |  |
| Range | 1 to 200 | |

Example: after average

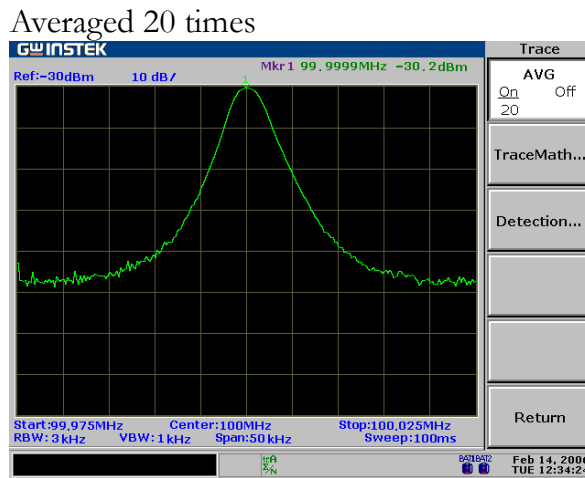


Move Marker to Trace
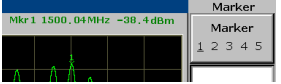
| | | |
|-----------------|--|---|
| Panel operation | 1. Check the active marker at the top right corner of the display. |  |
| | 2. Press the Marker key. |  |
| | 3. Press F6 (More). |  |
| | 4. Press F1 (Marker Trace). |  |
| Range | Auto | The marker moves to the active signal or trace. |
| | TraceA | The marker moves to TraceA. |
| | TraceB | The marker moves to TraceB. |
| | TraceC | The marker moves to TraceC. |

Display

Marker on TraceC

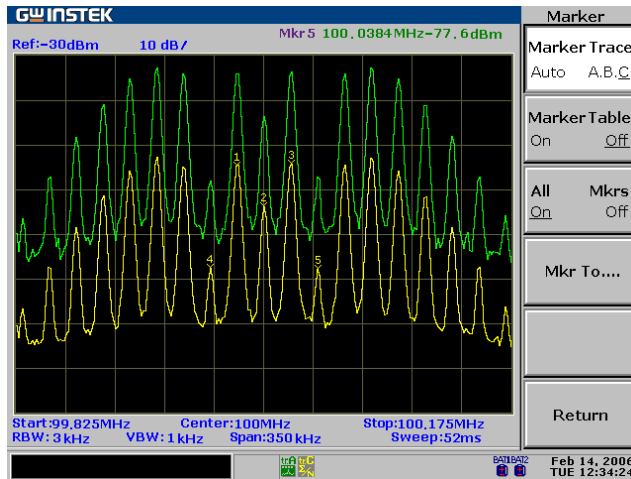

Save/copy/delete/rename trace file

 
Background

Trace files can be saved, copied, deleted, or renamed using the file utility. Press the File key to access each function.




Save/Copy

Press F1 (Copy). For detailed steps, see page 115.




Delete

  Press F2 (Delete). For detailed steps, see page 118.




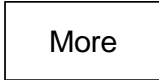





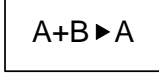

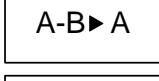

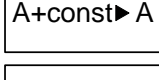





Rename

Press F3 (Rename). For detailed steps, see page 120.




Run Trace Math



Background Various mathematical operations are available using trace A and trace B. Both traces have to be activated in advance (page74). After the math operation, the trace mode changes into the View mode (page75).

- | | | |
|------------------------|---|---|
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F2 (Trace Math). |   |
| | 4. Select and press the type of math operation from F1 to F5. A↔B : Swaps trace A and B. A+B→A : Adds trace A and B. A-B→A : Subtracts trace B from trace A. A+const→A : Adds a constant value to trace A. A-const→A : Subtracts a constant value from trace A. |           |
| | 5. When A+const / A-const are selected, enter the constant value using the Numerical keys and dB or Enter key. Range: -40 to +40dB |  |
| | 6. The trace math icon appears at the bottom of the display. |  |



Example: A↔B

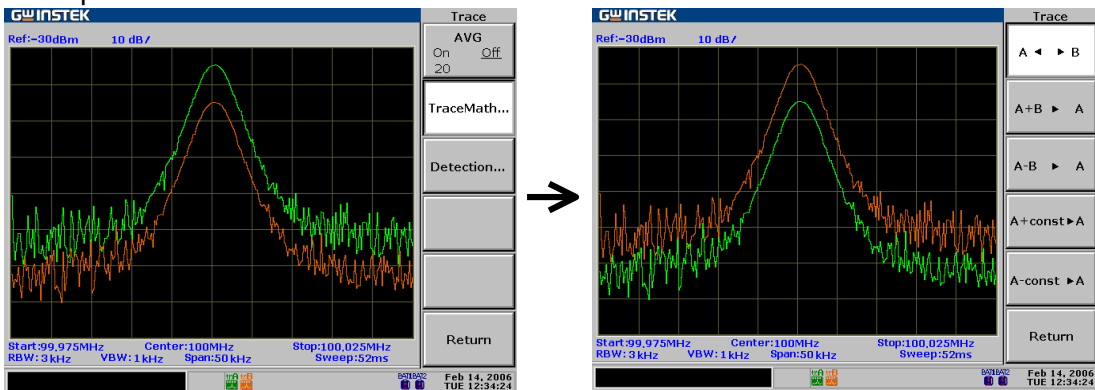



Example: $A+B \rightarrow A$

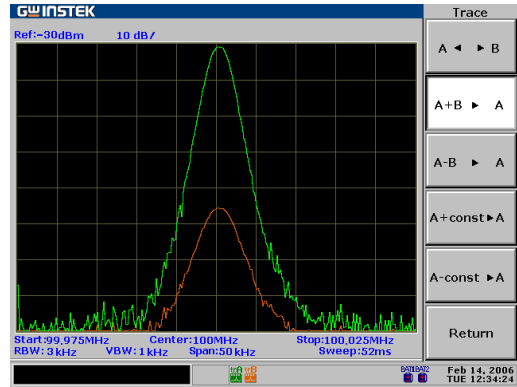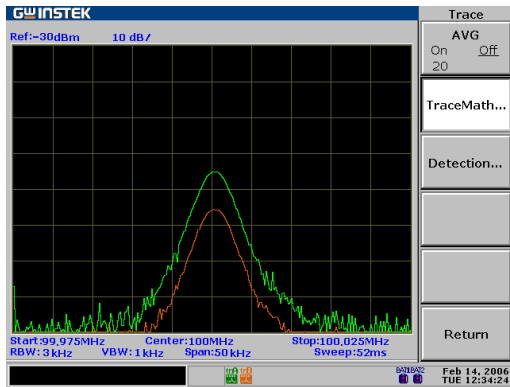



Example: $A-B \rightarrow A$

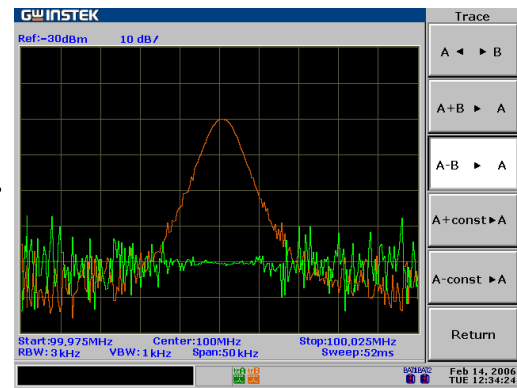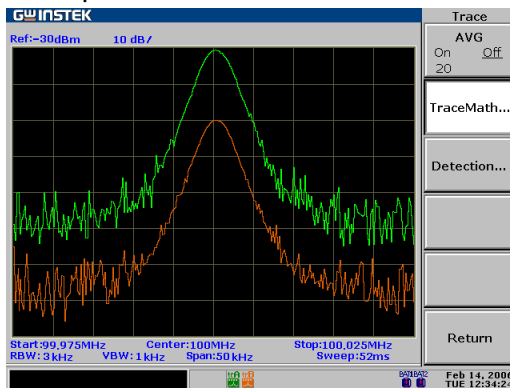

Example: $A+\text{constant} \rightarrow A$ (5 dB)

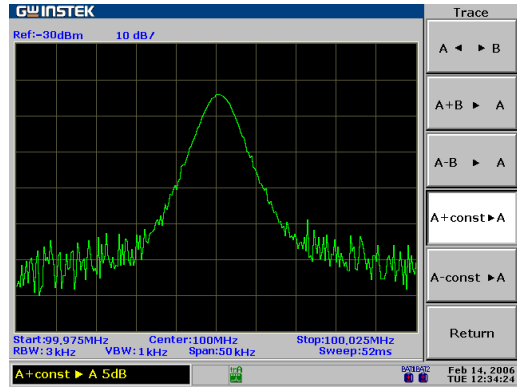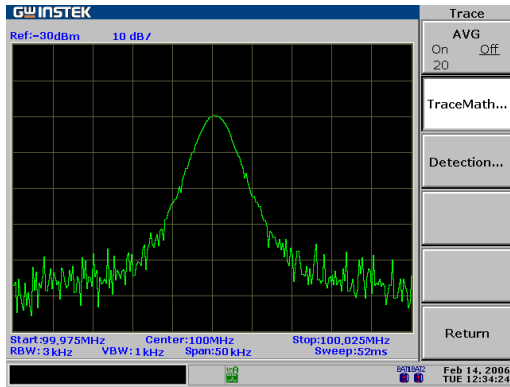

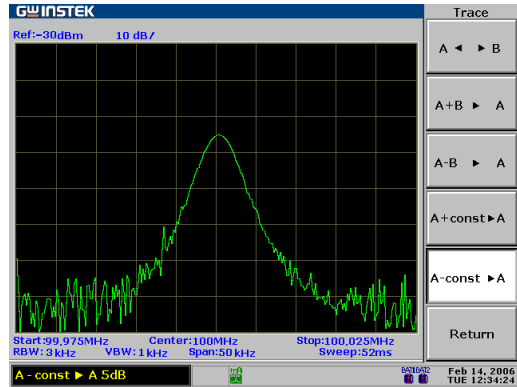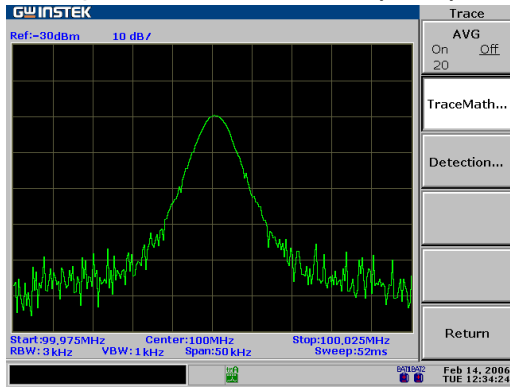


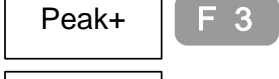
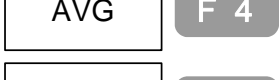

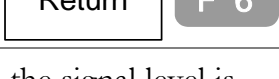


Example: $A-\text{constant} \rightarrow A$ (5 dB)



Select Signal Detection Mode

Background In order to show the incoming signal on the display, the GSP-830 first converts the input signal to a video signal, digitizes it, then uses a detector to pick up the samples for display. By configuring the detection mode, certain signals can be viewed more clearly and/or sharply.

| | | |
|---|---|--|
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F3 (Detection). |  |
| | 4. Select the signal detection type from F1 to F5 and press it. See below for the description of each type. |  |
| | |  |
|  | | |
|  | | |
|  | | |
| 5. Press F6 (Return) to go back to the previous menu. |  | |


| | | |
|------------------|------------------------------|--|
| Parameter | Normal | The default mode. When the signal level is constantly increasing or decreasing, the positive peaks are detected. Otherwise, detecting mode switches between positive peak and negative peaks. Useful for picking up burst phenomenon while avoiding excessive noise. |
| | Sample | Detects signals randomly. Useful when detecting noise-like signals, but tends to miss burst phenomenon. |
| | Peak+ (positive peak) | Detects positive peak signals. Useful for detecting sinusoid signals, but tends to pick up more noise than other modes. |

AVG
(average) Available when the optional EMI filter is installed. Detects the average power level of the samples using low pass filter. Useful for reducing the noise level. For EMI filter details, see page146.


QPeak
(quasi-peak) Available when the optional EMI filter is is installed. Detects the quasi-peak power level of the samples. Useful for viewing in zero span without missing signal variations. For EMI filter details, see page146.

Example


Normal detection mode

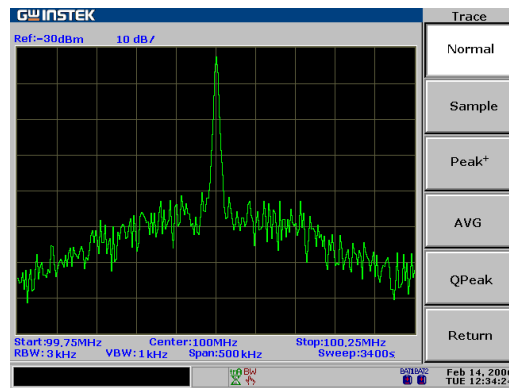

Sample detection mode


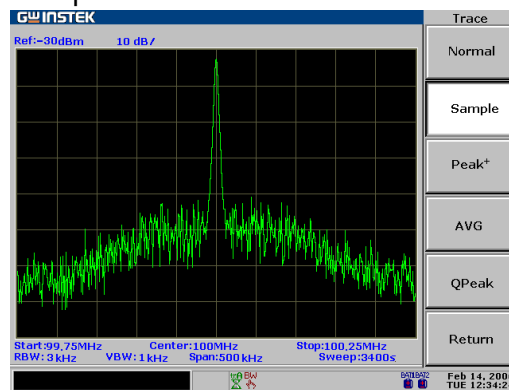


Peak+ detection mode

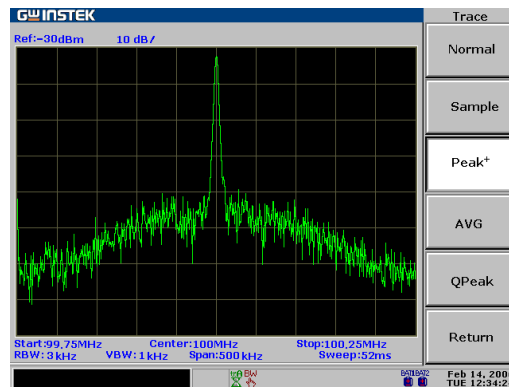

POWER MEASUREMENT

 The **Power Measurement** function includes four types of frequently used complex measurement procedures: ACPR, OCBW, N dB, and Phase Jitter. Each item is configurable and updated in real-time.

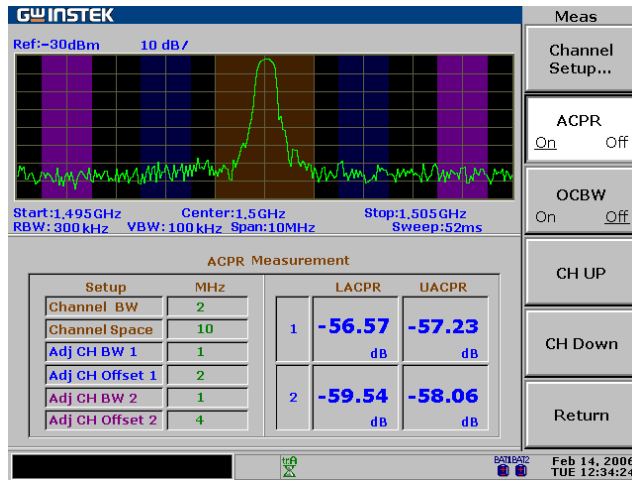

| | | |
|---------------------|-------------------------------|----|
| ACPR | Overview..... | 83 |
| | ACPR measurement step | 83 |
| OCBW | Overview..... | 86 |
| | OCBW measurement step..... | 86 |
| N dB | N dB Measurement..... | 88 |
| Phase Jitter | Phase Jitter Measurement..... | 89 |



ACPR Measurement


Overview





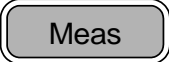

Background ACPR (Adjacent Channel Power Ratio), or ACLR (Adjacent Channel Leakage Ratio), refers to the amount of leakage power coming from the main radio channel which affects adjacent channels as signal distortion.
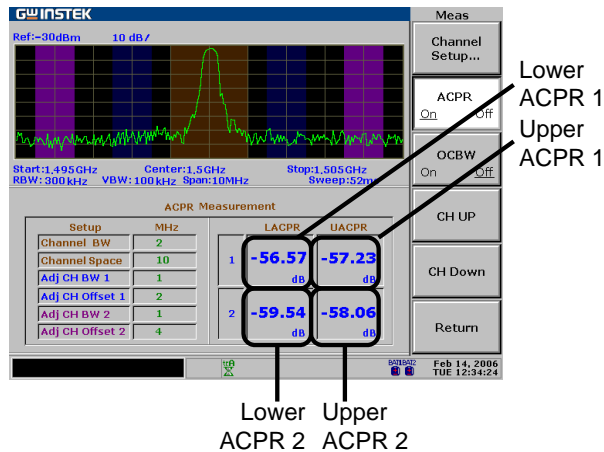
| | | |
|------------------|---|---|
| Parameter | Channel bandwidth | The frequency bandwidth the target channel occupies. Range: 0kHz to Current span |
| | Channel space | The frequency distance between each main channel. Range: 0kHz to 3GHz |
| | Adjacent channel bandwidth 1 & 2 | The frequency bandwidth the adjacent channels occupy. Range: 1kHz to 3GHz |
| | Adjacent channel offset 1 & 2 | The frequency distance between the adjacent channels and main channel. Range: 1kHz to 3GHz |

ACPR measurement step







1. Activate ACPR
 1. Press the Measurement key. 
 2. Press F2 (ACPR On). 
 3. The display switches to ACPR mode, updating the ACPR results in the lower half of the display.







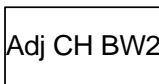

2. Set channel BW
1. Press F1 (Channel Setup).  
 2. Press F1 (CH BW).  
 3. Enter the channel BW using the Numerical and Unit keys. Range: 0kHz to Current span 
 4. The value is updated in the Channel BW column in MHz. 

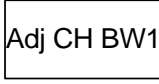
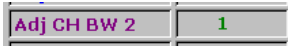




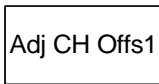



Note:

- If the span (page43) becomes less than the CHBW setting, the warning “Span is less than CHBW!” appears in the command window.
- If the CHBW is 0kHz, the warning “CHBW is zero!” appears in the command window.

3. Set adjacent channel1 bandwidth
1. Press F4 (ADJ CH Offset).  
 2. Press F1 (Adj CH BW1).  
 3. Enter the adjacent channel 1 bandwidth using the Numerical and Unit keys. Range: 1kHz to 3GHz 
 4. The value is updated in the Adj CH BW1 column in MHz. 

4. Set adjacent channel1 offset
1. Press F2 (Adj CH Offs1).  
 2. Enter the adjacent channel1 offset using the Numerical and Unit keys. Range: 1kHz to 3GHz 
 3. The value is updated in the Adj CH Offset1 column in MHz. 

5. Set adjacent channel2 bandwidth
1. Press F3 (Adj CH BW2).  
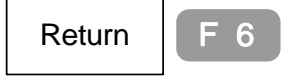
| | | | |
|---------------------------------|----|---|---|
| | 2. | Enter the adjacent channel2 bandwidth using the Numerical and Unit keys. Range: 1kHz to 3GHz |  |
| | 3. | The value is updated in the Adj CH BW2 column in MHz. |  |
| 6. Set adjacent channel2 offset | 1. | Press F4 (Adj CH Offs2). |  |
| | 2. | Enter the adjacent channel 2 offset using the Numerical and Unit keys. Range: 1kHz to 3GHz |  |
| | 3. | The value is updated in the Adj CH Offset2 column in MHz. |  |
| 7. Set channel space | 1. | Press F2 (Channel SPC). |  |
| | 2. | Enter the channel space using the Numerical and Unit keys. Range: 0kHz to 3GHz |  |
| | 3. | The value is updated in the Channel Space column in MHz. |  |
| 8. Move channel up/down | 1. | Press F6 (Return) twice. x2 |  |
| | 2. | Press F4 (CH Up) or F5 (CH Down) to switch the measurement to the next channel. |  |


OCBW Measurement

Overview


| | | |
|------------|--|---|
| Background | OCBW (OCcupied BandWidth) refers to the bandwidth of the channel that consumes (occupies) the specified amount of power. | |
| Parameter | Channel bandwidth | The frequency bandwidth that the target channel occupies. 0kHz to Current span |
| | Channel space | The frequency distance between each main channel. 0kHz to 3GHz |
| | OCBW % | The ratio of occupied bandwidth as the amount of power consumed. 0% to 100%, 0.1% resolution |

OCBW measurement step

 
1. Activate OCBW 1. Press the Measurement key.



 
2. Press F3 (OCBW On).



3. The display switches to OCBW mode, updating the OCBW result in the lower half of the display.

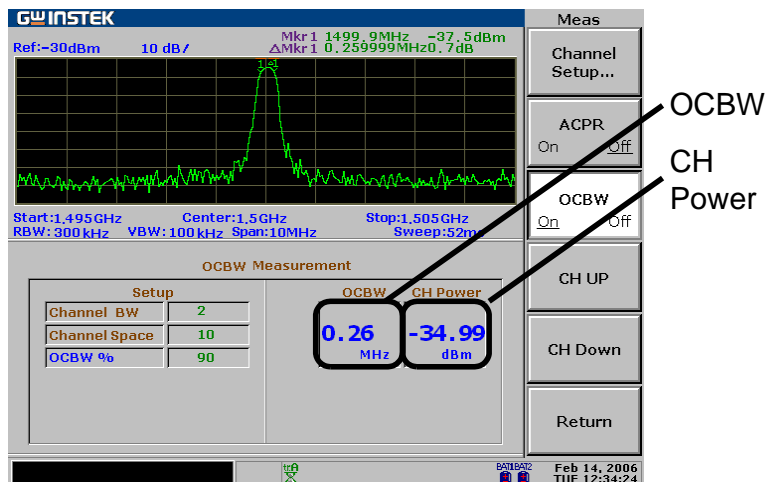

 2. Set channel BW 1. Press F1 (Channel Setup).



2. Press F1 (CH BW).



3. Enter the channel BW using the Numerical and Unit keys.
Range: 0kHz to Current span



 
4. The value is updated in the Channel BW column in MHz.



Note: • If the span (page43) becomes less than the CHBW setting, the warning “Span is less than CHBW!” appears in the command window.
• If the CHBW is 0kHz, the warning “CHBW is zero!” appears in the command window.

3. Set OCBW %

1. Press F3 (OCBW %).



2. Enter the OCBW % using the Numerical keys and Enter key.
Range: 0% to 100%



3. The value is updated in the OCBW % column.



4. Set channel space

1. Press F2 (Channel SPC).



2. Enter the channel space using the Numerical and Unit keys.
Range: 0kHz to 3GHz



3. Space column updates the value in MHz.

 


5. Move channel up/down

1. Press F6 (Return) twice.



2. Press F4 (CH Up) or F5 (CH Down) to switch the measurement to the next channel.




N dB Measurement

Background N dB refers to the frequency bandwidth of a channel that covers the specified amplitude.

Parameter N dB 0.1dB to 80dB, 0.1dB resolution

1. Activate N dB

 
1. Press the Measurement key.




2. Press F6 (More).



 3. Press F1 (N dB BW On).




4. The display switches to N dB mode, updating N dB result in the lower half of the display.

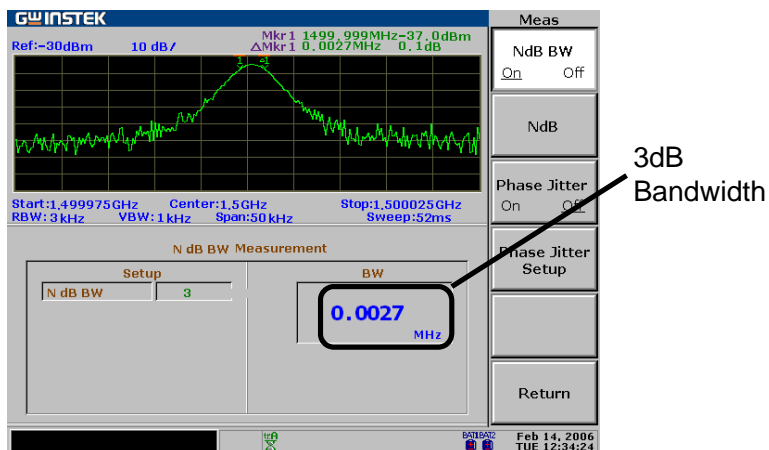

2. Set amplitude

 1. Press F2 (NdB) to set the amplitude which the BW covers.



2. Enter the amplitude using the Numerical keys and dB or Enter key.
Range: 0.1dB to 70dB



Phase Jitter Measurement

 
Background Phase Jitter refers to the amount of phase fluctuation that leads to shortening or lengthening the center frequency.

Parameter **Start offset** Beginning frequency offset in reference to the center frequency.
0kHz to 1/2 of span, 0.1MHz resolution

Stop offset End frequency offset in reference to the center frequency.
0kHz to 1/2 of span, 0.1MHz resolution

1. Activate Phase Jitter

1. Press the Measurement key.




2. Press F6 (More).



3. Press F3 (Phase Jitter On).




4. The display switches to Phase jitter mode, updating Phase jitter result in the lower half of the display.

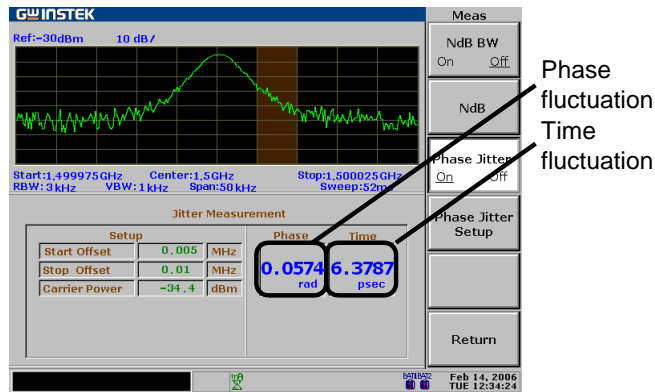

2. Set start/stop offset

 1. Press F4 (Phase Jitter Setup).



2. Press F1 (Start Offset) and F2 (Stop Offset) to set the amount of the beginning and end offset.




3. Enter the offset using the Numerical/Unit keys.
Range: 0kHz to 1/2 of span



LIMIT LINE

A **Limit Line** sets the upper and lower amplitude limit over the entire frequency range. Limit lines can be used to detect whether the input signal level is above, below, or within the specified amplitude. The result, pass or fail, is shown at the bottom of the display in real-time.

Limit Line

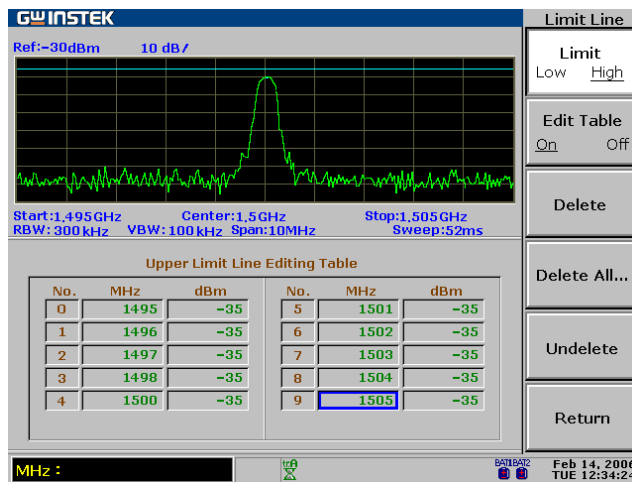

| | | |
|------------------------|---|----|
| Edit | Edit Limit Line | 91 |
| Pass/Fail Test | Run Pass/Fail test..... | 94 |
| Limit Line File | Save/copy/delete/rename limit line file | 94 |

Edit Limit Line

| | | |
|------------|---------------|---|
| Parameters | Editing point | Maximum 10 points for each limit line, high or low. |
| | Frequency | 9kHz to 3GHz per editing point. |
| | Amplitude | Per editing point: -130 to +20dBm -83.01dBmV to +66.99dBmV -23.01dBuV to +126.99dBuV |

1. Activate Limit Line

 - Press the Limit Line key.


Limit Line
 - Press F1 (H Limit On) and/or F2 (L Limit On) to activate the high and/or low limit line.

H Limit
 On Off

F 1

L Limit
 On Off

F 2
 - The limit line appears on the display.
 Blue: — H limit line
 Yellow: — L limit line

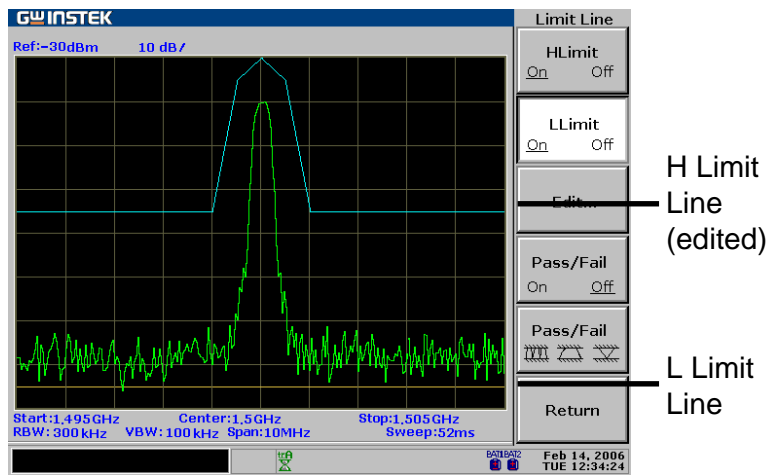

- 2a Activate limit line editing table

 - Press F3 (Edit).

Edit...


F 3
 - Press F1 (Limit) to select the limit line to be edited.

Limit
 Low High

F 1
 - Press F2 (Edit Table On). The editing table appears in the lower half of the display.

Edit Table
 On Off

F 2

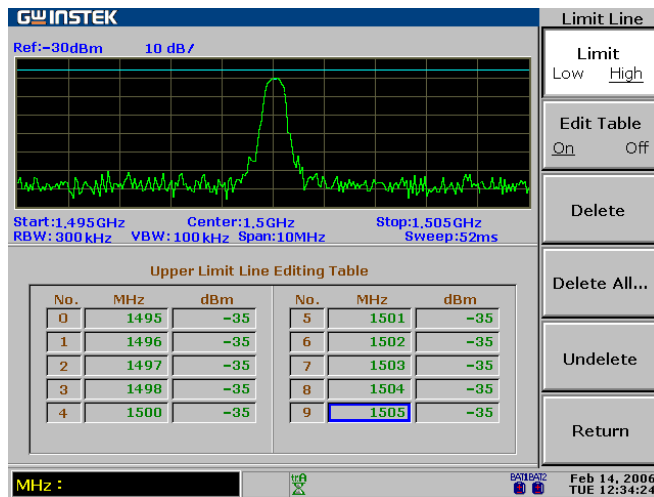

2b Deactivating limit line table

Press F2 (Edit Table Off). The editing table disappears and the edited contents will be saved.

Edit Table
On Off
F 2

3a. Add a limit line point

1. Make sure that the cursor is pointing to the first empty frequency point. Use the Up/Down keys to move the cursor, if necessary. 10 points are available for each high and low limit line.

| No. | MHz | dBm |
|-----|-----|-----|
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |



2. If necessary, move the cursor to different frequency points using the Arrow keys.



3. Enter the frequency using the Numerical and Unit keys. Range: 9kHz to 3GHz. The value is displayed in MHz.



4. The cursor automatically moves to the dBm side. Enter the gain in using the Numerical keys and dB or Enter key. Range: -130dBm to +20dBm

| No. | MHz | dBm |
|-----|-----|-----|
| 1 | | 98 |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |

5. Continue the above steps for the number of points required.

3b. Delete a limit line point

1. Move the cursor using the Arrow keys.



2. Press F3 (Delete) to delete the point (frequency and amplitude together).

Delete
F 3

| No. | MHz | dBm | | No. | MHz | dBm |
|-----|-----|-----|---|-----|-----|-----|
| 1 | 98 | -40 | → | 1 | 98 | -40 |
| 2 | 100 | -30 | | 2 | 102 | -40 |
| 3 | 102 | -40 | | 3 | | |
| 4 | | | | 4 | | |
| 5 | | | | 5 | | |


- | | | |
|--------------------------------------|---|---|
| 3. | To undo deletion, press F5 (Undelete). | Undelete <input type="button" value="F 5"/> |
| <hr/> | | |
| 3c. Delete the whole limit line data | 1. Press F4 (Delete All). | Delete All.. <input type="button" value="F 4"/> |
| | 2. Press F1 (No) or F2 (Yes) to confirm deletion. All 10 limit line points will be deleted at once. | No <input type="button" value="F 1"/> Yes <input type="button" value="F 2"/> |
| | 3. Press F6 (Return) to go back to the previous menu. | Return <input type="button" value="F 6"/> |
| | 4. To undo deletion, press F5 (Undelete). | Undelete <input type="button" value="F 5"/> |
| <hr/> | | |
| 4. Switch upper/lower limit line | If necessary, press F1 (Limit) to start editing the other limit line. Repeat the above steps. | Limit Low High <input type="button" value="F 1"/> |

Example

High Limit Line




| Point No. | Frequency (MHz) | Amplitude (dBm) |
|-----------|-----------------|-----------------|
| 1 | 98MHz | -40dBm |
| 2 | 100MHz | -30dBm |
| 3 | 102MHz | -40dBm |


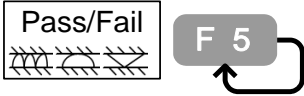
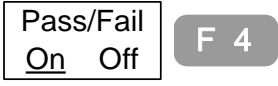

Resulted line

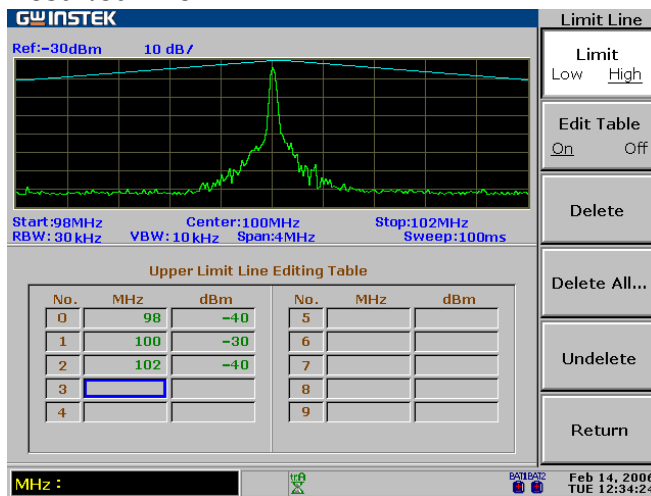

Run Pass/Fail test

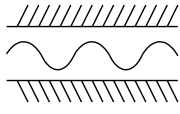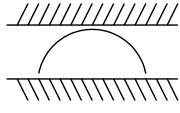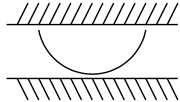


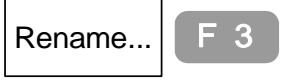
This section assumes that the limit line is already defined.

| | | |
|---------------------|---|--|
| Pass/Fail condition |  | Checks whether the entire waveform amplitude stays between the high limit and low limit lines. |
| |  | Checks whether the peak waveform amplitude stays between the high and low limit lines. |
| |  | Checks whether the waveform valleys stay between the high and low limit lines. |

| | | |
|-----------------------|---|---|
| 1. Select condition | 1. Press the Limit Line key. |  |
| | 2. Press F5 (Pass/Fail) repeatedly to select the condition. |  |
| 2. Run Pass/Fail test | 1. Press F4 (Pass/Fail On) to activate the test. |  |
| | 2. The test result appears at the bottom of the display. |  |


Note If the limit lines are not defined, the Pass/Fail test uses the highest or lowest display level as the limit line.

Save/copy/delete/rename limit line file

| | | |
|------------|--|---|
| Background | Limit line files can be saved, copied, deleted, or renamed using the file utility. Press the File key to access each function. |  |
| Save/Copy | Press F1 (Copy). For detailed steps, see page115. |  |
| Delete | Press F2 (Delete). For detailed steps, see page118. |  |
| Rename | Press F3 (Rename). For detailed steps, see page120. |  |

BANDWIDTH


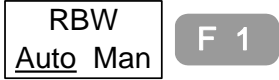


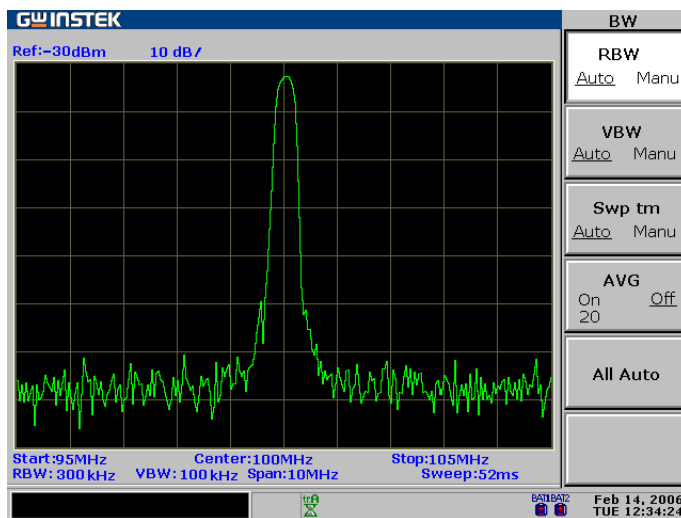The **BW (BandWidth)** feature configures how narrow the GSP-830 can sort out different signal peaks (resolution), and how fast the display can be updated (sweep time). Averaging the waveform is also available for smoothing noise level. The resolution, sweep time, and averaging are in a trade-off relationship, so configuration should be done with care.




| | | |
|-------------------|---|-----|
| RBW/VBW | Select RBW (Resolution BandWidth) | 96 |
| | Select VBW (Video BandWidth) | 98 |
| | RBW/VBW Auto Mode Contents | 99 |
| Sweep Time | Set Sweep time..... | 101 |
| Average | Average Waveform..... | 101 |
| Reset | Reset RBW/VBW/sweep time to auto..... | 102 |

Select RBW (Resolution BandWidth)

Background RBW (Resolution Bandwidth) defines the width of the IF (intermediate frequency) filter that is used to separate signal peaks from one another. The narrower the RBW, the greater the capability to separate signals at close frequencies. But it also makes the sweep time longer under specific frequency span (the display is updated less frequently). See page99 for suitable RBW selection.

- Panel operation**
1. Press the BW key. 
 2. Press F1 (RBW) to select Auto or Manual. 
 3. When Man (manual) is selected, use the Arrow keys or Scroll knob to select the RBW. The selected RBW appears in the command window.  

| | | |
|-------------|--|---|
| Mode | Auto | RBW is automatically selected. See page99 for the setting. |
| | Manual  | RBW is manually selected. The BW icon appears at the bottom of the display. |

Range See page99 for RBW reference setting according to the frequency span.


| RBW | Recommended span | Standard/ Optional |
|--------|--------------------|---------------------------------|
| 300Hz | Span<30kHz | Optional (300Hz RBW) |
| 3kHz | Span<300kHz | Standard |
| 9kHz | 300kHz≤Span<600kHz | Optional (EMI Filter - page146) |
| 10kHz | 300kHz≤Span<1MHz | Optional (10k/100kHz RBW) |
| 30kHz | 300kHz≤Span<6MHz | Standard |
| 100kHz | 6MHz≤Span<20MHz | Optional (10k/100kHz RBW) |
| 120kHz | 6MHz≤Span<19MHz | Optional (EMI Filter – page146) |

300kHz 6MHz≤Span<60MHz Standard


4MHz 60MHz≤Span Standard

Check RBW installation status

 
1. Press the System key.



 2. Press F6 (More).




3. Press F4 (System Config On) to show the system configuration in the display.

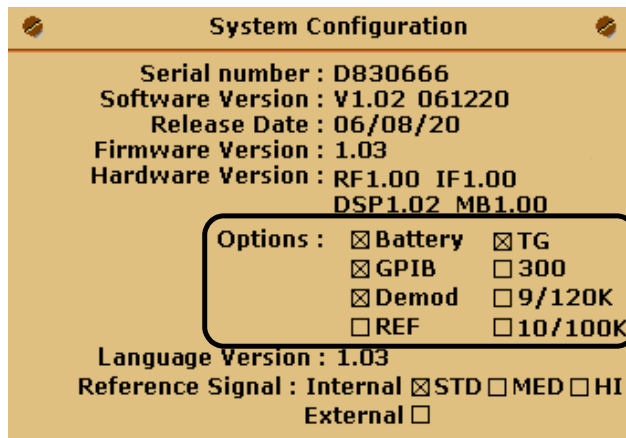


Optional Items

4. Check the optional items corner and see the RBW installation status (checkmark – installed, blank – not installed)

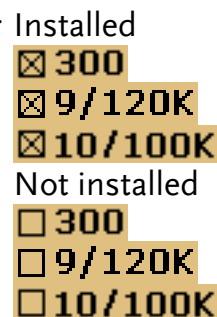

 5. Press F4 (System Config Off) to close the system configuration.






Note


9k/120kHz RBW (EMI Filter) and 10k/100kHz RBW are exclusive; cannot be installed together. For installing a new optional RBW, contact the service center.

Select VBW (Video BandWidth)

Background VBW (Video Bandwidth) defines the smoothness of the trace on the display. Combined with RBW, VBW defines the ability to sort out target signal from surrounding noise or adjacent peaks.
See page99 for suitable VBW selection.

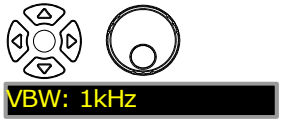- Panel operation**
1. Press the BW key. 
 2. Press F2 (VBW) to select Auto or Manual. 
 3. When Man (manual) is selected, use the Arrow keys or Scroll knob to select the VBW. The selected VBW appears in the command window. 

Mode

| | |
|--|--|
| Auto | VBW is automatically selected. See page99 for setting. |
| Manual  | VBW is manually selected. The VBW icon appears at the bottom of the display. |

Range 10Hz to 1MHz in 1-3 steps

In Auto mode, VBW is automatically selected in combination with RBW. See page99 for the settings. Use the Auto mode settings for reference when manually selecting the VBW.


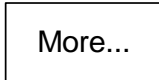

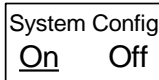

Note The GSP-830 automatically changes the VBW according to RBW selection.


RBW/VBW Auto Mode Contents

Background

- The following applies when selecting Auto mode for RBW and VBW setting. Use them as a reference when manually selecting RBW and VBW.
- The RBW/VBW range differs according to system configuration, especially the optional items.

Check the RBW installation status


1. Press the System key. 
2. Press F6 (More).  
3. Press F4 (System Config On) to turn on the system configuration window.  

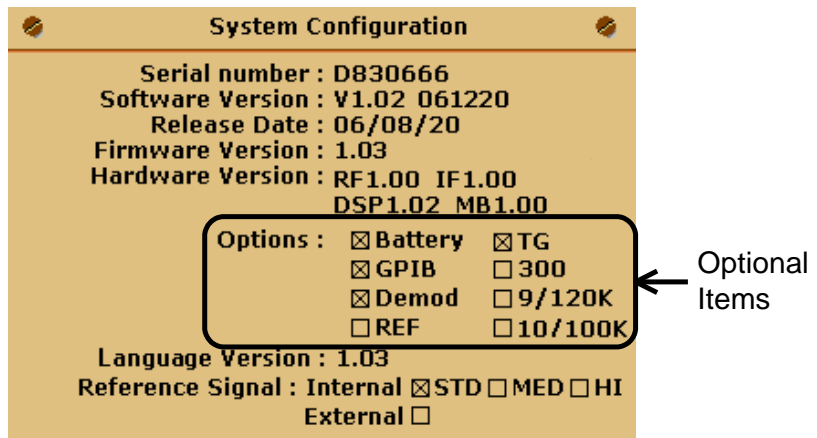

4. Press F4 (System Config Off) to close the system configuration.  


Standard configuration

| Optional item | Install | Icon |
|-------------------------|---------|----------------------------------|
| EMI Filter(9k/120k RBW) | No | <input type="checkbox"/> 9/120K |
| 300Hz RBW | No | <input type="checkbox"/> 300 |
| 10k/100kHz RBW | No | <input type="checkbox"/> 10/100K |

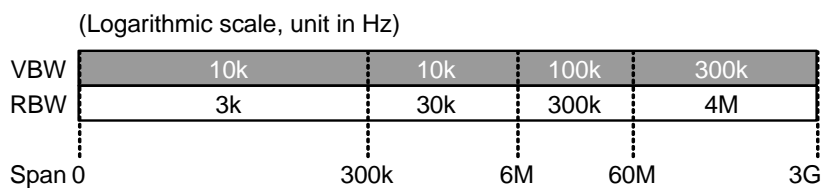


Standard +
9k/120kHz RBW
configuration

| Optional item | Install | Icon |
|--------------------------|---------|---|
| EMI Filter (9k/120k RBW) | Yes | <input checked="" type="checkbox"/> 9/120K |
| 300Hz RBW | No | <input type="checkbox"/> 300 |
| 10kHz/100kHz RBW | No | <input type="checkbox"/> 10/100K |

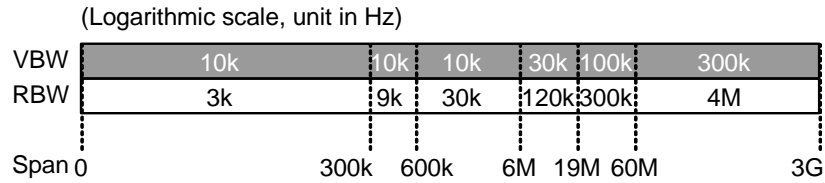


Standard +
300/9k/120kHz
RBW configuration

| Optional item | Install | Icon |
|--------------------------|---------|---|
| EMI Filter (9k/120k RBW) | Yes | <input checked="" type="checkbox"/> 9/120K |
| 300Hz RBW | Yes | <input checked="" type="checkbox"/> 300 |
| 10kHz/100kHz RBW | No | <input type="checkbox"/> 10/100K |

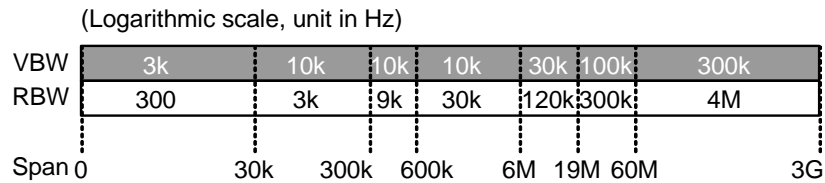


Standard +
10k/100kHz RBW
configuration

| Optional item | Install | Icon |
|--------------------------|---------|--|
| EMI Filter (9k/120k RBW) | No | <input type="checkbox"/> 9/120K |
| 300Hz RBW | No | <input type="checkbox"/> 300 |
| 10kHz/100kHz RBW | Yes | <input checked="" type="checkbox"/> 10/100K |

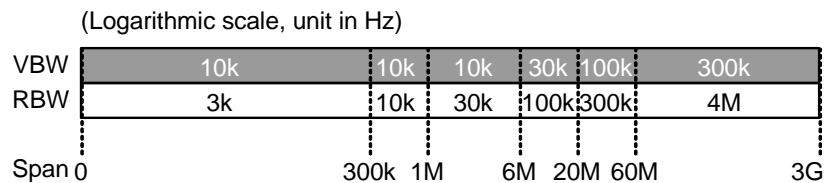



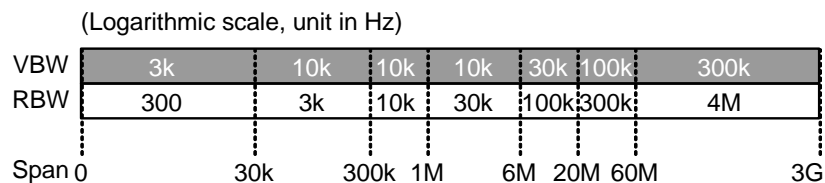

Standard +
300/10k/100kHz
RBW configuration




| Optional item | Install | Icon |
|--------------------------|---------|--|
| EMI Filter (9k/120k RBW) | No | <input type="checkbox"/> 9/120K |
| 300Hz RBW | Yes | <input checked="" type="checkbox"/> 300 |
| 10kHz/100kHz RBW | Yes | <input checked="" type="checkbox"/> 10/100K |




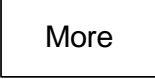








Set Sweep time

| | | |
|-----------------|--|---|
| Background | Sweep time defines the display update rate. Note that sweep time and RBW/VBW are in trade-off. Faster sweep time updates display more frequently but makes RBW and VBW wider, reducing the capability to separate signals at close frequencies. | |
| Panel operation | 1. Press the BW key. |  |
| | 2. Press F3 (Swp tm) To switch between Auto and Manual setting. |  |
| |  In the Manual mode, the manual sweep time icon appears. | |
| | 3. When Manual mode is selected, enter the sweep time using the Numerical/Unit keys. |  |
| Mode | Auto | Sweep time is automatically set. |
| | Manual | Sweep time is manually set. |
| Range | 50ms to 25.6s, 1us resolution | |
| Note | When in the Auto mode, GSP830 is optimized for fast sweep time. For narrower RBW settings, like 300 Hz or 3 KHz, this optimization will cause slightly higher phase noise. To reduce the phase noise level, slow down the sweep time using manual setting. | |


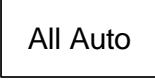

Average Waveform

| | | |
|---------------------------|--|--|
| Background | The GSP-830 averages the waveform for a user-defined or system-defined number before it is displayed. This feature smoothes the noise level to a great extent, but slows down the display update rate. | |
| Panel operation (Method1) | 1. Press the BW key. |  |
| | 2. Press F4 (AVG On) to turn on averaging. The current average number setting appears in the command window. |   |

| | | | |
|------------------------------|----|--|--|
| | 3. | The trace average icon appears at the bottom of the display. |  |
| | 4. | Enter the average time using the Numerical keys and Enter key. |  |
| Panel operation (Method2) | 1. | Press the Trace key. |  |
| | 2. | Press F6 (More). |   |
| | 3. | Press F1 (AVG On) to turn on the average mode. The current average number setting appears in the command window. |    |
| | 4. | The average mode icon appears at the bottom of the display. |  |
| | 5. | Enter the average number using the numerical keys followed by the Enter key. |  |


| | | |
|----------------------------------|--|-------------------------------------|
| Parameter | 2 to 200 | (Available only when Average is on) |
| AVG number after power on/preset | After powering up the GSP-830 (page20) or presetting it (page40), the average number is reset to 20 (AVG itself is turned off) | |

Reset RBW/VBW/sweep time to auto

| | | | |
|-------------------------------------|--|---|---|
| Panel operation | 1. | Press the BW key. |  |
| | 2. | Press F5 (All Auto). The RBW, VBW, and sweep time setting all change to Auto. |   |
| RBW/VBW/Sweep Setting after Autoset | When using the Autoset, all three BW related parameters, RBW, VBW, and sweep, will be reset to Auto mode, regardless of their previous settings. | | |

T RIGGER

The **Trigger** function sets the signal conditions upon which the GSP-830 triggers capturing waveforms, including frequency, amplitude, and delay. An external trigger signal, instead of the default internal signal, may be used as required for special conditions.

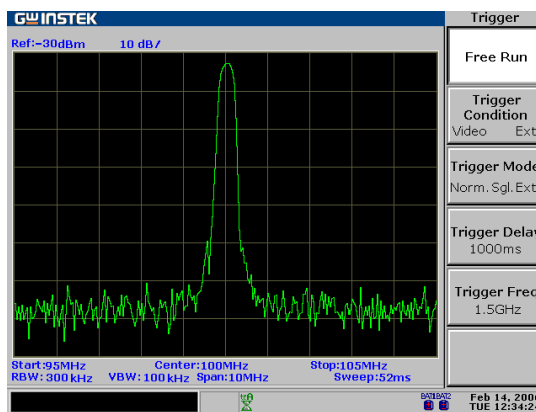



| | | |
|-------------------------|---------------------------------|-----|
| Free Run | Select free run (default) | 104 |
| Video Trigger | Activate video trigger | 104 |
| External Trigger | Activate external trigger | 104 |
| Trigger Mode | Select Trigger Mode | 105 |
| Trigger Delay | Set Trigger Delay | 106 |






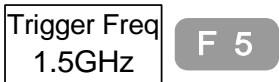

Select Trigger Type


Select free run (default)

In the free run mode, the GSP-830 captures all incoming signals (no triggering condition).

| | | |
|-----------------|---------------------------|---|
| Panel operation | 1. Press the Trigger key. |  |
| | 2. Press F1 (Free Run). |  |

Activate video trigger




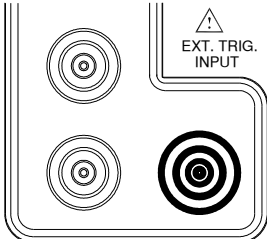
| | | |
|-----------------|--|--|
| Panel operation | 1. Press the Trigger key. |  |
| | 2. Press F2 (Trigger Condition Video). |  |
| | 3. The video trigger icon appears at the bottom of the display. |  |
| | 4. Enter the trigger level (amplitude) using the Numerical keys and dB or Enter key. The value appears in the command window. |   |
| | 5. Press F5 (Trigger Freq) to set the frequency at which the GSP-830 checks the trigger condition. Default value: center frequency |  |
| | 6. Enter the trigger frequency using the Numerical/Unit keys. |  |

| | | |
|--------------------------|---|---|
| Deactivate video trigger | To de-activate video triggering, press F1 (Free Run). |  |
|--------------------------|---|---|

Level range (Ref.Level – 80dBm) to Ref.Level
 (Example: when the reference level is –30dBm, the trigger range will be –110dBm to –30dBm)


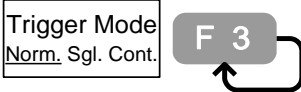

Frequency range 0 to 3GHz

Activate external trigger

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the Trigger key. |  |
| | 2. Press F2 (Trigger Condition Ext.). |  |
| | 3. The Ext. trigger icon appears at the bottom of the display. |  |
| | 4. Connect the external trigger signal to the rear panel terminal. |  |




Input level range 0V to 5V, positive edge trigger

Select Trigger Mode

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Trigger key. |  |
| | 2. Press F3 (Trigger Mode) repeatedly to select the trigger mode. |  |
| | 3. Press F6 (Run Now) to manually start triggering. |  |


| | | |
|-------|-------------------|--|
| Modes | Normal | The GSP-830 captures signals every time the triggering condition occurs. |
| | Single | The GSP-830 captures signals when the first triggering condition occurs, then stops capturing altogether. |
| | Continuous | The GSP-830 captures signals when the first triggering condition occurs, then switches to Free Run mode. After then, input signals are captured continuously regardless of their conditions. |

Set Trigger Delay

| | | |
|-----------------|---|---|
| Background | Trigger delay sets the amount of time between the moment of trigger condition and when the GSP-830 starts capturing signal. | |
| Panel operation | 1. Press the Trigger key. |  |
| | 2. Press F4 (Trigger Delay). |  |
| | 3. Enter the delay time using the Numerical/Unit keys. |  |
| Delay range | 10us to 100s, 1us resolution | |




D ISPLAY

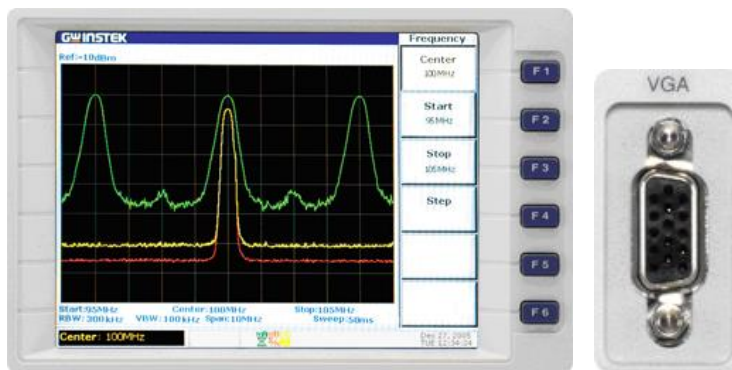The **Display** setting configures the LCD screen dimmer level, display line, display title, and split window. Display line provides a convenient reference line for measuring amplitude. Split window allows two simultaneous waveforms to be shown on the display. The VGA connector on the rear panel outputs the LCD screen contents in 640x480 resolution.


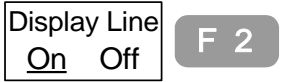



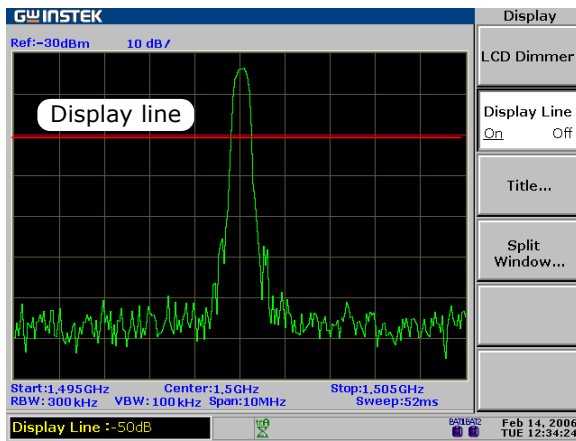
| | | |
|---------------------|---|-----|
| LCD Dimmer | Change Display Brightness | 108 |
| Display Line | Activate Display Line..... | 108 |
| Title | Enter Display Title..... | 109 |
| Split Window | Use Split Display..... | 110 |
| VGA Output | Use VGA Output | 111 |
| Save | Save Display Image to USB Flash Drive | 111 |


Change Display Brightness

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the Display key. |  |
| | 2. Press F1 (LCD Dimmer). |  |
| | 3. Change the brightness using the Left/Right keys or Scroll knob. |  |
| Range | 0 (darkest) to 5 (brightest) | |

Activate Display Line

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Display key. |  |
| | 2. Press F2 (Display Line On). |  |
| | 3. The display line appears on the display and its level appears in the command window. |  |








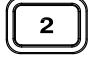







4. Move the line using the Left/Right keys or Scroll knob. 

Note Display line is NOT available in the following situations.

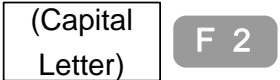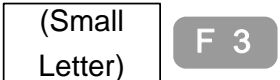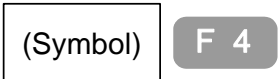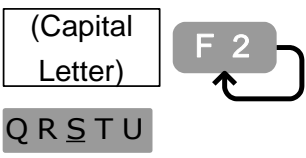- Split window (page110)
- Limit Line editing (page91)
- Power measurements (page82)

Enter Display Title

| | | |
|---|--|---|
| Panel operation | 1. Press the Display key. |  |
| | 2. Press F3 (Title). |  |
| | 3. Select the character from F2 to F4 and press it. (When entering numbers 0 to 9, press one from F2 to F4 anyway) |  |
| | |  |
| | |  |
| | 4. Here is how to type in the capital letter “S”. Press F2 (Capital Letter) repeatedly until the cursor reaches S. |  |
| | 5. Press the Enter key. S appears in the command window. |  |
| | To enter the number “2”, press the number 2 key. |  |
| | To delete (undo) previously entered character, press the BK SP key. |  |
| 6. Continue the above until all the characters are entered. |  | |
| 7. Press F5 (Show Title). |  | |
| 8. The entered title appears at the top left corner of the display. |  | |
| 9. To erase the title, press F1 (Clear Title). |  | |

| | | |
|-----------|----------------|--|
| Parameter | Capital letter | Upper case alphabet, A to Z. |
| | Small letter | Lower case alphabet, a to z. |
| | Number | 0 to 9. |
| | Symbol | Commonly used 14 symbols as shown below. |

| | | | | |
|---|---|---|---|---|
| \ | # | / | _ | - |
| . | * | : | & | (|
|) | < | > | % | |

 
Use Split Display

Panel operation


1. Press the Display key.




2. Press F4 (Split Window).




3. The display splits into upper and lower screen. The lower display retains the original vertical and horizontal scale. The upper display shows full scale.

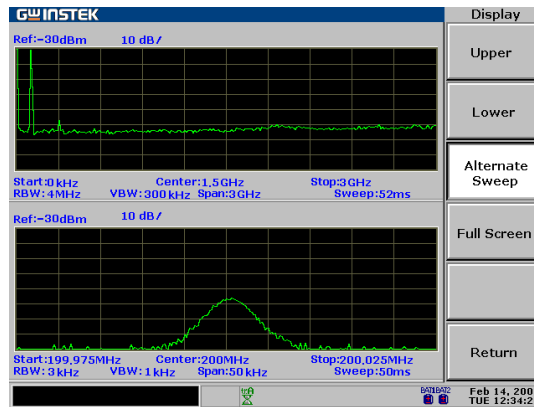

4. Select the active display (in which the waveform is updated) by pressing F1 (Upper) or F2 (Lower). Pressing F3 (Alternate Sweep) updates both displays alternately.

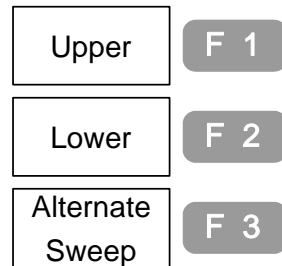

 5. To go back to the original single display, press F4 (Full Screen). The currently active window is expanded.



Note

Switching to the Full Screen from the Alternate Sweep mode is not recommended, since it is not predictable which display, upper or lower, will be selected.

Use VGA Output

Panel operation Connect an external monitor to rear panel VGA output terminal. The display output is always on.



| | |
|------------------|---|
| Parameter | Connector type VGA 15pin, female |
| | Resolution 640 x 480 |


Save Display Image to USB Flash Drive

Panel operation 1. Connect the USB flash drive to the front panel USB terminal. The USB icon appears at the bottom of the display.



Compatibility USB 1.1/2.0

 
Connector TypeA host, female

Note  If it takes more than 2 seconds for the USB icon to appear, disconnect the USB flash drive and connect again.


2. Press the File key.



3. Press F4 (Print Screen).



 4. Press F1 (To Ext. Memory).



5. The USB flash drive contents appear in the display.

| Item Name | Date | Remark |
|-----------|------------------|--------|
| MyFolderA | 2007/03/06 09:48 | |
| MyFolderB | 2007/01/12 14:45 | |
| MvResultA | 2007/06/06 10:29 | |

6. To enter into an existing folder, move the cursor to the folder and press the Enter key.



7. To save the display image, move the cursor to the blank area using the Up/Down keys and press F2 (Print Now). A new bitmap file (MyBMapx.bmp) is created in the USB flash drive.



| File Function: Print to File | | Memory External | Remark |
|------------------------------|-----------|------------------|--------|
| Item | Name | Date | |
| | MyFolderA | 2007/03/06 09:48 | |
| | MyFolderB | 2007/01/12 14:45 | |
| | MyResultA | 2007/06/06 10:29 | |
| | MyBMap0 | | |



Note If the cursor is pointing to an existing file, the file will be overwritten.

8. A confirmation message appears in the command window. To accept saving, press the Enter key. To cancel saving, press the BK SP key.



9. The file is saved when the date information appears. Now it is safe to remove the USB drive from the GSP-830.

| File Function: Print to File | | Memory External | Remark |
|------------------------------|-----------|------------------|--------|
| Item | Name | Date | |
| | MyFolderA | 2007/03/06 09:48 | |
| | MyFolderB | 2007/01/12 14:45 | |
| | MyResultA | 2007/06/06 10:29 | |
| | MyBMap0 | 2007/07/10 15:30 | |



FILE

The **File** function manages file operations; copy, delete, and name change. The file format and contents include trace waveform, limit line, amplitude correction, sequence set (user defined macro), and panel settings. The file source and destination are selectable between internal (inside the GSP-830) and external (inside the USB flash drive). The File function can also save display images to USB flash drives.



| | | |
|-----------------------|---|-----|
| File Operation | File Location and File Type..... | 114 |
| | Copy | 115 |
| | Delete File..... | 118 |
| | Rename File | 120 |
| | Save Display Image to USB Flash Drive | 121 |

File Location and File Type

| | | |
|---------------|---|--|
| File location | Internal | The GSP-830 internal memory. The number of files and their names are fixed (see below). |
| | External | The USB flash drive connected to the front panel connector. There is no practical limit on the number of files. |
| | |  <p>The USB icon turns on when the flash drive is detected.</p> <p>Compatibility: USB 1.1/2.0</p> <p>Connector: TypeA host</p> |
| |  Note | If it takes more than 2 seconds for the USB icon to appear, disconnect the USB flash drive and connect again. |
| File type | Trace | Trace waveform data. For details, see page73. File format: *.tra 13 files are available internally: TraceA/B/C (current trace), Trace 1to10 (stored trace). |
| | Limit | Limit Line data. For details, see page90. File format: *.lmt 12 files are available internally: LimitHL (current high limit line), LimitHL1 to 5 (stored high limit line), LimitLL (current low limit line), LimitLL1 to 5 (stored low limit line). |
| | Correction | Amplitude correction data. For details, see page52. File format: *.cor 5 files are available: Correction 1 to 5. |
| | Seq. | Sequence data. For details, see page136. File format: *.seq 10 files are available: Sequence 1 to 10. |

Setup Panel setup data. For details, see page125.
 File format: *.set
 10 files are available: Setup 1 to 10.

Copy File

1. Connect USB flash drive (for external file)

When using the USB flash drive (external file) for source or destination, connect the drive to the front panel connector.



 
The USB icon turns on when the flash drive is detected.

2. Select source file

1. Press the File key.




2. Press F1 (Copy). The file copy window appears.








| Source | | | |
|----------------|------|-------|--------|
| File Function: | Copy | Type: | Memory |
| Item | Name | Date | Remark |

 3. Press F1 (Source).



     4. Select the file type from F1 to F5, press it, and then select Int (internal) or Ext (external). The display gets updated accordingly. The below example shows the internal trace files.




| Source | | | |
|----------------|--------|-------|-----------------------|
| File Function: | Copy | Type: | Trace Memory Internal |
| Item | Name | Date | Remark |
| | TraceA | | |
| | TraceB | | |
| | TraceC | | |

5. Use the Up/Down keys to move the cursor to the source file location. (Example: Internal TraceC selected)




| Source | | | |
|---------------------|--------|-------------|-----------------|
| File Function: Copy | | Type: Trace | Memory Internal |
| Item | Name | Date | Remark |
| | TraceA | | |
| | TraceB | | |
| | TraceC | | |

 6. Press F6 (Return). The copy source file information is retained.




3. Select destination file

 1. Press F2 (Destination). The destination file copy window becomes active in the lower half of the display.



 2. Select the file type from F1 to F5, press it, and select Internal or external. The file type must be the same as the source type. The display updates accordingly.



| Source | | | |
|---------------------|--------|-------------|-----------------|
| File Function: Copy | | Type: Trace | Memory Internal |
| Item | Name | Date | Remark |
| | TraceA | | |
| | TraceB | | |
| | TraceC | | |
| | Trace1 | | Empty |
| | Trace2 | | Empty |
| | Trace3 | | Empty |
| | Trace4 | | Empty |

| Destination | | | |
|---------------------|--------|-------------|-----------------|
| File Function: Copy | | Type: Trace | Memory Internal |
| Item | Name | Date | Remark |
| | TraceA | | |
| | TraceB | | |
| | TraceC | | |
| | Trace1 | | Empty |
| | Trace2 | | Empty |
| | Trace3 | | Empty |
| | Trace4 | | Empty |

3. Use the Up/Down keys to move the cursor to the copy destination file location. (Example: internal Trace1 selected)



| Destination | | | |
|---|--------|------|--------|
| Item | Name | Date | Remark |
| File Function: Copy Type: Trace Memory Internal | | | |
| | TraceA | | |
| | TraceB | | |
| | TraceC | | |
| | Trace1 | | Empty |

When selecting an external location, select a blank space or an existing folder (a new file will be created inside).

| Destination | | | |
|---|-----------|------------------|--------|
| Item | Name | Date | Remark |
| File Function: Copy Type: Trace Memory External | | | |
| | MyFolderA | 2007/03/06 09:48 | |
| | MyFolderB | 2007/01/12 14:45 | |
| | MyBMap0 | 2007/06/06 10:29 | |

4. Press F6 (Return). The copy destination file information is retained.
- Return

F 6

4. Edit file name (when creating new file)


1. (Skip this step when overwriting an existing file or copying to a folder) To edit the newly created file name, press F3 (Edit File Name On).
- Edit File Name
On Off

F 1



Note: You cannot change the names of files in the internal memory.

2. Move the cursor inside the character table using the Left/Right keys or Scroll knob. Press the Enter key to confirm each character and the BK SP key to delete one character.

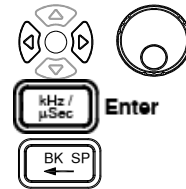

| Char Table | |
|----------------------------|--------------|
| ABCDEFGHIJKLMN | OPQRSTUVWXYZ |
| abcdefghijklmnopqrstuvwxyz | 0123456789 |

3. When completed, press F3 (Edit File Name Off) to turn it off.
- Edit File Name
On Off

F 1

5. Copy file

1. Press F4 (Copy Now).
- Copy Now

F 4
2. A confirmation message appears in the command window. To accept the file, press the Enter key. To cancel the file, press the BK SP key.
- ENTER for Yes: BKSP for No:

kHz / μSec

Enter

BK SP

- When the file copy is done, the destination file attribute changes from Empty to Full and/or the date becomes updated.

| Destination | | | |
|------------------|----------|--------|-------|
| File Function: | Copy | Type: | Trace |
| Memory | Internal | Item | Name |
| Date | Remark | | |
| | | TraceA | |
| | | TraceB | |
| | | TraceC | |
| 2007/07/09 10:41 | Full | Trace1 | |


Note If the source file does not contain data, a warning message appears. In this case, re-select a source file with actual data.

Selected File Is Empty!




Delete File

- Connect USB flash drive (for external file) When using the USB flash drive (external file) for source or destination, connect the drive to the front panel connector.



 The USB icon turns on when the flash drive is detected.

2. Select source file

- Press the File key. 
- Press F2 (Delete). 
- Press F1 (Type). The file deletion window appears. 

| File Function: | Delete | Type: | Memory |
|----------------|--------|-------|--------|
| Item | Name | Date | Remark |
| | | | |

4. Select the file type by pressing F1 to F5, then select Int (internal) or Ext (external).
The display gets updated accordingly. The example below shows the internal Trace files.

| | |
|-------------------------|-----|
| Trace Int. Ext. | F 1 |
| Limit Int. Ext. | F 2 |
| Correction Int. Ext. | F 3 |
| Seq. Int. Ext. | F 4 |
| Setup Int. Ext. | F 5 |

5. Use the Up/Down keys to move the cursor to the file location. (Example: internal Trace1 selected)



| File Function: | Delete | Type: | Memory | Internal |
|----------------|--------|------------------|--------|----------|
| Item | Name | Date | | Remark |
| | Trace1 | 2007/07/09 10:41 | | Full |
| | Trace2 | | | Empty |

6. Press F6 (Return). The file location is retained.

| | |
|--------|-----|
| Return | F 6 |
|--------|-----|

3. Delete file

1. Press F2 (Delete Now).

| | |
|------------|-----|
| Delete Now | F 2 |
|------------|-----|

2. A confirmation message appears in the command window. To accept deletion, press the Enter key. To cancel deletion, press the BK SP key.

ENTER for Yes; BKSP for No:

| | |
|------------|-------|
| kHz / μSec | Enter |
| BK SP | |

3. Internal file: The file attribute (Remark) changes from Full to Empty.
External file: The file itself is deleted.

| File Function: | Delete | Type: | Memory | Internal |
|----------------|--------|-------|--------|----------|
| Item | Name | Date | | Remark |
| | Trace1 | | | Empty |
| | Trace2 | | | Empty |

Rename File

File rename is allowed only for external (USB flash drive) files.

1. Connect USB flash drive

Connect the USB flash drive to the front panel connector.



 
The USB icon turns on when the flash drive is detected.

2. Select file

1. Press the File key.



2. Press F3 (Rename). The USB flash drive contents and the character table appear in the display.




3. Point the cursor to the file using the Up/Down keys.





3. Edit file name

 
1. Press F1 (Edit File Name) and turn it on.



2. Move the cursor inside the character table using the Left/Right keys or Scroll knob. Press the Enter key to confirm each character.

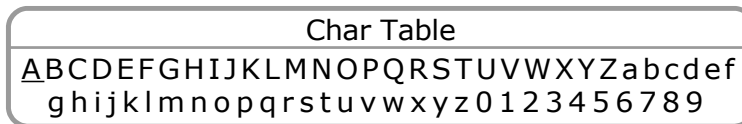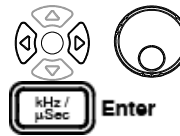

 
3. When completed, press F1 (Edit File Name Off) to turn it off.



4. Press F2 (Confirm). A confirmation message appears in the command window.



 5. To accept renaming and save the new file name, press the Enter key. To cancel renaming, press the BK SP key.



Save Display Image to USB Flash Drive


1. Connect USB flash drive

Connect the USB flash drive to the front panel USB connector. The USB icon appears at the bottom of the display.



Compatibility USB 1.1/2.0

Connector TypeA host

 
 **Note** If it takes more than 2 seconds for the USB icon to appear, disconnect the USB flash drive and connect again.

2. Enter menu


1. Press the File key.




2. Press F4 (Print Screen).



 3. Press F1 (To Ext. Memory).




4. The USB flash drive contents appear in the display.

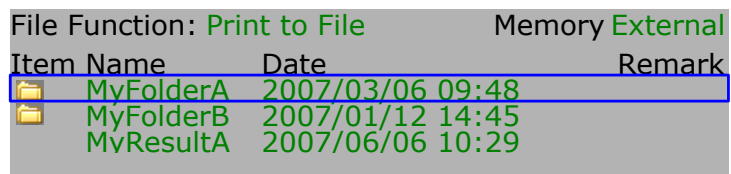



3. Selecting file

Move the cursor to the blank area using the Up/Down keys.

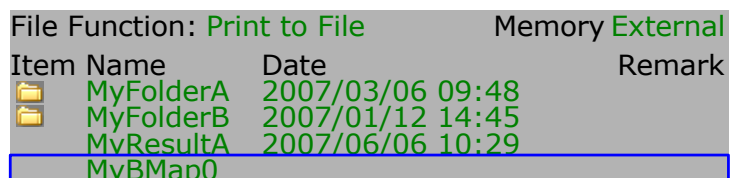

 
To enter into an existing folder, move the cursor to the folder and press the Enter key.




 **Note** If the cursor is pointing to an existing file, the file will be overwritten.

4. Edit file name (when creating new file)

 1. (Skip this step when overwriting an existing file) To edit the newly created file name, press F1 (Edit File Name On).




2. Move the cursor inside the character table using the Left/Right keys or Scroll knob. Press the Enter key to confirm each character and the BK SP key to delete one character.

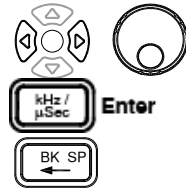

| Char Table | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T | U | V | W | X | Y | Z | a | b | c | d | e | f |
| g | h | i | j | k | l | m | n | o | p | q | r | s | t | u | v | w | x | y | z | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | | |

 3. When completed, press F1 (Edit File Name Off) to turn it off.



5. Save file

1. Press F2 (Print Now) and press F2 (Print Now).



2. A confirmation message appears in the command window. To accept the file, press the Enter key. To cancel the file, press the BK SP key.



3. The file is saved when the date information appears. Now it is safe to remove the USB drive from the GSP-830.

| File Function: Print to File | | Memory External | |
|------------------------------|-----------|------------------|--------|
| Item | Name | Date | Remark |
| | MyFolderA | 2007/03/06 09:48 | |
| | MyFolderB | 2007/01/12 14:45 | |
| | MyResultA | 2007/06/06 10:29 | |
| | MyBMap0 | 2007/07/10 15:30 | |

PRESET





Pressing the Preset key returns the GSP-830 to the factory default parameters as defined below.

| | | |
|-------------|--|---|
| Frequency | Center: 1.5GHz Start: 0Hz | Stop: 3GHz Step: 1MHz |
| Span | 3GHz | |
| Amplitude | Ref.level: 0dBm Unit: dBm Scale: 10dB/ | External Gain: 0dB Input Z: 50Ω |
| Autoset | Amplitude Floor: Auto | Span: Auto |
| Marker | Marker: Off Marker Table: Off | Marker Trace: Auto All Marker: Off |
| Peak Search | Peak Table: Off Peak Threshold: Off | Peak Sort: Freq Peak Track: Off |
| Trace | Trace: A Average: Off, 20 | Mode: Clear Detection: Normal |
| Meas | ACPR, OCBW: Off CH SPC: 0 CH BW: 600MHz OCBW %: 0 | N dB, Phase Jitter: Off Adj CH Offs: 0MHz Adj CH BW: 0MHz |
| Limit Line | H & L Limit: Off | Pass/ Fail: Off |
| BW | RBW, VBW, Swptime: Auto | Average: Off, 20 |
| Trigger | Trigger Delay: 50ms Trigger Mode: Normal | Trigger Freq: 1.5GHz |
| Display | LCD Dimmer: 5 Split Window: Off | Display Line: Off Display Title: Off |
| File | Copy Type: Int. Trace | Delete Type: Int. Trace |
| System | GPIO Add: 2 Aux Sig: Off | System Config: Off Clock: On |
| Option | External Ref Freq: 10MHz TG Norm Corr: Off Demod AM: Off | TG Output: Off TG Ref Value: 0dBm Demod FM: Off |
| Sequence | Sequence: 1 | Run Mode: Single |

 


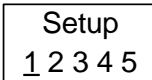

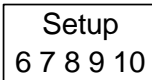

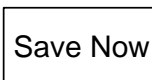

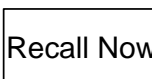

S SYSTEM

The **System key** configures and displays the system settings, including self-test result, date/time setting, and synchronization with other devices. The panel settings can be saved to GSP-830 internal memories or external USB flash drive, the latter permitting transferring panel settings among multiple GSP-830.

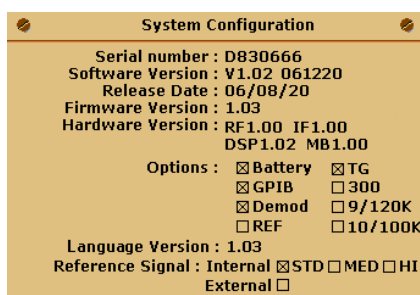



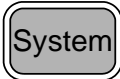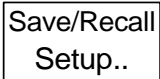


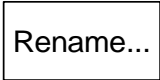

| | |
|--------------------------------|--|
| Panel Setting | Save/Recall Panel Setting 125 |
| | Copy/delete/rename setup 125 |
| Interface Configuration | USB slave port configuration 126 |
| | RS-232C configuration 126 |
| | GPIB configuration (optional) 127 |
| System Information | View system error 128 |
| | View system configuration 129 |
| | View self-test result 131 |
| Date/Time | Set Date/Time 132 |
| Synchronization | GSP-830 as master (internal reference signal) 133 |
| | GSP-830 as slave (external reference signal) 134 |
| Language | Select Language 135 |
| Auxiliary Signal | Use Auxiliary Signal 135 |
| Service Menu | Enter Service Operation 135 |

Save/Recall Panel Setting








| | | |
|-----------------|---|--|
| Panel operation | 1. Press the System key. |  |
| | 2. Press F1 (Save/Recall Setup). |   |
| | 3. Press F1 or F2 repeatedly to select the setting file. |     |
| | 4. Press F3 (Save Now) or F4 (Recall Now) to save or recall the setting file. |     |

| | |
|---------------|--|
| File contents | <p>Setting file contains the following information.</p> <ul style="list-style-type: none"> • Reference amplitude level • Amplitude unit, scale • Start/stop frequencies • Center and span frequencies • VBW, RBW, and sweep time • Tracking Generator level • Tracking Generator normalization data |
|---------------|--|

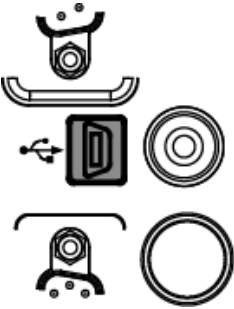
Copy/delete/rename setup file

| | | |
|------------|--|---|
| Background | Setting files can be copied, deleted, or renamed using the file utility. Press the File key to access each function. |  |
| Copy | Press F1 (Copy). For detailed step, see page115. |   |
| Delete | Press F2 (Delete). For detailed step, see page118. |   |
| Rename | Press F3 (Rename). For detailed step, see page120. |   |

Configure Communication Interface

| | | |
|-------------------------------------|---|--|
| Background | The GSP-830 supports three types of communication interface: standard USB/RS-232C and optional GPIB. | |
| Communication Method | PC software (page150) | USB slave, RS-232C |
| | Remote control (page157) | USB slave, RS-232C, GPIB |
| Interface type | USB slave | USB 1.1 or 2.0, TypeB mini |
| | RS-232C | D-sub 9 pin. |
| | GPIB (optional) | IEEE-488 24pin. |
| USB slave port configuration | No need for panel configuration: Just connect a type B mini USB cable between the rear panel and PC. |  |
| RS-232C configuration | 1. The RS-232C configuration can be viewed from the system menu. Press the System key. |  |
| | 2. Press F3 (Serial Port). |  |
| | 3. The RS-232C port configuration appears. Configure the PC according to this setting. Baud: 57600 Parity: None Stop bit: 1 Data bit: 8 |     |

4. Connect a 9-pin male RS-232C cable to the rear panel connector.

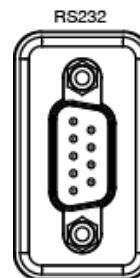


GPIB configuration (optional)

The GPIB interface is a factory installed optional item. Contact service personnel for a new installation.


1. Press the System key.



 
2. Press F2 (GPIB Add).



3. Select GPIB address using the Left/Right keys, Scroll knob, or Numerical keys. Configure the PC according to this setting.

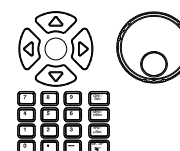


 4. Connect GPIB cable to the rear panel terminal.




Check GPIB installation status

 
1. To check the GPIB installation status, press the System key.



 
2. Press F6 (More).



 3. Press F4 (System Config On).




4. The system configuration appears. When the GPIB module is installed correctly, the check box is marked.

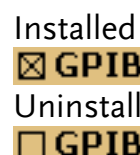


Check GPIB self-test result

 1. To check the internal GPIB functionality result, press the System key.



 2. Press F6 (More).



- | | | |
|--|--------------------------|-----|
| 3. Press F2 (Self Test). | Self Test... | F 2 |
| 4. The GPIB result appears at F1. If the result is Fail (underlined), contact service personnel. | GPIB <u>Pass</u> Fail | F 1 |

GPIB constraints

Keep these rules when using the GPIB interface.

- Altogether less than 15 devices & 20m cable length, 2m between each device on the bus
- Unique address assigned to each device
- At least 2/3 of the GPIB devices turned on
- No loop or parallel structure allowed

View System Information

View system error

Panel operation

View the bottom of the screen, the error message area. If there is a system error, the message appears in red.

Center : 1.5GHz

EXT
Unlock

 (EXT Unlock)

Amp
Uncal

- Inappropriate RBW or VBW is selected.
- Frequency is less than 15MHz and amplitude is less than -30dBm.

EXT
Unlock

 External reference input is not working properly.

LO1
Unlock

 Local oscillator 1 is not working properly.

LO3
Unlock

 Local oscillator 3 is not working properly.






Med
Unlock

 ±1ppm stability signal is not working properly. Appears only when the optional ±1ppm Stability Module is installed.


Ref
Unlock

 Internal reference signal is not working properly.

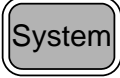View system configuration

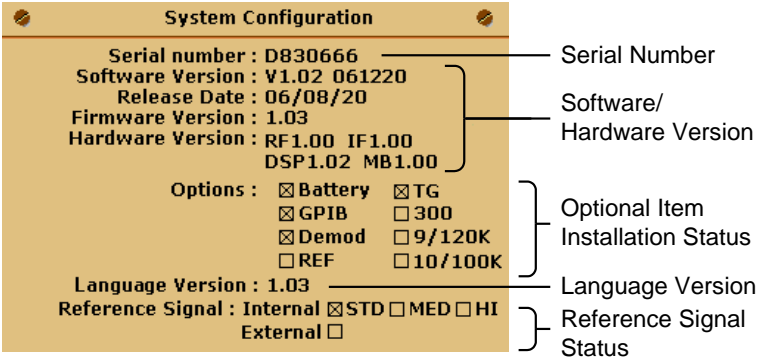- Panel operation
- To check system configuration, press the System key.
 
 - Press F6 (More).
 
 - Press F4 (System Config On).
 
 - The system configuration appears. Four types of information are listed.
 - Serial number
 - Software/hardware/firmware/language version
 - Installed optional items
 - Reference signal selection status
 - To close the configuration, press F4 again (System Config Off).
 


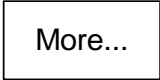


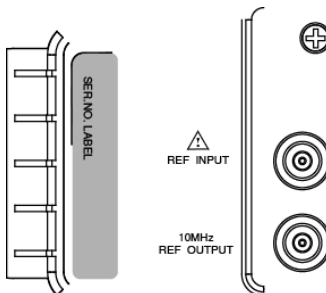
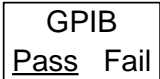

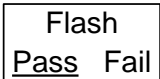

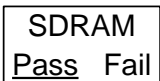



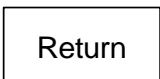

Serial number The serial number for device identification. This number is necessary for various service level operations. The same number is pasted on the rear panel.






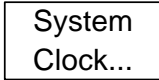

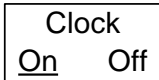

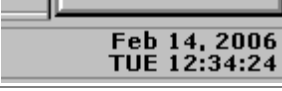






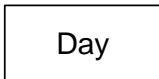

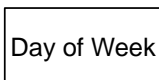

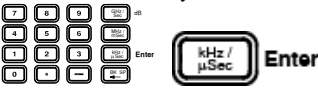
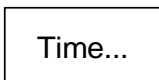

Software/hardware language version Shows versions and release date of hardware, software, firmware, and language database. Used for service level operations.

| | |
|-----------------------------------|---|
| Optional item installation status | Shows which optional item is currently installed. <input checked="" type="checkbox"/> : installed, <input type="checkbox"/> : uninstalled. |
| | Description |
| Battery | Battery pack / DC input module (page148) |
| GPIB | GPIB interface (page127) |
| Demod | Demodulator (page144) |
| REF | Internal reference signal with middle range stability (±1ppm stability module - page179). |
| 300 | 300Hz RBW (page96) |
| 9/120K | 9k/120kHz RBW(page96) included in the EMI Filter(page146) |
| 10/100K | 10k/100kHz RBW (page96) |
| Reference signal status | Checked radio button shows the reference signal used. For reference signal usage, see page133. <input checked="" type="checkbox"/> : enabled, <input type="checkbox"/> : disabled. |
| | Description |
| Internal STD | Internal reference signal, standard stability |
| Internal MED | Internal reference signal, medium stability. Available when the ±1ppm stability module (page179) is installed. |
| Internal HI | Internal reference signal, high stability (reserved for future use). |
| External | External reference signal. |


View self-test result

| | | |
|-----------------|--|--|
| Background | The GSP-830 runs a series of internal tests upon power-up. If any of the test result shows Fail, contact the service center. | |
| Panel operation | 1. Press the System key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F2 (Self Test). |   |
| | 4. The result appears in F1 to F4. (The GPIB result appears only when the module is installed) |         |
| | 5. Press F6 (Return) to go back to the previous menu. |   |
| Item | GPIB | The optional GPIB interface connection. Available only when the GPIB module is installed (page129). |
| | Flash | Internal Flash memory area for storing the system code and data. |
| | SDRAM | Internal SDRAM area on which the code runs. |
| | RTC | The real-time clock that controls the date and time settings (page132). |

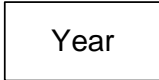
Set Date/Time

| | | | | | | | | | |
|--|--|------|--------------|-------|------------------------------------|-----|--------------------------------|-------------|------------------|
| 1. Activate clock display (if necessary) | <p>The clock display is activated by default.</p> <hr/> <p>1. Press the System key.</p> <div style="text-align: right; margin-right: 20px;">  </div> <hr/> <p>2. Press F6 (More).</p> <div style="text-align: right; margin-right: 20px;">   </div> <hr/> <p>3. Press F1 (System Clock).</p> <div style="text-align: right; margin-right: 20px;">   </div> <hr/> <p>4. Press F3 (Clock On). The clock appears at the bottom right side of the display.</p> <div style="text-align: right; margin-right: 20px;">   </div> <div style="text-align: right; margin-right: 20px;">  </div> | | | | | | | | |
| 2. Set date | <p>1. Press F1 (Date).</p> <div style="text-align: right; margin-right: 20px;">   </div> <hr/> <p>2. Press F1 (Year) to F4 (Day of Week). Enter the value using the Numerical keys and Enter key.</p> <div style="text-align: right; margin-right: 20px;">   </div> <div style="text-align: right; margin-right: 20px;">   </div> <div style="text-align: right; margin-right: 20px;">   </div> <div style="text-align: right; margin-right: 20px;">   </div> <div style="margin-top: 10px;">  <p>The clock display changes accordingly.</p> </div> <hr/> <table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Year</td> <td>2000 to 2099</td> </tr> <tr> <td>Month</td> <td>1 to 12 (translated to Jan to Dec)</td> </tr> <tr> <td>Day</td> <td>1 to 31 (depends on the month)</td> </tr> <tr> <td>Day of Week</td> <td>1(Mon) to 7(Sun)</td> </tr> </table> | Year | 2000 to 2099 | Month | 1 to 12 (translated to Jan to Dec) | Day | 1 to 31 (depends on the month) | Day of Week | 1(Mon) to 7(Sun) |
| Year | 2000 to 2099 | | | | | | | | |
| Month | 1 to 12 (translated to Jan to Dec) | | | | | | | | |
| Day | 1 to 31 (depends on the month) | | | | | | | | |
| Day of Week | 1(Mon) to 7(Sun) | | | | | | | | |
| 3. Set time | <p>1. Press F2 (Time).</p> <div style="text-align: right; margin-right: 20px;">   </div> | | | | | | | | |

 - Press F1 (Year) to F3 (Second). Enter the value using the Numerical keys and Enter key.



The clock display changes accordingly.

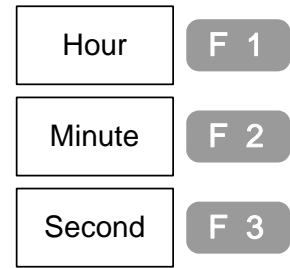


| | |
|--------|---------|
| Hour | 0 to 23 |
| Minute | 0 to 59 |
| Second | 0 to 59 |

Synchronize GSP-830 with Other Devices

Using the REF INPUT/OUTPUT on the rear panel, the GSP-830 can synchronize its internal frequency with other devices. The GSP-830 can become the master (reference signal for another device) or the slave (reference signal input from another device).


GSP-830 as master (internal reference signal)

Panel operation Connect the reference signal output terminal on the rear panel to the other device's reference input.

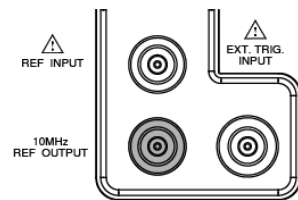


| | | |
|-------------|------------------|---|
| Signal type | Output level | 10MHz, 5V TTL signal (assumes the load impedance is infinite) |
| | Output impedance | 50Ω |

 
- Press the System key.



- Press F6 (More).

 

- Press F4 (System Config On).

 


The system configuration window appears. The Internal Reference Signal sign **Internal** shows the status. : enabled, : disabled.


STD Internal reference signal, standard stability


- MED** Internal reference signal, median stability.


MED
TXO
 Available when the ± 1 ppm stability module (page179) is installed. The MED icon appears at the bottom of the display.
- HI** Internal reference signal, high stability (reserved for future use).


GSP-830 as slave (external reference signal)

- Panel operation
1. Press the Option key. 


 2. Press F4 (Ext Ref Freq) to enable external reference signal. 


 3. Use the Left/Right keys or Scroll knob to select the external reference frequency. 

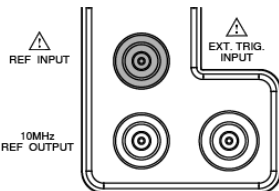
 4. Connect the external reference signal to the input terminal on the rear panel. 

 5. The external reference signal icon appears at the bottom of the display. 

| | | | | | |
|-------------|---|-------|-------|------|------|
| Signal type | TTL signal | | | | |
| Frequency | 10 preset frequencies are available (units in MHz). | | | | |
| | 1.0 | 1.544 | 2.048 | 5.0 | 10.0 |
| | 10.24 | 13.0 | 15.36 | 15.4 | 19.2 |

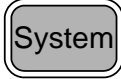


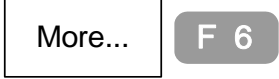

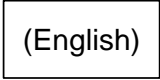


- Status check
1. Press the System key. 

 2. Press F6 (More). 

 3. Press F4 (System Config On). 

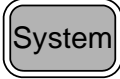


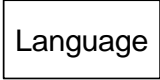The system configuration window appears. The External Reference Signal **External** shows the status: - enabled, - disabled.

Select Language

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the System key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F5 (Language). |   |
| | 4. Press F1 repeatedly to select the menu language. |    |
| Language type | English → Simplified Chinese → Other selections (The language selection depends on the regions) | |

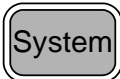





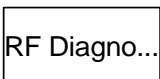

Use Auxiliary Signal

The auxiliary signal is a general purpose signal useful for functionality check.

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the System key. |  |
| | 2. Press F4 (Aux Sig On). The auxiliary signal appears in the display. |   |
| Specification | 100MHz, -30dBm | |


Enter Service Operation

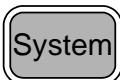The following functions are intended only for service personnel.
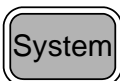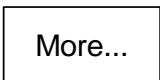
| | | |
|----------------------------|---|---|
| Optional items maintenance | 1. Press the System key. |  |
| | 2. Press F5 (Service). To continue, a password is needed. |   |
| RF diagnosis | 1. Press the System key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F3 (RF Diagno). To continue, a password is needed. |   |


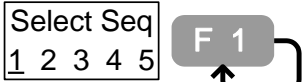
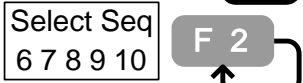


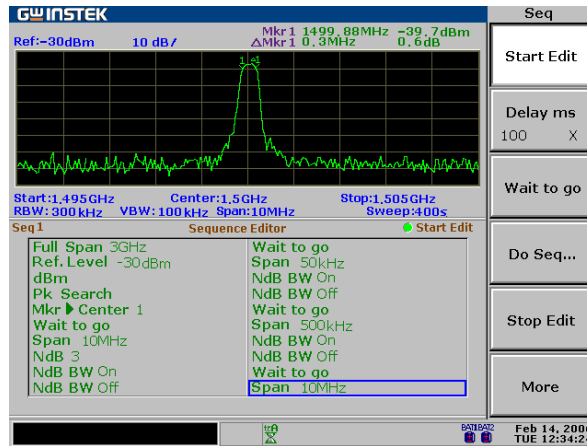



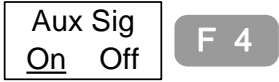





SEQUENCE

The **Sequence** function records and plays back user-defined macros (measurement steps). 10 sequences are available in repeat or single running mode, each with maximum 20 steps including all panel operations. Delay and pause features permit observing measurement results during the sequence.

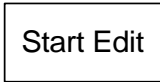

| | | |
|----------------------|---|-----|
| Edit | 1. Select sequence | 137 |
| | 2. Start editing | 137 |
| | 3. Stop editing | 140 |
| | 4. Save the edited sequence | 140 |
| | Delete all sequence..... | 140 |
| <hr/> | | |
| Run | 1. Select sequence | 140 |
| | 2. Select running mode..... | 141 |
| | 3. Run sequence | 141 |
| <hr/> | | |
| Sequence File | Save/copy/delete/rename sequence file | 141 |


Edit Sequence

| | | |
|---------------------------|---|--|
| 1. Select sequence | 1. Press the Sequence key. The display enters into the sequence edit mode. |  |
| | 2. Press F1 (sequence 1 to 5) or F2 (sequence 6 to 10) repeatedly to select the sequence ID. |   |
| 2. Start editing | 1. Press F3 (Edit). |   |
| | 2. Press F1 (Start Edit). |   |
| | 3. The Start Edit sign in the mid-right of the display turns green. |  |
| 2a. Add step | <p>20 steps are available for each sequence. Every key operation can be recorded as a step. Press the Enter key each time to confirm step entering. (In some cases this is not necessary: check if the item appears in the window).</p> <p>Example: Activate system auxiliary signal</p> <p>1. Press the System key.</p> <p>2. Press F4 (Aux Sig On).</p> <p>3. Press the Enter key.</p>    | |
| | <p>Example: Run Autoset</p> <p>1. Press the Autoset key.</p> <p>2. Press F1 (Autoset).</p> <p>3. Press the Enter key.</p>    | |
| | The result looks like this. |  |

2b. Add delay

The delay function inserts a waiting period between steps. The basic unit of delay time is 100ms.

1. Press F2 (Delay ms). Delay ms
100 X F 2

2. Enter the delay time using the Numerical keys and Enter key. For example, pressing 5 + Enter inserts 500ms (5 * 100ms) and pressing 100 + Enter inserts 10s (100 * 100ms = 10,000ms = 10s).


Range 100ms to 10s, 100ms resolution

2c. Pause sequence

Stops executing the sequence until the F1 (Continue) is pressed. Useful for observing the result of particular action (for example ACPR measurement).

1. Press F3 (Wait to go). Wait to go F 3

2. When the sequence is running, F1 (Continue) menu appears on the menu. Press it to break the pause and continue the sequence. Continue F 1

2d. Insert another sequence

Inserts a whole sequence set.

1. Press F4 (Do Seq.). Do Seq... F 4

2. Press F1 (sequence 1 to 5) or F2 (sequence 6 to 10) repeatedly to select the inserted sequence.

Select Seq
1 2 3 4 5


F 1

Select Seq
6 7 8 9 10


Note: The currently edited sequence cannot be inserted.

2e Insert blank space

1. Press F6 (More). More F 6

2. Use the Up/Down keys to move the cursor to the insertion point.


3. Press F1 (Insert). A blank space will be created. Insert F 1

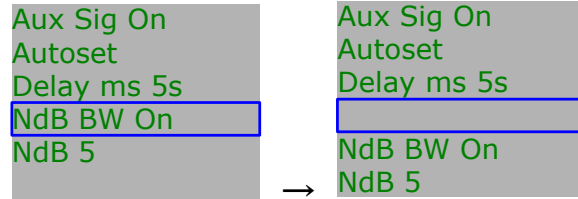


4. Press F6 (Return) to go back to the previous menu.
- | | |
|--------|-----|
| Return | F 6 |
|--------|-----|

2f. Delete step

1. Press F6 (More).
- | | |
|------|-----|
| More | F 6 |
|------|-----|

2. Use the Up/Down keys to move the cursor to the deletion point.
-

3. Press F3 (Delete). The step will be deleted.
- | | |
|--------|-----|
| Delete | F 3 |
|--------|-----|

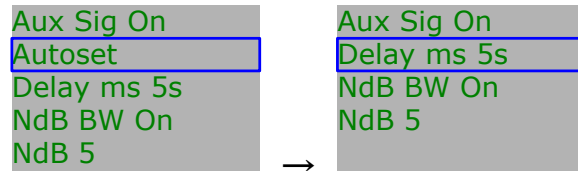

4. To undo deletion, press F5 (Undelete).
- | | |
|----------|-----|
| Undelete | F 5 |
|----------|-----|


5. To go back to the previous menu, press F6 (Return).
- | | |
|--------|-----|
| Return | F 6 |
|--------|-----|

2g. Delete all steps in a sequence

1. Press F6 (More).
- | | |
|------|-----|
| More | F 6 |
|------|-----|




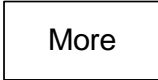


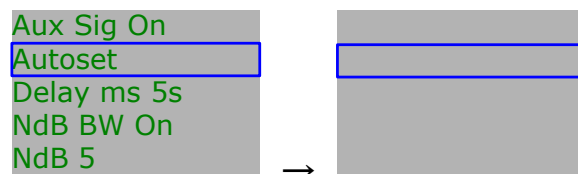
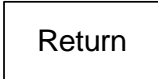

2. Press F4 (Delete All).
- | | |
|--------------|-----|
| Delete All.. | F 4 |
|--------------|-----|

3. Press F2 (Yes) to confirm, or F1 (No) to cancel. All steps will be deleted.
- | | |
|-----|-----|
| No | F 1 |
| Yes | F 2 |


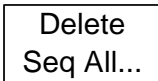

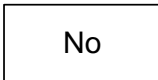

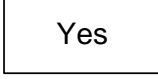

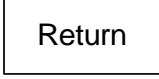



4. To undo deletion, press F5 (Undelete).
- | | |
|----------|-----|
| Undelete | F 5 |
|----------|-----|

5. Press F6 (Return) to go back to the previous menu.
- | | |
|--------|-----|
| Return | F 6 |
|--------|-----|

- | | | | |
|------------------------------------|--|---|---|
| 3. Stop editing | 1. Press F5 (Stop Edit). |  |  |
| | 2. The Start Edit sign in the display mid-right turns off. |  | |
| 4. Save the edited sequence | 1. Press F6 (More). |  |  |
| | 2. Press F2 (Save). The sequence is saved. |  |  |
| | 3. Press F6 (Return) to go back to the previous menu. |  |  |


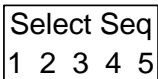

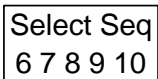

Delete all sequences

- | | | | |
|--|---|---|---|
| Panel operation | 1. Press the Sequence key. |  | |
| | 2. Press F5 (Delete Seq All). |  |  |
| | 3. Press F2 (Yes) to confirm, or F1 (No) to cancel. All 10 sequences will be deleted. |  |  |
| | |  |  |
| 4. To go back to the previous menu, press F6 (Return). |  |  | |

Note Delete Seq All cannot be recovered – the Undelete function is not applicable.

Run Sequence

This section assumes that editing the sequence is completed.

- | | | | |
|---------------------------|---|--|--|
| 1. Select sequence | 1. Press the Sequence key |  | |
| | 2. Press F1 (sequence 1 to 5) or F2 (sequence 6 to 10) repeatedly to select the sequence. |     | |


2. Select running mode

- | | | |
|----|---|--|
| 1. | Press F4 (Run). | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Run...</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 4</div> |
| 2. | Press F1 (Run Mode) to select the running mode, repeat (Rept) or single (Sngl). | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Run Mode Rept Sngl</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 1</div> |

Repeat Repeats running a sequence until F6 (Stop) is pressed. Note: F6 (Stop) menu appears only when the sequence is running.

Single Runs the sequence once.

3. Run sequence

- | | | |
|----|---|---|
| 1. | Press F2 (Run Now). | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Run Now</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 2</div> |
| 2. | If the sequence editing has not yet finished, a warning message appears. In such case, stop (finish) the editing process first (page140). | <div style="background-color: black; color: white; padding: 2px 5px; font-size: small;">Stop Edit First!</div> |
| 3. | The sequence icon appears at the bottom of the display. |  |
| 4. | To stop running, press F6 (Stop). In the single mode, the sequence automatically stops when all steps are completed. | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Stop</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 6</div> |

Save/copy/delete/rename sequence file

- | | | |
|-------------------|--|---|
| Background | Sequence files can be saved, copied, deleted, or renamed using the file utility. Press the File key to access each function. | <div style="border: 1px solid gray; border-radius: 10px; padding: 5px 15px; background-color: #eee;">File</div> |
| Save/Copy | Press F1 (Copy). For detailed steps, see page115. | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Copy...</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 1</div> |
| Delete | Press F2 (Delete). For detailed steps, see page118. | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Delete...</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 2</div> |
| Rename | Press F3 (Rename). For detailed steps, see page120. | <div style="border: 1px solid black; padding: 2px; display: inline-block;">Rename...</div> <div style="background-color: #ccc; border-radius: 5px; padding: 2px 10px; margin-left: 10px;">F 3</div> |

T RACKING GENERATOR

The optional **Tracking Generator** (Opt.01) is a factory installed item which generates a sweep signal with its sweep time and frequency range matching the GSP-830 system. The amplitude is maintained to a constant value over the entire frequency range, which is very useful for testing the frequency response of the DUT.








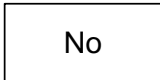
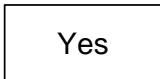




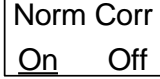




Activate tracking generator

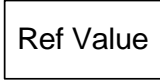


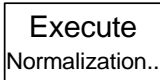


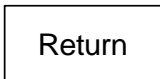
| | | |
|------------------------|---|-------------|
| 1. Activate TG output | 1. Press the Option key. | |
| | 2. Press F1 (TG). | |
| | 3. Press F1 (TG On). | |
| | 4. The tracking generator output becomes activated. | |
| 2. Set TG output level | 1. Press F2 (TG Level). | |
| | 2. Change the TG output level using the Numerical keys and Enter key. | |
| | Range | 0 to -50dBm |

Normalize tracking generator

| | | |
|------------------------|--------------------------|--|
| 1. Set reference level | 1. Press the Option key. | |
|------------------------|--------------------------|--|
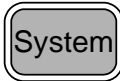
| | | | |
|---------------------------|--|--|--|
| | 2. Press F1 (TG). |  |  |
| | 3. Press F5 (Ref Value). |  |  |
| | 4. Set the reference value using the Numerical keys and Enter key. |  | |
| | Normalization amplitude is set at Reference level regardless of the TG output level. | | |
| | Range -130dBm to +20dBm | | |
| 2. Run normalization | 1. Press F3 (Execute Normalization). |  |  |
| | 2. Press F2 (Yes) to confirm running Normalization. Press F1 (No) to cancel running. |   |   |
| | 3. Press F6 (Return) to go back to the previous menu. |  |  |
| 3. Activate normalization | 1. To activate normalization, press F4 (Norm Corr On). |  |  |
| | 2. Normalization is activated and the TG icon appears. |  | |

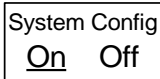Check TG installation status

| | | | |
|-----------------|---|--|---|
| Panel operation | 1. Press the System key. |  | |
| | 2. Press F6 (More). |  |  |
| | 3. Press F4 (System Config On). The configuration appears. |  |  |
| | 4. The TG sign shows the installation status, installed (checked) or not installed (unchecked). |   | |

D EMODULATOR

The optional FM/AM **Demodulator** (Opt.07) is a factory installed item which recovers AM or FM modulated baseband signal. The demodulated signal can be output from the rear panel 3.5mm mini-phone jack.



Activate demodulation

| | | |
|-----------------|--|------|
| Panel operation | 1. Press the Option key. | |
| | 2. Press F2 (Demod). | |
| | 3. Select Frequency Modulation or Amplitude Modulation by pressing F1 (FM On) or F2 (AM On). | |



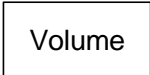



Activate phone output

| | | |
|-----------------|---|--|
| Panel operation | 1. Press F2 (Demod). | |
| | 2. Press F3 (SPK On). The rear panel phone output becomes active. | |



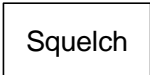



| | |
|---------------|---|
| Specification | <ul style="list-style-type: none"> • 3.5mm stereo headphone jack wired for mono • Maximum 0.5W output into 8 Ω load • Frequency range: 30Hz to 50kHz |
|---------------|---|
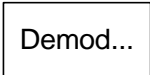
| | |
|------|---|
| Note | Either FM or AM must be turned on before activating the phone output. |
|------|---|


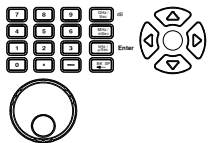

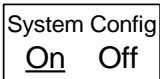

Set phone output volume

| | | |
|-----------------|---|---|
| Panel operation | 1. Press F2 (Demod). |   |
| | 2. Press F4 (Volume). |   |
| | 3. The volume level appears in the command window. |  |
| | 4. Change the output volume using the Numerical keys, Arrow keys, or Scroll knob followed by the Enter key. |  |
| Volume level | 0 to 63 | |

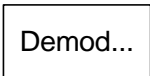Cut off phone output noise (squelch)
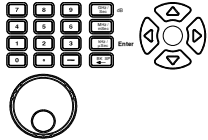
| | | |
|-----------------|---|---|
| Panel operation | 1. Press F2 (Demod). |   |
| | 2. Press F5 (Squelch). Squelch level: 0 to 4 |   |
| | 3. The squelch level appears in the command window. Output level lower than the setting is muted. |  |
| | 4. Change the squelch level using the Numerical keys, Arrow keys, or Scroll knob followed by the Enter key. |  |



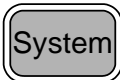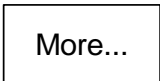


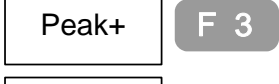

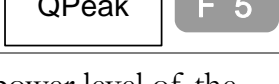
Check Demodulator installation status

| | | |
|-----------------|--|---|
| Panel operation | 1. Press the System key. |  |
| | 2. Press F6 (More). |   |
| | 3. Press F4 (System Config On). The configuration appears. |   |
| | 4. The Demodulator sign shows the installation status, installed (checked) or not installed (unchecked). | Installed <input checked="" type="checkbox"/> Demod Not installed <input type="checkbox"/> Demod |




EMI FILTER

The optional **EMI filter** (Opt. 05, also called 9kHz/120kHz RBW) is a factory installed optional item used for specific measurement situations such as EMI average detection, where a higher level of sensitivity is required than the standard configuration. When this module is installed, the GSP-830 acquires two additional features: Average/Quasi-peak detection mode, and 9k/120k RBW.

Select average/ quasi peak signal detection mode





| | | |
|-----------------|---|---|
| Panel operation | 1. Press the Trace key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F3 (Detection). |  |
| | 4. The signal detection mode appears. When the EMI filter is installed, F4 (AVG) and F5 (QPeak) becomes available. For signal detection mode details, see page80. |      |
| Parameter | AVG (average) | Detects the average power level of the samples using a low pass filter. Useful for smoothing the noise level. |
| | QPeak (quasi-peak) | Detects the quasi-peak power level of the samples. Useful for viewing in zero span without missing signal variations. |

Select 9kHz/120kHz RBW

| | | |
|-----------------|---|---|
| Panel operation | 1. Press the BW key. |  |
| | 2. Press F1 (RBW Man). |  |
| | 3. Select 9kHz/120kHz RBW using the Arrow keys or Scroll knob. The RBW value appears in the command window. |  |

Note In the automatic mode, RBW is selected according to the internal reference setting.
For reference RBW/VBW setting, see page99.

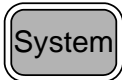Check EMI filter installation status
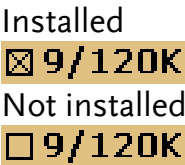
| | | |
|-----------------|---|---|
| Panel operation | 1. Press the System key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F4 (System Config On). The system configuration window appears. |  |
| | 4. The 9/120k RBW sign shows the installation status, installed (checked) or not installed (unchecked). |  |

Note EMI filter (9k/120k RBW) and 10k/100k RBW are exclusive. These two optional items cannot be installed together.

BATTERY / DC

OPERATION

The **Battery Pack** (Opt.02) is an optional item permitting portable field operation of the GSP-830 using internal battery. The **DC Input** permits using an automobile 12V power, also useful for field operation.



Battery Operation


Package removal / insertion



Turn Off the main power switch and remove the power cord before inserting or removing the battery pack.



Turn the knob to open the battery compartment.

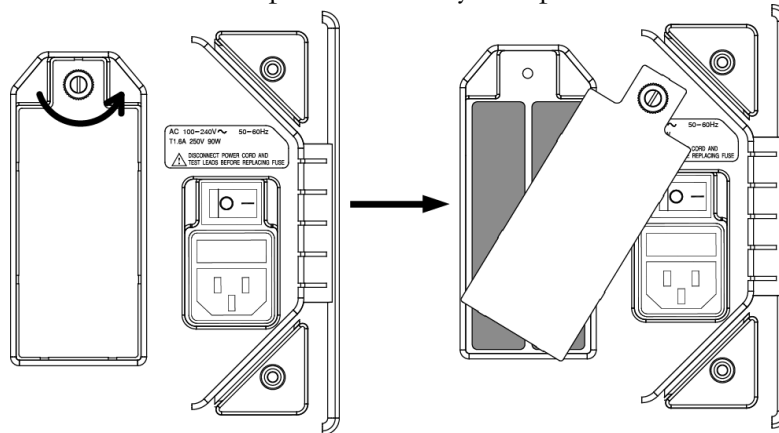

Check Battery level 1. Press the Option key.



2. Press F3 (Battery). The level icon appears at the bottom of the display.



| | | | |
|--|---------------|--|---------------|
| | Fully charged | | 50% to 25% |
| | 75% to 50% | | Less than 25% |

Note Regardless of battery check, the GSP-830 shows the icon for 5 seconds every 30 minutes.

Battery maintenance To prolong the battery life, take out the batteries when they are not in use for more than one month.

| | |
|------------------|--------------------------------------|
| Parameter | Usage time 3 hours (typical) |
| | Charge time 3 hours (typical) |

Check battery installation status



- Panel operation**
1. Press the System key.
 2. Press F6 (More).
 3. Press F4 (System Config On). The configuration appears.
 4. The Battery sign shows the installation status, installed (checked) or not installed (unchecked).
Installed
 Battery
Not installed
 Battery

DC Operation

- Panel operation** Connect the DC power cable to the rear panel input connector.
- Specification** 12V, 40W max, 2.1mm plug
- Battery charging** When the DC power is in use, the batteries are also charged.
- Note** DC power cable (with a lighter plug for automobile usage) is available as an optional item, GTL-401 (page179).

PC SOFTWARE

The proprietary **PC software** (Eagleshot) for remote operation is downloadable from Good Will Instruments website (www.gwinstek.com). The Eagleshot software permits waveform viewing and major panel operations using the familiar PC interface: large monitor, keyboard, and mouse.

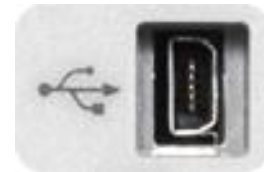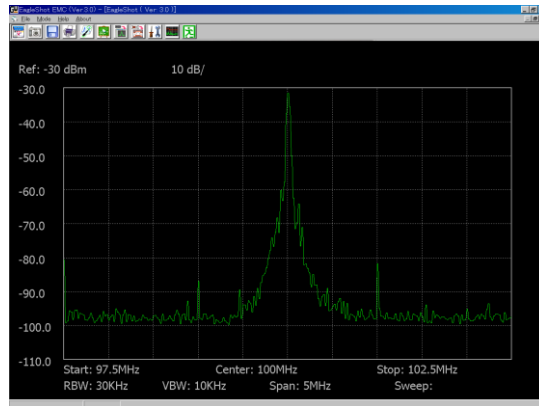

| | | |
|---------------------|----------------------------|-----|
| Installation | PC requirement..... | 151 |
| | Software download | 151 |
| | Installation step | 151 |
| <hr/> | | |
| Invocation | Configure interface | 152 |
| | Invoke software..... | 152 |
| <hr/> | | |
| Usage | Establish connection..... | 154 |
| | Capture waveform | 154 |
| | Clear waveform | 154 |
| | Save waveform | 155 |
| | Printout screen image..... | 155 |
| | Use marker | 155 |
| | Exit program | 156 |

Install Software

PC requirement


| | | |
|----------|-----|---|
| Software | OS | Windows 2000/XP |
| Hardware | USB | 1 USB host connector, 1.1 or 2.0 compatible |



Software download


1. Website access Access <http://www.gwinstek.com>
2. Download Go to the GSP-830 corner and download the software.

Installation step

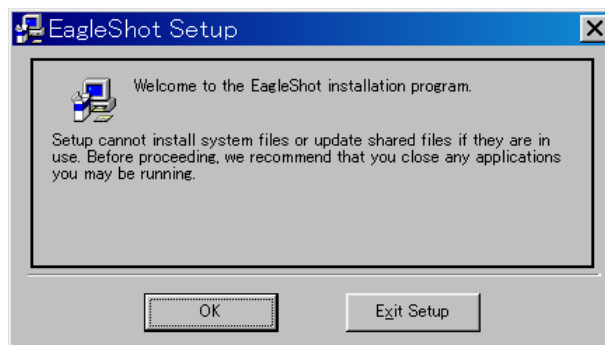1. Activate setup software
 1. Unpack the zip file.
 2. Double click Setup.exe.
 3. The setup screen opens. Close all other applications and click OK. To cancel, click Exit Setup.



2. Start installation
 1. To install the software into a specific directory, click the Change Directory button. 
 2. Click the icon to start installation. 
 3. When the installation is successful, a message appears. Click OK to complete the installation.

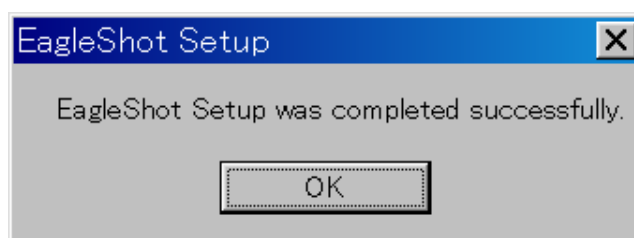

Connect Software


This section assumes that the software is already installed.

Configure interface

USB slave or RS-232C is acceptable.

Configure USB

No need to configure anything on the GSP-830 side. Just connect the type B mini USB cable to the rear panel.

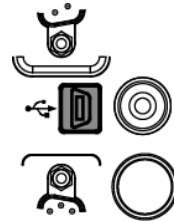

Configure RS-232C

 
 
1. The RS-232C configuration can be checked from the system menu. Press the System key.




2. Press F3 (Serial Port).



3. The RS-232C port configuration appears. Configure the PC according to this setting.
 Baud: 57600
 Parity: None
 Stop bit: 1
 Data bit: 8



 4. Connect a 9 pin, male RS-232C cable to the rear panel connector.




Invoke software

PC operation


1. Invoke the software from the startup menu in the PC.



- Click the setting icon. The parameter setting window appears.

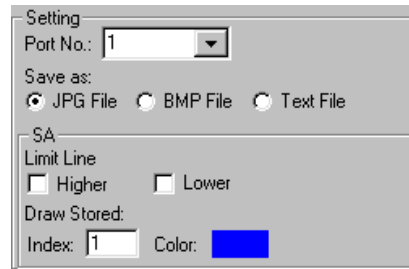

- Select the connection port (COM port).

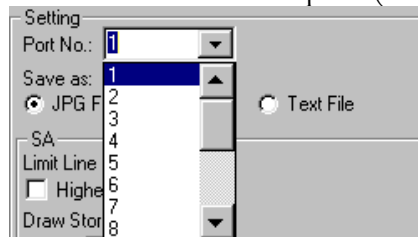

To check the configuration in the PC, go to Control panel → System properties → Device Manager.


- Click the Setting icon again to close the setting window



- Click the Open COM Port icon. The connection is established when the other icons become active.



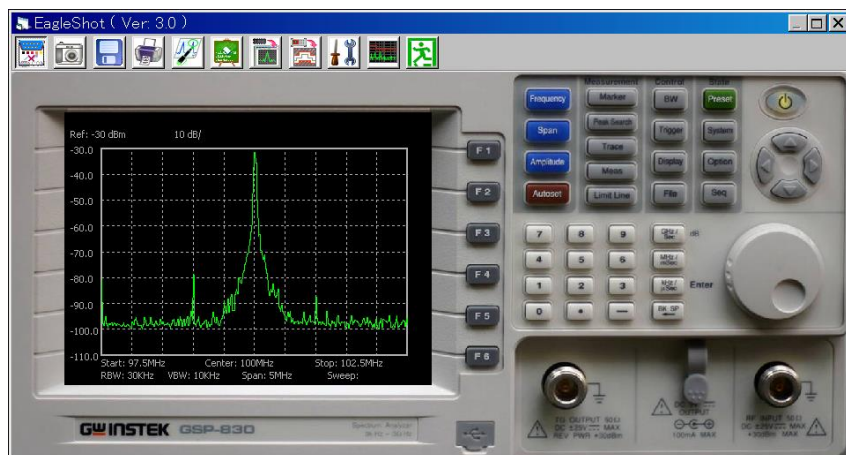


- Functionality check** Click the Capture icon. Make sure the waveform shown in the GSP-830 display is captured correctly.




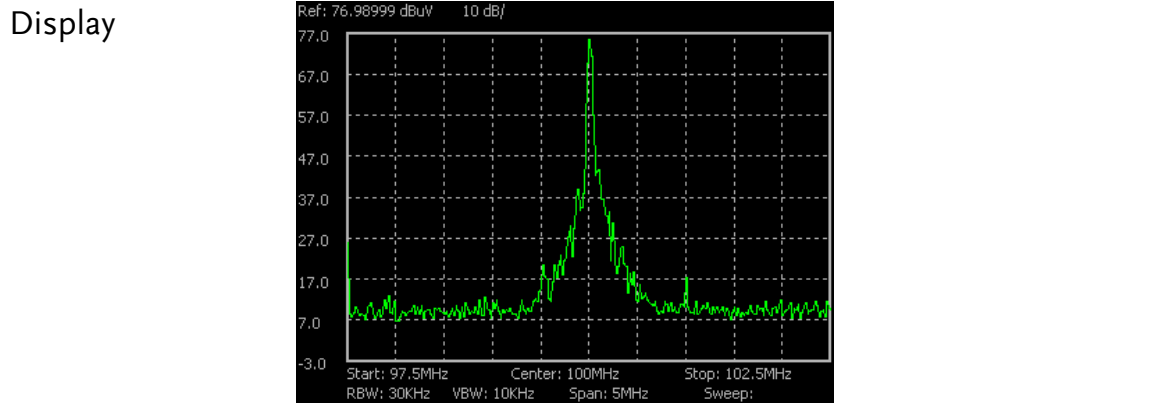
Use Software

Establish connection


| | | |
|----------------|---|---|
| Operation step | 1. Press the setting icon and open the parameter setting window. |  |
| | 2. Select the serial port terminal. |  |
| | 3. Press the COM port icon. The connection is established when the other icons become active. |  |
| Port setting | Select the port specified in the PC configuration. To check the configuration in the PC, go to Control panel → System properties → Hardware tab → Device Manager. | |

Capture waveform



| | | |
|----------------|---|---|
| Operation step | Click the capture icon. The current waveform is captured and appears on the screen. |  |
|----------------|---|---|



Clear waveform

| | | |
|----------------|--|---|
| Operation step | Click the clear trace icon. The waveform is cleared from the screen. |  |
|----------------|--|---|


Save waveform

- | | | |
|----------------|---|---|
| Operation step | <ol style="list-style-type: none"> Press the setting icon. Select the file format from *.jpg/*.bmp (screen snapshot), *.txt (measurement data). |  |
| | <div style="border: 1px solid gray; padding: 5px; width: fit-content; margin: 0 auto;"> Save as: <input checked="" type="radio"/> JPG File <input type="radio"/> BMP File <input type="radio"/> Text File </div> | |
| | <ol style="list-style-type: none"> Press the save icon. The standard save dialogue window opens. Select the directory and save the file. |  |

File format The *.txt file contains the following information.


- Frequency (MHz) and Amplitude for all waveforms
- Amplitude reference level, unit, and scale
- Start, Stop, Center frequency, and frequency span
- RBW, VBW, and sweep time
- Date and time (if already configured)


Printout screen image

- | | | |
|----------------|---|---|
| Operation step | Click the print icon. The standard printout dialogue opens. Select the printer and printout the screen image. |  |
|----------------|---|---|

Note The screen image contrast will be reversed (background color becomes white).

Use marker

- | | | |
|----------------|--|---|
| Operation step | <ol style="list-style-type: none"> Click the marker icon. The marker function window appears. |  |
|----------------|--|---|

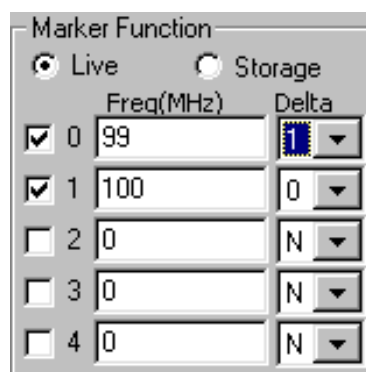

- | | |
|--|---|
| <ol style="list-style-type: none"> Select Live or Storage. | <div style="border: 1px solid gray; padding: 5px; width: fit-content; margin: 0 auto;"> <input checked="" type="radio"/> Live <input type="radio"/> Storage </div> |
| <ol style="list-style-type: none"> Check the marker ID box. 5 markers, 0 to 4, are available. | <div style="border: 1px solid gray; padding: 5px; width: fit-content; margin: 0 auto;"> <input checked="" type="checkbox"/> 0 <input checked="" type="checkbox"/> 1 </div> |

4. Enter the frequency to each marker in MHz.

Freq(MHz)

99

100

5. Select normal (N) or delta marker.
 Example:
 Marker 0 & Delta 1: the delta marker shows the difference between marker0 and marker1.


Delta

1

0

N

6. The display is updated with markers in red color. The marker values are listed at the bottom of the display.

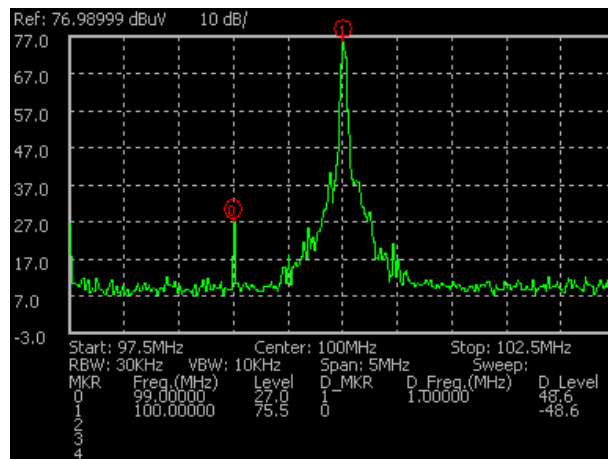

Exit program

Operation step Click the exit icon or press Alt key + F4.


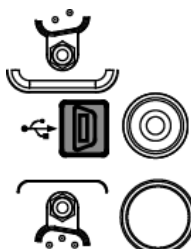
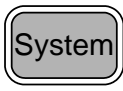

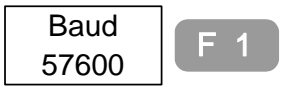



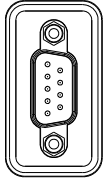
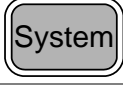












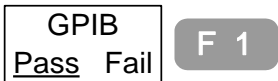
REMOTE CONTROL

The GSP-830 supports remote control which is partially based on IEEE 488.2 and SCPI (Standard Commands for Programmable Instrumentation) standards. The command set covers most of the panel operations. Three interfaces are available: USB slave, RS-232, and GPIB.

| | | |
|-------------------------|-----------------------------------|-----|
| Interface | Configure Interface | 158 |
| Command Syntax | Command Syntax..... | 160 |
| Status Registers | Status Registers..... | 161 |
| Command Set | IEEE488.2 standard commands | 165 |
| | Register commands | 165 |
| | Sweep commands..... | 165 |
| | Frequency | 165 |
| | Span | 166 |
| | Amplitude..... | 166 |
| | Autoset..... | 167 |
| | Marker & Peak Search | 167 |
| | Trace | 169 |
| | Power measurement..... | 169 |
| | Limit line | 171 |
| | BW..... | 171 |
| | Trigger | 172 |
| | Display | 172 |
| | File | 173 |
| | Preset | 174 |
| | System..... | 174 |
| | Option | 175 |
| | Sequence | 175 |

Configure Interface
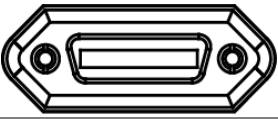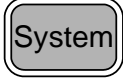
| | | |
|-------------------------------|--|-----------------------------|
| Interface type | USB slave | USB 1.1 or 2.0, type B mini |
| | RS-232C | D-sub 9 pin |
| | GPIB (optional) | 24 pin |
| USB slave port configuration | <p>No need for panel configuration: Just connect a type B mini USB cable to the rear panel.</p> <p> The USB icon turns on when the connection is detected.</p>  | |
| RS-232C configuration | <ol style="list-style-type: none"> The RS-232C configuration can be checked from the system menu. Press the System key.  Press F3 (Serial Port).  The RS-232C port configuration appears. Configure the PC according to this setting. Baud: 57600  Parity: None  Stop bit: 1  Data bit: 8  Connect a 9-pin male RS-232C cable to the rear panel terminal.  | |
| GPIB (optional) configuration | <p>GPIB interface is a factory installed optional item. Contact the service center for a new installation.</p> <ol style="list-style-type: none"> Press the System key.  Press F2 (GPIB Add).  | |
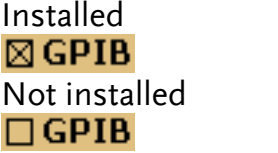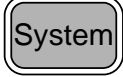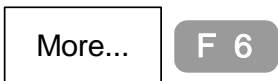
| | | |
|--------------------------------|--|---|
| | 3. Select the GPIB address using the Left/Right keys or Scroll knob. Configure the PC accordingly. |  |
| | 4. Connect the GPIB cable to the rear panel terminal. |  |
| Check GPIB installation status | 1. To check the GPIB installation status, press the System key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F4 (System Config On). The configuration appears. |  |
| | 4. The system configuration window appears. GPIB sign shows installed (checked) or not installed (unchecked) |  |
| Check GPIB self-test result | 1. To check the internal GPIB functionality test result, press the System key. |  |
| | 2. Press F6 (More). |  |
| | 3. Press F2 (Self Test). |  |
| | 4. The GPIB result appears at F1. If the result is Fail (underlined), contact the service center. |  |
| GPIB constraints | <p>Keep these rules when using the GPIB interface.</p> <ul style="list-style-type: none"> • Altogether less than 15 devices & 20m cable length, 2m between each device on the bus • Unique address assigned for each device • At least 2/3 of the GPIB devices turned On • No loop or parallel structure allowed | |
| Functionality Check | <p>Run this query command from the terminal.</p> <pre>*idn?</pre> <p>This should return the Manufacturer, Model number, Serial number, and Firmware version.</p> <p>GW, GSP-830, P920130, V3.01</p> | |

Command Syntax

The commands are partially compatible with IEEE488.2 (1992) and SCPI (Standard Commands for Programmable Instrumentation) (1994) standards. Commands are NON-case sensitive.

| | | |
|--------------------|--|--|
| Example command | <pre>meas:freq:cen _ 9 _ khz</pre> | |
| | 1: Command Header | 2: Single space |
| | 3: Parameter1 | 4: Single space |
| | 5: Parameter2 | |
| Command Header | Several command header elements (nodes) can be concatenated to form a complex command. The above example can be separated into: meas: (root node) + freq: + cen: | |
| Parameter example | 0/1 | 0 or 1. |
| | 1to4 | Integer between 1, 2, 3, or 4. |
| | 0.01to5 | Decimal number between 0.01 and 5. |
| | khz | Unit (non-case sensitive) |
| Message Terminator | Marks the end of a command line. Any of the following is acceptable. | |
| | CR^END | Line feed code (hexadecimal 0D) with END message |
| | CR | Line feed code |
| | <dab>^END | Last data byte with END message |
| Message Separator | ; (semicolon) Command separator. | |

Status Registers

To program the GSP-830 effectively, the Status Register structure needs to be understood. This chapter explains in detail the structure of the status registers.

Description

The status registers are used to determine the status of the spectrum analyzer. The status registers maintain the status of the operation events, execution errors, messages and service requests.

The GSP-830 has a number of registers:

- Operation Event Status Register

- Operation Event Status Enable Register


- Standard Event Status Register

- Standard Event Status Enable Register

- Status Byte Register

- Service Request Enable Register

The structure of the status registers is shown on the next page.

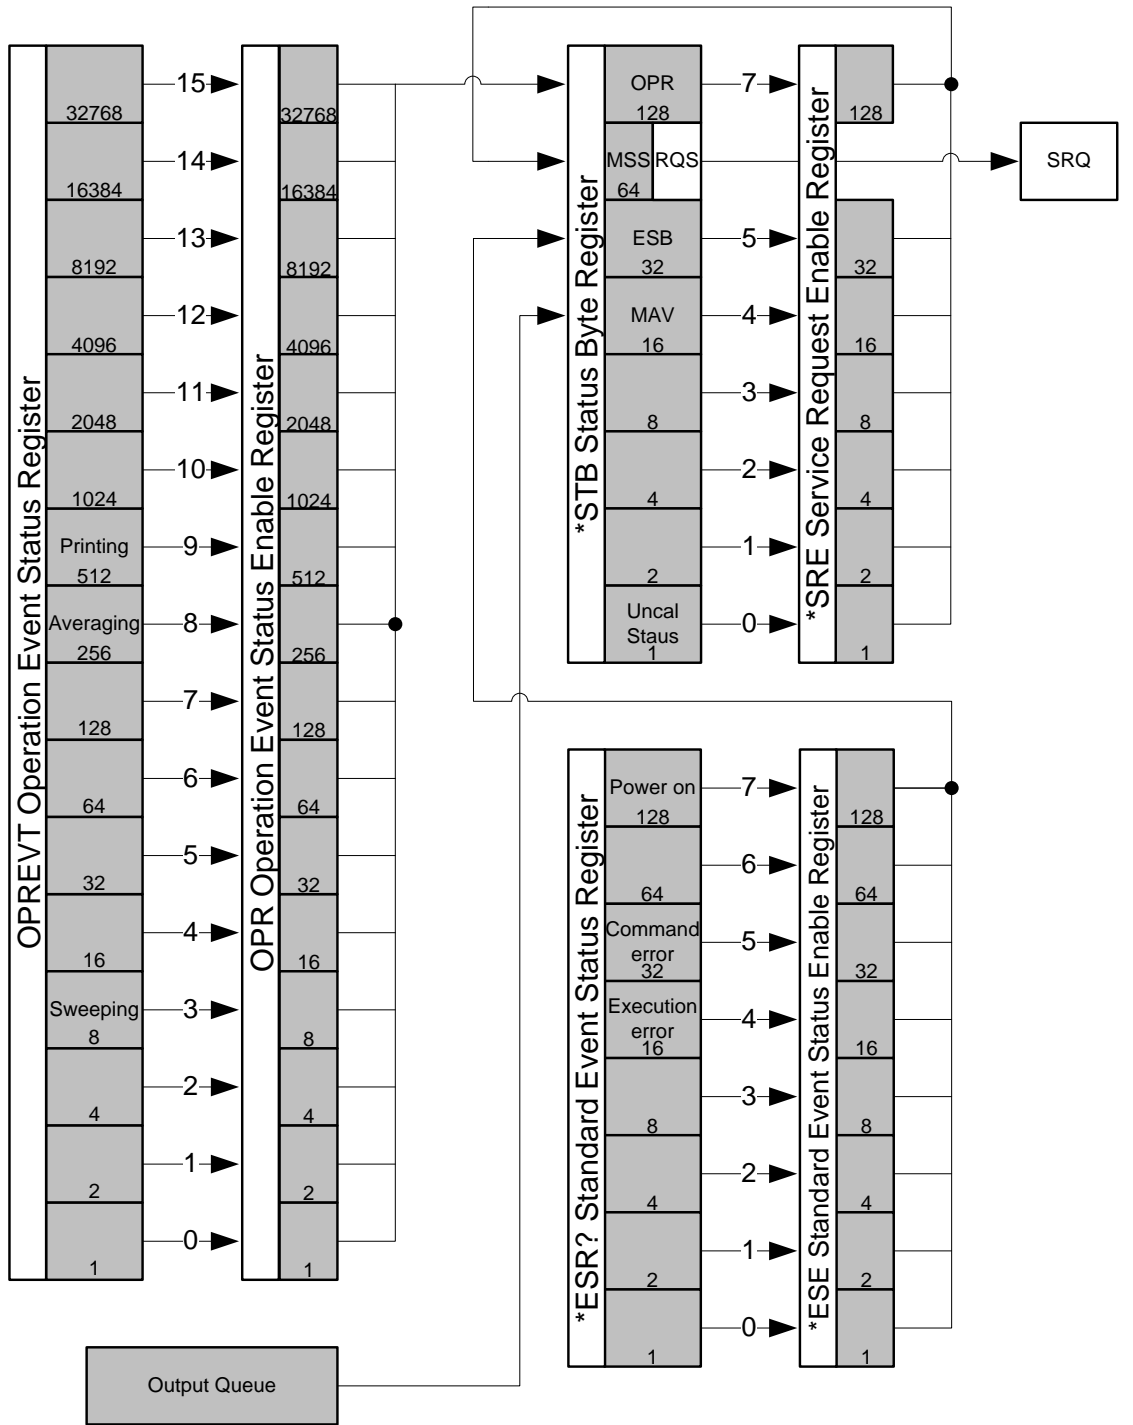

| | |
|--|--|
| Operation Event Status Register | The Operation Event Status Register is used to indicate if events have been completed. |
| Operation Event Status Register | |
| Bit | Event Description |
| 0 to 2 | Not used. |
| 3 | Sweeping This bit is set to 1 when a sweep has been completed. |
| 4 to 7 | Not used. |
| 8 | Averaging This bit is set to 1 when Averaging has been completed. |
| 9 | Printing This bit is set to 1 when saving the display image to an external USB flash drive has completed. |
| 10 to 15 | Not used. |
| Operation Event Status Enable Register | The Operation Event Status Enable Register is used to determine which events in the Operation Event Status Register will set the OPR bit in the Status Byte Register. |
| Standard Event Status Register | The Standard Event Status Register is used to indicate if any standard events have occurred. |
| Standard Event Status Register | |
| Bit | Event Description |
| 0 to 3 | Not used. |
| 4 | Execution This bit is set to 1 when the program data is out of range. |
| 5 | Command Error This bit is set to 1 when an illegal command is used. |
| 6 | Not used. |
| 7 | Power On |
| Standard Event Status Enable Register | The Standard Event Status Enable Register is used to determine which events in the Standard Event Status Register will set the ESB bit in the Status Byte Register. |
| Status Byte Register | The Status Byte Register is used to summarize the events from the Operation Event Status Enable Register and the Standard Event Status Enable Registers as well as indicate service requests and message requests. |
| Status Byte Register | |

| Bit | Event | Description |
|--------|--------------|--|
| 0 | Uncal status | This bit is set to 1 when the sweep is too fast resulting in an unstable signal. |
| 1 to 3 | | Not used. |
| 4 | MAV | The MAV (Message AAvailable) bit is set when there is a data in the Output Queue. |
| 5 | ESB | The ESB (Event Summary Bit) bit is set when any of the events are set and enabled in the Standard Event registers. |
| 6 | MSS/RQS | The MSS/RQS bit is used for service requests. MSS: The MSS bit is essentially a summary of all the events for all the status registers. The MSS bit is set when any events in the Service Request Enable Register are set. RQS: The RQS bit is set when the MSS bit is set. The RQS bit indicates that there is at least one reason for a service request. |
| 7 | OPR | The outputs from the Operation Event Status Enable Register (OPR) are logically ORed to summarize the OPR event (bit 7) in the Status Byte Register. Thus the corresponding bits in the OPR register must be enabled first before the OPR event can be set. |

Command Set

- Commands are **non**-case sensitive.
- Underline means a single space (100_mhz→100 mhz).

IEEE488.2 standard commands

| | |
|-------|--|
| *cls | Clear Status Command. |
| *ese? | Standard Event Status Enable Register Query. |
| *ese | Standard Event Status Enable Register Command. Parameter: 1 to 255. Example: *ESE_128 (Set bit 7) |
| *esr? | Standard Event Status Register Query. |
| *idn? | Identification Query. Parameter: Manufacturer, Model, Serial number, Firmware version. Example: GW, GSP-830, P920130,V3.01 |
| *rst | Reset Command. |
| *sre? | Service Request Enable Register Query. |
| *sre | Service Request Enable Register Command. Parameter: 1 to 255. Example: *SRE_128 (Set bit 7) |
| *stb? | Read Status Byte Register Query. |
| *tst? | Self-Test Query. |

Register commands

| | |
|---------|--|
| opr | Operation Event Status Enable Register command. Sets which events in the Standard Operation Status Register can be enabled. Parameter: 1 to 65535. Example: OPR_8 |
| opr? | Operation Event Status Enable Register query. Queries which events in the Standard Operation Status Register are enabled. Returns the bit weight of the Operation Event Status Enable Register. Return parameter: 1 to 65535. Example: 8 (bit 3 is set.) |
| oprevt? | Operation Event Status Register query. Returns the bit weight of the Operation Event Status Register. Return parameter: 1 to 65535. Example: 8 (bit 3 is set.) |

Sweep commands

| | |
|----|---------------------------------|
| si | Stop the sweep. |
| ts | Reset the sweep and start once. |
| sn | Continue the sweep. |

Frequency

| | |
|----------------|---|
| meas:freq:cen? | Returns the center frequency in kHz. Example: 1000000 khz |
| meas:freq:cen | Sets the center frequency. Example: meas:freq:cen_100_mhz |
| meas:freq:st? | Returns the start frequency in kHz. Example: 1000000 khz |

| | |
|------------------|--|
| meas:freq:st | Sets the start frequency. Example: meas:freq:st_100_mhz |
| meas:freq:stp? | Returns the stop frequency in kHz. Example: 1000000 khz |
| meas:freq:stp | Sets the stop frequency. Example: meas:freq:stp_100_mhz |
| meas:freq:ss? | Returns the frequency step size in kHz. Example: 1000000 khz |
| meas:freq:ss | Sets the frequency step. Example: meas:freq:ss_100_mhz |
| meas:freq:cen:fw | Moves the center frequency one step size forward. |
| meas:freq:cen:bw | Moves the center frequency one step size backward. |

Span

| | |
|----------------|---|
| meas:span? | Returns the frequency span in kHz. Example: 10000 khz |
| meas:span | Sets the frequency span. Example: meas:span_10_mhz |
| meas:span:full | Sets the frequency span to full. |
| meas:span:zero | Sets the frequency span to zero. |
| meas:span:last | Recalls the last frequency span setting. |

Amplitude

| | |
|----------------------------|---|
| meas:refl:unit? | Returns the reference level unit. Parameter: 1 (dBm), 2 (dBmV), 3 (dBuV) |
| meas:refl:unit | Sets the reference level unit. Parameter: 1 (dBm), 2 (dBmV), 3 (dBuV) Example: meas:refl:unit_1 (dBm) |
| meas:refl? | Returns the reference level in the current unit. Example: -30 (-30dBm when the unit is dBm) |
| meas:refl | Sets the reference level in the current unit. Example: meas:refl_-30 (-30dBm when in dBm) |
| meas:refl:scale? | Returns the amplitude scale. Parameter: 1(10dB/Div), 2(5dB/Div), 3(2dB/Div), 4(1dB/Div) |
| meas:refl:scale | Sets the amplitude scale. Parameter: 1(10dB/Div), 2(5dB/Div), 3(2dB/Div), 4(1dB/Div) Example: meas:refl:scale_1 (10dB/Div) |
| meas:refl:exg? | Returns the external gain/loss in dB. Example: -6 (-6dB) |
| meas:refl:exg | Sets the external gain/loss. Example: meas:refl:exg_-6 (-6dB) |
| meas:refl:corr:edit | Sets the amplitude correction data (frequency, amplitude). Need to specify the table index and the number of correction. Example: meas:refl:corr:edit_1_CR_2,100,-40,150,-30, (table index1, 2 data, 100MHz/-40dB, 150MHz/-30dB) |
| meas:refl:corr:edit:delall | Deletes all point in an amplitude correction set. Need to specify set index. Example: meas:refl:corr:edit:delall_5 (delete set No.5) |
| meas:refl:corr:on? | Returns the activated amplitude correction set. Parameter: none, 1 to 5 (correction set) |
| meas:refl:corr:on? | Returns the amplitude correction set is active or inactive. Need to specify the set index. Parameter: on, off Example: meas:refl:corr:on_1? (set No.1 is activated?) |

| | |
|--------------------|---|
| meas:refl:corr:on | Activates the amplitude correction set. Specify the set index. Example: meas:refl:corr:on_1 (activate set No.1) |
| meas:refl:corr:off | Deactivates the amplitude correction set. Specify set index. Example: meas:refl:corr:off_1 (deactivate set No.1) |
| meas:inputz? | Returns the input impedance. Parameter: 0 (50 Ω), 1 (75 Ω) |
| meas:inputz | Sets the input impedance. Parameter: 0 (50 Ω), 1 (75 Ω) Example: meas:inputz_0 (50 Ω) |
| meas:inputz:cal? | Returns the input impedance calibration value in dB. |
| meas:inputz:cal | Sets the input impedance calibration value in dB. Example: meas:inputz:cal_5.9 (5.9dB) |

Autoset

| | |
|-------------------------|---|
| meas:autoset:run | Runs autoset. |
| meas:autoset:amp:auto | Sets the autoset amplitude floor setting to auto mode. |
| meas:autoset:amp:man | Sets the autoset amplitude floor setting to manual mode. Need to specify the amplitude in the current unit. Example: meas:autoset:amp:man_20 (20dB) |
| meas:autoset:amp:mode? | Returns the autoset amplitude floor setting mode. Parameter: auto, manual |
| meas:autoset:span:auto | Sets the autoset frequency span setting to auto mode. |
| meas:autoset:span:man | Sets the autoset frequency span setting to manual mode. Need to specify unit. Example: meas:autoset:span:man_100_khz (100kHz) |
| meas:autoset:span:mode? | Returns the autoset frequency span setting mode. Parameter: auto, manual |

Marker & Peak Search

| | |
|-----------------------|---|
| meas:mark:on? | Returns marker On/Off. Need to specify the marker ID. Parameter: on, off Example: meas:mark:on_1? (marker1 On?) |
| meas:mark:on | Turn On marker. Parameter: 1to5 (marker ID), all (all markers) Example: meas:mark:on_1 (marker 1 On) |
| meas:mark:off | Turn Off marker. Parameter: 1 to 5 (marker ID), all (all markers) Example: meas:mark:off_1 (marker 1 Off) |
| meas:mark:norm | Sets a marker to normal mode. Parameter: 1 to 5 (marker ID) Example: meas:mark:norm_1 (marker 1 normal mode) |
| meas:mark:norm:freq? | Returns the frequency of a normal marker. Need to specify ID. Example: meas:mark:norm:freq_1? (normal mkr1 frequency?) |
| meas:mark:norm:level? | Returns the amplitude of a normal marker. Need to specify ID. Example: meas:mark:norm:level_1? (normal mkr1 level?) |

| | |
|---------------------------|---|
| meas:mark:delta | Sets a marker to delta mode. Also sets the relative frequency. Parameter: 1 to 5 (marker ID) Example: meas:mark:delta_1_10_mhz (marker 1 in delta mode, relative frequency 10MHz) |
| meas:mark:delta:freq? | Returns the relative frequency of a delta mkr. Need to specify ID. Example: meas:mark:delta:freq_1?(delta mkr1 freq?) |
| meas:mark:delta:level? | Returns the relative amplitude of a delta mkr. Need to specify ID. Example: meas:mark:delta:level_1?(delta mkr1 amp?) |
| meas:mark:tomin | Moves a marker to minimum peak. Parameter: 1 to 5 (marker ID) Example: meas:mark:tomin_1 (marker 1 to min peak) |
| meas:mark:topeak | Moves a marker to the peak. Parameter: 1 to 5 (marker ID) Example: meas:mark:topeak_1 (marker 1 to peak) |
| meas:mark:tonp | Moves a normal/delta marker to the next peak. Parameter: 1 to 5 (marker ID) Example: meas:mark:tonp_1 (marker 1 to the next peak) |
| meas:mark:tonpr | Moves a normal/delta marker to the next right peak. Parameter: 1 to 5 (marker ID) Example: meas:mark:tonpr_1 (marker 1 to the next right pk) |
| meas:mark:tonpl | Moves a normal/delta marker to the next left peak. Parameter: 1 to 5 (marker ID) Example: meas:mark:tonpl_1 (marker 1 to the next left peak) |
| meas:mark:tocen | Moves a normal/delta marker to the center frequency. Parameter: 1 to 5 (marker ID) Example: meas:mark:tocen_1 (marker 1 to the center freq) |
| meas:mark:tost | Moves a normal/delta marker to the start frequency. Parameter: 1 to 5 (marker ID) Example: meas:mark:tost_1 (marker 1 to the start frequency) |
| meas:mark:tostp | Moves a normal/delta marker to the stop frequency. Parameter: 1 to 5 (marker ID) Example: meas:mark:tostp_1 (marker 1 to stop frequency) |
| meas:mark:toss | Moves a normal/delta marker to the stop frequency. Parameter: 1 to 5 (marker ID) Example: meas:mark:toss_1 |
| meas:mark:torefl | Moves a normal/delta marker to the reference level. Parameter: 1 to 5 (marker ID) Example: meas:mark:torefl_1 (marker 1 to the reference level) |
| meas:mark:trace | Moves a normal/delta marker to a trace. Parameter: 1 to 5 (marker ID), followed by 0 (auto), 1 (traceA), 2 (traceB), 3 (traceC) Example: meas:mark:trace_1_2 (marker 1 to traceB) |
| meas:mark:marktable:on | Activates marker table. |
| meas:mark:marktable:off | Deactivates marker table. |
| meas:mark:peaktbale:on | Activates peak table. |
| meas:mark:peaktbale:off | Deactivates peak table. |
| meas:mark:peaktbale:sortf | Sorts peak table by frequency. |

| | |
|---------------------------|--|
| meas:mark:peaktable:sorta | Sorts peak table by amplitude. |
| meas:mark:peaktrack:on | Turns On peak track. Parameter: 1 to 5 (marker ID) Example: meas:mark:peaktrack:on_1 (marker1 track on) |
| meas:mark:peaktrack:off | Turns Off peak track. Parameter: 1 to 5 (marker ID) Example: meas:mark:peaktrack:off_1 (marker1 track off) |
| meas:mark:peakthres:on | Turns On peak threshold and sets amplitude. Parameter: peak threshold in dB. Example: meas:mark:peakthres:on_-30 (-30dB threshold) |
| meas:mark:peakthres:off | Turns Off peak threshold. |

Trace

| | |
|--------------------|--|
| meas:tra | Sets the mode for a trace. Parameter: 1 (traceA), 2 (traceB), 3 (traceC), followed by 1 (clear), 2 (peak hold), 3 (view), 4 (blank), 5 (mini_hold) Example: meas:tra_1_2 (traceA set to peak hold mode) |
| meas:tra:avg:on | Turns On average mode and sets average number for a trace. Parameter: 1 (traceA), 2 (traceB), 3 (traceC), followed by No. Example: meas:tra:avg:on_1_20 (Average trace A 20 times) |
| meas:tra:avg:off | Turns Off the average mode. Parameter: 1 (traceA), 2 (traceB), 3 (traceC) Example: meas:tra:avg:off_1 (traceA average mode Off) |
| meas:tra:read? | Returns trace data. Parameter: 1 (traceA), 2 (traceB), 3 (traceC), all (all three traces) Example: meas:tra:read_1? (traceA data) |
| meas:tra:a<>b | Swaps trace A and B. |
| meas:tra:a+b>a | Adds trace B to A. |
| meas:tra:a-b>a | Subtracts trace B from A. |
| meas:tra:const? | Returns the constant value to be added or subtracted. |
| meas:tra:const | Sets the constant value to be added or subtracted. Example: meas:tra:const 6 |
| meas:tra:a+const>a | Adds a constant value to traceA. |
| meas:tra:a-const>a | Subtracts a constant value from traceA. |
| meas:tra:det? | Returns the detection mode. Parameter: 1 (normal), 2 (sample), 3 (peak+), 4 (avg), 5 (qpeak) |
| meas:tra:det | Sets the detection mode. Parameter: 1 (normal), 2 (sample), 3 (peak+), 4 (avg), 5 (qpeak) Example: meas:tra:det_4 (set the detection mode to average) |

Power measurement

| | |
|-------------|--|
| meas:ch:bw? | Returns the main channel bandwidth in kHz. Example: 1000 khz |
| meas:ch:bw | Sets the main channel bandwidth. Need to specify the unit. Example: meas:ch:bw_1_mhz (1MHz) |

| | |
|----------------------|--|
| meas:adjch:bw? | Returns the adjacent channel bandwidth in kHz. Need to specify the channel. Example: meas:adjch:bw_2? (adjacent channel2 bandwidth) |
| meas:adjch:bw | Sets the adjacent channel bandwidth. Need to specify CH and unit. Example: meas:adjch:bw_2_1_mhz (adj CH2 BW 1MHz) |
| meas:adjch:offs? | Returns the adjacent channel offset in kHz. Specify channel. Example: meas:adjch:offs_2? (adjacent channel2 offset) |
| meas:adjch:offs | Sets the adjacent channel offset. Specify channel and unit. Example: meas:adjch:offs_2_1_mhz (adjacent ch2 offs 1MHz) |
| meas:acpr? | Returns ACPR activation status. Parameter: on, off |
| meas:acpr | Turns On/Off ACPR measurement. Parameter: on, off Example: meas:acpr_on (ACPR On) |
| meas:acpr:lower? | Returns the lower ACPR result. Need to specify 1 or 2. Example: meas:acpr:lower_2? (lower ACPR 2 result?) |
| meas:acpr:upper? | Returns the upper ACPR result. Need to specify 1 or 2. Example: meas:acpr:upper_2? (upper ACPR 2 result?) |
| meas:acpr:chup | Moves the ACPR channel up. |
| meas:acpr:chdown | Moves the ACPR channel down. |
| meas:chspc | Sets the channel space. Need to specify the unit. Example: meas:chspc_10_mhz (10MHz) |
| meas:chspc? | Returns the channel space in KHz. |
| meas:ocbw? | Returns the OCBW activation/deactivation status. Parameter:on,off |
| meas:ocbw | Turns On/Off OCBW. Parameter: on, off Example: meas:ocbw_on |
| meas:ocbw:bw? | Returns the OCBW in kHz. |
| meas:ocbw:chpw? | Returns the channel power in the current unit. I.e. dBm. |
| meas:ocbw:per? | Returns OCBW percentage. |
| meas:ocbw:per | Sets OCBW percentage. Example: meas:ocbw:per_90 (90%) |
| meas:ndb? | Returns N dB activation status. Parameter: on, off |
| meas:ndb | Turns on/off N dB. Parameter: on, off Example: meas:ndb_on |
| meas:nbw:bw? | Returns N dB bandwidth in kHz. Example: 1000 khz |
| meas:nbw:ndb | Sets N dB. Example: meas:ndb:ndb_3 (3 dB) |
| meas:nbw:ndb? | Returns the value of NdB. |
| meas:jitter? | Returns Phase Jitter on/off status. Parameter: on, off |
| meas:jitter | Turns On/Off Phase Jitter. Parameter: on, off Example: meas:jitter_on |
| meas:jitter:crpw? | Returns the carrier power in the current unit. I.e. dBm. |
| meas:jitter:stoffs? | Returns Phase Jitter start offset. Example: 0 khz |
| meas:jitter:stoffs | Sets Phase Jitter start offset. Need to specify the unit. Example: meas:jitter:stoffs_0_khz |
| meas:jitter:stpoffs? | Returns Phase Jitter stop offset. Example: 50 khz |

| | |
|---------------------|---|
| meas:jitter:stpoffs | Sets Phase Jitter stop offset. Need to specify the unit. Example: meas:jitter:stpoffs_50_khz |
| meas:jitter:phase? | Returns Phase Jitter phase in radian. Example: 1.234 rad |
| meas:jitter:time? | Returns Phase Jitter time in pico second. Example: 1.234psec |

Limit line

| | |
|----------------------------------|--|
| meas:lmpline:on | Turns On limit line. Parameter: 0 (low limit line), 1 (high limit line) Example: meas:lmpline:on_0 (low limit line On) |
| meas:lmpline:off | Turns Off limit line. Parameter: 0 (low limit line), 1 (high limit line) Example: meas:lmpline:off_0 (low limit line Off) |
| meas:lmpline:passfail? | Returns Pass/Fail test result. Parameter: 0 (Fail), 1 (Pass) |
| meas:lmpline:passfail | Turns On/Off Pass/Fail test. Parameter: on, off Example: meas:lmpline:passfail_on (Pass/Fail test On) |
| meas:lmpline:passfail:criterion? | Returns Pass/Fail test criteria. Parameter: 1 (pass if all signals are in the zone), 2 (pass if the peaks are in the zone), 3 (pass if valleys are in the zone) |
| meas:lmpline:passfail:criterion | Sets Pass/Fail test criteria. Parameter: 1 (pass if all signals are in the zone), 2 (pass if the peaks are in the zone), 3 (pass if valleys are in the zone) Example: meas:lmpline:passfail:criterion_3 |
| meas:lmpline:table? | Returns limit line table On/Off. Parameter: on, off |
| meas:lmpline:table | Turns On/Off limit line table. Parameter: on, off Example: meas:lmpline:table_on (limit line table On) |
| meas:lmpline? | Returns the limit line table data. Need to specify 0 (low limit line), 1 (high limit line) / limit line points. Example: meas:lmpline_0? Returns: 3,100,0,110,3,120,2 (low limit line, 3 points, 100MHz/0dB, 110MHz/3dB, 120MHz/2dB) |
| meas:lmpline:edit | Sets the limit line table data. Need to specify 0 (low limit line), 1 (high limit line) / limit line points. Example: meas:lmpline:edit_0_CR_3,100,-2,110,-3,120,-2, (low limit line, 3 points, 100MHz/-2dB, 110MHz/-3dB,120MHz/-2dB) |
| meas:lmpline:edit:delall | Delete all points in limit line table. Parameter: 0 (low limit line), 1 (high limit line) Example: meas:lmpline:edit:delall_0 (delete low lline table) |

BW

| | |
|--------------|---|
| con:rbw:auto | Sets RBW to auto. |
| con:rbw? | Returns the RBW (resolution bandwidth). Parameter: 0 (300Hz), 1 (3kHz), 2 (9kHz), 3 (10kHz), 4 (30kHz), 5 (100kHz), 6 (120kHz), 7 (300kHz), 8 (4MHz) |

| | |
|---------------|--|
| con:rbw:man | Selects the RBW. Parameter: 0 (300Hz), 1 (3kHz), 2 (9kHz), 3 (10kHz), 4 (30kHz), 5 (100kHz), 6 (120kHz), 7 (300kHz), 8 (4MHz) Example: con:rbw:man_1 (sets RBW to 300Hz) |
| con:rbw:mode? | Returns RBW mode. Parameter: auto, manual |
| con:vbw:auto | Sets VBW to auto. |
| con:vbw? | Returns the VBW. Parameter: 0 (10Hz), 1 (30Hz), 2 (100Hz), 3 (300Hz), 4 (1kHz), 5 (3kHz), 6 (10kHz), 7 (30kHz), 8 (100kHz), 9 (300kHz), 10 (1MHz) |
| con:vbw:man | Selects the VBW. Parameter: 0 (10Hz), 1 (30Hz), 2 (100Hz), 3 (300Hz), 4 (1kHz), 5 (3kHz), 6 (10kHz), 7 (30kHz), 8 (100kHz), 9 (300kHz), 10 (1MHz) Example: con:vbw:man_4 (sets VBW to 1kHz) |
| con:vbw:mode? | Returns VBW mode. Parameter: auto, manual |
| con:swt:auto | Sets the sweep time to auto. |
| con:swt:man | Sets the sweep time in msec. Example: con:swt:man_50 (sets the sweep time to 50ms) |
| con:swt? | Returns the sweep time in msec. |
| con:swt:mode? | Returns the sweep time mode. Parameter: auto, manual |
| con:allcouple | Sets the RBW, VBW, and sweep time to auto. |

Trigger

| | |
|------------------|--|
| con:trig:freerun | Sets the trigger to free run mode. |
| con:trig:video | Sets the trigger to video and sets the trigger level in current unit. Example: con:trig:video_-20 (video mode, -20dBm) |
| con:trig:single | Sets the trigger condition to single. |
| con:trig:cont | Sets the trigger condition to continuous. |
| con:trig:ext | Sets the trigger to external mode. |
| con:trig:delay | Sets the trigger delay in msec. Example: con:trig:delay_1000 (1000ms delay) |
| con:trig:freq | Sets the trigger frequency in MHz. Example: con:trig:freq_1 (1MHz) |

Display

| | |
|----------------------|---|
| con:disp:dim | Selects the display dimmer level. Parameter: 0 to 5 Example: con:disp:dim_2 (dimmer level 2) |
| con:disp:dl | Turns On/Off display line. Parameter: on, off Example: con:disp:dl_on (display line On) |
| con:disp:dl:level | Sets the display line level in current unit. Example: con:disp:dl:level_-50 (display line at -50dBm) |
| con:disp:title:show | Sets and shows the display title. The title is case sensitive. Example: con:disp:title:show_SAtest (title is SAtest) |
| con:disp:title:clr | Clears the display title. |
| con:disp:split:upper | Turns On and sweeps upper window in split window mode. |

| | |
|----------------------|--|
| con:disp:split:lower | Turns On and sweeps lower window in split window mode. |
| con:disp:split:alt | Sweeps the upper/lower window alternatively in split mode. |
| con:disp:split:full | Goes back to full screen mode. |

File

| | |
|-----------------------|--|
| con:file:copy | <p>Copies file. Need to specify the source and destination file. Parameter: ta/tb/tc (traceA/B/C), t1to10 (trace1to10), lh/ll (high/low limit line), lh1to5 (high limit line 1to5), ll1to5 (low limit line 1to5), c1to5 (correction set 1to5), q1to10 (sequence 1to10), s1to10 (setup 1to10), file name in USB flash drive Example: con:file:copy_t10_ta (copy from trace10 to traceA) Example: con:file:copy_ta_mytrace (copy from traceA to a file in external USB flash named mytrace)</p> |
| con:file:del | <p>Deletes file. Need to specify the source and destination file. Parameter: ta/tb/tc (traceA/B/C), t1to10 (trace1to10), lh/ll (high/low limit line), lh1to5 (high limit line 1to5), ll1to5 (low limit line 1to5), c1to5 (correction set 1to5), q1to10 (sequence 1to10), s1to10 (setup file 1to10), file name in external USB flash drive. Example: con:file:del_t10 (delete trace10) Example: con:file:del_myspace (delete a file names myspace in extrenal USB flash drive)</p> |
| con:file:prtsc:tofile | <p>Saves the display image to external USB flash drive. Need to specify the file name. Example: con:file:prtsc:tofile_myscreen (saves the display image to a file named myscreen)</p> |

Preset

con:preset Presets the GSP-830.

System

con:sys:setup:save Save the current system setting. Parameter: 1 to 10
Example: con:sys:setup:save_1 (save current setup to setup1)

con:sys:setup:recall Recalls a system setting from setup file. Parameter: 1 to 10
Example: con:sys:setup:recall_1 (recall setting in setup1 file)

con:sys:gpibaddr? Returns the current GPIB address.

con:sys:gpibaddr Sets the GPIB address. Example: con:sys:gpibaddr_2

con:sys:calsig Turns On/Off the auxiliary signal. Parameter: on, off
Example: con:sys:calsig_on (auxiliary signal On)

con:sys:clock:date? Returns the current date setting.
Parameter: year/month/day/day of week 1 (Mon) to 7 (Sun)
Example: 2006/6/24/6 (June 24th, Saturday, 2006)

con:sys:clock:date Sets the date.
Parameter: year/month/day/day of week 1 (Mon) to 7 (Sun)
Example: con:sys:clock:date_2006_6_24_6 (Jun24, Sat, 2006)

con:sys:clock:time? Returns the current time setting.
Parameter: hour : minute : second
Example: 13:30:26 (1 p.m., 30 minutes, 26 second)

con:sys:clock:time Sets the time. Parameter: hour_minute_second
Example: con:sys:clock:time_13_30_26 (1 p.m., 30 min, 26 sec)

con:sys:clock:show Turns On/Off clock display. Parameter: on, off
Example: con:sys:clock:show_on (clock display On)

con:sys:selftest? Returns the self test result. Parameter: 0 (fail), 1 (pass) in the following order: GPIB/Flash/SDRAM/RTC
Example: 1 1 0 1 (GPIBpass,Flashpass,SDRAMfail,RTCpass)

con:sys:lang Selects language. Parameter: 1 (English), 2 (Simplified Chinese) Example: con:sys:lang_2 (simplified Chinese)

con:sys:ser? Returns the serial number. Example: EE8300000

con:sys:swver? Returns the software version.
Example: v1.20_080514 (version 1.20, 2008 May 14th)

con:sys:fwver? Returns the firmware version. Example: v1.03 (version 1.03)

con:sys:hwver? Returns hardware version in following order. RF, IF, DSP, MB
Example: v1.0 v1.02 v1.02 v1.01 (RF: version 1.0, IF: version 1.02, DSP: version 1.02, MB: version 1.01)

con:sys:optstatus? Returns optional items installation status in the following order. 300HzRBW, EMIFilter, 10k/100kHzRBW, TG, Demodulator, Medref (± 1 ppm stability) Parameter: 0 (not installed), 1 (installed)
Example: 0 0 1 1 1 (TG, Demodulator, Medref are installed)

Option

| | |
|---------------------|---|
| con:opt:tg | Turns On/Off Tracking Generator (TG). Parameter: on, off Example: con:opt:tg_on (TG On) |
| con:opt:tg:level? | Returns the TG level. |
| con:opt:tg:level | Sets the TG level. |
| con:opt:tg:norm | Turns On/Off TG normalization. Parameter: on, off Example: con:opt:tg:norm_on (normalization On) |
| con:opt:tg:refval? | Returns the TG reference value. |
| con:opt:tg:refval | Sets the TG reference value. |
| con:opt:dm:fm | Turns On/Off FM in the demodulator. Parameter: on, off Example: con:opt:dm:fm_on (FM On) |
| con:opt:dm:am | Turns On/Off AM in the demodulator. Parameter: on, off Example: con:opt:dm:am_on (AM On) |
| con:opt:dm:spk | Turns On/Off phone output in the demodulator. Parameter: on, off Example: con:opt:dm:spk_on (phone On) |
| con:opt:dm:vol | Sets the demodulator phone output volume. |
| con:opt:dm:sql? | Returns the demodulator squelch level. |
| con:opt:dm:sql | Sets the demodulator squelch level. |
| con:opt:bat? | Returns the battery level. |
| con:opt:extreffreq? | Returns the external reference frequency. |
| con:opt:extreffreq | Sets the external reference frequency. Example: con:opt:extreffreq_1_mhz (1MHz) |

Sequence

| | |
|-------------------|--|
| con:seq:runmode | Selects the sequence run mode. Parameter: 1 (repeat mode), 2 (single mode) Example: con:seq:runmode_2 (sequence runs in sing mode) |
| con:seq:runseq | Runs the sequence. Parameter: sequence index, 1 to 10 Example: con:seq:runseq_2 (run sequence 2) |
| con:seq:stopseq | Stops the running sequence. |
| con:seq:delallseq | Deletes all programmed sequence. |
| con:seq:delseq | Deletes a sequence. Parameter: sequence index, 1 to 10 Example: con:seq:delseq_2 (delete sequence 2) |

FAQ

I pressed the power (ON/STBY) key on the front panel but nothing happens.

Make sure you turned on the rear panel power switch. For details, see page20.
Note that after proper sequence, it takes around 10 seconds for the display to become active.

I cannot even see the default green line on the display.

Check if the TraceBlank (hide trace from the display) is on for TraceA, the default waveform. Press the Trace key→F1 (select TraceA)→F2 (Clear) to recover the trace. For details, see page74.

I connected the signal but it does not appear on screen.

Run the Autoset and let the GSP-830 find the best display scale for your target signal. Press the Autoset key, then press F1 (Autoset). For details, see page58.

I want to see which optional items are installed.

Check the optional item status in the system information window. Press the System key → F6 (More) → F4 (System Config On). For details, see page129.

The Pre-amplifier (GAP-801 or GAP-802, page56) is a completely external item, therefore does not appear in the system information menu.

The GSP-830 performance does not match the specification.

Make sure the device is powered on for at least 30 minutes, within +18°Cto+28°C. This is necessary to stabilize the unit to match the specification.

If there is still a problem, please contact your local dealer or GWInstek at marketing@goodwill.com.tw.

Appendix

GSP-830 Specifications

The following specifications apply when the GSP-830 is powered on for at least 30 minutes within +18°C to +28°C.

| | | | |
|----------------------|---|---|--------|
| Frequency | Frequency Range | 9kHz to 3.0GHz | |
| | Aging Rate | ± 10ppm, 0-50°C, 5ppm/yr | |
| | Span Range | 2kHz to 3.0GHz in 1/2/5 sequence, full span, zero span | |
| | Phase Noise | -80dBc/Hz @ 1GHz 20kHz Offset typical | |
| Resolution Bandwidth | Sweep Time Range | 50ms to 25.6s | |
| | RBW Range | 3kHz, 30kHz, 4MHz | 300kHz |
| | RBW Accuracy | 15% | 17% |
| | VBW Range | 10Hz to 1MHz in 1-3 steps | |
| Amplitude | Measurement Range (Span: 50kHz, RBW: 3kHz) | -103dBm to +20dBm: 1 MHz to 15MHz, Ref Lvl @ -30dBm -117dBm to +20dBm: 15MHz to 1GHz, Ref Lvl ≥ -110dBm -114dBm to +20dBm: 1GHz to 3GHz, Ref Lvl ≥ -110dBm | |
| | Overload Protection | Max. +30dBm, 25VDC | |
| | Reference Level Range | -110dBm to +20dBm | |
| | Accuracy | ±1dB @100MHz | |
| | Frequency Flatness | ±1dB, 100kHz to 3GHz | |
| | Display Range | ±1dB over 70dB | |
| | Linearity | | |
| | Average Noise Floor | < -135±1dBm/Hz: 1MHz to 15MHz, Ref Lvl @ -30dBm < -149dBm/Hz, typical -152dBm/Hz: 15MHz to 1GHz, Ref Lvl ≥ -110dBm < -146dBm/Hz, typical -149dBm/Hz: 1GHz to 3GHz, Ref Lvl ≥ -110dBm | |
| | Third Intermodulation | <-70dBc, RF Input @ -40dBm, Ref Level @ -30dBm | |
| | Harmonic Distortion | <-60dBc typical, RF Input < -40dBm, Ref Level @ -30dBm | |
| Dynamic Range | Non-Harmonic Spurious (Span: 50kHz, RBW: 3kHz) | < -93dBm: 1MHz to 15MHz, RefLvl ≥ -30dBm < -107dBm: 15MHz to 1GHz, RefLvl ≥ -110dBm < -104dBm: 1GHz to 3GHz, RefLvl ≥ -110dBm | |

| | | |
|-----------------------|--|---|
| General | Display | 640 x 480 high-res color TFT LCD |
| | Split Windows | Active Window: Upper, Lower, or Alternate (two simultaneously sweeping windows) |
| | Markers | 10 markers for peaks: 5 normal-delta marker pairs. Function: Delta, To Peak, To Minimum, Peak Track, Peak Table, Peak Sort |
| | Trace Detection | 3 traces with Peak, Maximum hold, Freeze, Average, and Trace Math |
| | Power Measurement | ACPR, OCBW, Channel power, N dB, and Phase Jitter |
| | Autoset Function | Auto tuning the measurement result for observation |
| | Trigger | Conditions: Video, External (Positive-going +5V-TTL ext. signal) Modes: Normal, Single, Continuous |
| | Sequence | Automated test by user defined macros without any remote controller. 10 sequential macro sets and 10 macros per each set. Variable Delays and Wait-to-Go facilitate automated measurement. Do-Sequence links and nests different sequence sets. |
| Connectors | RF Input | Type: N Female, 50Ω nominal RF input VSWR: <2:1, @0dBm Ref Lvl |
| | External Reference Clock Input (MHz) | Type: BNC Female, 1M, 1.544M, 2.048M, 5M, 10M, 10.24M, 13M, 15.36M, 15.4M, 19.2M |
| | Ref. Clock Output | Type: BNC Female, 10MHz |
| | DC Input (DC Power Operation) | Jack: 5.5mm, 12V |
| | DC Output (for pre-amplifier) | Type: SMA Male, output +9V/100mA max. |
| Interface | RS-232C | Sub-D 9pins Female USB Host/Device fully supported |
| | USB Connector | Front Panel: Type A receptacle for USB flash drives. Rear Panel: Type mini-B receptacle for PC remote control. |
| | VGA Output | Sub-D 15pins Female |
| | GPIB (option) | Fully programmable with IEEE488.2 compliance |
| Accessories | User Manual x1, Power Cord x1, USB Cable (Type A plug to Type mini-B plug) x 1 | |
| Power Source | AC 100V to 240V, 50/60Hz | |
| Dimensions & Weight | 330 (W) × 170(H) × 340(D) mm, Approx. 6kg | |
| Operation Environment | Temperature: 18°C to 28°C Relative Humidity: < 90% | |
| Storage Environment | Temperature: 0°C to 40°C Relative Humidity: < 85% | |

Optional Items Specifications

| | | |
|---------------------------------------|---|--|
| Opt.01 Tracking Generator | Frequency Range | 9kHz to 3.0GHz |
| | Amplitude Range | -50dBm to 0 dBm |
| | Amplitude Accuracy | ±1dB @100MHz, 0dBm |
| | Amplitude Flatness | ±1dB @0dBm |
| | Harmonics | <-30dBc typical |
| | Reverse Power | +30dBm |
| | Impedance | Type: N female, 50Ω nominal |
| | RF Output VSWR | < 2:1 |
| Opt.02 Battery Pack | Battery Type | 11.1V Li-Ion battery pack x 2 |
| Opt. 03 ±1ppm Stability | Output Range | ±1ppm, 0to50°C |
| | Aging Rate | ±1ppm / year |
| Opt. 04 300Hz RBW | RBW Selection | 300Hz |
| | RBW Accuracy | 20% |
| Opt. 05 9kHz&120kHz RBW(= EMI Filter) | RBW Selections | 9kHz and 120kHz, 6dB bandwidth |
| | RBW Accuracy | 15% |
| Opt. 06 10kHz & 100kHz RBW | RBW Selections | 10kHz and 100kHz, 3dB bandwidth |
| | RBW Accuracy | 15% |
| Opt. 07 Demodulator | Demodulation | AM, FM |
| | Output | 3.5mm stereo jack wired for mono operation |
| | RBW Selections | 10kHz and 100kHz, 3dB bandwidth |
| | RBW Accuracy | 15% |
| Opt. 08 GPIB Interface | Compliant standard | IEEE 488 bus |
| ADP-001 | BNC(J/F)to N(P/M) adaptor | |
| ADP-002 | SMA(J/F)to N(P/M) adaptor | |
| ADP-101 | BNC(J/F)75Ω to BNC(P/M)50Ω adaptor | |
| ATA-001 | BNC antenna | |
| ATN-100 | 10dB attenuator N(J/F) to N(P/M) | |
| GAK-001 | Termination 50Ω N(P/M) | |
| GAK-002 | Cap with chain N(P/M) | |
| GAP-801 | 10dB Preamplifier: 9kHz to 6GHz, 10dB typical | |
| GAP-802 | 20dB Preamplifier: 9kHz to 3GHz, 20dB typical | |
| GKT-001 General Kit Set | ADP-002 | SMA (J/F) to N (P/M) adaptor x 2 |
| | ATN-001 | 10dB Attenuator, N (J) to N(P) x 1 |

| | | |
|----------------------------|---|--|
| | GTL-303 | RF Cable (RD316, SMA(P), 60cm) x 2 |
| | GSC-002 | Kit box x 1 |
| GKT-002 CATV Kit set | ADP-001 | BNC (J/F) to N (P/M) adaptor x 2 |
| | ADP-101 | BNC (P/M) 50Ω to BNC (J/F) 75Ω adaptor x2 |
| | GTL-304 | RF Cable (RG223, N(P)-N(J), 30cm) x 2 |
| | GSC-003 | Kit box x 1 |
| GKT-003 RLB Kit set | GAK-001 | Termination, 50Ω, N(P) x 1 |
| | GAK-002 | Cap with chain, N(P) x 1 |
| | GTL-302 | RF Cable assembly (RG223+N(P), 30cm) x 2 |
| | GSC-004 | Kit box x 1 |
| GKT-006 EMI Probe set | ADP-01 | BNC (J/F) to N (P/M) adaptor x 1 |
| | ADP-02 | SMA (J/F) to N (P/M) adaptor x 1 |
| | ANT-01 | 6cm loop, H-Field probe x 1 |
| | ANT-02 | 3cm loop, H-Field probe x 1 |
| | ANT-03 | 6mm loop, H-Field probe x 1 |
| | PR-03 | Touch passive probe, < 3GHz x 1 |
| | Test Lead | RF Cable BNC (P/M) to BNC (P/M) x 1 |
| | Test Lead | RF Cable SMA (P/M) to SMA (P/M) x 1 |
| GRA-404 | 19 inch Rack adaptor panel, 4U | |
| GTL-301 | RF Cable assembly RG223, N(P/M) 100cm | |
| GTL-302 | RF Cable assembly RG223, N(P/M) 30cm | |
| GTL-303 | RF Cable assembly RD316, SMA(P/J) 60cm | |
| GTL-304 | RF Cable assembly RG223, N(P/M) to N(J/F) 30cm | |
| GTL-401 | DC power cord with DC Jack and lighter plug, 5A | |
| GSC-001 | Soft Carrying Case: available to accommodate the field operations | |
| RLB-001 Return Loss Bridge | Frequency range | 10MHz to 1GHz |
| | Directivity | 10MHz to 100MHz: > 48dB 100MHz to 1000MHz: > 38dB |
| | Insertion loss | Source to Load: < 10dB Load to Coupler: < 7dB |
| | Return loss | Source return loss: > 7dB Load return loss: > 11dB Coupler return loss: > 17dB |
| | Impedance | 50Ω (Characteristic Impedance) |
| | Connector | N type, Source/load: female, Coupler: male |
| | Dimension & weight | 88 x 54 x 32 (mm), 230g |

Note: Among Opt. 05 to 07, only one item can be installed to the GSP-830.

The following are factory installed items. Opt. 01, 03, 04, 05, 06, 07

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the below mentioned product

Type of Product: **Spectrum Analyzer**

Model Number: **GSP-830**

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to the EMC: 2014/30/EU, LVD: 2014/35/EU, WEEE: 2012/19/EU and RoHS: 2011/65/EU.

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

| © EMC | |
|---|---|
| EN 61326-1: EN 61326-2-1: EN 61326-2-2: | Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013) |
| Conducted & Radiated Emission EN 55011: 2009+A1: 2010 | Electrical Fast Transients EN 61000-4-4: 2012 |
| Current Harmonics EN 61000-3-2: 2014 | Surge Immunity EN 61000-4-5: 2006 |
| Voltage Fluctuations EN 61000-3-3: 2013 | Conducted Susceptibility EN 61000-4-6: 2014 |
| Electrostatic Discharge EN 61000-4-2: 2009 | Power Frequency Magnetic Field EN 61000-4-8: 2010 |
| Radiated Immunity EN 61000-4-3: 2006+A1: 2008+A2: 2010 | Voltage Dip/ Interruption EN 61000-4-11: 2004 |
| Low Voltage Equipment Directive 2014/35/EU | |
| Safety Requirements | EN 61010-1: 2010 (Third Edition) EN 61010-2-030: 2010 (First Edition) |

GOOD WILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng Dist., New Taipei City 236, Taiwan

Tel: [+886-2-2268-0389](tel:+886-2-2268-0389)

Fax: [+866-2-2268-0639](tel:+866-2-2268-0639)

Web: www.gwinstek.com

Email: marketing@goodwill.com.tw

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: [+86-512-6661-7177](tel:+86-512-6661-7177)

Fax: [+86-512-6661-7277](tel:+86-512-6661-7277)

Web: www.instek.com.cn

Email: marketing@instek.com.cn

GOOD WILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: [+31\(0\)40-2557790](tel:+31(0)40-2557790)

Fax: [+31\(0\)40-2541194](tel:+31(0)40-2541194)

Email: sales@gw-instek.eu

INDEX

| | |
|------------------------------|---------|
| 1 | |
| 1ppm stability | |
| error message..... | 22 |
| specifications..... | 179 |
| 5 | |
| 50ohm/75ohm..... | 57 |
| A | |
| accessories list..... | 11 |
| ACPR..... | 83 |
| adjacent channel..... | 83 |
| activate | |
| ACPR..... | 83 |
| all marker at once..... | 64 |
| amplitude correction..... | 54 |
| autoset..... | 60 |
| delta marker..... | 64 |
| demodulator..... | 144 |
| limit line..... | 91 |
| N dB..... | 88 |
| OCBW..... | 86 |
| phase jitter..... | 89 |
| phone output..... | 144 |
| TG..... | 142 |
| trace..... | 74 |
| AM demodulator..... | 144 |
| amplitude..... | 48 |
| command set..... | 166 |
| copy correction file..... | 115 |
| delete correction file..... | 119 |
| menu tree..... | 31, 32 |
| operation shortcut..... | 26 |
| peak sort..... | 72 |
| preset contents..... | 123 |
| specifications..... | 177 |
| amplitude correction..... | 52 |
| file type..... | 114 |
| amplitude floor..... | 61 |
| autoset..... | 58 |
| amplitude floor..... | 61 |
| command set..... | 167 |
| how autoset works..... | 59 |
| in functionality check..... | 24 |
| menu tree..... | 31 |
| operation shortcut..... | 26 |
| preset contents..... | 123 |
| auxiliary signal..... | 23, 135 |
| average | |
| signal detection..... | 81 |
| trace..... | 75 |
| waveform..... | 101 |
| B | |
| bandwidth..... | 95 |
| command set..... | 171 |
| menu tree..... | 35 |
| operation shortcut..... | 28 |
| preset contents..... | 123 |
| specifications..... | 177 |
| battery..... | 148 |
| life..... | 149 |
| safety instruction..... | 7 |
| specifications..... | 179 |
| C | |
| cable TV..... | 57 |
| kit set..... | 180 |
| calibration | |
| error message..... | 22, 128 |
| input impedance..... | 57 |
| caution symbol..... | 6 |
| center and span..... | 42 |
| center frequency..... | 42 |
| move marker to..... | 66 |
| move peak to..... | 70 |
| channel bandwidth | |
| ACPR..... | 83 |
| OCBW..... | 86 |
| channel space | |
| ACPR..... | 83 |
| OCBW..... | 86 |
| cleaning the GSP-830..... | 7 |
| clear trace..... | 74 |
| COM port selection..... | 153 |
| command syntax..... | 160 |
| continuous trigger mode..... | 105 |
| cooling fan caution..... | 6 |
| copy file..... | 115 |
| D | |
| date setting..... | 132 |
| dB unit selection..... | 50 |

- DC input 148
 specifications 178
 DC operation 149
 DC output 56
 specifications 178
 delay in sequence set 138
 delete
 amplitude correction 55
 limit line 93
 sequence 139
 delete file 118
 delta marker 64
 demodulator 144
 specifications 179
 destination files, copy 116
 detection mode 80
 display 107
 clock activation 132
 command set 172
 FAQ 176
 menu tree 35
 operation shortcut 29
 preset contents 123
 save image 111
 split 110
 title 109
 VGA output 111
 display line 108
- E**
- edit file name
 when copy file 117
 when rename 120
 when save image 122
 EMI filter 146
 bandwidth configuration 100
 specifications 179
 EMI probe set 180
 EN 55011 declaration of conformity 181
 EN 61010
 declaration of conformity 181
 measurement category 7
 pollution degree 8
 environment
 safety instruction 7
 specifications 178
 error
 message list 22
 message on power up 21
 self test result 22
 external offset 51
 external reference signal 134
 external trigger 104
- F**
- feature list 10
 file 113
 command set 172
 copy 115
 delete 118
 display image 121
 menu tree 36, 37
 operation shortcut 29
 preset contents 123
 rename 120
 type 114
 USB icon 114
 Flash memory self test 22
 FM demodulator 144
 free run 104
 freeze trace 75
 frequency 41
 command set 165
 menu tree 31
 operation shortcut 26
 peak sort 72
 preset contents 123
 specifications 177
 frequency adjustment point 16
 frequency step 42
 full span 46
 functionality check 23
 PC software 153
 fuse instruction 7
- G**
- GAP-801/802 56
 specifications 179
 general kit set 179
 GPIB
 configuration 127
 constraints 128
 functionality check 159
 self test 22, 127
 specifications 178
 ground symbol 6
- H**
- hardware version 129
 hide trace 75
 high limit line 91
 high voltage symbol 6
- I**
- icon
 75ohm impedance 57
 amplitude correction 52
 battery level 149
 external offset 51
 external reference 134
 internal reference median 134
 peak track 65, 69
 RBW manual 96

| | | | |
|--------------------------------------|---------|-----------------------------------|---------|
| sequence running..... | 141 | marker table | 67 |
| sweep time..... | 101 | minimum peak..... | 71 |
| TG normalized | 143 | month setting..... | 132 |
| trace average..... | 75, 102 | | |
| trace clear mode..... | 74 | N | |
| trace math | 78 | N dB..... | 88 |
| trace peak hold..... | 74 | normal detection mode | 80 |
| trace view | 75 | normal marker | 63 |
| trigger external | 105 | normal trigger mode | 105 |
| trigger video | 104 | numerical keys example..... | 15 |
| USB..... | 114 | | |
| VBW manual..... | 98 | O | |
| icon overview | 19 | OCBW..... | 86 |
| IEEE488.2 | 157 | offset | |
| standard commands..... | 165 | amplitude..... | 51 |
| impedance offset..... | 57 | phase jitter..... | 89 |
| impedance selection | 57 | operation environment | 7 |
| initial display..... | 21 | option | |
| menu tree | 25, 31 | command set..... | 175 |
| shortcut..... | 25, 26 | menu tree..... | 39 |
| interface configuration..... | 126 | operation shortcut | 30 |
| | | preset contents | 123 |
| L | | optional item | |
| language | | 10/100kHz RBW | 96 |
| selection..... | 135 | 300Hz RBW | 96 |
| version | 129 | 9k/120kHz RBW | 96 |
| last span setting..... | 47 | battery..... | 148 |
| last stored settings..... | 21 | demodulator..... | 144 |
| LCD dimmer..... | 108 | EMI filter | 96, 146 |
| limit line | 90 | FAQ | 176 |
| command set | 171 | installed items | 129 |
| copy file..... | 115 | list of options | 11 |
| delete file | 119 | pre-amplifier..... | 56 |
| file type..... | 114 | specifications | 179 |
| menu tree | 34 | TG..... | 142 |
| operation shortcut..... | 28 | overview | |
| preset contents | 123 | display | 18 |
| local oscillator error message | 22 | display icon | 19 |
| low limit line..... | 91 | features | 10 |
| | | front panel | 13 |
| M | | menu tree..... | 31 |
| marker | 62 | operation shortcuts | 26 |
| activate all at once..... | 64 | preset..... | 40 |
| command set | 167 | rear panel..... | 16 |
| marker table..... | 67 | | |
| marker to center | 66 | P | |
| marker to peak..... | 65 | package contents..... | 11 |
| menu tree | 32 | panel settings | |
| operation shortcut..... | 26 | copy file | 115 |
| PC software | 155 | delete file..... | 119 |
| peak track..... | 69 | file type | 115 |
| preset contents | 123 | save/recall | 125 |
| specifications..... | 178 | pass/fail test | 94 |
| to center frequency | 66 | pause sequence | 138 |
| to reference level..... | 66 | PC requirement for software | 151 |
| to start/stop frequency..... | 66 | PC software..... | 150 |
| to trace..... | 67, 76 | | |

installation 151

peak hold trace 74

peak search 68

 command set 167

 menu tree 33

 minimum peak 71

 next peak 70

 operation shortcut 27

 peak table 71

 preset contents 123

peak signal

 in autoset 59

 search 69

peak table 71

peak threshold 72

percentage, OCPW 86

phase jitter 89

phone output 144

positive peak detection 80

power measurement 82

 ACPR 83

 command set 169

 menu tree 34

 N dB 88

 OCBW 86

 operation shortcut 27

 phase jitter 89

 preset contents 123

power supply safety instruction 7

power up sequence 20

 FAQ 176

pre-amplifier 56

 specifications 179

preset 123

 command set 174

 contents 40

printout display image 155

protective conductor symbol 6

Q

quasi-peak detection 81

R

RBW 96

 9k/120kHz RBW 146

 error message 22

RBW configuration 100

real-time clock self test 23

recall

 amplitude correction 55

 panel settings 125

reference level 49

 move marker to 66

reference signal

 error message 22

 master 133

 settings 129

 slave 134

 specifications 178

Register

 command set 165

remote control 157

 PC software 150

return loss bridge 180

 accessory kit set 180

RS-232C

 configurations 126

 specifications 178

RTC test result 131

S

sample detection mode 80

save

 panel settings 125

 waveform from PC software 155

SCPI 157

SDRAM self test 23

self test result 22

sequence 136

 command set 175

 copy file 115

 delete file 119

 edit 137

 file type 114

 menu tree 39

 operation shortcut 30

 preset contents 123

 run 140

 specifications 178

serial number 129

service operation

 contact 176

 menu 135

signal detection 80

 in EMI filter 146

single trigger mode 105

soft carrying case 180

source files, copy 115

span 41, 43

 command set 166

 menu tree 31

 operation shortcut 26

 preset contents 123

 specifications 177

specifications

 FAQ 176

 GSP-830 177

 optional item 179

split display 110

squelch, demodulator setting 145

start and stop 44

 move marker to 66

start frequency 44

status structure 161

stop frequency 45

storage environment7

Sweep

 command set 165

sweep time 101

synchronization

 master 133

 slave 134

system 124

 command set 174

 error message 128

 menu tree 38

 operation shortcut 29

 preset contents 123

system configuration 129

T

table of contents3

TG 142

 level 142

 normalization 142

 reversed power level caution6

 specifications 179

tilt stand 20

time domain view 46

time setting 132

title, display 109

trace 73

 average 75

 clear 74

 command set 169

 copy file 115

 delete file 119

 FAQ 176

 file type 114

 freeze 75

 menu tree 33

 move marker to 67, 76

 operation shortcut 27

 preset contents 123

 specifications 178

trace math 78

trigger 103

 command set 172

continuous trigger 105

delay 106

external 105

menu tree 35

normal trigger 105

operation shortcut 28

preset contents 123

single trigger 105

specifications 178

video 104

U

UK power cord requirement 8

USB

 file copy 115

 file delete 118

 file rename 120

 icon 114

 save display image 111, 121

 slave configuration 126, 152, 158

 specifications 178

V

VBW 98

 error message 22

VBW configuration 100

version information 129

vertical unit 50

VGA output 111

 specifications 178

video trigger 104

W

warning symbol 6

website, Good Will Instruments 151

Y

year setting 132

Z

zero span 46