Rack Adapter Panel

GRA-418

GWINSTEK

Assembly Manual GW INSTEK PART NO. 82RA-41800M01

This assembly manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd. No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.



ISO-9001 CERTIFIED MANUFACTURER




GRA-418

The GRA-418 rack mount is suited for the PSB-1000 Series DC multi-range power supplies. The GRA-418 supports both the EIA (GRA-418-E) and JIS (GRA-418-J) standards for use with standard sized rack units. Incorporating a strong frame and robust design, the GRA-418 can fit between 1 ~ 2 PSB-1000 units.

Rack Mount Adapter Component List and Assembly


DescriptionPlease check to make sure all the components of the
GRA-418 rack mount kit are provided. The JIS and EIA rack
mounts have slightly different component sets.

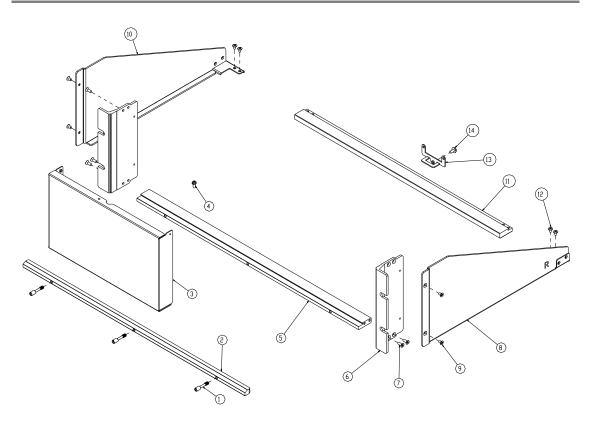

G≝INSTEK

GRA-418-E (EIA)

	Item	Part NO.	Description	QTY
GRA-418-E	1	59CA-04017NS1	RACK SCREW	3
Assembly	2	62RA-410HP201	FRONT BRACKET	1
	3	62RA-414HP201	BLANK PANEL	1
	4	592B-W3008NS1	PMS-W-3*8	1
	5	62RA-410HP101	MIDDLE BRACKET	1
	6	62RA-410HPAA1	EIA BRACKET 3U	2
	7	593B-03008NS1	FMS 3*8	5
	8	62RA-410HP5B1	RIGHT BRACKET	1
	9	593B-03005NS1	FMS 3*5	4
	10	62RA-410HP4A1	LEFT BRACKET	1
	11	62RA-410HP3A1	REAR BRACKET	1
	12	599B-03006NS1	IMS 3*6	4
	13	62RA-410HP9A1	RACK HP	2
	14	594B-W3008NS1	BMS-W3*8	2

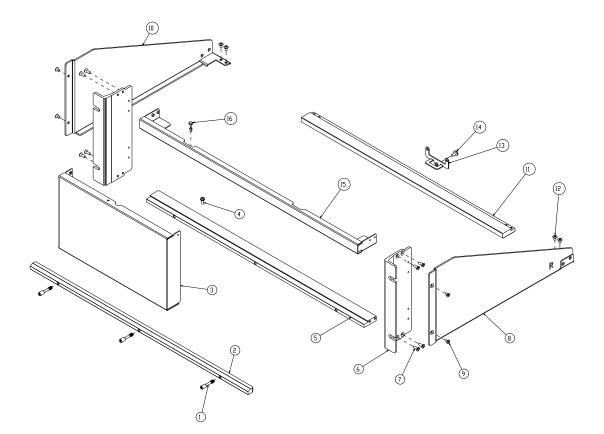

GRA-418-J (JIA)

	Item	Part NO.	Description	QTY
GRA-418-J	1	59CA-04017NS1	RACK SCREW	3
Assembly	2	62RA-410HP201	FRONT BRACKET	1
	3	62RA-414HP201	BLANK PANEL	1
	4	592B-W3008NS1	PMS-W-3*8	1
	5	62RA-410HP101	MIDDLE BRACKET	1
	6	62RA-410HPBA1	JIA BRACKET 3U	2
	7	593B-03008NS1	FMS 3*8	9
	8	62RA-410HP5B1	RIGHT BRACKET	1


G^wINSTEK

9	593B-03005NS1	FMS 3*5	4
10	62RA-410HP4A1	LEFT BRACKET	1
11	62RA-410HP3A1	REAR BRACKET	1
12	599B-03006NS1	IMS 3*6	4
13	62RA-410HP9A1	RACK HP	2
14	594B-W3008NS1	BMS-W3*8	2
15	62RA-414HP301	TOP BRACKET	1
16	5320-00403001	Pin(SR-3S)	1


Assembly


Initial setup	1. Remove the handle (from) the unit.
---------------	---------------------------------------

- Remove the handle cover.
- Remove the screws securing the handle to the case.
- Remove the handle.

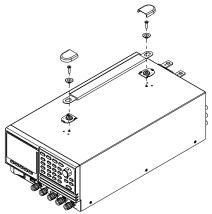

2. Remove the feet from the underside of the unit.

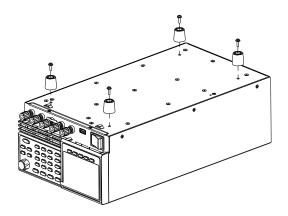


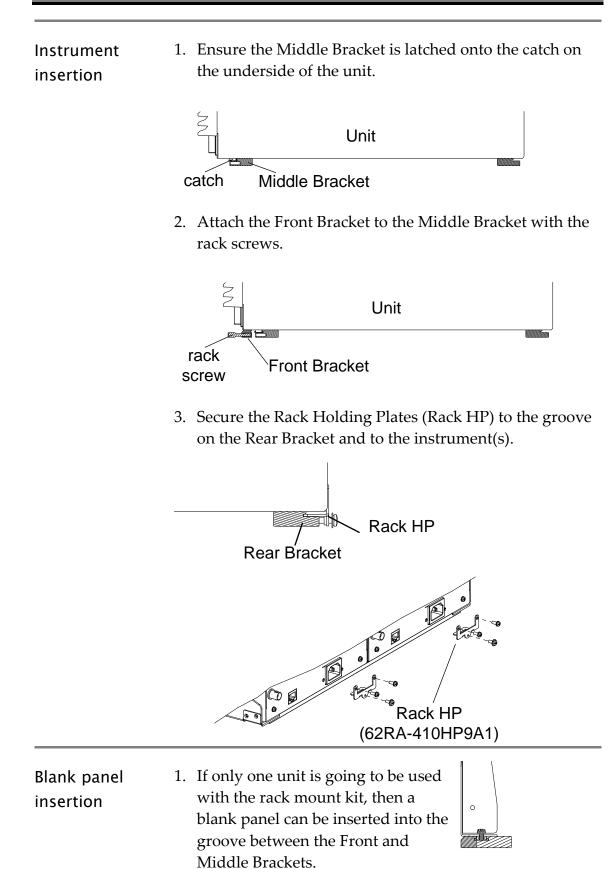


2. Secure the panels with the PMS-W-3*8 screw.

On the JIS model, use the SR-3S pin to hold the plate to the top bracket.




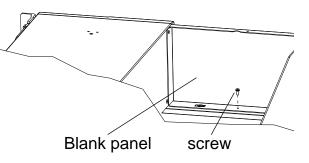




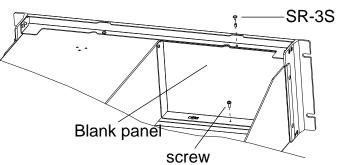

Appearance

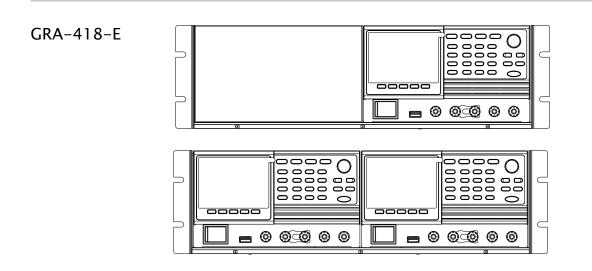


GRA-418-J

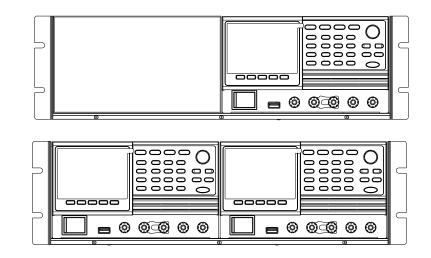


Specification

Load Capacity Max 20kg

Rack installation diagram:

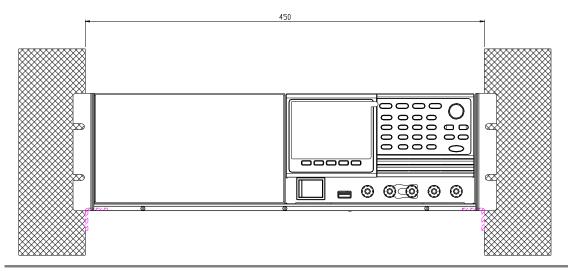

The angle brackets are used to support the bottom of the rack.

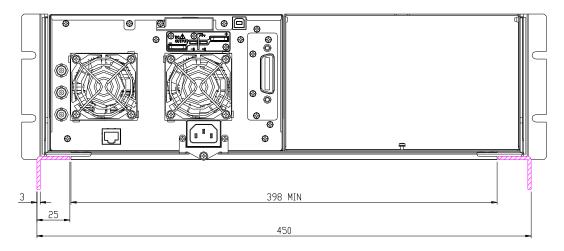

Note: If using the angle brackets, please pay attention to the size limitations.