

Programmable DC Power Supply

GPP-3610H/GPP-7250

User Manual

82PP372500EA1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

Copyright Statement

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

Table of Contents	3
SAFETY INSTRUCTIONS	6
Safety Symbols	6
Safety Guidelines	7
Power cord for the United Kingdom	10
OVERVIEW	11
Introduction	12
Key Features	14
Front Panel	16
Rear Panel.....	21
Constant Voltage/Constant Current Crossover Characteristics	23
GETTING STARTED.....	24
Start Up	25
Load Connection	26
Select front/rear panel output.....	28
Turning the Output On/Off.....	29
BASIC OPERATION	30
Display Change	31
Source Function	34
Output Mode	39
Load Function	41
Sequence Function	45
Set Sequence Output.....	45
Set Group Parameter	48

Construct Templet.....	49
Menu Tree.....	52
Save and Recall.....	54
Delay Function	57
Set Delay Output	57
Set Group Parameter	60
Menu Tree.....	63
Save and Recall.....	65
Monitor Function	68
Set Monitor.....	68
Recorder Function.....	71
Set Recorder.....	71
External I/O Control.....	74
Key Function Description	75
FILE OPERATION	78
Save/Recall	79
Restore Factory Default Settings	82
SYSTEM SETTINGS.....	83
System Information	84
System Settings	85
Firmware Upgrading	87
Description of Using Flash Drive	88
REMOTE CONTROL.....	90
Connection Usage.....	92
RS-232.....	93
USB	95
GPIB.....	96
LAN	98
Command Syntax	104

Command List	108
Measurement Instructions	108
Display Functions	108
Output Commands	108
Source and Load Commands	109
Status Commands	114
System Commands	115
System Related Commands	116
IEEE488.2 Common Commands	116
Command Details	118
Measurement Commands	118
Display Commands	120
Output Commands	122
Source and Load Commands	126
Status Commands	165
System Commands	172
System Related Commands	181
SCPI Status Registers SCPI	182
Event Registers	184
Enable Registers	184
Status Byte Register	184
Standard Event Register	186
Status Byte Register Commands	187
Standard Event Register Commands	188
Other Status Register Commands	190
APPENDIX	191
Replacing the Fuse	191
Specifications	192
Optional Accessories	194
Declaration of Conformity	195

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These symbols may appear in the manual or on the instrument.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the GPP or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General
Guideline



CAUTION

- Do not place any heavy object on the unit.
 - Avoid severe impact or rough handling that leads to damaging the unit.
 - Do not discharge static electricity to the unit.
 - Do not block the cooling fan opening.
 - Do not perform measurements on circuits that are directly connected to mains power.
 - Do not disassemble the GPP unless you are qualified.
 - (Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The GPP Series falls under category I .
 - Measurement category IV is for measurement performed at the source of low-voltage installation .
 - Measurement category III is for measurement performed in the building installation.
 - Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
 - Measurement category I is for measurements performed on circuits not directly connected to Mains.
-

- (Pollution Degree) EN 61010-1:2010 specifies pollution degrees and their requirements as follows. Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”. The GPP Series falls under degree 2.
 - Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Power Supply**WARNING**

- AC Input voltage range:
100V/120V/220V/230V $\pm 10\%$
- Frequency: 50Hz/60Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

Fuse**WARNING**

- Fuse type: 100V/120V: T12A/250V,
220V/230V: T6.3A/250V
 - To prevent fire, replace the fuse only with the specified type and rating.
 - Disconnect the power cord before replacing the fuse.
 - Make sure the cause of fuse blowout is fixed before replacing the fuse.
-

Cleaning the power supply	<ul style="list-style-type: none">• Disconnect the power cord before cleaning it .• Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into it.• Do not use chemicals containing harsh products such as benzene, toluene, xylene, and acetone.
Operation Environment	<ul style="list-style-type: none">• Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)• Relative Humidity: < 80%• Altitude: < 2000m• Temperature: 0°C to 40°C
Storage environment	<ul style="list-style-type: none">• Location: Indoor• Relative Humidity: < 70%• Temperature: -10°C to 70°C

Power cord for the United Kingdom

When using the power supply in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons




WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth
Blue: Neutral
Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

O VERVIEW

This chapter contains a brief introduction to GPP-3610H/GPP-7250 including the main features and an overview of the front and rear panel. Use the Getting Started chapter on page 24 to start up instructions and how to setup the appropriate operation environment.

Key Features	14
Front Panel	16
Rear Panel.....	21
Constant Voltage/Constant Current Crossover Characteristics	23

Introduction

Overview	The GPP-3610H/GPP-7250 regulated DC power supply series are adjustable, multifunctional work stations. The isolation degree, from output terminal to chassis or from output terminal to output terminal, is DC500V.
Load Mode	It has additional Load function with 3 modes: CV (Constant Voltage), CC (Constant Current) and CR (Constant Resistance), all of which can be selected through the function keys on the front panel. Voltage, current and resistance can be well regulated in each mode, respectively.
Constant Voltage/ Constant Current	The output channel is completely transistorized and well-regulated, and works in constant voltage (CV) or constant current (CC) mode. Even at the maximum output current, a fully rated, continuously adjustable output voltage is provided. For a big load, the power supply can be used as a CV source; while for a small load, a CC source. When in the CV mode (independent or tracking mode), output current (overload or short circuit) can be controlled via the front panel. When in the CC mode (independent mode only), the maximum (ceiling) output voltage can be controlled via the front panel. The power supply will automatically cross over from CV to CC operation when the output current reaches the target value. The power supply will automatically cross over from CC to CV when the output voltage reaches the target value. For more details about CV/CC mode operation, see page 23.


Display Change Function	It provides up to 4 display types, each of which can be well selected via setting. For details, see page 30.
Output Waveform Function	Under Source mode, user can customize a certain V/I sequential waveform output. Under Load mode, it is programmable for dynamic load (below 1Hz). For details, see page 45.
Front and rear output function	For the convenience of customers, It can be operated by the panel menu or remote command, so that it can be output on the front and rear panels, please refer to page 28.
Remote Control	To meet the various needs of customers, the GPP is designed for USB, GPIB ,LAN and RS-232 remote control. For details, see page 90.
Additional Function	Control signal of external switch is reserved for user. For details, see page 74.

Key Features

Features	<ul style="list-style-type: none">• Multiple Outputs:• Constant voltage and constant current operation (CV/CC).• Low noise, thermostatically controlled fan.• Compact, lightweight, standard rack mount conformity 3U, half Rack.• 4.3 inch TFT display.
Operation	<ul style="list-style-type: none">• Digital panel control.• Output on/off control (ON/OFF).• Digital voltage and current settings. (Key & Encode)• 10 groups of save/recall settings and 2 groups of power-on settings.<ul style="list-style-type: none">10 groups of save/recall Sequence.10 groups of save/recall Delay.10 groups of save/recall Record.• workable in Load Mode• 4 types display modes available with 2 contents and 2 waveforms respectively• Input/Output terminal (Control I/O)• Alarm buzzer (Beeper).• Key lock function (LOCK).• Front and rear output function• Multiple remote control interfaces (standard: RS-232, USB; optional: GPIB, LAN)


- | | |
|---------------------|---|
| Protection Features | <ul style="list-style-type: none">• Overvoltage and overcurrent protection (OVP/OCP)• Overtemperature protection (OTP).• Polarity Reverse Protection• Overload Protection (OPP in Load mode) |
| Interface | <ul style="list-style-type: none">• Remote Control RS-232 (standard)• USB remote control. (standard)• Control I/O (standard)• LAN remote control (optional)• GPIB & LAN remote control (optional) |

Front Panel

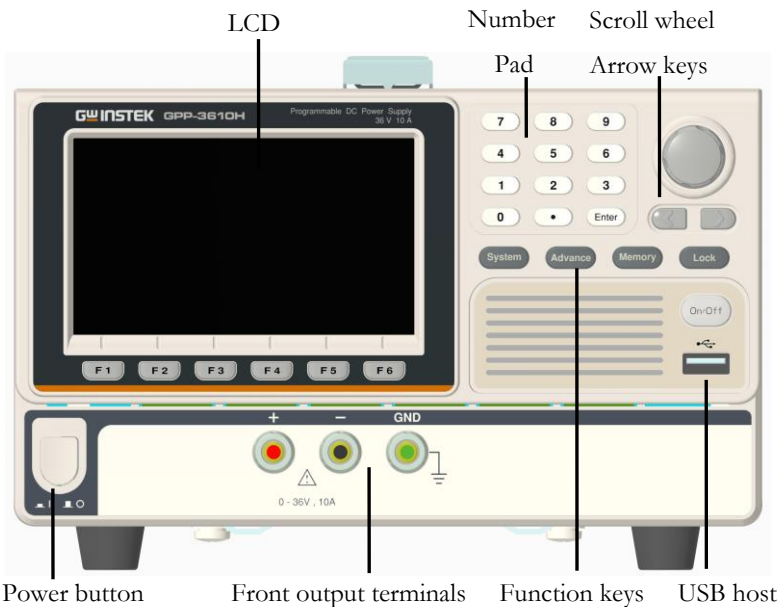

Display

Display Interface

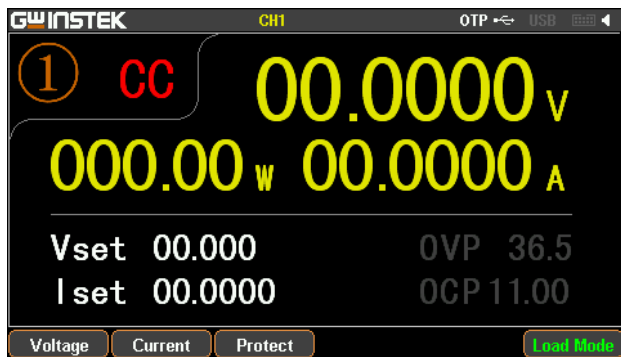

⚠ (Take GPP-3610H model as example)

display



Channel no.

Breathing light status, displayed in yellow and orange alternating. ① ↔ ①

Channel status

Display the channel state

Power supply: green CV or red CC

Load Mode: orange CV CC CR

Voltmeter Indicators

Displays the output voltage with up to 6 digits of resolution. The default units are Volts (V).



 
Ammeter Indicator

Displays the output current with up to 5 digits of resolution. The default units are ampere (A).



Setting Display


Displays the voltage and current settings.







Display OVP/OCP settings







Status Indicator Display the set function/remote control interface



CH1: Current channel
OTP: The status of OTP protection mode
: The status of USB flash drive connected
: USB remotely disconnected
: USB remotely connected
: The status of control I/O connected when Sequence/Delay/Monitor/Recorder is activated, the corresponding SEQ/DLY/MON/REC icons appear on the display.

Function Keys

Power Button  Turns the power on or off.
 On: 
 Off: 

Output buttons Individual output  The ON/OFF button is operational individually by each channel. The Output key will light up when the output is on.
 ON:  ⇒ 

 
Number pad  For parameter value setting

Scroll wheel &
Arrow keys




Scroll wheel is used to set each parameter value, whilst arrow keys are used for parameter, menu selection and voltage/current fine adjustment. It is used to switch or operate the displayed waveforms under diagram display mode.

Function keys




The 6 function keys (F1-F6) display varied functions per different operations.

 System key



It is used to set functions including Interface, Beeper, Backlight, etc. For details, refer to page 85.

 Advance key



It is used for certain advanced functions like Sequence, Delay, Monitor, Recorder, etc.

Memory key



It is used to operate several functions including save and recall, etc., for set parameters. For details, refer to page 78.

Lock key




It is used to disable all the panel keys except for the Output key.

Unlock

Press the F6 button to unlock, which can disable remote control and return to panel operation.

Terminals

terminal

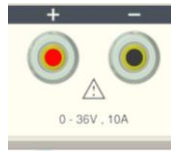
Power output terminal or load
input terminal

GND terminal



Ground terminal

Rear Panel

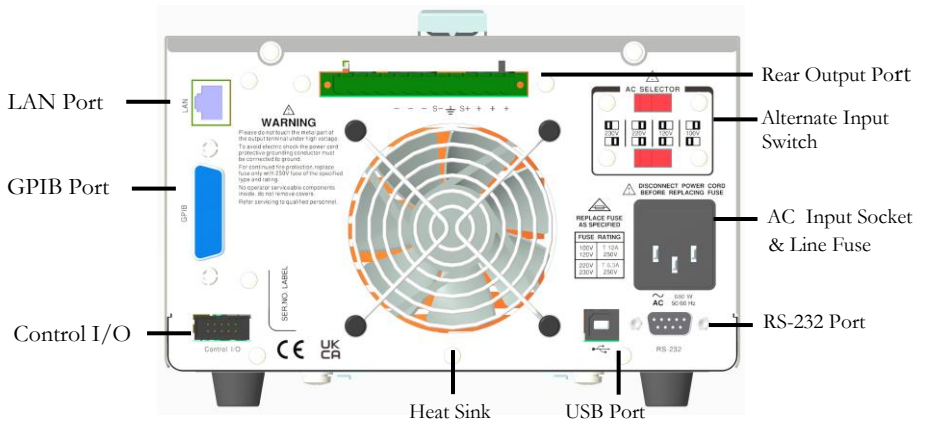

Terminals


Alternate input switch



AC voltage selection:

100V/120V/220V/230V
±10%, frequency 50/60Hz

AC input socket and line fuse

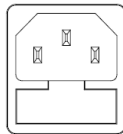

The AC input accepts 100V/120V/220V/230V AC. The frequency is 50Hz/60Hz.

Fuse:

100V/120V: T12A/250V,
220V/230V :T6.3A/250V,
slow-blow type, See page 191 for details.

Rear output terminal



 
Operation and connection mode, see page26 and page39.

USB port



USB device port for remote control. See page 90 for details.

GPIB port




GPIB slave port for remote control. Abides to IEEE488.2 (SCPI) protocol. See page 96 for details.

LAN port




LAN port for remote control. See page 98 for LAN setting and operation details.

 RS-232 port




RS-232 port for remote control. See page 93 for details.

Heat sink fan

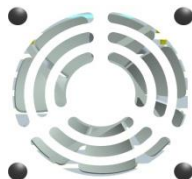

It is used to discharge the heat inside the equipment through air flow.

 Control I/O port




5 ports in all for input/output control. See page 74 for details of configuration.

Constant Voltage/Constant Current Crossover Characteristics

Background	The unit will switch automatically between constant voltage and constant current according to changes in the load.
CV mode	When the load current is less than the current setting, the unit operates in constant voltage mode, changing the current level according to the load but maintaining the set voltage level until the current reaches the set current level. The status indicator will show CV on the LCD when in CV mode.
Constant Current Mode	When the output current reaches the set current level, the unit switches operation to constant current mode. The status indicator will show CC on the LCD display. In CC mode, the current level is maintained and the voltage level is limited to less than the set voltage level to limit the output power from an overload. When the current drops below the set current level, the unit will revert back to CV mode.

Diagram

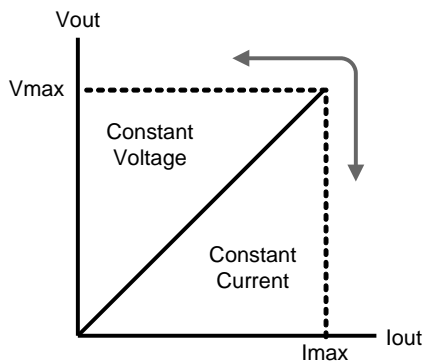

G E T T I N G S T A R T E D


This chapter describes the start up procedures and the preparation that is necessary before operating the power supply.

Load Connection	26
Select front/rear panel output.....	28
Turning the Output On/Off.....	29

Start Up


Checking the AC Voltage

Before the power is turned on, confirm that the input power supply meets the following conditions:
 100V/120V/220V/230V $\pm 10\%$,
 50/60Hz

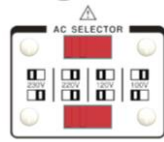

Connecting the AC power cord

The fuse is a slow-blow fuse.
 6.3A(220V/230V),12A(100V/120V) ,
 Confirm that the fuse is of the correct type and rating before connecting the power cord.

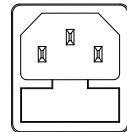

Turning the power on

Press the power button.



Turning the power off

To turn the power off, press the power button again.



Load Connection

Recommended Cables	Model	Specification	Usage
	GTL-104A	10A	Front panel terminal

Front panel wiring

Use the GTL-104A cables for the front panel source connections.



Rear panel wiring

Self distribution wire:
 + / - need to be equipped with awg12 or above
 S + / S - can be equipped with awg20, preferably twisted into twisted pair.
 When in LOAD mode, there is no need to connect sense.



 Caution

For safety considerations, please keep in mind that the wiring must be equivalent to the wiring on the front terminals.

Wire Gauge

Load wires must have enough current capacity to minimize cable loss and load line impedance. Voltage drop across a wire should not exceed 0.5V. The following list is the wire current rating at 450A/cm².

Wire Size(AWG)	Maximum Current (A)
20	2.5
18	4
16	6

14

10

12

16

Select front/rear panel output

Panel
Operation

1. Double click the system button



2. Press F1 (front) key to select front panel output, or press F2 (rear) key to select rear panel output.



3. You can see the switching output panel results from the corresponding display interface.



Command
Set

Refer to page 108 for more details on remote commands chapter.

Turning the Output On/Off

Panel Operation

Press the *Output* key to turn the output on. The *Output* key will light-up when the output is on.



When the output is turned on, pressing the *Output* key again will turn the output off.



Command Set

Refer to page 108 for more details on remote commands chapter.

Automatic Output Shut Down

Any of the following actions will cause the output to be automatically shut down:

- Toggle between power output and load mode
- Recall the saved setting
- OVP/ OCP/OPP/OTP protection is tripped.
- When Sequence/Delay/Monitor/Control IO fits the set conditions.


BASIC OPERATION

This chapter describes how to set various functions.

Display Change	31
Source Function	34
Output Mode	39
Load Function	41
Sequence Function	45
Set Sequence Output.....	45
Set Group Parameter	48
Construct Templet.....	49
Menu Tree.....	52
Save and Recall	54
Delay Function	57
Set Delay Output	57
Set Group Parameter	60
Menu Tree.....	63
Save and Recall	65
Monitor Function	68
Set Monitor	68
Recorder Function.....	71
Set Recorder.....	71
External I/O Control.....	74
Key Function Description	75

Display Change

Display Area

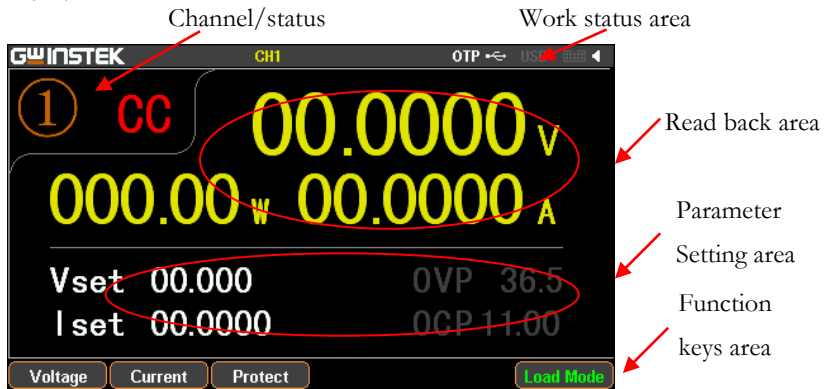

Warning

:

1. Under the Source interface:





There is a setting area (V/I/OVP/OCP) and read back status area (V/I/W).

2. Under the Load interface:

It is basically equivalent to Source interface with additional Load and OPP status displays.

Diverse display screens


In order to offer diverse information display to meet requirements from different users, the GPP provide several selections of different display screens as follows:

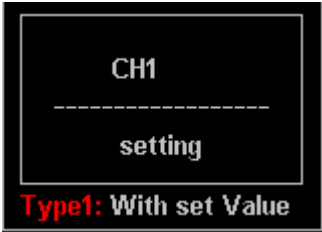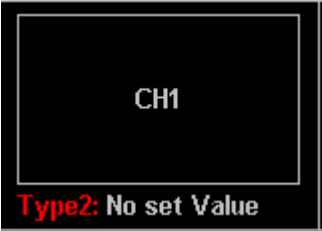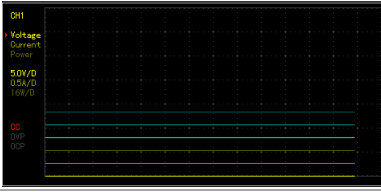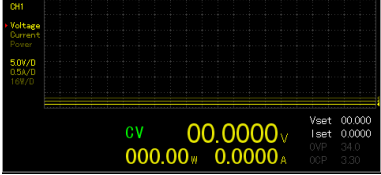	Type	Display screens
Normal	Type1	 <p>Type1: With set Value</p>
	Type2	 <p>Type2: No set Value</p>
Waveform	Type3	 <p>Type3: With set Value</p>
	Type4	 <p>Type4: With set Value</p>

*Type's selection: Advance key ->F1(Display) key->F1(Normal) key or F2(Waveform) key.

* Default factory display screen: Type1


The introduction to Type 3 display

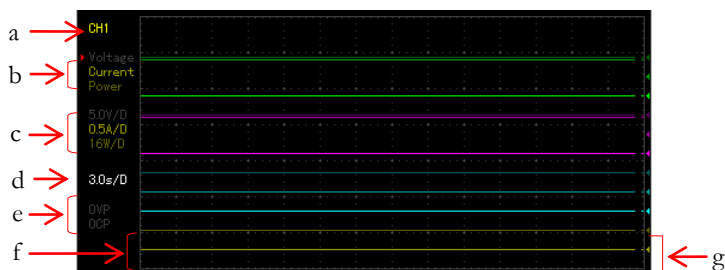

- a represents the currently edited channel.
- b indicates the adjustable items of reference point for voltage/current/power respectively. The one with a red triangular arrow is the active item to adjust, which can be toggled through the directional button on the panel.
- c stands for the vertical sensitivity for voltage/current/power respectively.
- d stands for the horizontal sensitivity for time.
- e represents the output state and the open state of OVP/OCP.
- f indicates the output curve for voltage/current/power respectively. The three curves have the identical color in common with slight difference in brightness, which corresponds to the brightness of b.
- g stands for the output reference point for voltage/current/power respectively, which is adjustable ups and downs via scroll wheel.

Source Function



Description	The channel is equipped with basic power functions and able to display both settings and read back value of V/I as well as output status	
Parameter description	Vset	The range is as the following: 0.000V-36.500V (GPP-3610H) 0.000V-72.500V (GPP-7250)
	Iset	The range is as the following: 0.0000A-10.2000A (GPP-3610H) 0.0000A-5.2000A (GPP-7250)
	OVP	The range is as the following: 0.5V-38.0V (GPP-3610H) 0.5V-75.0V (GPP-7250)
	OCP	The range is as the following: 0.05A-10.50A (GPP-3610H) 0.05A-5.50A (GPP-7250)
Parameter Setting	Voltage	Press the F1 key corresponding to Voltage to activate voltage setting area on LCD (red font color with the underline indicator). 

(a) Input digit with number pad (0-9,.) and press unit key F1(V) or F2(mV) to confirm:

Input 6.543V:



(b) Step input:
 Press the left or right arrow buttons to select high and low level that require fine-tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



Current

Press the F2 key corresponding to Current to activate current setting area on LCD (red font color with the underline indicator).



(a) Input digit with number pad (0-9,.) and press unit key F1(A) or F2(mA) to confirm:

Input 1.543V:



(b) Step input:
 Press the left or right arrow buttons to select high and low level that require fine tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



OVP

Press F3 key to enter the Protect menu.



Press F3 key to open OVP function. OVP display will change from gray to white font.



Press the F1 key to enter OVP setting area on LCD, which will be thus activated (red font color with the underline indicator).



(a) Input digit with number pad (0-9,.) and press unit key F1(V) or F2(mV) to confirm:



(b) Step input:
 Press the left or right arrow buttons to select high and low level that require fine tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



OCP

Press F3 key to enter the Protect menu.



Press F4 key to open OCP function. OCP display will change from gray to white font.




Press the F2 key to enter OCP setting area on LCD, which will be thus activated (red font color with the underline indicator).





(a) Input digit with number pad (0-9,.) and press unit key F1(A) or F2(mA) to confirm: Input 2.5A:



 CAUTION: There's no proper sequence between turning on OVP/OCP functions and setting OVP/OCP value.

Either step input or number pad input is applicable for setting parameter value.


Operation	ON/OFF	Output ON/OFF control. Output is open when output lights up; whilst output is off when output lights out.
State description	CV/CC	Constant voltage displays   while constant current displays in red CC.
	OVP/OCP	OVP/OCP displays in white when OVP is not in activation.
		OVP/OCP displays in red and output is off when OVP is activated.
		OVP/OCP displays in gray when OVP/OCP functions are off.

Output Mode


Description

Setting and output, etc.

Front panel connection

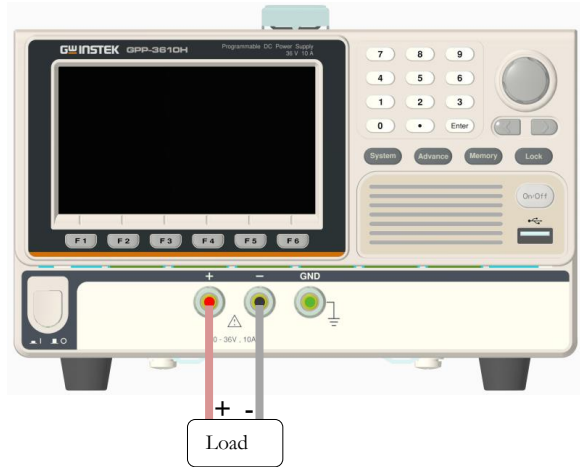

Rear panel with sense connection

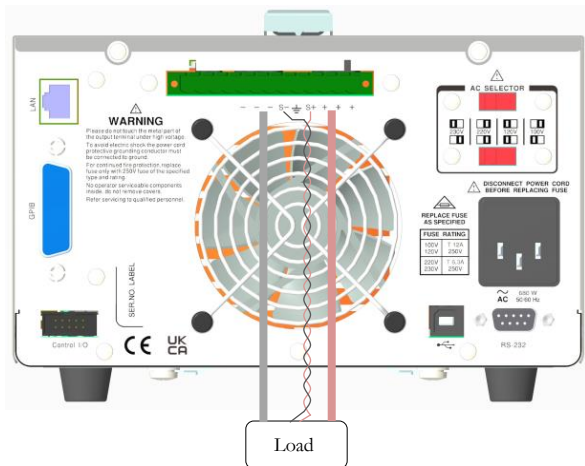

Voltage/Current Rating

0.000V-36.000V (GPP-3610H)
0.000V-72.000V (GPP-7250)

0.0000A-10.0000A (GPP-3610H)
0.0000A-5.0000A (GPP-7250)

Setting	For setting operation of parameter, refer to page 34.
Output	Press ON/OFF key or command.

Load Function

Description GPP can be set to the Load Mode function, under which both tracking series and tracking parallel function are Not available.



Note

The voltage ($\geq 1V$) or --- (<1V) pertaining to port appears when Output is Off.



In LOAD mode, the rear panel does not need to be connected with sense.

Parameter Description	Load	Under PWR. mode, press F6 (Load Mode) to enter the Load mode. LCD will display the status LOAD .
Vset		Set rating range of voltage value under Load mode: 0.000V-36.500V (GPP-3610H) 0.000V-72.500V (GPP-7250)
Iset		Set rating range of current value under Load mode: 0.0000A-10.2000A (GPP-3610H) 0.0000A-5.2000A (GPP-7250)

Rset	Set rating range of resistance value under Load mode: 1 Ω-1000 Ω
Others	OPP: Fixed 100W, non-revisable OVP/OCP: identical to Source

Parameter setting Vset Press F4 or F5 button for operating the corresponding (CV) mode followed by F1 button (Vset). The voltage setting area on LCD will be activated and appears **Vset 00.00** (red font color with the underline indicator).

(a) number pad (0-9,.) input; press unit button F1 (V) or F2 (mV) button to confirm:

Input 6.54V:



(b) Step input: Press the left or right arrow buttons to select high and low level that require fine tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



Iset Press F4 or F5 button for operating the corresponding (CC) mode followed by F1 button (Iset). The

current setting area on LCD will be activated and appears **iset 1.000** (red font color with the underline indicator).

(a) number pad (0-9,.) input; press unit button F1 (A) or F2 (mA) button to confirm:

Input 1.543A:



(b) Step input: Press the left or right arrow buttons to select high and low level that require fine tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



Rset

Press F4 or F5 button for operating the corresponding (CR) mode followed by F1 button (Rset). The current setting area on LCD will be activated and appears **Rset 0000** (red font color with the underline indicator).

(a) number pad (0-9,.) input; press unit button F1 (OHM) to confirm:

Input 52Ω:




(b) Step input: Press the left or right arrow buttons to select high and low level that require fine tune (underline below the corresponding number value), and scroll the scroll wheel to increase or decrease setting value.



	OVP OCP	The setting method is identical to Source.
--	------------	--

Operation	ON/OFF	Press ON/OFF button.
-----------	--------	----------------------

Mode	CV CC CR	Font color appears in orange under Load mode.
------	-------------	---





Note

In CR mode, the external power supply must provide the current required for $I = V / R$, otherwise the output ports V and I will fluctuate.

Sequence Function

Description This function can be used for practical applications when different voltage waveforms are required to be output. Users can edit the output waveform according to their needs. The amplitude range of the output waveform is the output voltage range of power supply. The setting range for output waveform duration is 1s (duration calculation: Time x Groups x Cycles) and the resolution is 1s.

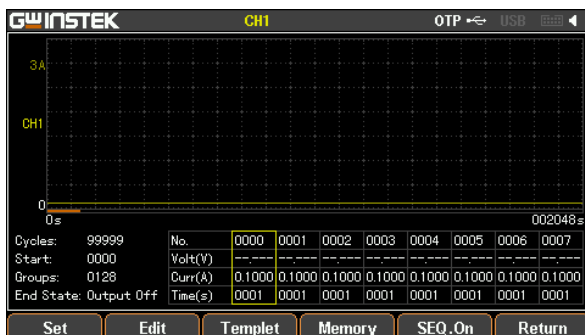

Set Sequence Output

Parameter Description	Cycles	Cycle number, 1 represents a cycle of single period, whilst 2 indicate a cycle with 2 periods, and so on. The range is from 1 to 9999 or Infinite.
	Start	The number to execute, 0 indicates the execution starts from the group 0, while 1 indicates it begins from the group 1, and so on. The range is from 0 to 2047.
	Groups	The number to be executed. It can

NOT exceed 2048 for Start+Groups.

End State	There're 2 statuses after the necessary Group and Cycle are executed: output termination or being hold with the last step.
Parameter Setting	<p>Cycles</p> <p>Press the Advance key on control panel. Select F2 (Sequence) function. Press F1 (Set) button followed by selecting F1 (Cycles). The setting on LCD is activated and appears in red font color Cycles: 99993. Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting. Press and hold the F5 (Infinite) button if Infinite execution is in need.</p>
Start	<p>Under the Sequence function, press F1 (Set) button followed by selecting F2 (Start). The setting on LCD is activated and appears in red font color Start: 2047. Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting.</p>
Groups	<p>Under the Sequence function, press F1 (Set) button followed by selecting F3 (Groups). The setting on LCD is activated and appears in red font color Groups: 0001. Use number pad to set the parameters directly and</p>

then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

End State

Under the Sequence function, press F1 (Set) button followed by selecting F4 (End State), and 2 statuses Last/Output off will appear in turn on LCD `End State: Output Off`. The one displaying is what's called the current status.

Operation ON/OFF

Press the F5 (SEQ.On) button. When the output is on, the Output key will light up. When the output is off, the Output key will not be lit. SEQ will appear in the status area (yellow for CH1 only).



In Sequence ON, the F1 (Restart) button appears, it means that start from the first.



CAUTION

If the channel has been in Output ON before Sequence function, the status remains unchanged until SEQ.On so that Sequence starts to output.

Set Group Parameter

Description	Each Group consists of Voltage, Current and Time. Therefore, properly confirm parameter of each group is correct before setting Sequence output.	
Parameter Description	No. Voltage Current Time	Group number. Maximum 2047 Voltage setting of each group. Current setting of each group. Execution duration of each group. Range: 1S – 300S
Parameter Setting	No.	Under the Sequence function, press F2 (Edit) button followed by selecting F1 (No.). The setting on LCD is activated and appears in red font color  . Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting. The F4 (Page Up)key and F5 (Page Down) key can jump directly to the previous or next page,each 8 groups is a Page.
	Voltage	Under the Sequence function, press F2 (Edit) button followed by selecting F3 (Voltage). The setting on LCD is activated and appears in red font color  . Use number pad to set the parameters directly and then press the F1 (V) or F2 (mV) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

Current	Under the Sequence function, press F2 (Edit) button followed by selecting F4 (Current). The setting on LCD is activated and appears in red font color Curr(A) 0.1000 . Use number pad to set the parameters directly and then press the F1 (A) or F2 (mA) button to confirm; or use arrow keys along with scroll wheel to complete the setting.
Time	Under the Sequence function, press F2 (Edit) button followed by selecting F2 (Time). The setting on LCD is activated and appears in red font color Time(s) 0001 . Use number pad to set the parameters directly and then press the F1 (Second) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

Construct Templet

Description This function can be used for practical applications when different voltage waveforms are required to be output. Users can edit the output waveform according to their needs. The built-in Sine, Pulse, Ramp, Stair Up, Stair Dn, Stair UpDn, Exp Rise, Exp Fall waveforms are practical per usage.

Parameter Description	Object	To edit Voltage or Current
	Type	Select the built-in waveforms including Sine, Pulse, Ramp, Stair Up, Stair Dn, Stair UpDn, Exp Rise,

		Exp Fall.
	Max Value	Set the max. value of waveform voltage/current
	Min Value	Set the min. value of waveform voltage/current
	Start	Set the initial group number of waveform. Maximum: 2037
	Points	Select the required points. Range: 10-2047
	Inverted	Invert the selected waveform
Parameter Setting	Object	Press the F1 (Object) button to select Voltage Object Voltage /Current Object Current in turn. Simply stop at the parameter which is in need of setting.
	Type	After pressing the F2 (Type) button, select the button corresponding to the applicable waveform. Up to 8 default waveforms are available for selection.
	Max Value	Press the F3 (Max Value) button. The setting on LCD will be activated and appears in red front color Max Value 32000V . Use number pad to set the parameters directly and then press the F1 (V/A) or the F2 (mV/mA) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

- Min Value** Press the F4 (Min Value) button. The setting on LCD will be activated and appears in red front color. Use number pad to set the parameters directly and then press the F1 (V/A) or the F2 (mV/mA) button to confirm; or use arrow keys along with scroll wheel to complete the setting.
- Start** Press the F5 (More) button and then press the F1 (Start) button. The setting on LCD will be activated and appears in red front color **Start 1900**. Use number pad to set the parameters directly and then press the F1 (Done) to confirm; or use arrow keys along with scroll wheel to complete the setting.
- Points** Press the F2 (Points) button. The setting on LCD will be activated and appears in red front color **Points 0123**. Use number pad to set the parameters directly and then press the F1 (Done) to confirm; or use arrow keys along with scroll wheel to complete the setting.
- Interval** Setting the time interval of each point of the current selected template (i.e. the duration of output of each set of timing parameters) ,it can be set from 1s to 300s. Press the F3 (Interval) button. The setting on LCD will be activated and appears in red front color **Interval 005**. Use number pad to set


the parameters directly and then press the F1 (Done) to confirm; or use arrow keys along with scroll wheel to complete the setting.


Inverted Press the F4 (Inverted) button. On (inverted) **Inverted On** and Off (non-inverted) **Inverted Off** appear on LCD in turn. Simply stop at the status which is required.

Construct Construct Press the F5 (Construct) to complete construction.

Menu Tree

Description User is able to well understand the overall functions of Sequence via menu tree, which is put in proper order by tiers. The Return key is used for back to the parent menu. See the construction below:

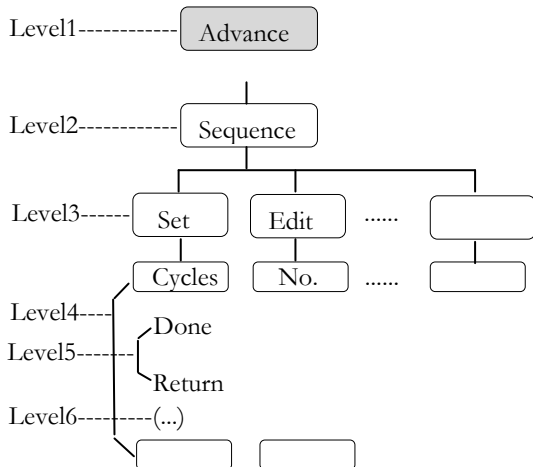

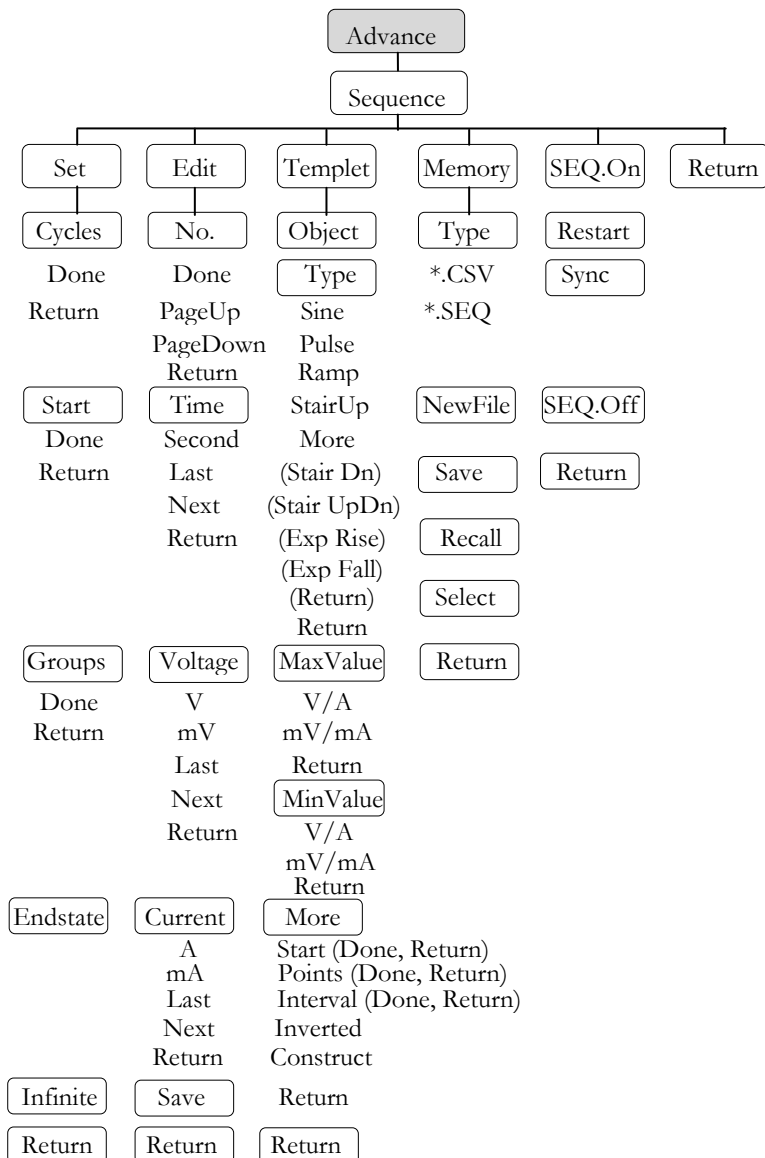


⚠ Note: In the Memory menu, Type/*.CSV/*.SEQ/New File/Select appear only when flash drive is plugged in.


Save and Recall

Description	GPP models can save and recall the Sequence data from internal 10 groups or flash drive.	
Parameter Description	Type	Available for *.CSV or *.SEQ file type
	New File	Available for creating new *.CSV or *.SEQ file type
	Save	Save the Sequence data to the specified file.
	Recall	Recall the data saved in the specified file.
	Select	Select the file folder in need.

Operation Internal storage 1. In the Sequence menu, press F4 (Memory) button to enter the page as figure show below.

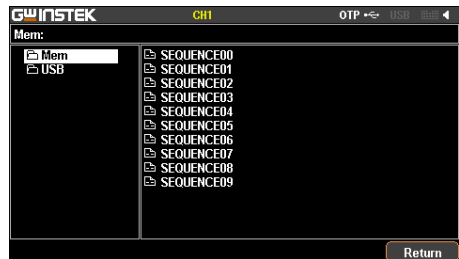

2. Press right arrow button to enter the list of 10 groups.

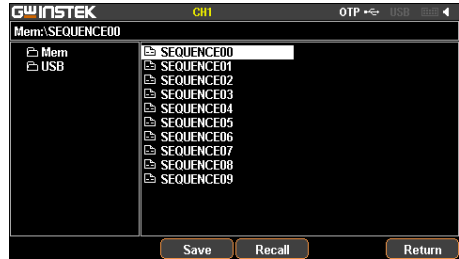

3. Rotate the scroll wheel (Encode) to select target file.

4. Press F3 (Save) button to save the settings of Sequence into the corresponding file.

5. Press the F4 (Recall) button to recall the Sequence file of list to the current sequence settings when necessary.

Flash drive storage

1. Plug flash drive in before rotating the scroll wheel (Encode) to select flash drive.

2. Press right arrow button to enter the root directory of flash drive.

3. Press F1 (Type) button to select required file type *.CSV or *.SEQ.


4. Rotate the scroll wheel (Encode) to select target file.



5. Press F3 (Save) button to save the settings of Sequence into the corresponding file.
6. Press the F4 (Recall) button to recall the Sequence file of list to the current sequence settings when necessary.

Delay Function

Description It is necessary to output a series of pulse in real applications. This function is available when voltage is constant. Output waveform can be edited per user's preference. The amplitude range of the output waveform is the output voltage range of power supply. The setting range for output waveform duration is 1s ~ Infinite (duration calculation: Time x Groups x Cycles) and the resolution is 1s.

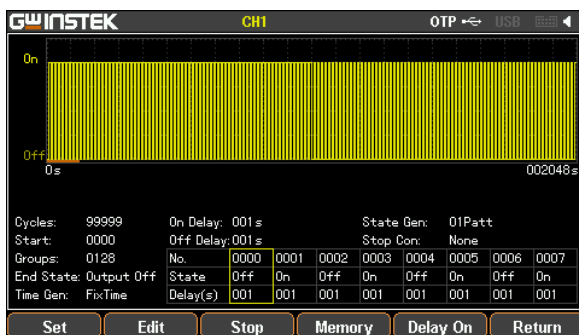

Set Delay Output

Parameter Description **Cycles** Cycle number, 1 represents a cycle of single period. 2 represents a cycle with 2 periods, and so on. The range is from 1 to 9999 or Infinite.

Start The number (No.) to start execute. 0 indicates the execution starts from the group 0, while 1 indicates it begins from the group 1, and so on. The range is from 0 to 2047.

	Groups	The number to be executed. It can NOT exceed 2048 for Start+Groups.
	End State	There're 3 statuses after the necessary Group and Cycle are executed: output termination or output on or being hold with the last step.
	Stop Condition	Halt the current operation based on the set condition of Voltage/Current/Power.

Parameter Setting	Cycles	Press the Advance key on control panel. Select the F3 (Delay) function. Press the F1 (Set) button followed by selecting F1 (Cycles). The setting on LCD is activated and appears in red font color Cycles: 99993 . Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting. Press and hold the F5 (Infinite) button if Infinite execution is in need.
	Start	Under the Delay function, press the F1 (Set) button followed by selecting the F2 (Start). The setting on LCD is activated and appears in red font color Start: 2047 . Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

Groups		Under the Delay function, press the F1 (Set) button followed by selecting the F3 (Groups), the setting on LDC will be activated and appears in red font Groups: 0001 . Use number pad for direct setting followed by pressing F1 (Done) key to confirm; or use arrow keys along with scroll wheel to complete setting.
End State		Under the Delay function, press the F1 (Set) button followed by selecting the F3 (Groups), and 3 statuses Last/Output on/ Output off will appear in turn on LCD End State: Output Off . The one displaying is what's called the current status.
Stop Condition		Under the Delay function, a condition of stopping operation can be set. When the instrument monitors the condition, the execution of delay function can be terminated. press the F3 (Stop) button and halt the operation by setting voltage F2 (Voltage), current F3 (Current) and power F4 (Power), or Stop infinitely by F1 (None). The output state of the instrument after stopping is determined by the setting of "End State".
Operation	ON/OFF	Press the F5 (Delay On) button. Output is open when output lights up; whilst output is off when output lights out. DLY appears on the status bar (yellow). At this time, the F5

button will become "Delay OFF", which can perform the function of closing Delay .
 In Delay ON, the F1 (Restart) button appears, it means that start from the first.



Warning


If the channel has been in Output ON before Delay function, the status remains unchanged until Delay.On so that the corresponding waveform starts to output.

Set Group Parameter

Description Each Group consists of Vltage, Current and Time. Therefore, properly confirm parameter of each group is correct before setting Delay output.

Parameter Description	No.	Group number. Maximum 2047
	State	Output status of each group: On, Off
	Time	Execution duration of each group. Range: 1s - 300s
	Pattern	Set the initial status of initial group. 01 Patt: start from Off; 10Patt: start from On
	Time set	It is used to generally set the pattern of time change. Model is for the changes covering fix (FixTime), increase (Increase) and decline (Decline). Base Time is for setting time of initial Group. Step is for

setting time interval of neighboring Group.

Parameter Setting	No.	Under the Delay function, press the F2 (Edit) button followed by selecting the F1 (No.). The setting on LCD is activated and appears in red font color  . Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting. The F4 (Page Up)key and F5 (Page Down) key can jump directly to the previous or next page,each 8 groups is a Page.
	State	Under the Delay function, press the F2 (Edit) button, and then the F2 (State) button followed by selecting F1 (On), F2 (Off) or F3 (Inverted) to set output On/Off status of each group. Press the F4 (Last) key for the previous one and the F5 (Next) key for the next one
	Time	Under the Delay function, press the F2 (Edit) button followed by selecting the F3 (Time). The setting on LCD is activated. Use number pad to set the parameters directly and then press the F1 (Second) button to confirm; or use arrow keys along with scroll wheel to complete the setting. Press the F4 (Last) key for the previous one and the F5 (Next) key for the next one.
	Pattern	Under the Delay function, press the

F2 (Edit) button followed by selecting F4 (Pattern), and then set up via F1 (01Patt) and F2 (10Patt). The live setting result appears on the LCD.

Time Set

Under the Delay function, press the F2 (Edit) button followed by selecting the F5 (Time Set), and then set time change patterns of each group, There are 3 types"Time Gen" options:fix (FixTime), increase (Increase) and decline (Decline) of which are available) via F1 (Model). The live setting result appears on the LCD.

**On Delay
Off Delay**


When fix (FixTime) is set in Time Set, it's available to set the time value of both F2 (On Delay) and F3 (Off Delay)at the same time.


**Base
Time Step**

When increase (Increase) or decline (Decline) is set in Time Set, it's available to set the time value of F2 (Base Time) start time and F3 (Step)group change at the same time.

Menu Tree


Description User is able to well understand the overall functions of Delay via menu tree, which is put in proper order by layer. The Return key is used for back to the parent menu. See the construction below:

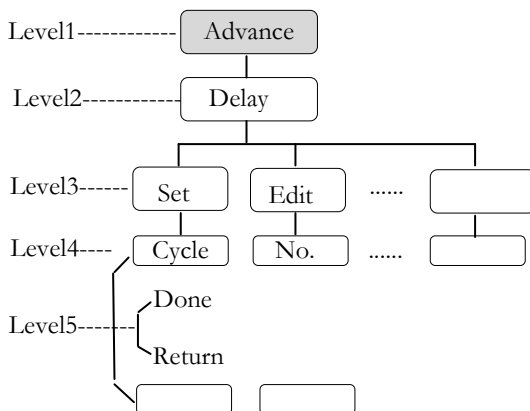

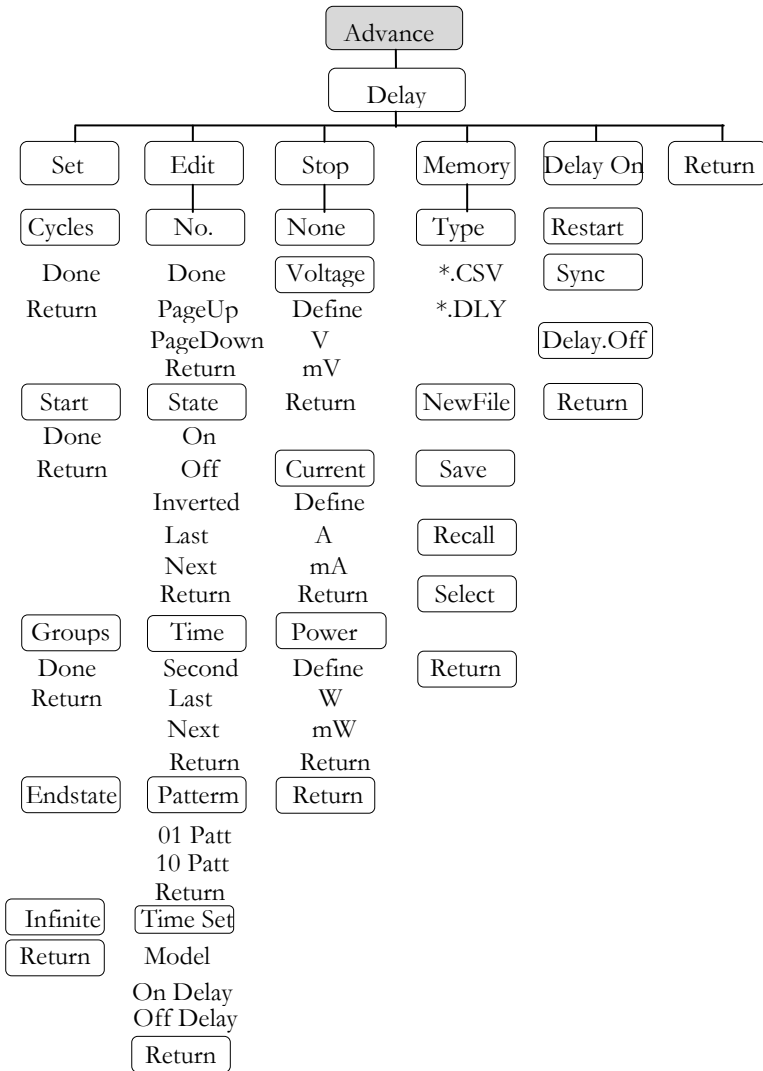

⚠ Note: In the Memory menu, Type/*.CSV/*.DLY/New File/Select appear only when flash drive is plugged in.

Save and Recall

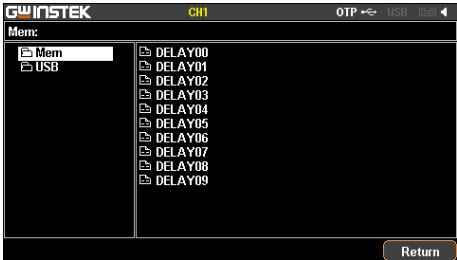Description	GPP models can save and recall the Delay data from internal 10 groups or flash drive.	
Parameter Description	Type	Available for *.CSV or *.DLY file type
	New File	Available for creating new *.CSV or *.DLY file type
	Save	Save the delay data to the specified file.
	Recall	Recall the data saved in the specified file.
	Select	Select the file folder in need.
Operation	Internal Storage	<p>1. In the Delay menu, press F4 (Memory) button to enter the page as figure show below.</p>  <p>2. Press right arrow button to enter the file list of 10 groups.</p>



3. Rotate the scroll wheel (Encode) to select target file.

4. Press F3 (Save) button to save the settings of Delay into the corresponding file.

5. Press the F4 (Recall) button to recall the Delay file of list to the current sequence settings when necessary.

Flash
drive
storage

1. Plug in flash drive before rotating the scroll wheel (Encode) to select flash drive.

2. Press right arrow button to enter the root directory of flash drive.

3. Press F1 (Type) button to select required file type *.CSV or *.DLY.

4. Rotate the scroll wheel (Encode) to select target file.



5. Press F3 (Save) button to save the settings of Delay into the corresponding file.

6. Press the F4 (Recall) button to recall the Delay file of list to the current sequence settings when necessary.

Monitor Function

Description In order to have well understanding of the channel under long-term output, the GPP series has the additional live monitor function, which helps guarantee load status of client via halting operation based on certain preset conditions.



Set Monitor

Parameter Description	Voltage	Set condition of monitor of voltage.
	Current	Set condition of monitor of current.
	Power	Set condition of monitor of power.
	Stop Type	Set status after halt. 3 types are available, output disable, content notice and audible alarm.
	Select	To confirm if voltage/current/power is selected as monitor object. White font stands for selected, while gray font represents not selected.

Parameter	Voltage	Press the Advance key on control
------------------	---------	----------------------------------

Setting

panel. Select the F4 (Monitor) function followed by pressing the F1 (Voltage) button to enter the voltage setting.

1. Press the F1 (Set) button. The setting on LCD is activated and appears in red font color. Use number pad to set the parameters directly; or use arrow keys along with scroll wheel to complete the setting.
2. Press the F4 (Define) button to define terminated condition.
3. Press the F5 (Logic) button to define logical pattern of other conditions.

Current

Press the Advance key on control panel. Select the F4 (Monitor) function followed by pressing the F2 (Current) button to enter the current setting.

1. Press the F1 (Set) button. The setting on LCD is activated and appears in red font color. Use number pad to set the parameters directly; or use arrow keys along with scroll wheel to complete the setting.
2. Press the F4 (Define) button to define terminated condition.
3. Press the F5 (Logic) button to define logical pattern of other

conditions.

Power Press the Advance key on control panel. Select the F4 (Monitor) function followed by pressing the F3 (Power) button to enter the power setting.

1. Press the F1 (Set) button. The setting on LCD is activated and appears in red font color. Use number pad to set the parameters directly; or use arrow keys along with scroll wheel to complete the setting.

2. Press the F4 (Define) button to define terminated condition.


3. Press the F5 (Logic) button to define logical pattern of other conditions.

Stop Type Press the Advance key on control panel. Select the F4 (Monitor) function followed by pressing the F4 (Outoff) button to set output disable; select F2 (Alarm) to set content notice; select F3 (Beeper) to set audible alarm. Buzzer should be turned on in system settings when Beeper is enabled, refer to page 85.

Operation ON/OFF Press the F5 (MON. On) button to enter live monitor. MON appears on the status bar.

Recorder Function

Description In order to have well understanding of the channel under long-term output, the GPP series has the additional live record function, which saves file via media for further analysis later.

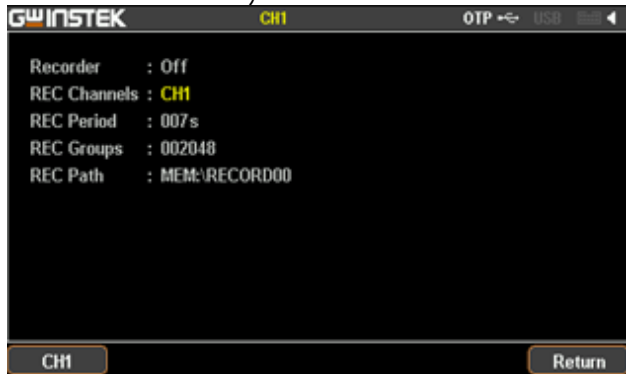

Set Recorder

Parameter Description **Period** Set period of each recorded.
Groups Set recorded group number.



Memory Set saving location of record.

Parameter Setting **Period** Press the Advance key on control panel. Select F5 (Recorder) function. Press F1 (Period) button to enter

setting of recorded period. The setting on LCD is activated and appears in red font color. Use number pad to set the parameters directly and then press the F1 (s) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

Groups

Press the Advance key on control panel. Select the F5 (Recorder) function. Press the F2 (Groups) button to enter setting of recorded group number. The setting on LCD is activated and appears in red font color. Use number pad to set the parameters directly and then press the F1 (Done) button to confirm; or use arrow keys along with scroll wheel to complete the setting.

Memory

Press the Advance key on control panel. Select the F5 (Recorder) function followed by pressing F4 (Memory) button to setting of recorded saving. Recorded data can be stored in internal memory or external USB Flash.



Internal Storage

1. Press right arrow button to enter the list of 10 groups. Rotate the scroll wheel (Encode) to select target file.

Also rotate the scroll wheel (Encode) to enter the flash drive when necessary.



2. Press F3 (Save) button to save the temporary data into the corresponding file.
3. Press F4 (Recall) button to save the record data of file into the temporary storage for further saving into flash drive later.

Flash drive operation description

Type/*.*CSV/ *.REC/New File/Select buttons appear when flash drive is selected.




 Note:

- Type is used to select *.CSV and *.REC file types.
- New File is used to create new file.
- Select is used to open the required file folder.

Operation ON/OFF

Press F5 (REC.On) button to enter live record function. REC appears on the status bar.

External I/O Control


Description	The GPP series models provides user with a programmable external trigger port, which is used to dock certain functions control.	
-------------	---	---

Function	It can turn each Data Line (D0,D1,D2,D3,D4) into input signal respectively to have command of the following four functions:
----------	---

1. Control of channel On/Off
2. Toggle between PWR/Load modes
3. Toggle between CC/CV/CR modes under Load.


The conditions listed below for output signal setting:

1. Channel output On/Off
2. Beyond the setting of Voltage/Current/Power

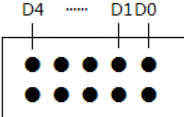Rear Pannel Control Port	Up to 10 terminals within the control port; the upper 5 terminals can be set input/output functions, while the lower 5 are ground terminals. See diagram in right side for details (rear view).	
--------------------------	---	---

Schematic diagram for control signal

The control circuit of each port is illustrated as the diagram below (D1 for example)

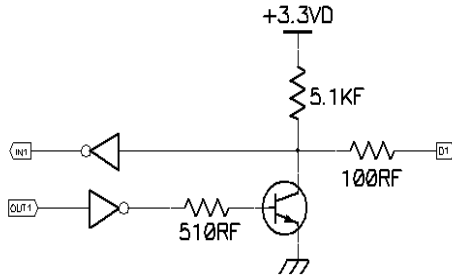

I/O port

Electrical characteristics

Input	Low Level DC Voltage	$\leq 0.3V$
	High Level DC Voltage	$\geq 3.3V$
Output	Low Level DC Voltage	$\leq 0.3V$
	High Level Voltage	$\geq 3.3V$
	DC output Current	$\leq 0.6mA$

Key Function Description

Input/Output Mode:		
Key	Function	Operation Result
F1	Data Line	Select object to be set from D0 to F4
F2	Enable	Set to Enable or Disable function of the port
F3	Mode	Set which mode to adopt: Input Mode or Output Mode
F4		
F5	More	
F6	Return	

F5 (**More**) under Input Mode setting:

Key	Function	Operation Result
F1	Type	Select trigger type: F1(RiseEdge), F2 (FallEdge), F3 (Hi-Level), F4 (Lo-Level), , F5(States Input) * "States Input" equivalent to edge trigger (RiseEdge + FallEdge)
F2	Response	Set result after trigger response: F1(Output) sets as ON, OFF or reverse Toggle F2 (PWR.Mode) sets channel as power mode F3 (Load Mode) set channel as load CV/CC/CR mode
F3	Sensitivity	Set sensitivity of trigger: High/Middle/Low
F4		
F5		
F6	Return	

F5 (**More**) under Output Mode setting:

Key	Function	Operation Result
F1	Condition	Set response type: F1(Output), F2 (Voltage), F3 (Current), F4 (Power), F5 (Auto) ⚠ Note: F5 (<i>Auto</i>) triggers automatically only when voltage, current or power triggers meet at least one condition.
F2	Polarity	Set the polarity of output signal
F3,F4		
F5	State Out.	Enable or disable the state output
F6	Return	

Description

Operation

Press the System key on control panel. Select the F1 (Interface) function followed by pressing the F5 (Control I/O) button to enter the setting of external I/O.

	<p>Press the F1 (Data Line) button. Select required data line from D0 through D4: F1(D0), F2(D1), F3(D2), F4(D3), F5(D4).</p>
	<p>Press the F2 (Enable) button to set this terminal as input or output function. This button enables Enable or Disenable to be selected in turn.</p>
	<p>Press the F3 (Mode) button to set this terminal as input or output function. This button enables Input Mode or Output Mode to be selected in turn.</p>
Key F5 (More)	<p>After pressing the F3 (Mode) button, Trigger in and Trigger out will bring about different results individually. Refer to the table above for details.</p>

FILE OPERATION


Restore Factory Default Settings	82
--	----

Save/Recall


Description System provides user with 4 different files, each of which has 10 groups including parameter setting *.set, use record *.rec, sequence output *.seq and delay output *.dly.

⚠ Note: Both file folder and name in flash drive are limited within 8 characters.

- Set file operation *.set
1. Press the Memory button to enter the interface. Rotate the scroll wheel (Encode) to select file of either internal memory or flash drive.

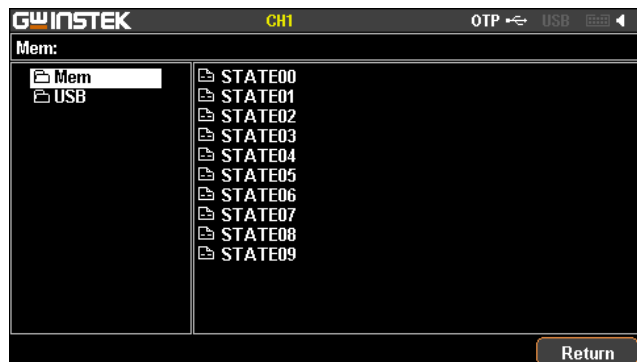

2. Press the right arrow button to enter the file group. Rotate the scroll wheel (Encode) and stop at the file in need

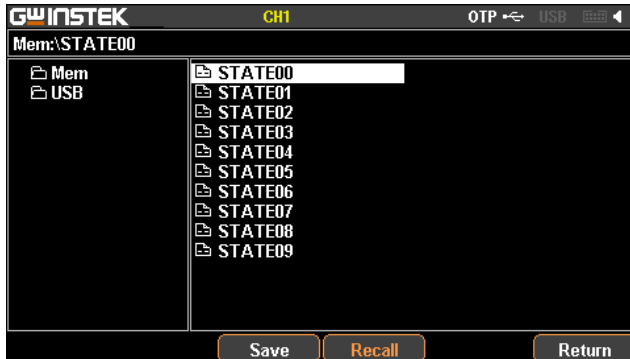

3. Press the F3 (Save) button to have the settings of current model saved into the corresponding file.
4. Or press the F4 (Recall) button to recall the corresponding file, whose file name will be shown on the status bar.

Recorded file operation *.SEQ

Refer to page 54 for chapter of save and recall Sequence data.

⚠ Note: *.SEQ file can be edited in PC by the specified format (*.CSV or *.SEQ) and imported, via flash drive, into machine.

Recorded file operation *.DLY

Refer to page 65 for chapter of save and recall Delay data.

⚠ Note: *.DLY file can be edited in PC by the specified format (*.CSV or *.DLY) and imported, via flash drive, into machine.

Recorded
file
operation
*.REC

Refer to page 73 for chapter of Memory operation of Record.

⚠ Note: *.REC file can be edited in PC by the specified format (*.CSV or *.REC) and imported, via flash drive, into PC.

Power-on
setting

In the System Setting menu, the interface parameter settings area shows Power On. There are 2 settings to choose from, Last (the last shut down status) and Default (non-modifiable factory default setting).

To enter the function, press the System button to enter the interface followed by pressing the F2 (Power on) button.



Restore Factory Default Settings

Description There's a group of Default value, the non-modifiable factory default setting. User is able to restore Default or proceed to Preset operation from Power On under System.

Operation Press the System button to enter the interface followed by pressing either the F2 (Power On) or the F5 (Preset) button to select Default.

Default setting

Item	Parameter	Item	Parameter
Voltage	00.000V	Current	0.0000A
OVP	Off, 38V(3610H) Off, 75V(7250)	OCP	Off, 10.5A(3610H) Off, 5.5A(7250)
Disp Type	Type1	Vset(Load)	1.500V
Model	PWR	Iset (Load)	0.000A
Tracking	Indep.	Rset(Load)	0050Ω

Default setting of system


System item	Parameter	System item	Parameter
Beeper	On	Subnet Mask	255.255.0.0
Backlight	High	HOST Name	GPP
Power On	Default		
Output Panel	Front		

S SYSTEM SETTINGS

System Information	84
System Settings	85
Firmware Upgrading	87
Description of Using Flash Drive	88

System Information

System Information The picture below shows complete system information. If the selected model is without ports (GPIB, LAN), the corresponding info will disappear.

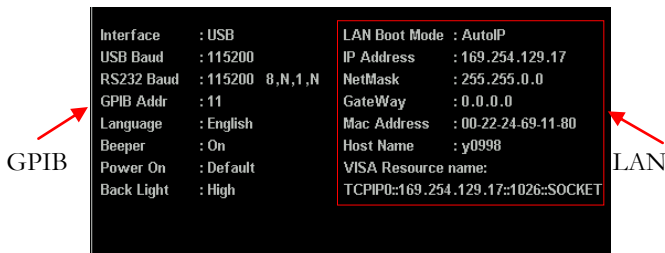

Check operation Press the System button on the panel to show the screen as above.

System Version	Model	View the device Model.
	Firmware	View the system software version.
	Serial Number	View the machine serial number.

Check operation Press the System button followed by pressing the F4 (Version) button to show the above system version window.

System Settings

Description	It can be used to perform system operations for machine.	
Setting information	Interface	Remote control and relevant data output setting
	Power On	Power on initial state setting
	Language	menu language setting
	BackLight	Adjust the LCD brightness.
	Beeper	Sets when the buzzer is turn on.
	Upgrade	Firmware upgrade
	Hardcopy	For Screenshot operation
	Preset	Restore to Factory Settings
	Output panel	Select front or rear output
Remote control setting	The System menu, press the F1 (Interface) button to select port in need. For more details, refer to page 90.	
Power on initial state setting	In the System menu, press the F2 (Power On) button to select required power on setting: Last (the last shut down setting) and Default (factory default setting).	
Menu language setting	The System menu, press the F3 (Setting) button followed by selecting the F1 (Language) to locate the F1 (English) button or the F2 (Chinese) button.	

Backlight brightness adjustment	In the System menu, press the F3 (Setting) button followed by selecting the F2 (Backlight) to adjust backlight brightness. There are three brightness levels: High, Middle, and Low. Select from pressing the F1 (Low) or F2 (Middle) or F3 (High) button.
Buzzer operation	In the System menu, press the F3 (Setting) button followed by selecting the F3 (Beeper) to turn on or turn off the buzzer beeper.
Firmware upgrade	In the System menu, press the F3 (Setting) button followed by selecting the F4 (Upgrade) button to upgrade the machine to the latest software version. For more details, refer to page 86.
Screenshot operation	In the System menu, press the F3 (Setting) button followed by selecting F5 (Hardcopy) to proceed to screenshot operation. For more details, refer to page 88.
Restore to Factory Settings	In the System menu, press the F5 (Preset) button to restore to the factory default setting. For more details, refer to page 82.
Select front or rear output	Double click system key, press F1 (front) key to select front port output or F2 (rear) key to select rear port output, refer to page 28.

Firmware Upgrading

When to Upgrade Firmware	When system is failure, request by customer GW Instek. When the system fails, firmware can requested by GW Instek customers.
--------------------------	--

Upgrade Requirement	Firmware file	Supplied by GW Instek
---------------------	---------------	-----------------------

Operation	<p>After plugging in flash drive, the corresponding symbol appears in the status bar.</p> <p>Press System button;</p> <p>Press F3 (Setting) button;</p> <p>Press F4 (Upgrade) button;</p> <p>Rotate the scroll wheel to select corresponding file;</p> <p>Press the F4 (Recall) button and start to upgrade;</p> <p>The procedure is done when the message, upgrading successful, shows up.</p>
-----------	---



Note

Flash drive only support USB2.0/USB3.0,FAT32 file system,16G MAX.

Description of Using Flash Drive

Description It can be used when upgrading the software upgrades, screenshot operation and importing or exporting files. Flash drive only support USB2.0/USB3.0,FAT32 file system,16G MAX.

Operation Insert flash driver into the USB Host port. Then the system identifies the flash driver and the identification appears in the status bar.

Software Update refer to page 86;

Screenshot operation In the target interface, press System button > F3 (Setting) > F5 (Hardcopy) button and rotate the scroll wheel (Encode) to locate the target interface followed by pressing Enter key to save screenshot. A confirm voice will sound when successful.



The file format of screenshot is *.BMP and is saved in the root directory of flash drive by default.

Exporting the
Sequence data

The files of Sequence (*.SEQ), Recorder (*.REC), Delay (*.DLY), etc within machine can be, in addition to individual format, converted to *.CSV file format for easy check and edit in PC by user. For more details, refer to page 79.

REMOTE CONTROL

RS-232	93
USB	95
GPIB	96
LAN	98
Command Syntax	104
Command List	108
Measurement Instructions	108
Display Functions	108
Output Commands	108
Source and Load Commands	109
Status Commands	114
System Commands	115
System Related Commands	116
IEEE488.2 Common Commands	116
Command Details	118
Measurement Commands	118
Display Commands	120
Output Commands	122
Source and Load Commands	126
Status Commands	165
System Commands	172
System Related Commands	181
SCPI Status Registers SCPI	182
Event Registers	184



Enable Registers	184
Status Byte Register	184
Standard Event Register	186
Status Byte Register Commands.....	187
Standard Event Register Commands	188
Other Status Register Commands	190

Connection Usage

This chapter describes how to set and enable port, as well as all the required preparations prior to operation.

Port type	The GPP series has 2 standard remote control ports (RS-232, USB), and 2 optional ports (GPIB, LAN).
Port selection	It is allowed to control the GPP series by only single remote control method once time. Before to use, it's required to select or confirm beforehand.
Operation	Press the System button followed by pressing the F1 (Interface) button to select the target port: F1 (RS-232), F2 (USB), F3 (GPIB), F4 (LAN). The available ports <code>Interface :USB</code> will appear on the LCD.
State	The selected port will appear in the status bar with font color in gray, for instance <code>USB</code> , whilst it will change to white color after successful commnad operation.

RS-232

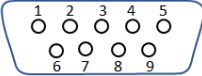Description	The GPP series models can be remotely controlled by RS-232 connection.	
Interface	Rear panel RS-232 port 	 2--->Digital Receiver 3--->Digital Transmitter 5--->Ground terminal
Connection	Under power-off state, connect RS-232 cable and select RS-232 port in the Interface. The message USB232 will appear gray in the status bar when connection, and turns to white color while the first command connects successfully. Panel control will be automatically under lock state when connection is successful.	
Parameter Setting	Press the System button followed by pressing the F1 (Interface) button to select the target port: F1 (RS-232). The setting of baud rate will appear automatically, please then choose desired setting.	

Display The parameter information of RS-232 will appear on LCD. Refer to the description below:

```
RS232 Baud : 115200 8,N,1,N
```

8 --->data bit 8bit

N --->no parity bit

1 --->stop bit 1bit

N --->no flow control bit

Function check Perform the following query:

*IDN?

The unit will return the manufacturer, model, serial number and software version.

GW INSTEK, GPP-3610H, SN: xxxxxxxx, Vx.xx

Disable Remote
Control Mode

- Send a remote command Local from the PC.
- Long-press the F6 (unlock) key on the front panel.



Warning: RS-232 is Not hot-plug device. Please proceed to the connection procedure under the power-off state.

USB

Description	GPP can be connected via USB using the USB Communications Device (CDC) class.
-------------	---

Interface	Rear panel USB device port.
-----------	-----------------------------



Installing the Driver	Install the USB driver provided by supplier in PC.
-----------------------	--

Select USB port in the Interface after connecting the USB cable. The message USB will appear gray in the status bar when connection, and turns to white color while the first command connects successfully.

The front panel keys are automatically locked when the connection is successful.

Parameter Setting Press the System button followed by pressing the F1 (Interface) button to select the target port: F2 (*USB*). The setting of baud rate will appear automatically, please then choose desired setting.

Display The parameter information of USB will appear on LCD. Refer to the description below:

USB Baud : 115200

115200----> transmission baud rate


Function Check Perform the following query:

*IDN?

The unit will return the manufacturer, model, serial number and software version.



GW INSTEK, GPP-3610H, SN: xxxxxxxxxx, Vx.xx

- Disabling Remote Control Mode
- Send a remote command from the PC
 - Long-press the F6 (unlock) key on the front panel.
 - Unplug the USB cable from the rear panel.

 **Note** USB devices are hot-plug devices. You can directly remove the cable and exit.

GPIB

Description The communication data format, compatibility settings and GPIB address must all be configured before using GPIB remote control.

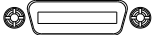Interface	Rear panel GPIB port.	
Connection	<p>Select GPIB port in the Interface after connecting the GPIB cable. The message GPIB will appear gray in the status bar when connection, and turns to white color while the first command connects successfully.</p> <p>The front panel keys are automatically locked when the connection is successful.</p>	
Parameter Setting	<p>Press the System button followed by pressing the F1 (Interface) button to select the target port: F3 (GPIB). The setting of communication address will appear automatically. Input required address when the setting of GPIB Addr turn red color and press the F1 (Enter) button to confirm.</p>	
Display	<p>The address information of GPIB will appear on LCD. Refer to the description below:</p>	
		
	<p>11----> GPIB address of the current unit</p>	
Exiting from Remote Control Mode	<ul style="list-style-type: none"> • Send a remote command from the PC • Long-press the F6 (unlock) key on the front panel. 	

LAN

Description	When using the LAN port, the relevant parameters are supposed to be set earlier.
Connection	Select LAN port in the Interface after connecting the LAN cable. The message LAN will appear gray in the status bar when connection, and turns to white color while the first command connects successfully.
Set port	<p>The front panel keys are automatically locked when the connection is successful.</p> <p>A. Press the System button to enter the system interface followed by pressing the F1 (Interface) button to configure port parameter.</p> <p>B. Press the F4 (LAN) button to configure internet port parameter.</p>
Edit Host name	<p>A. Press the System button to enter the system interface followed by pressing the F1 (Interface) button to configure port parameter.</p> <p>B. Press the F4 (LAN) button to configure internet port parameter.</p> <p>C. Press the F1 (Config) button to configure relevant parameter.</p>

D. press the F4 (Host Name) button to manually input. The Name area will be activated and become red color after setting. The default first letter is A, and can be changed to other string by rotating scroll wheel Encoder (A, B...Z, a, b...z, 1, 2...9, 0, - in clockwise sequence). Press the F1 (Enter) button to confirm current string and automatically enter the next string input. Repeat the process above until completing a full name.

IP Mode The IP address can be obtained by using either DHCP or Manual IP.

Manual IP

A. Press the System button to enter the system interface followed by pressing the F1 (Interface) button to configure port parameter.

B. Press the F4 (LAN) button to configure internet port parameter.

C. Press the F2 (Config) button to configure relevant parameter.

D. Press the F3 (Manual) button to manually configure.

E. press the F1 (IP Addr) button to manually input IP address. The set content will be activated to become red color. Input required data and confirm by pressing the F1 (Done) button. Press the F5 (Clear) button to clear and input again if error occurs.

F. return to the Manual configuration menu and repeat manually configuring NetMask. Press the F2 (NetMask) button to manually input data. The set content will be activated to become red color. Input required data and confirm by pressing the F1 (Done) button. Press the F5 (Clear) button to clear and input again if error occurs.

G. return to the Manual configuration menu and repeat manually configuring GateWay. Press the F3 (GateWay) button to manually input data. The set content will be activated to become red color. Input required data and confirm by pressing the F1 (Done) button. Press the F5 (Clear) button to clear and input again if error occurs.

Parameter Settings:

IP Address: IP address range: 1.0.0.0 to 223.255.255.255 (excluding 127.nnn.nnn.nnn).

Subnet Mask: Subnet Mask Range: 1.0.0.0 to 255.255.255.255.

Gateway: Gateway range: 1.0.0.0 to 223.255.255.255 (excluding 127.nnn.nnn.nnn).

VISA Resource name :
TCPIP0::169.254.129.17::1026::SOCKET

DHCP

A. Press the System button to enter the system interface followed by pressing the F1 (Interface) button to configure port parameter.

B. Press the F4 (LAN) button to configure internet port parameter.

C. Press the F1 (Config) button to configure relevant parameter.

D. Press the F1 (DHCP) button. The unit will be assigned an IP address, subnet mask, the default gateway and other network parameters from the DHCP server. The corresponding parameters will be shown in the parameter area.

PC Operation

1. Enter the IP address into Microsoft Internet Explorer (IE). After entering the IP address you will be shown the Welcome screen which displays the instrument information. The page also provides three links: [Welcome Page](#), [Browser Web Control](#) and [View & Modify Configuration](#) (network settings).

The screenshot shows the web interface for a GPP Series Programmable DC Power Supply. At the top, there is a navigation bar with the GW INSTEK logo and the text 'Simply Reliable'. Below the logo, there are three buttons: 'Welcome Page', 'Browser Web Control', and 'View & Modify Configuration'. The main content area is titled 'Web-Enabled GPP-3610H Programmable DC Power Supply' and contains a table with the following information:

Information about this Web-Enabled Instrument	
Instrument:	GPP-3610H
Serial Number:	GEXB43806
Description:	Programmable DC Power Supply
Hostname:	GPP
Config Type:	Manual
IP Address:	172.16.131.22
VISA TCP/IP Connect String:	TCP/IP: 172.16.131.22:1026:SOCKET
MAC Address:	00:22:24:6A:4D:B6
Software Version:	V1.00
Auto-MDIX Capable:	Yes


Use the navigation bar on the left to access your GPP-3610H Programmable DC Power Supply and related information.

© GW Instek, Inc. 2017


2. Click on “Browser Web Control” to execute commands through the browser, as shown below.



3. Press the “View & Modify Configuration” icon to enter the Modify Config menu, as shown below.

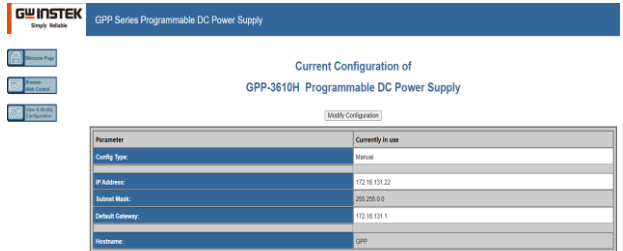

4. Click “Modify Config” to enter the network configuration setting menu, as shown below. Use the mouse to click on “Save and Restart” to change the remote settings for the GPP series.

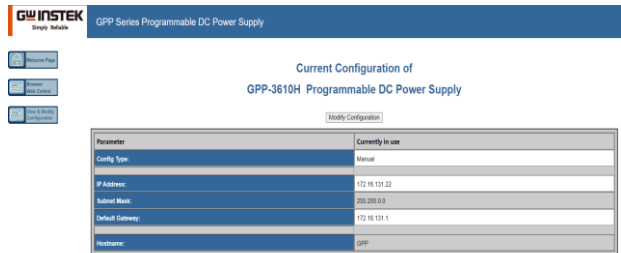

The screenshot shows the web interface for the GPP Series Programmable DC Power Supply. The page title is "GPP Series Programmable DC Power Supply". On the left, there are three menu items: "Home", "Remote Control", and "Save & Restart". The main content area is titled "Current Configuration of GPP-3610H Programmable DC Power Supply" and includes a "Modify Configuration" button. Below this is a table showing the current configuration parameters.

Parameter	Currently in use
Config Type	Manual
IP Address	172.16.131.22
Subnet Mask	255.255.0.0
Default Gateway	172.16.131.1
Hostname	GPP



Note

Click “Undo Edits” to cancel all the edited settings.

Click “Factory Defaults” to restore to the factory default settings.

Exiting from
Remote Control
Mode

- Send a remote command from the PC
- Long-press the F6 (unlock) key on the front panel.
- Unplug the USB cable from the rear panel.



Note

Hot-swappable LAN devices can be directly disconnected to exit.

Command Syntax

The commands that are used with the GPP meet IEEE488.2 and SCPI standards.

SCPI Commands Overview

Command Format

SCPI is an ASCII based command language designed for test and measurement instruments. SCPI commands uses a hierarchical structure (tree system), and is divided into different subsystems. Each subsystem is defined by a different root keyword. Each command consists of a root keyword and one or more hierarchical key words separated by a colon ":" and followed by a parameter. There is always a space between the keywords and the parameters. Any commands followed by a question mark (?) are queries.

For Example:

```
:SYSTem:BEEPer:STATe {0|1|OFF|ON}
```

```
:SYSTem:BEEPer:STATe?
```

SYSTem is the root level keyword and BEEPer and STATe are the secondary and tertiary level keywords. All levels have a ":" separating each keyword. Parameters are enclosed in "{ }".

The commands SYSTem:BEEPer:STATe has {0 | 1 | OFF | ON } as parameters. The parameters are separated with a space.

SYSTem:BEEPer:STATe? indicates that the command is a query.

In addition some commands have multiple parameters that are usually separated by a comma ",".

For example: :STATus:QUEue:ENABLE (-110:-222, -220).

Symbol Description

SCPI commands have the following conventional symbols. These symbols are not commands but are used to describe the command parameters.

1. Curly Brackets { }

Curly Bracket enclose command string parameters, for example:

{OFF | ON}

2. Vertical Bars |

Vertical bars are used to separate one or more optional parameters. Only one command can be selected. With the following two parameters, {ON | OFF} only ON or OFF can be selected.

3. Square Brackets []

The contents inside square brackets represent keywords or parameters that can be omitted when executing a command. For example: For the commands :OUTPut[:STATe] {ON | OFF}, [STATe] can be omitted.

4. Angle Brackets < >

The parameters in angle brackets must be substituted with a valid parameter. For example: For the command :DISPlay:CONTRast <brightness>, <brightness> must be use a numerical value instead such as, :DISPlay:CONTRast 1

Parameter Types

The commands have a number of different parameter categories. How the parameters are set depend on the parameter categories.

1. Boolean

Commands parameter that have to states "OFF" and "ON", for example, DISPLAY:FOCUS {ON | OFF}. "ON" will turn on the focus display function, while "OFF" will turn it off.

2. Consecutive Integers

Parameters that use consecutive integers, for example: For the command :DISPLAY:CONTRast <brightness>, <brightness> is an integer value with a range of 1~3.

3. Continuous Real Number

Parameter that must be a continuous real number can have any value within the effective range and accuracy. For example: The command CURRent {<current> | MINimum | MAXimum}, is used to set the current value for the current operating channel. <current> can be any value within the setting range of the current channel.

4. Discrete

For discrete parameters, only those values that are listed can be used. For example: The *RCL {0 | 1 | 2 | 3 | ... | 9} command can only use 0, 1, 2, 3, ..., 9.

5. ASCII Strings

ASCII string parameters must use a combination of ASCII characters in a string. For example: For the command: MODE <name>, <name> must be an ASCII string.

Command Abbreviations

The syntax for SCPI commands contains a combination of upper and lower case letters. The upper case letters in a command represent the short form of that command.

Commands are not case sensitive and can be used in both upper and lower case. Note, however, to use the short form of the command, only the capital letter part of the command can be used (no other abbreviation can be used). For example:

:MEASure:CURRent?

Can be abbreviated to:

:MEAS:CURR?

Command Terminators

When sending a command to the function generator, the command must be terminated with a <new line> character. The IEEE-4888 EOI can also be used as a <new line> character. A command can also be terminated using a carriage return + <new line> character. The command path will always be reset back to the root level after a command has been terminated.

Return values are terminated with 0x0A.

Command List

Measurement Instructions

:MEASure[1]:<function>?	Page 118
:MEASure[1]:ALL?	Page 118
VOUT<X>?	Page 118
IOUT<X>?	Page 119

Display Functions

:DISPlay:ENable 	Page 120
:DISPlay:ENABLE?	Page 120
:DISPlay:BRIGhtness <NRf>	Page 120
:DISPlay:BRIGhtness?	Page 120
:DISPlay:TYPE {1 2 3 4}	Page 121
:DISPlay:TYPE?	Page 121

Output Commands

:OUTPut[1][:STATe] 	Page 122
:OUTPut[1][:STATe]?	Page 122
OUT<Boolean>	Page 122
ROUTe:TERMinals {FRONT/REAR}	Page 122
ROUTe:TERMinals?	Page 123
:OUTPut[1]:OVP:STATe 	Page 123
:OUTPut[1]:OVP:STATe?	Page 123
:OUTPut[1]:OVP:TRIGger?	Page 123
:OUTPut[1]:OVP <value>	Page 124
:OUTPut[1]:OVP?	Page 124

:OUTPut[1]:OCP:STATe 	Page 124
:OUTPut[1]:OCP:STATe?	Page 124
:OUTPut[1]:OCP:TRIGger?	Page 125
:OUTPut[1]:OCP <value>	Page 125
:OUTPut[1]:OCP?	Page 125

Source and Load Commands

:SOURce[1]:CURRent <NRf>	Page 126
ISet<X>:<NR2>	Page 126
:SOURce[1]:CURRent?	Page 126
ISet<X>?	Page 126
:SOURce[1]:CURRent[:LIMit]:STATe?	Page 126
:SOURce[1]:VOLTage <NRf>	Page 127
VSet<X>:<NR2>	Page 127
:SOURce[1]:VOLTage?	Page 127
VSet<X>?	Page 127
:SOURce[1]:RESistor <NRf>	Page 128
:SOURce[1]:RESistor?	Page 128
:LOAD[1]:CV {ON OFF}[,FAST]	Page 128
:LOAD[1]:CC {ON OFF}[,FAST]	Page 129
:LOAD[1]:CR {ON OFF}	Page 129
:MODE[1]?	Page 129
:LOAD[1]: RESistor <NRf>	Page 129
:LOAD[1]: RESistor?	Page 129
:LOAD:DISPlay {Low Middle High}	Page 130
:LOAD:DISPlay?	Page 130
:DELAy[1]:CYCLEs {N I}[,<value>]	Page 130
:DELAy[1]:CYCLEs?	Page 131

:DELAy[1]: ENDState {ON OFF LAST}	Page 131
:DELAy[1]: ENDState?	Page 131
:DELAy[1]:GROUPs <Nrf>	Page 131
:DELAy[1]:GROUPs?	Page 132
:DELAy[1]:PARAMeter <No>,{ON OFF},{<time>	Page 132
:DELAy[1]:PARAMeter? <No>,<cecount>	Page 132
:DELAy[1]: REStArt	Page 133
:DELAy[1]:StARt <value>	Page 133
:DELAy[1]:StARt?	Page 134
:DELAy[1][:STATe] {ON OFF}	Page 134
:DELAy[1][:STATe]?	Page 134
:DELAy[1]:StATe:GENERate {01P 10P}	Page 134
:DELAy[1]:StATe:GENERate?	Page 135
:DELAy[1]:StOP {NONE <V >V =V <C >C =C <P >P =P},{<value>	Page 135
:DELAy[1]:StOP?	Page 135
:DELAy[1]:TIME:GENERate {FIX INC DEC} [,<value0>[,<value1>]]	Page 136
:DELAy[1]:TIME:GENERate?	Page 136
:DELAy[1]:MEMory:SAVE {0,1,2,3,4,5,6,7,8,9}	Page 137
:DELAy[1]:MEMory:LOAD {0,1,2,3,4,5,6,7,8,9}	Page 137
:DELAy[1]:USB:SAVE <dest>	Page 137
:DELAy[1]:USB:LOAD <dest>	Page 138
:MONItor[1]:CURRent:CONDition {<C >C =C NONE}, {AND OR NONE}	Page 138
:MONItor[1]:CURRent:CONDition?	Page 139
:MONItor[1]:CURRent[:VALue] {<value> MINimum MAXimum}	Page 139
:MONItor[1]:CURRent[:VALue]?	Page 139

:MONItor[1]:POWER:CONDition {<P >P =P NONE}	Page 139
:MONItor[1]:POWER:CONDition?	Page 140
:MONItor[1]:POWER[:VALue] {<value> MINimum MAXimum}	Page 140
:MONItor[1]:POWER[:VALue]?	Page 140
:MONItor[1][:STATe] {ON OFF}	Page 140
:MONItor[1][:STATe]?	Page 141
:MONItor[1]:STOPway {OUTOFF ALARM BEEPER},{ON OFF}	Page 141
:MONItor[1]:STOPway?	Page 141
:MONItor[1]:VOLTage:CONDition {<V >V =V NONE},{AND OR NONE}	Page 141
:MONItor[1]:VOLTage:CONDition?	Page 142
:MONItor[1]:VOLTage[:VALue] {<value> MINimum MAXimum}	Page 142
:MONItor[1]:VOLTage[:VALue]?	Page 142
:RECOOrder[1]:PATH?	Page 143
:RECOOrder[1]:MEMory {0 1 2 3 4 5 6 7 8 9}	Page 143
:RECOOrder[1]: USB <dest>	Page 143
:RECOOrder:PERIOd <value>	Page 144
:RECOOrder:PERIOd?	Page 144
:RECOOrder[:STATe] {ON OFF}	Page 144
:RECOOrder[:STATe]?	Page 145
:RECOOrder[1]:GROUPs <value>	Page 144
:RECOOrder[1]:GROUPs?	Page 144
:RECOOrder[1]:ENABle {ON OFF}	Page 144
:RECOOrder[1]:ENABle?	Page 145
:SEQUence[1]:CYCLEs {N I},{<value>}	Page 146
:SEQUence[1]:CYCLEs?	Page 146

:SEQUence[1]:ENDState {OFF LAST}	Page 147
:SEQUence[1]:ENDState?	Page 147
:SEQUence[1]:GROUPs <value>	Page 147
:SEQUence[1]:GROUPs?	Page 147
:SEQUence[1]:PARAMeter<No>,<volt>,<curr>,<time>	Page 148
:SEQUence[1]:PARAMeter? <No>,<count>	Page 148
:SEQUence[1]:REStart	Page 149
:SEQUence[1]:StARt <value>	Page 149
:SEQUence[1]:StARt?	Page 150
:SEQUence[1][:StATE] {ON OFF}	Page 150
:SEQUence[1][:StATE]?	Page 150
:SEQUence[1]:TEMPlEt:CONStRuct	Page 151
:SEQUence[1]:TEMPlEt:FALLRate <value>	Page 151
:SEQUence[1]:TEMPlEt:FALLRate?	Page 151
:SEQUence[1]:TEMPlEt:INTErval <value>	Page 151
:SEQUence[1]:TEMPlEt:INTErval?	Page 152
:SEQUence[1]:TEMPlEt:INVErt {ON OFF}	Page 152
:SEQUence[1]:TEMPlEt:INVErt?	Page 152
:SEQUence[1]:TEMPlEt:MAXValue {<value> MINimum MAXimum}	Page 152
:SEQUence[1]:TEMPlEt:MAXValue?	Page 153
:SEQUence[1]:TEMPlEt:MINValue {<value> MINimum MAXimum}	Page 153
:SEQUence[1]:TEMPlEt:MINValue?	Page 153
:SEQUence[1]:TEMPlEt:OBJect {V C}	Page 154
:SEQUence[1]:TEMPlEt:OBJect?	Page 154
:SEQUence[1]:TEMPlEt:POINtS <value>	Page 154
:SEQUence[1]:TEMPlEt:POINtS?	Page 154
:SEQUence[1]:TEMPlEt:RISERate <value>	Page 155

:SEQUence[1]:TEMPlEt:RISERate?	Page 155
:SEQUence[1]:TEMPlEt:SELect {SINE PULSE RAMP UP DN UPDN RISE FALL}	Page 155
:SEQUence[1]:TEMPlEt:SELect?	Page 155
:SEQUence[1]:TEMPlEt:SYMMetry <value>	Page 155
:SEQUence[1]:TEMPlEt:SYMMetry?	Page 156
:SEQUence[1]:TEMPlEt:WIDTh <value>	Page 156
:SEQUence[1]:TEMPlEt:WIDTh?	Page 156
:SEQUence[1]:TEMPlEt:STARt <value>	Page 156
:SEQUence[1]:TEMPlEt:STARt?	Page 156
:SEQUence[1]:MEMory:SAVE {0,1,2,3,4,5,6,7,8,9}	Page 157
:SEQUence[1]:MEMory:LOAD {0,1,2,3,4,5,6,7,8,9}	Page 157
:SEQUence[1]:USB:SAVE <dest>	Page 157
:SEQUence[1]:USB:LOAD <dest>	Page 158
:TRIGger:IN[:ENABle] {D0 D1 D2 D3 D4},{ON OFF}	Page 158
:TRIGger:IN[:ENABle]? {D0 D1 D2 D3 D4}	Page 158
:TRIGger:IN:RESPonse {D0 D1 D2 D3 D4},{ON OFF TOGGLE POWER C V CC CR}	Page 159
:TRIGger:IN:RESPonse? {D0 D1 D2 D3 D4}	Page 160
:TRIGger:IN:SENSitivity {D0 D1 D2 D3 D4}, {LOW MID HIGH}	Page 160
:TRIGger:IN:SENSitivity? {D0 D1 D2 D3 D4}	Page 160
:TRIGger:IN:SOURce {D0 D1 D2 D3 D4},{CH1},{ON OFF}	Page 160
:TRIGger:IN:SOURce? {D0 D1 D2 D3 D4}	Page 161
:TRIGger:IN:TYPE {D0 D1 D2 D3 D4}, {RISE FALL HIGH LOW STATE }	Page 161
:TRIGger:IN:TYPE? {D0 D1 D2 D3 D4}	Page 161
:TRIGger:OUT:CONDition {D0 D1 D2 D3 D4},{OUTOFF OUTON >V <V =V	Page 161

>C <C =C >P <P =P AUTO} , <value>	
:TRIGger:OUT:CONDition? {D0 D1 D2 D3 D4}	Page 163
:TRIGger:OUT[:ENABle] {D0 D1 D2 D3 D4}, {ON OFF}	Page 163
:TRIGger:OUT[:ENABle]? {D0 D1 D2 D3 D4}	Page 163
:TRIGger:OUT:POLARity {D0 D1 D2 D3 D4}, {POSITIVE NEGATIVE}	Page 163
:TRIGger:OUT:POLARity? {D0 D1 D2 D3 D4}	Page 164
:TRIGger:OUT:SOURce {D0 D1 D2 D3 D4}, {CH1}	Page 164
:TRIGger:OUT:SOURce? {D0 D1 D2 D3 D4}	Page 164
:TRIGger:OUT:STATe [D0 D1 D2 D3 D4], {ON OFF}	Page 165
:TRIGger:OUT:STATe? [D0 D1 D2 D3 D4]	Page 165

Status Commands

STATus?	Page 165
:STATus:PRESet	Page 165
:STATus:OPERation[:EVENT]?	Page 166
:STATus:OPERation:CONDition?	Page 166
:STATus:OPERation:ENABle <NRf>	Page 166
:STATus:OPERation:ENABle?	Page 166
:STATus:MEASurement[:EVENT]?	Page 167
:STATus:MEASurement:ENABle <NRf>	Page 167
:STATus:MEASurement:ENABle?	Page 168
:STATus:MEASurement:CONDition?	Page 168
:STATus:QUEStionable[:EVENT]?	Page 168
:STATus:QUEStionable:CONDition?	Page 168
:STATus:QUEStionable:ENABle <NRf>	Page 168
:STATus:QUEStionable:ENABle?	Page 169
:STATus:QUEue[:NEXT]?	Page 169

:STATus:QUEue:ENABle <list>	Page 169
:STATus:QUEue:ENABle?	Page 170
:STATus:QUEue:DISABle <list>	Page 170
:STATus:QUEue:DISABle?	Page 170
:STATus:QUEue:CLEAr	Page 170

System Commands

:SYSTem:VERSion?	Page 172
:SYSTem:ERRor?	Page 172
ERR?	Page 172
:SYSTem:CLEAr	Page 173
:SYSTem:POSetup <name>	Page 173
:SYSTem:POSetup?	Page 173
:SYSTem:COMMunicate:LAN:DHCP[:STATe] 	Page 173
:SYSTem:COMMunicate:LAN:DHCP[:STATe]?	Page 173
:SYSTem:COMMunicate:LAN:IPADdress <IP address>	Page 174
:SYSTem:COMMunicate:LAN:IPADdress?	Page 174
:SYSTem:COMMunicate:LAN:SMASk <Mask>	Page 174
:SYSTem:COMMunicate:LAN:SMASk?	Page 175
:SYSTem:COMMunicate:LAN:GATEway <IP address>	Page 175
:SYSTem:COMMunicate:LAN:GATEway?	Page 175
:SYSTem:COMMunicate:LAN:MANualip[:STATe] 	Page 175
:SYSTem:COMMunicate:LAN:MANualip[:STATe]?	Page 176
:SYSTem:COMMunicate:LAN:APPLY	Page 176
:SYSTem:REMote	Page 176
REMOTE	Page 176
:SYSTem:BEEPer:STATe {0 1 OFF ON}	Page 176
BEEP<Boolean>	Page 177

:SYSTem:BEEPer:STATe?	Page 177
:SYSTem:LOCal	Page 177
LOCAL	Page 177
:SYSTem:INTerface [USB RS232 GPIB LAN]	Page 177
:SYSTem:LANGuage [CHINese ENGLISH]	Page 178
:SYSTem:LANGuage?	Page 178
:SYSTem:BAUDrate:USB [9600 19200 38400 57600 115200]	Page 178
:SYSTem:BAUDrate:USB?	Page 178
:SYSTem:BAUDrate:RS232 [9600 19200 38400 57600 115200]	Page 178
:SYSTem:BAUDrate:RS232?	Page 178
BAUD<NR1>	Page 179
HELP	Page 179

System Related Commands

*IDN?	Page 181
*RST	Page 181
*SAV <NRf>	Page 181
SAV<NR1>	Page 181
*RCL <NRf>	Page 182
RCL<NR1>	Page 182

IEEE488.2 Common Commands

*SRE <Enable Values>	Page 187
*SRE?	Page 187
*STB?	Page 188
*ESE <Enable Value>	Page 188
*ESE?	Page 188

*ESR?	Page 188
*CLS	Page 190
*OPC	Page 190
*OPC?	Page 190

Command Details

When using commands to select a specific channel, [1] stands for CH1, [2] stands for CH2. "1" can be omitted when you want to select CH1 as it is selected by default. However if you wish to select CH2, "2" must be selected.

Measurement Commands

Command	:MEASure[1] :<function>
Function	Performs a "READ?" query on the specified measurement function.
Description	<function> CURRent[:DC]:Measures the current. VOLTage[:DC]:Measures the voltage. POWER[:DC]:Measures the power.

Example :MEASure:CURRent?
 Reads back the current value.

Command	:MEASure[1]:ALL?
Function	Query the all measurement functions.
Example	:MEASure:ALL? Reads back the voltage ,current and power value.

Command	VOUT<X>?
Function	Returns the actual output voltage.
Description	X =1
Example	VOUT1? Returns the output voltage.

Command	IOUT<X>?
Function	Returns the actual output current.
Description	X = 1
Example	IOUT1? Returns the output current.

Display Commands

Command :DISPlay:ENABle
 Function Turn the LCD display on or off.
 Description b 0/OFF: Turns the display off.
 1/ON: Turns the display on.

Example :DISPlay:ENABle ON
 Turns the LCD display on.

Command :DISPlay:ENABle?
 Function Queries the state of the display.
 Return 0/OFF: Display turned off.
 1/ON: Display turned on.

Example :DISPlay:ENABle?
 Returns the state of the display.

Command :DISPlay:BRIGhtness <NRf>
 Function Sets backlight display brightness.
 Description <NRf> Low
 Middle
 High

Example :DISPlay:BRIGhtness Low
 Sets the backlight to Low.

Command :DISPlay:BRIGhtness?
 Function Queries the brightness of the display.

Return	Low: The brightness is low, Middle: The brightness is low, High: The brightness is low.
Example	:DISPlay:BRIGhtness? Returns the brightness of the display.
Command	:DISPlay:TYPE {1 2 3 4}
Function	Sets the display screens. For details, see page 32.
Example	:DISPlay:TYPE 4 Sets the display screens of TYPE4.
Command	:DISPlay:TYPE?
Function	Queries the TYPE of display screens.
Example	:DISPlay:TYPE? Returns the TYPE of display screens.

Output Commands

Command :OUTPut[1][:STATe]
 Function Turns the output on or off.
 Description 0/OFF: Turn off the output
 1/ON: Turn on the output

Example :OUTPut1:STATe ON
 Turns on the output.

Command :OUTPut[1][:STATe]?
 Function Queries the output state.
 Return 0/OFF: The output is turned off.
 1/ON: The output is turned on.

Example :OUTPut1:STATe?
 Returns the output state .

Command OUT<Boolean>
 Function Turns the output on or off.
 <Boolean> : 0= off, 1=on

Example OUT1
 Turns on the output.

Command ROUTe:TERMinals {FRONT/REAR}
 Function Set the front or rear terminal output.

Example ROUTe:TERMinals REAR
 Set output from rear terminal.

Command	ROUTe:TERMinals?
Function	Query front or rear terminal output.
Return	FRONT: Output from front terminal. REAR: Output from rear terminal.

Example	ROUTe:TERMinals?
---------	------------------

Command	:OUTPut[1]:OVP:STATe
Function	Turns OVP protection on/off.
Description	 0/OFF:Turns OVP off. 1/ON:Turns OVP on.

Example	:OUTPut:OVP:STATe ON Turn on OVP.
---------	--------------------------------------

Command	:OUTPut[1]:OVP:STATe?
Function	Queries the status of the OVP function.
Return	0/OFF: OVP function is off. 1/ON: OVP function is on.

Example	:OUTPut:OVP:STATe? Returns the status of the OVP function.
---------	---

Command	:OUTPut[1]:OVP:TRIGer?
Function	Query whether the OVP protection function has been triggered.
Return	0/OFF: The channel OVP protection is not triggered. 1/ON: The channel OVP protection has been triggered.

Example :OUTPut:OVP:TRIGer?
Return whether the OVP protection function has been triggered.

Command :OUTPut[1]:OVP <value>

Function Sets the OVP level.

Description <value> Refer to the specification sheet on page 200 for value.

Example :OUTPut:OVP 10.5

Sets the OVP voltage to 10.5V .

Command :OUTPut[1]:OVP?

Function Queries the OVP voltage level.

Example :OUTPut:OVP?

Queries the OVP voltage level .

Command :OUTPut[1]:OCP:STATe

Function Turns OCP protection on/off.

Description 0/OFF:Turns OCP off.
1/ON:Turns OCP on.

Example :OUTPut:OCP:STATe ON

Turn on OCP .

Command :OUTPut[1]:OCP:STATe?

Function Queries the status of the OCP function.

Return 0/OFF: OCP function is off.
1/ON: OCP function is on.

Example :OUTPut:OCP:STATe?

Returns the status of the OCP function.

Command :OUTPut[1]:OCP:TRIGer?

Function Query whether the OCP protection function has been triggered.

Return 0/OFF: The channel OCP protection is not triggered.
1/ON: The channel OCP protection has been triggered.

Example :OUTPut:OCP:TRIGer?

Return whether the OCP protection function has been triggered.

Command :OUTPut[1]:OCP <value>

Function Sets the OCP level.

Description <value> Refer to the specification sheet on page 200 for value.

Example :OUTPut:OCP 1.5

Sets the OCP voltage to 1.5A .

Command :OUTPut[1]:OCP?


Function Queries the OCP current level.

Example :OUTPut:OCP?

Queries the OCP current level .

Source and Load Commands

Command	:SOURce[1]:CURRent <NRf>
Function	Sets the current level.
Description	<NRf> 0.0000- MAX value (Refer to the specification sheet for MAX value).
Example	:SOURce:CURRent 1.0005 Sets the current level to 1.0005A.
Command	ISET<X>:<NR2>
Function	Sets the current level.
Description	X : =1 <NR2>: Decimal number, range 0- MAX value.
Example	ISET:1.500 Sets output current to 1.500A.
Command	:SOURce[1]:CURRent?
Description	Queries the current limit level.
Example	:SOURce:CURRent? Queries the current limit level .
Command	ISET<X>?
Function	Returns the output current setting.
Description	X : =1
Example	ISET1? Returns output current setting.
Command	:SOURce[1]:CURRent[:LIMit]:STATe?

Function	Queries the current limit state.
Return	0: The current limit has not been reached. 1:The current limit has been reached.
Example	:SOURce:CURRent:STATe? Return the current limit state.
 Note	At output off or Load Mode,The return value of is 0.
Command	:SOURce[1]:VOLTage < NRf >
Function	Sets the output voltage amplitude.
Description	<NRf> 0.000-MAX
Example	:SOURce:VOLTage 5.321 Sets the output voltage to 5.321V.
Command	VSET<X>:<NR2>
Function	Sets the Voltage level.
Description	X : =1 <NR2>: Decimal number, range 0-MAX.
Example	VSET1:20.345 Sets the CH1 voltage to 20.345V.
Command	:SOURce[1]:VOLTage?
Function	Queries the output voltage setting.
Example	:SOURce:VOLTage? Queries the output voltage setting.
Command	VSET<X>?

Function	Returns the output voltage setting.
Description	X : =1
Example	VSET1? Returns output voltage setting.
Command	:SOURce[1]:RESistor < NRf >
Function	Set the resistor value.
Description	NRF 1-1000
Example	:SOURce:RESistor 1000 Set the resistor value as 1000Ω.
Command	:SOURce[1]:RESistor?
Function	Queries the setting resistor value.
Example	:SOURce:RESistor? Queries the setting resistor value and returns the readback value.
Command	:LOAD[1]:CV {ON OFF}[,FAST]
Function	Sets Load CV mode. Automatically switch to power mode after closing LOAD mode.
Description	[FAST]: In order to protect the function switching device" relay", it is necessary to wait until the voltage and current drop to zero under normal conditions. When FAST is enabled, this factor will not be considered, but it is easy to damage the "relay", so it is recommended to use it with caution.
Example	:LOAD:CV ON Sets Load CV mode.

Command :LOAD[1]:CC {ON | OFF}[,FAST]
 Function Sets Load CC mode.
 Description [FAST]: In order to protect the function switching device "relay", it is necessary to wait until the voltage and current drop to zero under normal conditions. When FAST is enabled, this factor will not be considered, but it is easy to damage the "relay", so it is recommended to use it with caution.

Example :LOAD:CC ON
 Sets Load CC mode.

Command :LOAD[1]:CR {ON | OFF}
 Function Sets Load CR mode.

Example :LOAD:CR ON
 Sets Load CR mode.

Command :MODE[1]?
 Function Queries work mode. 4 modes below:
 Power and CV, CC, CR mode (load).

Example :MODE1?
 Queries work mode.

Command :LOAD[1]:RESistor <NRf>
 Function Sets the Load CR level.
 Description <NRf> 1-1000

Example :LOAD:RESistor 100
 Sets the Load CR level to 100Ω.

Command :LOAD[1]:RESistor?

Function	Queries the Load CR level.
Description	<NRf> 1-1000
Example	:LOAD:RESistor? Return the Load CR level .
Command	:LOAD:DISPlay {Low Middle High}
Function	In load mode, set the minimum voltage value that can be displayed. The factory default is high. Below this value, it will display "--.----".
Description	Low: 0.5V; Middle: 0.75V; High:1V
Example	:LOAD:DISPlay Low In load mode, the minimum voltage value that can be displayed is 0.5V.
Command	:LOAD:DISPlay?
Function	Query the minimum voltage value that can be displayed in load mode.
Example	:LOAD:DISPlay? In load mode, query the minimum voltage value that can be displayed. The return variables are low, 0.5V; middle, 0.75V; high, 1V.
Command	:DELAy[1]:CYCLEs {N I}[,<value>]
Function	Sets the cycle number of Delay.
Description	<value> 1-99999 I represents an infinite loop. N represents a finite loop. The cycle number is set by parameter <value>.
Example	:DELAy:CYCLEs N,100 Sets the cycle number of Delay as 100 .

Command	:DELAy[1]:CYCLEs?
Function	Queries the cycle number of Delay.
Example	:DELAy:CYCLEs? Return to I or N, <value> (For example: N,100).
Command	:DELAy[1]:ENDState {ON OFF LAST}
Function	Sets the termination state of Delay.
Description	ON OFF LAST ON: output enabled. OFF: output disabled. LAST: stay at the last group of output state.
Example	:DELAy:ENDState OFF Sets the termination state of Delay as output disabled.
Command	:DELAy[1]:ENDState?
Function	Queries the termination state of Delay.
Description	ON OFF LAST ON: output enabled OFF: output disabled LAST: stay at the last group of output state.
Example	:DELAy:ENDState? Return the termination state of Delay.
Command	:DELAy[1]:GROUPs <NRf>
Function	Sets the output number of Delay.
Description	<NRf> 1 - 2048

Example	:DELAy:GROUPs 100 Sets the output number of Delay as 100.
Command	:DELAy[1]:GROUPs?
Function	Queries the output number of Delay.

Example	:DELAy:GROUPs? Return the output number of Delay.
Command	:DELAy[1]:PARAMeter <No>,{ON OFF},{<time>
Function	Sets the delay parameter of Delay.
Description	<No> 0-2047 Sets the serial number of delay parameter. Integer 0-2047. {ON OFF} The output state of the group. <time> 1s-300s The delay duration of the group. Integer 1s-300s.

Example	:DELAy:PARAMeter 1,ON,10 Sets the delay parameter of Delay as the 1st group, output ON, delay 10s.
Command	:DELAy[1]:PARAMeter? <No>[,<count>]

Function Queries the delay parameter of the specified groups of Delay. Returns to a string initiating from #. Data head is to describe data length information starting from #. For example, ##900000017, the later 9 digits (00000017) following the initial 9 indicate length of data flow (17 bytes).

The format of delay parameter of each group is “serial number, output state, delay duration”, and parameter of each group is divided by semicolon“;”.

For example: “2, OFF, 3;3, ON,1;” representing the delay parameters of 2 groups; the serial number of delay parameter of the 1st group is 2, output state is OFF,delay time is 3S;the 2nd group is 3, output state is ON,delay time is 1S.

Description <No> 0 – 2047 Sets the serial number of the delay parameter. Integer 0 – 2047.

Example :DELAy:PARAMeter? 2,2

Return the delay parameter of 2 groups of Delay. From the second group.

Command :DELAy[1]:REStArt

Function Start output with the first setting.

Example :DELAy:REStArt

Sets the output with the first delay setting.

Command :DELAy[1]:StARt <value>

Function Sets the sequence number for initial execution.

<value>: Integer 0 – 2047.

Example :DELAy:StARt 10

Sets the sequence output to start from the group 11.

Command	:DELAy[1]:STARt?
Function	Queries the sequence number for initial execution of delay output.
<hr/>	
Example	:DELAy:STARt? Returns the initial sequence number of sequence output.
Command	:DELAy[1][:STATe] {ON OFF}
Function	Enable or disable the delay output function.
Description	{ON OFF} Output state of the group.
<hr/>	
Example	:DELAy ON Enable the delay output function.
Command	:DELAy[1] [:STATe]?
Function	Queries whether the output function of Delay has been enabled or disabled.
<hr/>	
Example	:DELAy:STATe? Return whether the output function of Delay has been enabled or disabled.
Command	:DELAy[1]:STATe:GENERate {01P 10P}
Function	Selects the used pattern of the automatically generated state.
Description	01P 10P 10P: the automatically generated state will repeat by the sequence of Off and the On. The automatically generated state will repeat by the sequence of On and the Off.
<hr/>	
Example	:DELAy:STATe:GENE 01P The automatically generated state will repeat by the sequence of Off and the On.

Command	:DELAy[1]:STATe: GENErate?
Function	Queries the currently used pattern of the automatically generated state.
Example	:DELAy:STATe:GENE? Queries the currently used pattern of the automatically generated state.
Command	:DELAy[1]:STOP {NONE <V >V =V <C >C =C <P >P =P}[,<value>]
Function	Sets the stop condition of delay.
Description	NONE: Sets stop condition type as "NONE". <V, >V, =V: Sets stop condition type as "<voltage" ">voltage" "=voltage". <C, >C, =C: Sets stop condition type as "<current" ">current" "=current". <P, >P, =P: Sets stop condition type as "<power" ">power" "=power". <value> It is used to set voltage, current or power value of stop condition, which range from 0 to the maximum voltage/current/power value of the channel.
Example	:DELAy:STOP >V,8 Sets the stop condition of delay as >8V.
Command	:DELAy[1]:STOP?
Function	Queries the stop condition of the current delay.
Example	:DELAy:STOP? Queries the current stop condition, back to NONE or stop condition value.

Command	:DELAy[1]:TIME:GENERate {FIX INC DEC}[,<value0>[,<value1>]]
Function	Sets the method of automatically generated time and the corresponding parameter of delay.
Description	<p><value0> The duration of "ON" state.</p> <p><value1> The duration of "OFF" state.</p> <p>FIX (fixed time) sets <value0> and <value1> time, which range from 1s to 300s. The default setting of delay time is enabled when only a time parameter is specified.</p> <p>Constant duration will be generated by the pattern of either monotonous increase or monotonous decrease when INC (monotonous increase) or DEC (monotonous decrease) is set. Starting from the base time, it gradually increases or decreases by steps and further generates duration. Base time (<value0>) and step value (<value1>) are available for setting, the mechanical relation of both of which is base time + output group number * step value ≤300s. The available range of setting value for <value0> is from 1s to (300s-output group number * step value). The available range of setting value for <value1> is from 1s- int{(300s-base time/output group number)}. The default duration is base time when only a time parameter is specified.</p>
Example	<p>:DELAy:TIME:GENE INC,3,5</p> <p>Sets the method of automatically generated time for delay as monotonous increase, base time as 3s, step value as 5s.</p>
Command	:DELAy[1]:TIME:GENERate?
Function	Queries the method of automatically generated time for delay and the corresponding parameter.

Example	:DELAy:TIME:GENE? Queries the method of automatically generated time for delay and the corresponding parameter. Return a string with format consisting of the method of automatically generated time, <value0>,<value1>.
Command	:DELAy[1]:MEMory:SAVE {0 1 2 3 4 5 6 7 8 9}
Function	Saves the delayed file to the designated location of internal storage.
Parameter	{0 1 2 3 4 5 6 7 8 9} represent the storage locations of 10 delayed files within the internal storage individually.

Example	:DELAy:MEMory:SAVE 1 Saves the delayed file to the DELAY01 of internal storage.
Command	:DELAy[1]:MEMory:LOAD {0 1 2 3 4 5 6 7 8 9}
Function	Recalls the delayed file saved in the designated location from internal storage.
Parameter	{0 1 2 3 4 5 6 7 8 9} represent the locations of storage of 10 delayed files within the internal storage individually.

Example	:DELAy:MEMory:LOAD 1 Recalls the delayed file of DELAY01 saved in the internal storage.
Command	:DELAy[1]:USB:SAVE <dest>
Function	Saves the delayed file to the designated location of external storage.

Parameter <dest> indicates the designated location of external storage with file format in either usb:\<name>.CSV or usb:\<name>.DLY. The file name spans up to the max. 8 alphanumeric characters. .CSV/.DLY represents the suffix of file name. Storage location can not be designated when delay function is enabled.

Example :DELAy:USB:SAVE USB:\R001.CSV
Saves the delayed file, by the name of "R001.CSV", to the external storage.

Command :DELAy[1]:USB:LOAD <dest>

Function Recalls the delayed file saved in the designated location from external storage.

Parameter <dest> indicates the designated location of external storage.

Example :DELAy:USB:LOAD USB:\R001.CSV
Recalls the delayed file, R001.CSV, saved in the external storage.

Command :MONItor[1]:CURRent:CONDition
{<C | >C | =C | NONE},{AND | OR | NONE}

Function Sets the current monitor condition for monitor.

Description {<C | >C | NONE} Sets the current monitor condition as
" <C" (<current), " >C" (>current), "=C" (=current) or
"NONE" (current not monitored).
{AND | OR | NONE} Practical monitor condition is the logical composition of voltage, current and power. "AND" (and), "OR" (or), "NONE" (non-logical pattern).

Example	:MONItor:CURRent:CONDition <C,AND Sets the current monitor condition for monitor as <current, and the logical pattern as “and”.
Command	:MONItor[1]:CURRent:CONDition?
Function	Queries the current monitor condition for monitor.
<hr/>	
Example	:MONItor:CURRent:CONDition? Queries the current monitor condition for monitor. Returns to the current monitor condition and logical pattern.
Command	:MONItor[1]:CURRent[:VALue]{<value> MINImum MAXimum}
Function	Queries the current monitor value for monitor.
Description	<value> The range available is from 0 to the maximum current value.
<hr/>	
Example	:MONItor:CURRent 2 Sets current monitor value for monitor as 2A.
Command	:MONItor[1]:CURRent[:VALue]?
Function	Queries the current monitor value for current monitor.
<hr/>	
Example	:MONItor:CURRent? Queries the current monitor value for current monitor. Returns to the current monitor value of current monitor.
Command	:MONItor[1]:POWER:CONDition {<P >P =P NONE}
Function	Sets the power monitor condition for monitor.

Description {<P | >P | NONE} Sets power monitor condition as “ <P” (<power), “ >P” (>power) , “=P” (=power) or “NONE” (none-monitored power).

Example :MONItor:POWER:CONDition <P
 Sets the power monitor condition of monitor as <power>.

Command :MONItor[1]:POWER:CONDition?

Function Queries the power monitor condition of current monitor.

Example :MONItor:POWER:COND?
 Queries the power monitor condition of current monitor.

Command :MONItor[1]:POWER[:VALue]
 {<value> | MINimum | MAXimum}

Function Sets the power monitor value for monitor.

Description <value> ranges from 0 to the maximum power value.

Example :MONItor:POWER 20
 Sets the power monitor value for monitor as 20W.

Command :MONItor[1]:POWER[:VALue]?

Function Sets the power monitor value for monitor.

Example :MONItor:POWER?
 Queries the power monitor value for current monitor.

Command :MONItor[1][:STATe] {ON | OFF}

Function Enable or disable monitor.

Example	:MONItor ON Enable monitor.
Command	:MONItor[1][:STATe]?
Function	Queries whether the current monitor is On or Off.
Example	:MONItor? Queries whether the current monitor is On or Off. Returns to ON or OFF.
Command	:MONItor[1]:STOPway {OUTOFF ALARM BEEPER},{ON OFF}
Function	Sets the stop method of monitor.
Description	{OUTOFF ALARM BEEPER} Disable output by set stop method (OUTOFF), warning (ALARM) or beep (BEEPER).
Example	:MONItor:STOPway ALARM,ON Enable stop method of “warning”.
Command	:MONItor[1]:STOPway?
Function	Queries the stop method for current monitor.
Example	:MONItor:STOPway? Queries the stop method state of current monitor. Returns to the on & off state of the 3 stop methods.
Command	:MONItor[1]:VOLTage:CONDition{<V >V =V NONE},{AND OR NONE}
Function	Queries the voltage monitor condition of monitor.

Description {<V | >V | =V | NONE} Sets voltage monitor condition as “ <V” (<voltage), “ >V” (>voltage), “=V” (=voltage) or “ NONE” (none-monitored voltage).

{AND | OR | NONE} Practical monitor condition is the logical composition of voltage, current and power. “AND” (and), “OR” (or), “ NONE” (non-logical pattern) .

Example :MONItor:VOLTage:CONDition <V,AND
Sets the voltage monitor condition of monitor as “<voltage,and”.

Command :MONItor[1]:VOLTage:CONDition?

Function Queries the voltage monitor condition for the current monitor.

Example :MONItor:VOLTage:CONDition?
Queries the voltage monitor condition for the current monitor.

Command :MONItor[1]:VOLTage[:VALue]{<value> | MINimum | MAXimum}

Function Sets the voltage monitor value of monitor.

Description <value> ranges from 0 to the maximum voltage value.

Example :MONItor:VOLTage 5
Sets the voltage monitor value of monitor as 5V.

Command :MONItor[1]:VOLTage[:VALue]?

Function Queries the voltage monitor value of monitor.

Example	:MONitor:VOLTage? Queries the voltage monitor value for the current monitor.
Command	:RECOOrder[1]:PATH?
Function	Queries the save location of recorded file.
Example	:RECOOrder:PATH? Queries the save location of recorded file.
Command	:RECOOrder[1]:MEMory{0 1 2 3 4 5 6 7 8 9}
Function	Save the recorded file to the internal storage with specified saving location.
Description	{0 1 2 3 4 5 6 7 8 9} represent individually 10 saving locations of recorded file within internal storage.
Example	:RECOOrder:MEMory 5 Save the recorded file to the saving location of recorded file within the internal storage 5.
Command	:RECOOrder[1]:USB <dest>
Function	Save the recorded file to the specified location within the external storage.
Description	<dest> represents the specified location within the external storage with specific formate usb:\<name>.CSV. The length is limited within 8 characters. Filename comes with .CSV in the end of surffix, which can be omitted.

Example	:RECOOrder:USB usb:\R001.CSV Save the recorded file with specified name "R001.CSV" to the external storage. To set record period and saving location is Not permitted when recorder is enabled. Therefore, preset required saving location prior to enabling recorder. Instrument will automatically save recorded file with specified name to the specified saving location when recorder is disabled.
Command	:RECOOrder:PERIOd <value>
Function	Sets the record period of recorder.
Description	<value> ranges from 1s to 300s. Instrument samples and saves output intervals when recorder is enabled.

Example	:RECOOrder:PERIOd 5 Sets the recorded period of recorder as 5s.
Command	:RECOOrder:PERIOd?
Function	Sets the recorded period of recorder.

Example	:RECOOrder:PERIOd? Queries the recorded period for the current recorder. Returns to integer between 1 to 300.
Command	:RECOOrder [:STATe] {ON OFF}

Function	<p>Enable or disable recorder.</p> <p>When recorder is enabled, it is Not allowed to set record period and saving location and instrument will sample and save output based on the interval of currently set recorded period.</p> <p>During recording, please ensure that the output of the channel is turned on. If the output is not turned on, the corresponding recording data will be all zero. When recorder is disabled, recording process terminates and instrument will automatically save recorded file to the currently set saving location.</p>
Example	<p>:RECOOrder ON</p> <p>Enable recorder.</p>
Command	:RECOOrder [:STATe]?
Function	Queries the current recorder state.
Return	<p>ON: Recorder is Enable.</p> <p>OFF: Recorder is Disable.</p>
Example	<p>:RECOOrder?</p> <p>Queries the state of recorder. Returns to ON or OFF.</p>
Command	:RECOOrder:GROUPs <value>
Function	Sets the group number of recorder.
Example	<p>:RECOOrder:GROUPs 100</p> <p>Sets the group number as 100 for recorder.</p>
Command	:RECOOrder[1]:GROUPs?
Function	Queries the group number of recorder.

Example	:RECOOrder:GROUPs? Returns the group number of recorder.
Command	:RECOOrder[1]:ENABLE {ON OFF}
Function	Sets the channel recorder ON or OFF.
Example	:RECOOrder:ENABLE ON Enables recorder.
Command	:RECOOrder[1]:ENABLE?
Function	Queries the state of channel recorder.
Return	ON: Recorder is Enable. OFF: Recorder is Disable.
Example	:RECOOrder:ENABLE? Returns the state of recorder, ON or OFF.
Command	:SEQUence[1]:CYCLEs {N I}[,<value>]
Function	Sets the cycle number of sequence.
Description	{N I} Sets cycle number as infinite (I) or specified value (N, <value>).
Example	:SEQUence:CYCLEs N,20 Sets the cycle number of sequence as 20.
Command	:SEQUence[1]:CYCLEs?
Function	Queries the cycle number of the sequence.
Example	:SEQUence:CYCLEs? Queries the cycle number of the sequence, Returns to I or N, <value>.

Command	:SEQUence[1]:ENDState {OFF LAST}
Function	Sets terminate state of sequence.
Description	{OFF LAST} Output disabled (OFF): instrument automatically disable output when output is complete. The last group (LAST): instrument stays at the output state of the last group when output is complete.
Example	:SEQUence:ENDState LAST Sets the terminate state of sequence as “the last group”.
Command	:SEQUence[1]:ENDState?
Function	Queries the terminate state of the sequence. See previous instruction.
Example	:SEQUence:ENDState? Queries the terminate state of the sequence. Returns to OFF or LAST.
Command	:SEQUence[1]:GROUPs <value>
Function	Sets the output group number of sequence.
Description	<value> the definition of output group number is that the default voltage/current group number of power output from each cycle ranges from 1 to 2048. All group number of sequence = output group number*cycle number. Power will terminate timer function after completing outputs of all group numbers.
Example	:SEQUence:GROUPs 25 Sets the output group number of sequence as 25.
Command	:SEQUence[1]:GROUPs?
Function	Queries the output group number of the sequence.

Example	:SEQUence:GROUPs? Queries the output group number of the sequence. Returns to an integer between 1 to 2048.
Command	:SEQUence[1]:PARAMeter<No>,<volt>,<curr>,<time>
Function	Sets the parameter of the specified group.
Description	< No > is the serial number of sequence parameter of the specified group, integer, 0 to 2047. <volt> is the voltage of sequence parameter of the group. Unit is V, number, voltage range of the active channel. <curr> is the current of sequence parameter of the group. Unit is A, number, current range. <time> is the time of sequence parameter of the group. Unit is s, number, 1s to 300s.
Example	:SEQUence:PARAMeter 1,8,1,10 Sets the sequence parameter of the 1st group as 8V,1A,10s.
Command	:SEQUence[1]:PARAMeter? <No>,< count>

Function	<p>Queries the specified several groups of sequence parameter.</p> <p>Returns to a string initiating from #. Data head is to describe data length information starting from #. For example, ##900000037, the later 9 digits (00000037) following the initial 9 indicate length of data flow (37 bytes).</p> <p>The format of sequence parameter of each group is "serial number, voltage, current, timer time", and parameter of each group is divided by semicolon";". For example: 1,8.000,1.0000,10;2,6.000,1.0000,10; represents sequence parameters for 2 groups; the serial number of sequence parameter for 1st group is 1with voltage 8.000V, current 1.0000A and timer time 10s. The serial number of sequence parameter for 2nd group is 2with voltage 6.000V, current 1.0000A and timer time 10s.</p>
Description	<p><No>: The serial number 0 ~ 2047 of the first group within the several sequence output parameters that are in need of query.</p> <p><count> is group number of sequence parameter in need of query. Integer, 1 to 2048.</p>
Example	<p>:SEQUence:PARAMeter? 1,2</p> <p>Queries 2 groups' sequence parameters from the 1st group.</p>
Command	<p>:SEQUence[1]:REStart</p>
Function	<p>Start output with the first sequence.</p>
Example	<p>:SEQUence: REStart</p> <p>Sets the output with the first sequence.</p>
Command	<p>:SEQUence[1]:StARt <value></p>

Function	Sets the sequence number for initial execution. <value>: Integer 0 - 2047
Example	:SEQUence:STARt 10 Sets the sequence output to start from the group 11th.
Command	:SEQUence[1]:STARt?
Function	Queries the sequence number for initial execution of the channel sequence output.
Example	:SEQUence:STARt? Returns the initial sequence number of sequence output.
Command	:SEQUence[1][:STATe] {ON OFF}
Function	Enable or disable sequence function. To enable sequence will change state of channel output, make sure the changed output state will Not impact the device connected with power before enabling. Sequence output is activated only when both sequence and channel output are enabled. To modify parameter is Not available when sequence is being enabled. It is Not allowed to enable sequence and delay simultaneously.
Example	:SEQUence:STATe ON Enable sequence output.
Command	:SEQUence[1] [:STATe]?
Function	Queries the state of sequence output . See previous instruction.
Example	:SEQUence:STATe? Queries the state of sequence output. Returns to ON or OFF.

Command	:SEQUence[1]:TEMPlet:CONSTRUCT
Function	Sends the command. Instrument builds, based on the actively selected templet and set the sequence parameter.
Example	:SEQUence:TEMPlet:CONSTRUCT Set build sequence output according to the selected template and set parameters..
Command	:SEQUence[1]:TEMPlet:FALLRate <value>
Function	Sets the falling degree of ExpFall.
Description	<value> Integer from 0 to 10.
Example	:SEQUence:TEMPlet:FALLR 5 Sets the falling degree of ExpFall as 5.
Command	:SEQUence[1]:TEMPlet:FALLRate?
Function	Queries the falling degree of the active ExpFall.
Example	:SEQUence:TEMPlet:FALLRate? Queries the falling degree of the active ExpFall. Returns to an integer ranging from 0 to 10.
Command	:SEQUence[1]:TEMPlet:INTERval <value>
Function	Sets the time interval.
Description	<value> integer 1s to 300s. Time interval is the duration period in accord with each time parameter of the active selected templet.
Example	:SEQUence:TEMPlet:INTERval 15 Sets the time interval as 15s. Pulse templet does Not support this parameter.

Command	:SEQUence[1]:TEMPlet:INTERval?
Function	Queries the active time interval.
Example	:SEQUence:TEMPlet:INTERval? Queries the active time interval. Returns to an integer between 1 to 300.
Command	:SEQUence[1]:TEMPlet:INVErt {ON OFF}
Function	Enable or disable invert function of the active selected templet.
Description	When enabling the invert function, invert the target waveform in instrument first, and build timer parameter. Invert function is available for Sine, Pulse and Ramp templets only.
Example	:SEQUence:TEMPlet:INVErt ON Enable the invert function of active selected templet.
Command	:SEQUence[1]:TEMPlet:INVErt?
Function	Queries whether the invert function under the active selected templet is enabled.
Example	:SEQUence:TEMPlet:INVErt? Returns to the templet to check if the invert function is ON or OFF.
Command	:SEQUence[1]:TEMPlet:MAXValue{<value> MINimum MAXimum}
Function	Sets the maximum voltage or current value of the active selected templet.

Description When voltage is the object to edit, it is the maximum voltage to be set. When current is the object to edit, it is the maximum current to be set. When templet type is Pulse, the command is to set low level value.

Example :SEQUence:TEMPlet:MAXValue 5
Sets the maximum voltage of the active selected templet as 5V.

Command :SEQUence[1]:TEMPlet:MAXValue?

Function Queries the maximum voltage or current value of the active selected templet.

Example :SEQUence:TEMPlet:MAXValue?
Queries the maximum voltage or current value of the active selected templet.

Command :SEQUence[1]:TEMPlet:MINValue{<value> | MINimum | MAXimum}

Function Sets the minimum voltage or current value of the active selected templet.

Description When voltage is the object to edit, it is the minimum voltage to be set. When current is the object to edit, it is the minimum current to be set. When templet type is Pulse, the command is to set high level value.

Example :SEQUence:TEMPlet:MINValue 0.5
Sets the minimum voltage of the active selected templet as 0.5V.

Command :SEQUence[1]:TEMPlet:MINValue?

Function Queries the minimum voltage or current value of the active selected templet.

Example	:SEQUence:TEMPlet:MINValue? Returns to the minimum voltage or current value of the active selected templet.
Command	:SEQUence[1]:TEMPlet:OBject {V C}
Function	Selects the object to be edited by the active templet.
Description	V C : Selects the object to be edited as voltage V or current C.

Example	:SEQUence:TEMPlet:OBject V Sets the voltage to be edited.
Command	:SEQUence[1]:TEMPlet:OBject?
Function	Queries the object being edited of the active selected templet.

Example	:SEQUence:TEMPlet:OBject? Returns to the object being edited of the actively selected templet.
Command	:SEQUence[1]:TEMPlet:POINTs <value>
Function	Sets the overall points (adopts the group numbers of sequence parameter constructed by the actively selected templet, which Pulse type does Not support).
Description	<value> The overall points range from 10 to 2048.

Example	:SEQUence:TEMPlet:POINTs 10 Sets the overall points as 10.
Command	:SEQUence[1]:TEMPlet:POINTs?
Function	Queries the actively set overall points.

Example	:SEQUence:TEMPlet:POINTs? Returns the actively set overall points.
---------	---

Command	:SEQUence[1]:TEMPlet:RISERate <value>
Function	Sets the rising degree of ExpRise.
Description	<value> Ranges from 0 to 10.
Example	:SEQUence:TEMPlet:RISERate 10 Sets the rising degree of ExpRise as 10.
Command	:SEQUence[1]:TEMPlet:RISERate?
Function	Queries the rising degree of the actively set ExpRise.
Example	:SEQUence:TEMPlet:RISERate? Returns the rising degree of the actively set ExpRise.
Command	:SEQUence[1]:TEMPlet:SELEct {SINE PULSE RAMP UP DN UPDN RISE FALL}
Function	Selects templet type.
Description	SINE PULSE RAMP UP DN UPDN RISE FALL
Example	:SEQUence:TEMPlet:SELEct SINE Sets the selected templet type as SINE.
Command	:SEQUence[1]:TEMPlet:SELEct?
Function	Queries the actively selected templet type.
Example	:SEQUence:TEMPlet:SELEct? Returns the actively selected templet type .
Command	:SEQUence[1]:TEMPlet:SYMMetry <value>
Function	Sets the symmetry of RAMP.
Description	<value> Ranges from 0 to 100.

Example	:SEQUence:TEMPlet:SYMMetry 50 Sets the symmetry of RAMP as 50%.
Command	:SEQUence[1]:TEMPlet:SYMMetry?
Function	Queries the symmetry of the actively set RAMP.
Example	:SEQUence:TEMPlet:SYMMetry? Returns the symmetry of the actively set RAMP.
Command	:SEQUence[1]:TEMPlet:WIDTh <value>
Function	Sets the pulse width of Pulse.
Description	<value> The available setting range, which is from 1 to (Points-1), is relevant to the actively set period.
Example	:SEQUence:TEMPlet:WIDTh 5 Sets the pulse width of Pulse as 5s.
Command	:SEQUence[1]:TEMPlet:WIDTh?
Function	Queries the pulse width of the actively set Pulse.
Example	:SEQUence:TEMPlet:WIDTh? Returns the pulse width of the actively set Pulse.
Command	:SEQUence[1]:TEMPlet:STARt <value>
Function	Sets the sequential number of channel sequence output templet to strat execution.
Example	:SEQUence:TEMPlet:STARt 100 Sets the initial number of sequence output templet as 100.
Command	:SEQUence[1]:TEMPlet:STARt?
Function	Queries the sequential number of channel sequence output to strat execution.

Example	:SEQUence:TEMPlet:START? Returns to the initial number of sequence output templet.
Command	:SEQUence[1]:MEMory:SAVE {0 1 2 3 4 5 6 7 8 9}
Function	Saves the channel sequence output file to the designated location of internal storage. {0 1 2 3 4 5 6 7 8 9} represent the storage locations of 10 files within the internal storage individually.
Example	:SEQUence:MEMory:SAVE 1 Saves the sequence output file to the SEQUENCE01 location of internal storage.
Command	:SEQUence[1]:MEMory:LOAD {0 1 2 3 4 5 6 7 8 9}
Function	Recalls the channel sequence output file saved in the designated location from internal storage. {0 1 2 3 4 5 6 7 8 9} represent the storage locations of 10 files within the internal storage individually.
Example	:SEQUence:MEMory:LOAD 1 Recalls the sequence output file of SEQUENCE01 saved in the internal storage.
Command	:SEQUence[1]:USB:SAVE <dest>

Function Saves the channel sequence output file to the designated location of external storage. <dest> indicates the designated location of external storage with file format in either usb:\<name>.CSV or usb:\<name>.SEQ. The file name spans up to the max. 8 alphanumeric characters. .CSV/.SEQ represents the suffix of sequence output file name. Storage location can not be designated when sequence function is enabled.

Example :SEQUence:USB:SAVE USB:\R001.CSV
Saves the sequence output file, by the name of "R001.CSV", to the external storage.

Command :SEQUence[1]:USB:LOAD <dest>

Function Recalls the channel sequence output file saved in the designated location from external storage. <dest> indicates the designated location of external storage.

Example :SEQUence:USB:LOAD USB:\R001.CSV
Recalls the sequence output file, R001.CSV, saved in the external storage.

Command :TRIGger:IN[:ENABle]
{D0 | D1 | D2 | D3 | D4},{ON | OFF}

Function Enables or disables the trigger input function of the specified data line.

Example :TRIGger:IN D0,ON
Enabled trigger input function of the D0 data line.

Command :TRIGger:IN[:ENABle]?{D0 | D1 | D2 | D3 | D4}

Function Queries the state of the trigger input function of the specified data line.

Example	:TRIGger:IN? D0 Returns the state of the trigger input function of the D0 data line.
Command	:TRIGger:IN:RESPonse{D0 D1 D2 D3 D4},{ON OFF TOGGLE POWER CV CC CR }
Function	Sets the output response from the trigger input of the specified data line.
Description	<p>ON OFF TOGGLE POWER CV CC CR }</p> <p>Enable output (ON): when the input signal of the specified data line meets the trigger condition, enable the channel output</p> <p>Disable output (OFF): when the input signal of the specified data line meets the trigger condition, disable the channel output.</p> <p>Output Invert mode (TOGGLE): when input signal of the specified cable line meets the set triggering condition, invert the channel output.</p> <p>Output Power mode (POWER): when input signal of the specified cable line meets the set triggering condition, set the channel in the power mode.</p> <p>Output Load CV mode (CV): when input signal of the specified cable line meets the set triggering condition, set the channel in the load CV mode.</p> <p>Output Load CC mode (CC): when input signal of the specified cable line meets the set triggering condition, set the channel in the load CC mode.</p> <p>Output Load CR mode (CR): when input signal of the specified cable line meets the set triggering condition, set the channel in the load CR mode.</p>

Example	:TRIGger:IN:RESPonse D0,ON Sets the output response from the trigger input of the D0 data line as ON.
---------	--

Command	:TRIGger:IN:RESPonse? {D0 D1 D2 D3 D4}
Function	Queries the output response from the trigger input of the specified data line.
<hr/>	
Example	:TRIGger:IN:RESPonse? D0 Returns the output response of the trigger input of the queried D0 data line.
Command	:TRIGger:IN:SENSitivity {D0 D1 D2 D3 D4},{LOW MID HIGH}
Function	Sets the trigger sensitivity from the trigger input of the specified data line.
Description	LOW MID HIGH Selecting lower level in trigger sensitivity will avoid false press in noisy environment.
<hr/>	
Example	:TRIGger:IN:SENSitivity D0,LOW Sets the trigger sensitivity from the trigger input of D0 data line as LOW.
Command	:TRIGger:IN:SENSitivity? {D0 D1 D2 D3 D4}
Function	Queries the trigger sensitivity from the trigger input of the specified data line.
<hr/>	
Example	:TRIGger:IN:SENSitivity? D0 Returns the trigger sensitivity from the trigger input of D0 data line.
Command	:TRIGger:IN:SOURce {D0 D1 D2 D3 D4} , {CH1},{ON OFF}
Function	Sets the controlled channel from the trigger input of the specified data line.
<hr/>	
Example	:TRIGger:IN:SOURce D0,CH1,ON Sets the controlled channel from the trigger input of D0 data line as CH1.

Command	:TRIGger:IN:SOURce?{D0 D1 D2 D3 D4}
Function	Queries the trigger input of the specified data line.
Example	:TRIGger:IN:SOURce? D0 Returns the the trigger input of D0 data line.
Command	:TRIGger:IN:TYPE {D0 D1 D2 D3 D4},{RISE FALL HIGH LOW STATE }
Function	Sets the trigger type from the trigger input of the specified data line.
Description	RISE FALL HIGH LOW STATE It is available to trigger from the following options of signal input: rising edge (RISE), falling edge (FALL), high level (HIGH), low level (LOW) or STATE. For the signal input, high level: 2.5V~3.3V, low level: 0V~0.8V, noise tolerance: 0.4V.
Example	:TRIGger:IN:TYPE D0,RISE Sets the trigger type from the trigger input of D0 data line as RISE.
Command	:TRIGger:IN:TYPE?{D0 D1 D2 D3 D4}
Function	Queries the trigger type from the trigger input of the specified data line.
Example	:TRIGger:IN:TYPE? D0 Returns the trigger type from the trigger input of D0 data line.
Command	:TRIGger:OUT:CONDition {D0 D1 D2 D3 D4},{OUTOFF OUTON >V <V =V >C <C =C >P <P =P AUTO},<value>

Function	Sets the trigger condition from the trigger output of the specified data line.
Description	<p>OUTOFF OUTON >V <V =V >C <C =C >P <P =P AUTO</p> <p>When OUTOFF, OUTON or AUTO is selected, parameter <value> will be omitted.</p> <p>Input trigger: disable output(OUTOFF) and enable output (OUTON), both of which indicate to disable or enable respectively the trigger when the specified controlled channel output.</p> <p>Voltage trigger: greater than voltage (>V) , less than voltage (<V) , equal to voltage (=V) , all of which indicate that when the output voltage of the specified controlled channel meets the set trigger condition, it will trigger then.</p> <p>Current trigger: greater than current (>C) , less than current (<C) , equal to current (=C) , all of which indicate that when the output current of the specified controlled channel meets the set trigger condition, it will trigger then.</p> <p>Power trigger: greater than power (>P) , less than power (<P) , equal to power (=P) , all of which indicate that when the output power of the specified controlled channel meets the set trigger condition, it will trigger then.</p> <p>Automatic trigger: triggers automatically only when voltage, current or power triggers meet at least one condition.</p> <p>When either one of the following modes: voltage trigger (>V、<V、=V) , current trigger (>C、<C、=C) , power trigger >P、<P、=P) is selected, it required to set parameter <value> (the specified voltage, current or power value of the trigger condition).</p>

Example	:TRIGger:OUT:CONDition D0,>V,10 Sets the trigger condition from the trigger output of D0 data line as output voltage>10V.
Command	:TRIGger:OUT:CONDition? {D0 D1 D2 D3 D4}
Function	Queries the trigger condition from the trigger output of the specified data line.
Example	:TRIGger:OUT:CONDition? D0 Returns the trigger condition from the trigger output of D0 data line.
Command	:TRIGger:OUT[:ENABLE] {D0 D1 D2 D3 D4},{ON OFF}
Function	Enables or disables the trigger output function of the specified data line.
Description	After enabling trigger output function, the specified data line will, when the output signal of the specified controlled channel meets the set trigger condition, output the specified level or square wave based on the setting of output signal.
Example	:TRIGger:OUT D0,ON Enables the trigger output function of D0 data line.
Command	:TRIGger:OUT[:ENABLE]?{D0 D1 D2 D3 D4}
Function	Queries the state of the trigger output function of the specified data line.
Example	:TRIGger:OUT? D0 Returns the state of the trigger output function of D0 data line.
Command	:TRIGger:OUT:POLARity {D0 D1 D2 D3 D4},{POSitive NEGAtive}

Function	Sets the polarity of the output signal from the trigger output of the specified data line.
Description	<p>POSITIVE NEGATIVE</p> <p>Positive polarity (POSITIVE): when trigger condition is met, it will output the actively specified output signal.</p> <p>Negative polarity (NEGATIVE) when trigger condition is met, it will invert and then output the actively specified output signal.</p>
Example	<p>:TRIGGER:OUT:POLARITY D0,POSITIVE</p> <p>Sets the polarity of the output signal from the trigger input of D0 data line as POSITIVE.</p>
Command	:TRIGGER:OUT:POLARITY? {D0 D1 D2 D3 D4}
Function	Queries the polarity of the output signal from the trigger input of the specified data line.
Example	<p>:TRIGGER:OUT:POLARITY? D0</p> <p>Returns the polarity of the output signal from the trigger input of D0 data line.</p>
Command	:TRIGGER:OUT:SOURCE {D0 D1 D2 D3 D4},{CH1}
Function	Sets the controlled channel from the trigger output of the specified data line.
Example	<p>:TRIGGER:OUT:SOURCE D0,CH1</p> <p>Sets the controlled channel from the trigger output of D0 data line as CH1.</p>
Command	:TRIGGER:OUT:SOURCE?{D0 D1 D2 D3 D4}
Function	Queries the controlled channel (channel) from the trigger output of the specified data line.

Example :TRIGger:OUT:SOURce? D0
Returns the channel from the trigger output of D0 data line.

Command :TRIGger:OUT:STATe [D0 | D1 | D2 | D3 | D4,]
{ON | OFF}

Function Set the data line trigger output state on or off.

Example :TRIGger:OUT:STATe D0,ON
Set the data line D0 trigger output state on.

Command :TRIGger:OUT:STATe? [D0 | D1 | D2 | D3 | D4]

Function Query trigger output status of data line.

Example :TRIGger:OUT:STATe? D0
Query trigger output status of data line D0.

Status Commands

Command STATus?

Function Returns the Status .

Return parameter 8 bytes in the following format

Byte	Item	Description
0	CH1	0=CC mode, 1=CV mode.
1	---	
2, 3	---	
4	Beep	0=Off, 1=On.
5	Output	0=Off, 1=On.
6, 7	Baud	00=115200bps, 01=57600bps, 10=9600bps.

Note Except for the bauds above, bytes 6 and 7 are 11 in other states (19200bps, 38400bps, LAN, GPIB).

Example STATus?

Command :STATus:PRESet

Function Clears the operation event enable registers, the measurement event enable registers and the questionable event register, The unit will then return to the default settings status.

Example :STATus:PRESet

Command :STATus:OPERation[:EVENT]?

Function Read the operation event register.

Example :STATus:OPERation?

Reads the operation event register.

Command :STATus:OPERation:CONDition?

Function Read the operation condition status register.

Example :STATus:OPERation:CONDition?

Read the contents of the operation condition status register.

Command :STATus:OPERation:ENABLE <NRf>

Function Programs the operation enable status register.

Description <NRf> 8: CL (Current enable bit).
 16: CLT (Current limit tripped enable bit).
 64: PSS (Power supply shutdown enable bit).

Example :STATus:OPERation:ENABLE 64

Enable the power supply shutdown bit.

Command :STATus:OPERation:ENABLE?

Function Read the operation enable status register.

Example	:STATus:OPERation:ENABLE?
	Read the contents of the operation enable status register.
Command	:STATus:MEASurement[:EVENT]?
Function	Reads the measurement event status register.
Example	:STATus:MEASurement?
	Reads the contents of the measurement event status register.
Command	:STATus:MEASurement:ENABLE <NRf>
Function	Program the measurement enable status register.
Description	<NRf> 8: ROF (reading overflow enable bit). 16: PTT (pulse trigger timeout enable bit). 32: RAV (Reading available enable bit). 512: Buffer full enable bit. The register is 16 bits. If <value> is between 512 and 1,023, it is certainly valid. If <value> is between 1,024 and 65,535, ensure Cal (bit8) is a valid value for it to work.
Example	:STATus:MEASurement:ENABLE 8
	Enables the ROF bit.

Command	:STATus:MEASurement:ENABLE?
Function	Read the measurement enable status register.
Example	:STATus:MEASurement:ENABLE? Read the contents of the measurement enable status register.
Command	:STATus:MEASurement:CONDition?
Function	Read the measurement condition status register.
Example	:STATus:MEASurement:CONDition? Read the contents of the measurement condition status register.
Command	:STATus:QUEStionable[:EVENT]?
Function	Read the questionable event status register.
Example	:STATus:QUEStionable? Read the questionable event status register.
Command	:STATus:QUEStionable:CONDition?
Function	Read the questionable condition status register.
Example	:STATus:QUEStionable:CONDition? Read the questionable condition status register.
Command	:STATus:QUEStionable:ENABle <NRf>
Function	Programs the questionable enable status register.
Description	<NRf> 256: CAL (Calibration summary enable bit). Register is 16 bits. If <value> is between 256 and 511, it is certainly valid. If <value> is between 512 and 65,535, ensure Cal (bit8) is a valid value.

Example	:STATus:QUESTionable:ENABle 256 Sets the CAL bit.
Command	:STATus:QUESTionable:ENABle?
Function	Read the questionable enable status register.

Example	:STATus:QUESTionable:ENABle? Read the contents of the questionable enable status register.
Command	:STATus:QUEue[:NEXT]?
Function	Read the next message in the error queue.

Example	:STATus:QUEue? Read the next error message.
Command	:STATus:QUEue:ENABle <list>
Function	Specifies which error and status messages get enabled for the error queue.
Description	<list> (-440:+900): Full range error messages. (-110): Single error message. (-110:-222): A specific range of error messages. (-110:-222, -220): A specific range of error messages and a single error message (separated by a comma).

Example	:STATus:QUEue:ENABle (-110:-222) Enables error messages that are between error message -100 and -222.
---------	--

Command	:STATus:QUEue:ENABle?
Function	Read the error and status messages that have been enabled.
Example	:STATus:QUEue:ENABle? Returns the contents of the enabled error and status messages.
Command	:STATus:QUEue:DISAble <list>
Function	Specifies which messages will not be placed in the error queue.
Description	<list> (-440:+900): Full range error messages. (-110): Single error message. (-110:-222): A specific range of error messages. (-110:-222, -220): A specific range of error messages and a single error message (separated by a comma).
Example	:STATus:QUEue:DISAble (-110:-222) The error messages in the range of -110 to -222 will not appear in the error queue.
Command	:STATus:QUEue:DISAble?
Function	Reads the disabled messages.
Example	:STATus:QUEue:DISAble? Returns the disabled messages.
Command	:STATus:QUEue:CLear
Function	Empty all the messages from the error queue.

Example

:STATus:QUEue:CLEar

Empty all the messages from the error queue.

System Commands

Command :SYSTem:VERSion?

Function Query the SCPI version.

Example :SYSTem:VERSion?

Query the SCPI version.

Command :SYSTem:ERRor?

Function Read and clear the last error and from the error queue.

Example :SYSTem:ERRor?

Read and clear the last error and from the error queue.

Command ERR?

Function Checks the error status and returns the last error message.

Message contents ^o	Descriptions ^o
a ^o Program mnemonic too long ^o	The command length must be 15 characters or less. ^o
b ^o Invalid character ^o	Invalid characters, such as symbols, are entered. Example: VOUT# ^o
c ^o Missing parameter ^o	The parameter is missing from the command. Example: VSET: (should have a number) ^o
d ^o Data out of range ^o	The entered value exceeds the specification. Example: VSET:33 (should be $\leq 32V$) ^o
e ^o Command not allowed ^o	The entered command is not allowed in the circumstance. Example: trying to set CH2 output while in the tracking mode. ^o
f ^o Undefined header ^o	The entered command does not exist, or the syntax is wrong. ^o

Command	:SYSTem:CLEar
Function	Clear the error messages.
Example	:SYSTem:CLEar Clears the error queue.
Command	:SYSTem:POSetup <name>
Function	Set the power on configuration.
Description	<name> RST: Machine default settings. Last: Machine last settings.
Example	:SYSTem:POSetup RST Set the power on configuration to RST.
Command	:SYSTem:POSetup?
Function	Query the power on configuration.
Example	:SYSTem:POSetup? Query the power on configuration.
Command	:SYSTem:COMMunicate:LAN:DHCP[:STATe]
Function	Sets the DHCP state on or off.
Description	 0/OFF: DHCP off 1/ON:DHCP on Note: The :SYSTem:COMMunicate:LAN:APPLY command must be executed before the DHCP settings can take effect.
Example	:SYSTem:COMMunicate:LAN:DHCP ON Enable DHCP.
Command	:SYSTem:COMMunicate:LAN:DHCP[:STATe]?

Function	Query the DHCP status.
Example	:SYSTem:COMMunicate:LAN:DHCP? Query the DHCP state.
Command	:SYSTem:COMMunicate:LAN:IPADdress <IPaddress>
Function	Sets the IP address.
Description	<IP address> ASCII string, within the range of 1.0.0.0 to 223.255.255.255 (excluding 127.nnn.nnn.nnn). Note: This command is only applicable if for the manual IP mode. The SYSTem:COMMunicate:LAN:APPLY command needs to executed before the IP address settings can take effect.
Example	:SYSTem:COMMunicate:LAN:IPADdress 172.131.161.152 Sets the IP address to 172.131.161.152.
Command	:SYSTem:COMMunicate:LAN:IPADdress?
Function	Queries the IP address.
Example	:SYSTem:COMMunicate:LAN:IPADdress? Queries the IP address.
Command	:SYSTem:COMMunicate:LAN:SMASK <mask>
Function	Sets the subnet mask.
Description	<mask> ASCII string, within the range of 1.0.0.0 to 255.255.255.255. The SYSTem:COMMunicate:LAN:APPLY command needs to be executed before the subnet mask setting can take effect.

Example	:SYSTem:COMM:LAN:SMAS 255.255.255.0 Sets the subnet mask to 255.255.255.0.
Command	:SYSTem:COMMunicate:LAN:SMASK?
Function	Query the subnet mask.

Example	:SYSTem:COMMunicate:LAN:SMASK? Query the subnet mask.
Command	:SYSTem:COMMunicate:LAN:GATEway <IPaddress>
Function	Sets the gateway IP address.
Description	<IP address> ASCII string, within the range of 1.0.0.0 to 223.255.255.255 (excluding 127.nnn.nnn.nnn). The SYSTem:COMMunicate:LAN:APPLY command needs to be executed before the gateway IP address setting can take effect.

Example	:SYSTem:COMMunicate:LAN:GATEway 172.16.3.1 Sets the gateway IP to 172.16.3.1.
Command	:SYSTem:COMMunicate:LAN:GATEway?
Function	Queries the gateway IP.

Example	:SYSTem:COMMunicate:LAN:GATEway? Queries the gateway IP.
Command	:SYSTem:COMMunicate:LAN:MANualip[:STATe]
Function	Allow the IP address to be set manually. 0/OFF: disable the manual IP address. 1/ON: enable the manual IP address.

Example	:SYSTem:COMMunicate:LAN:MANualip ON Enables a manual IP address to be set.
Command	:SYSTem:COMMunicate:LAN:MANualip[:STATe]?
Function	Queries whether manual IP addressing has been enabled or disabled.
Example	:SYSTem:COMMunicate:LAN:MANualip? Queries the status of the manual IP addressing.
Command	:SYSTem:COMMunicate:LAN:APPLY
Function	When this command is executed, all the LAN settings are applied.
Example	:SYSTem:COMMunicate:LAN:APPLY Applies all the LAN settings.
Command	:SYSTem:REMote
Function	Sets the unit to remote control.
Example	:SYSTem:REMote Sets to remote control mode.
Command	REMOTE
Function	Sets the unit to remote control.
Example	REMOTE
Command	:SYSTem:BEEPer:STATe
Function	Turn the buzzer on or off. 0/OFF: Turn the buzzer off. 1/ON: Turn the buzzer on.

Example :SYSTem:BEEPer:STATe OFF
 Turns the buzzer off.

Command BEEP<Boolean>
Function Turn the buzzer on or off.
 <Boolean> 0:off, 1:on

Example BEEP1
 Turns on the beeper

Command :SYSTem:BEEPer:STATe?
Function Queries the buzzer status.

Example :SYSTem:BEEPer:STATe?
 Queries the buzzer status.

Command :SYSTem:LOCAl
Function Disable remote control mode.


Example :SYSTem:LOCAl
 Disables remote control mode.

Command LOCAL
Function Exits remote mode and sets the instrument to local
 mode.

Example LOCAL

Command :SYSTem:INTerface [USB | RS232 | GPIB | LAN]
Function Sets the interface type.

Example	:SYSTem:INTerface USB Sets the interface type to USB.
Command	:SYSTem:LANGuage [CHINese ENGLISH]
Function	Sets the syetem language.
Example	:SYSTem:LANGuage ENGLISH Sets the syetem lanuage to English.
Command	:SYSTem:LANGuage?
Function	Query the syetem lanuage.
Example	:SYSTem:LANGuage? .
Command	:SYSTem:BAUDrate:USB [9600 19200 38400 57600 115200]
Function	Sets the USB baud rate.
Example	:SYSTem:BAUDrate:USB 9600 Sets the USB baud rate to 9600.
Command	:SYSTem:BAUDrate:USB?
Function	Query the USB baud rate.
Example	:SYSTem:BAUDrate:USB?
Command	:SYSTem:BAUDrate:RS232 [9600 19200 38400 57600 115200]
Function	Sets the RS232 baud rate.
Example	:SYSTem:BAUDrate:RS232 9600 Sets the RS232 baud rate to 9600.
Command	:SYSTem:BAUDrate:RS232?

Function	Query the RS232 baud rate.
Example	:SYSTem:BAUDrate:RS232?
Command	BAUD<NR1>
Function	Sets the baud rate to 9600 / 57600 / 115200. <NR1> 0: 115200bps, 1: 57600bps, 2: 9600bps
Example	BAUD0 Sets the baud rate to 115200bps
 Note	It functions only when RS232 or USB is connected.
Command	HELP?
Function	Shows the Simple command list.

Return parameters	ISET<x>:<NR2> Sets the value of current.
	VSET<x>:<NR2> Sets the value of voltage.
	ISET<x>? Return the value of current.
	VSET<x>? Return the value of voltage.
	IOUT<x>? Returns actual output current .
	VOUT<x>? Returns actual output voltage.
	TRACK<NR1> Sets the output of the power supply working on independent or tracking mode.
	BAUD< NR1 >Set the value of baud rate.
	RCL<NR1> Recall the setting data from the memory which previous saved.
	SAV<NR1> Saves the setting data to memory.
	BEEP<Boolean> Sets the BEEP state on or off.
	OUT<Boolean> Sets the output state on or off.
	LOCAL Return to local mode.
	REMOTE Return to remote mode.
	*IDN? Returns instrument identification.
	ERR? Returns instrument error messages.
	STATUS? Returns the power supply state.

System Related Commands

Command	*IDN?
Function	Read the instrument identification <string>.
Description	<string> The return string contains four fields, each separated by a comma. The first field is the manufacturer, followed by the model name, serial number and the version number.

Example	*IDN? Returns the GPP identification: GW INSTEK,GPP-3610H,XXXXXXXXXX,V1.00 GW INSTEK: Manufacturer, GPP-3610H: Model name, XXXXXXXXXX: Serial number, V1.00: version number.
---------	--

Command	*RST
Function	Resets the unit to RST default conditions.

Example	*RST Resets the unit.
---------	--------------------------

Command	*SAV <NRf>
Function	Save the current setup to the selected save location.
Description	<NRf>: 0 - 9, Corresponding to STATE00-STATE09.


Example	*SAV 1 Stores the setting in memory 1(STATE01).
---------	--

Command	SAV<NR1>
---------	----------

Function	Save the current setup to the selected save location.
Description	<NR1> : 0-9, Corresponding to STATE00-STATE09.
	SAV1
	Stores the setting in memory 1(STATE01).
Command	*RCL <NRf>
Function	Recall the selected save setting from memory.
Description	<NRf>: 0 - 9 , Corresponding to STATE00-STATE09.
Example	*RCL 2
	Recalls the setting stored in memory 2(STATE02).
Command	RCL<NR1>
Function	Recall the selected save setting from memory.
Description	<NR1>: 0 - 9 , Corresponding to STATE00-STATE09.
Example	RCL2
	Recalls the setting stored in memory 2(STATE02).

SCPI Status Registers SCPI

The SCPI instrument configuration is controlled by the status registers. The Status system records various instrument conditions into three main register groups: The status byte register, the standard event register group and the questionable data register group. The status byte register records a high-level summary of the other register groups. The following diagram is the SCPI Status System diagram.

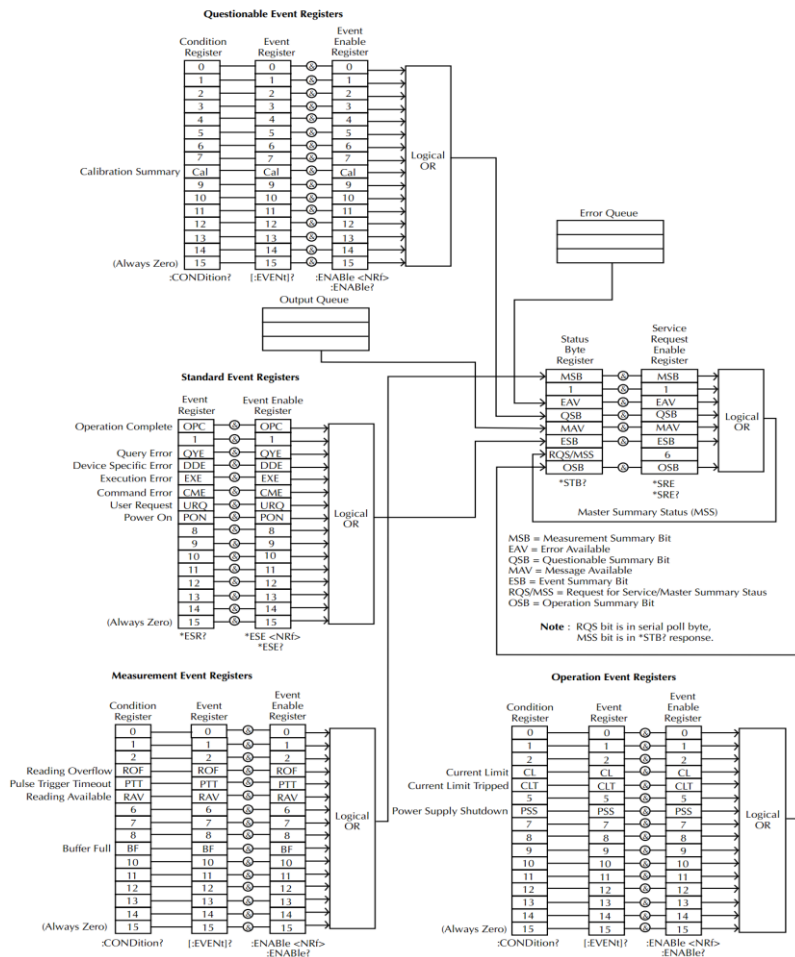

*Note: URQ indicates that the "Lock" key on the panel has been used. (Entering lock from unlock or Entering unlock from lock).

Event Registers

The operation, measurement and questionable status register groups all have event registers. The event registers are read only registers that reflect the status of the unit. Individual bits in the event registers are latched (set) when a corresponding event occurs and will remain latched even if the corresponding event changes, as long as the event bit is still set. The register query (*ESR) or the command (*CLS) will automatically clear any set bits in the event registers. The reset command (*RST) will not clear the bits in the event register. Queries for the event registers will return a binary-weighted decimal value that represents the state of all the bits in an event register.

Enable Registers

The enable registers define which bits in the corresponding event register can be latched (set). The enable register can be read and written to. Any queries for the enable register will not clear the value in the register. The *CLS command will not clear the enable register, but will clear the events in the event register. To allow the individual bits in the event registers to be set, the corresponding bits in the enable registers must be set, where each bit is represented by a binary number.

Status Byte Register

The status byte register reports the status of the other status registers. The message available bit (bit 4), will indicate when there is a message in the output buffer. Clearing an event register will clear the corresponding bit in the status byte condition register. Reading all the data in the output buffer will clear the message available bit. To set the enable register mask for the status byte register and to generate an SRQ (service request) you must use the *SRE command to write the appropriate decimal value to the register.

Bit Definition for the Status Byte Register

Bit number	Decimal value	Definition
0 Not used	1	Not used, returns "0"
1 Not used	2	Not used, returns "0"
2 Error Queue	4	Indicates that one or more errors are stored in the error queue.
3 Questionable Summary bit	8	One or more bits are set in the questionable data register (for enabled events).
4 Message Available bit	16	Indicates that a message is available in the output queue.
5 Standard Event Summary bit.	32	Indicates that one or more bits are set in the standard event register. (For enabled events).
6 Master Summary bit	64	Indicates that a summary bit is set in the status byte register. (for enabled summary bits)
7 Unused	128	Not used, returns "0"

The status byte condition register is cleared when one of the following occurs:

- *CLS command is used to clear the status byte register.
- You read the event register from another register group (only clear the corresponding bit in the condition register)

The status byte enable register is cleared when the following occurs:

- When the *SRE 0 is command is executed.

Use the *STB? query to read the status byte register.

The *STB? query will return the contents of the status byte register as long as the bit 6 (MSS) has been cleared.

Using the *OPC? query to place a signal in the output buffer.

In general it is best to use the Operation Complete Bit (bit 0) in the standard event register to check to see if an operation/command has completed. After executing the *OPC command, the OPC bit will be set to 1. If a command or query is placed in the output buffer immediately before the *OPC command is sent, the Operation Complete Bit can be used to determine when the information can be used. However if too many commands/queries are executed prior to the execution of the *OPC command, the output buffer could become saturated and the unit will stop taking readings.

Standard Event Register

The Standard Event Register reports the following types or events: Power on has been detected, command syntax errors, command execution errors, self test and execution errors, query errors or if the *OPC command is executed. Any one or more of these events will set the standard event summary bit in the status byte register. To set a mask for the enable register, a binary-weighted decimal number must be written using the *ESE command.

Bit Definition for the Standard Event Register

Bit number	Decimal value	Definition
0 Operation Complete Bit	1	The *OPC command will set this bit when all overlapping operations have completed (including the *OPC command itself).
1 Not used	2	Not used, returns 0.
2 Query Error	4	The instrument tried to read the error queue when the queue was empty or the queue was read before a new command was given or the input/output buffers are full.
3 Device Error	8	A self-test, calibration or other device-specific error.

4 Execution Error	16	An execution error.
5 Command Error	32	A command syntax error.
6 Not used	64	Not used, return 0.
7 Power On	128	This bit is set if the power supply has been reset from the last time you read the event register.

The following will clear the standard event register:

- The *CLS command is executed.
- The *ESR? command is used to query the event register.

The following will clear the standard event enable register.

- The *ESE command is executed.

Status Byte Register Commands

Command *SRE <Allowed values>

Function Service request enable register (SRER) command that writes a binary weighed value which determines which events in the status byte register are enabled.

Function Allowed Decimal vales: 0~255 values

Example *SRE 7
Returns the SRER setting (0000 0111)

Command *SRE?

Function Queries the status byte enable register. This command returns a binary-weighted decimal number that indicates which bits are set in the status byte register. The range is from 0~255.

Example	*SRE?
	Returns "7", which are the contents of the service request enable register.

Command	*STB?
Function	Query the status byte register. This is the same as performing a serial poll, however the master summary bit (MSS, bit 6) will not be cleared by the *STB command. The return value range is from 0 to 255.

Example	*STB?
	Returns 81 if the status byte register is set to 0101 0001.

Standard Event Register Commands

Command	*ESE<Allowed Values>
Function	Sets the standard event enable register. The allowable value range is 0~255.

Example	*ESE 65
	Sets the ESER as 0100 0001.

Command	*ESE?
Function	Queries the standard event enable register. It returns a binary-weighted decimal value representing all the enabled bits in the standard event register.

Example	*ESE?
	Returns 65, as the ESER is set as 0100 0001.

Command	*ESR?
---------	-------

Function Queries the standard event register. It returns a binary-weighted decimal value in the range of 0~255.

Example *ESR?
It returns 65, as the ESER is set as 0100 0001.

Other Status Register Commands


Command	*CLS
Function	Clears the status byte summary registers and the all event registers.
Example	*CLS Clears all the event registers, which include Standard event registers, Operation event registers, Measurement event registers, Questionable event registers.
Command	*OPC
Function	After all the pending operations are complete, sets the operation complete bit in the standard event status register.
Example	*OPC
Command	*OPC?
Function	Will return "1" to the output queue when all pending operations have been completed.
Example	*OPC? After the last command is executed, will return a "1" to the output queue.

A PPENDIX


Replacing the Fuse

Steps

Remove the power cord and then take out the box using a small screw driver.

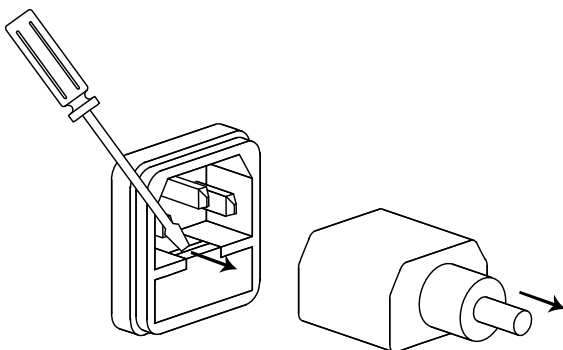

The fuse is stored in the housing.

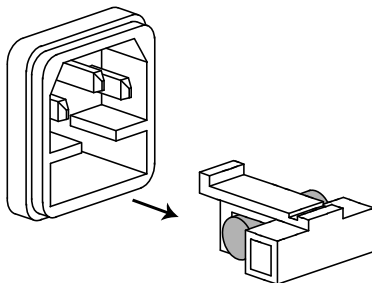

Rating

- T6.3A/250V (220V/230V)
- T12A/250V (100V/120V)

Specifications

The specifications apply under the following conditions: The GPP is powered on for at least 30 minutes, within +20°C-+30°C.

Power Mode		
Output Rating	Independent	0 - 36.000V , 0 - 10.0000A (GPP-3610H) 0 - 72.000V , 0 - 5.0000A (GPP-7250)
Voltage	Line regulation	$\leq 0.01\% + 3\text{mV}$
	Load regulation	$\leq 0.01\% + 5\text{mV}$
	Ripple & noise	$\leq 1\text{mVrms}$ (5Hz-1MHz)
	Transient recovery time	$\leq 100\mu\text{s}$ (50% load change, minimum load 0.5A)
	Temperature coefficient	$\leq 300\text{ppm}/^\circ\text{C}$
Current	Line Regulation	$\leq 0.01\% + 3\text{mA}$
	Load Regulation	$\leq 0.02\% + 3\text{mA}$
	Ripple & noise	$\leq 2\text{mArms}$
	Resolution	Voltage programming 1mV,Readback 0.1mV (GPP-3610H) programming 2mV,readback 0.1mV (GPP-7250) Current programming 0.2mA,readback 0.2mA (GPP-3610H) programming 0.1mA,readback 0.1mA (GPP-7250)
Accuracy	Ammeter	Max.10.2A(GPP-3610H), 5.2A (GPP-7250) programming 6 digits,readback 6 digits
	Voltmeter	Max.36.5V(GPP-3610H), 72.5V(GPP-7250) programming 5 digits,readback 6 digits
	Setting accuracy	Voltage: $\leq \pm (0.03\% \text{ of reading} + 20\text{mV})$ Current: $\leq \pm (0.3\% \text{ of reading} + 10\text{mA})$
	Readback accuracy	Voltage: $\leq \pm (0.03\% \text{ of reading} + 20\text{mV})$ Current: $\leq \pm (0.3\% \text{ of reading} + 10\text{mA})$

Load Mode

Display	Voltage	1-36.50V (GPP-3610H) 1-72.50V (GPP-7250)
	Current	0-10.200A (GPP-3610H) 0-5.200A (GPP-7250)
	Power	0-100.00W
	CV Mode	CH1 1.500V - 36.50V (GPP-3610H) 1.500V - 72.50V (GPP-7250)
	Setting/Readback accuracy	$\leq \pm(0.1\% + 30\text{mV})$
	Resolution	10mV
CC Mode	CH1	0 - 10.200A (GPP-3610H) 0 - 5.200A (GPP-7250)
	Setting/Readback accuracy	$\leq \pm(0.3\% + 10\text{mA})$
	Resolution	1mA
CR Mode	Setting	1 Ω - 1k Ω
	Setting/Readback accuracy	$\leq \pm(3\% + 1 \Omega)$ (voltage $\geq 0.1\text{V}$, and current $\geq 0.1\text{A}$)
	Resolution	1 Ω

Other Mode

OVP	Power mode	OFF, ON (0.5V-38.0V) (GPP-3610H) OFF, ON (0.5V-75.0V) (GPP-7250)
	Load mode	OFF, ON (1.5V-38.0V) (GPP-3610H) OFF, ON (1.5V-75.0V) (GPP-7250)
	Setting accuracy	$\leq \pm 100\text{mV}$
	Resolution	100mV
OCP	Power/Load mode	OFF, ON (0.05A-10.50A) (GPP-3610H) OFF, ON (0.05A-5.50A) (GPP-7250)
	Setting accuracy	$\leq \pm 20\text{mA}$
	Resolution	10mA
Insulation resistance	Between chassis and terminal	20M Ω or above (DC 500V)
	Between chassis and DC power cord	30M Ω or above (DC 500V)
Operation Environment	Indoor use, Altitude: $\leq 2000\text{m}$ Ambient temperature: 0 ~ 40°C Relative humidity: $\leq 80\%$ Installation category: II Pollution degree: 2	

Storage Environment	TEMPERATURE: -10°C ~ 70°C HUMIDITY: ≤ 70%
Power input consumption	AC 100V/120V/220V/230V±10%, 50/60Hz 900VA, 680W
Accessories	CD User manual x1, Quick Start manual x1, Power Code x1 Test lead: GTL-104A x1 (Europe) Test lead: GTL-204A x1, GTL-201A x1
Dimensions	213 (W) x 145 (H) x 362 (D) mm
Weight	Approx. 10kg

Optional Accessories

USB Cable	GTL-246	USB 2.0, A-B type
-----------	---------	-------------------

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the CE marking mentioned product satisfies all the technical relations application to the product within the scope of council:

Directive: EMC; LVD; WEEE; RoHS

The product is in conformity with the following standards or other normative documents:

© EMC

EN 61326-1 :	Electrical equipment for measurement, control and laboratory use — EMC requirements	
Conducted & Radiated Emission EN 55011 / EN 55032	Electrical Fast Transients EN 61000-4-4	
Current Harmonics EN 61000-3-2 / EN 61000-3-12	Surge Immunity EN 61000-4-5	
Voltage Fluctuations EN 61000-3-3 / EN 61000-3-11	Conducted Susceptibility EN 61000-4-6	
Electrostatic Discharge EN 61000-4-2	Power Frequency Magnetic Field EN 61000-4-8	
Radiated Immunity EN 61000-4-3	Voltage Dip/ Interruption EN 61000-4-11 / EN 61000-4-34	

© Safety

EN 61010-1 :	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements
--------------	--

GOOD WILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng Dist., New Taipei City 236, Taiwan

Tel: +886-2-2268-0389

Fax: +866-2-2268-0639

Web: www.gwinstek.com

Email: marketing@goodwill.com.tw

GOOD WILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: +86-512-6661-7177

Fax: +86-512-6661-7277

Web: www.instek.com.cn

Email: marketing@instek.com.cn

GOOD WILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: +31(0)40-2557790

Fax: +31(0)40-2541194

Email: sales@gw-instek.eu