

Digital Storage Oscilloscope APP

FREQUENCY RESPONSE ANALYZER



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

Jan 2018

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan

Table of Contents


| | |
|-------------------------------------|----|
| Install the Software | 4 |
| Uninstall the Software | 6 |
| Overview | 8 |
| Display Overview | 9 |
| Connections | 10 |
| Launching the FRA application | 11 |
| Setting mode | 12 |
| FRA Run | 12 |
| Setup | 13 |
| Reference Circuit | 17 |
| Quit | 17 |
| Analysis mode | 18 |
| FRA Measure | 18 |
| Scale Bode Plot | 19 |
| FRA Utility | 21 |
| Remote Control Commands | 23 |
| Specifications | 29 |

INSTALL THE SOFTWARE

Step

1. Make sure firmware version is V1.34 or higher.

2. Insert the USB memory stick with the "FRA.gz" into the USB port on the front panel.





3. Press the *Utility* key.





4. Select *File Utilities* from the bottom menu.



5. Use the *Variable* knob to select the USB memory stick and then press the *Select* button.

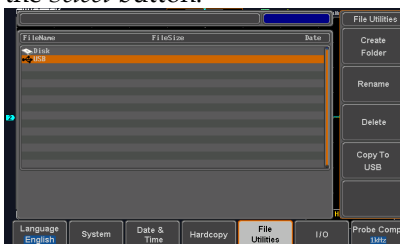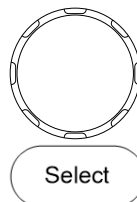

6. Use the *Variable* knob to select FRA.gz and then press the *Select* button to select it.

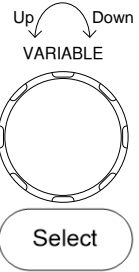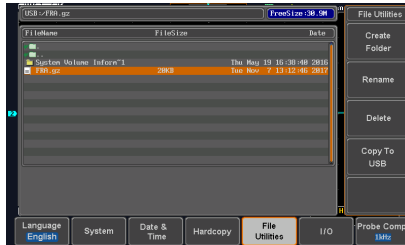

7. Press the *Select* button again to start installation.



8. The installation is complete when a message showing "Please turn off the oscilloscope and turn on again" is displayed.

UNINSTALL THE SOFTWARE

Step


1. Press the *APP* key on the front panel





2. Press the *APP.* button from the bottom menu.




3. Use the *Variable* knob to select the *FRA APP*.

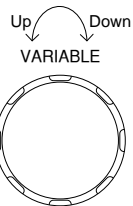

4. Press the *Uninstall* button from the side menu.

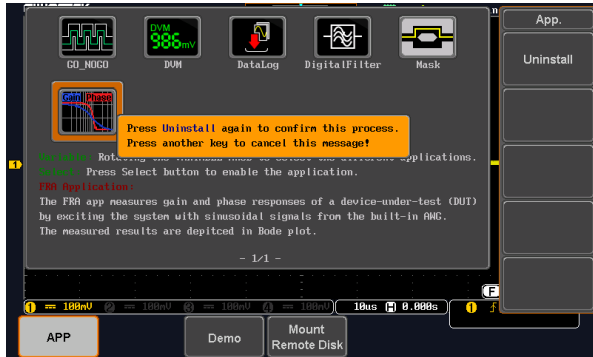

5. Press the *Uninstall* button from side menu again to start the uninstallation process.



6. Uninstallation process is complete when a message showing “Please turn off the oscilloscope and turn on again” appears.

FREQUENCY RESPONSE ANALYZER

Overview

Background The Frequency Response Analyzer (FRA) is a feature application for digital storage oscilloscope with an integrated arbitrary waveform generator. It can plot gain and phase responses at the output of a device-under-test (DUT) when its input is excited by a frequency-swept sinusoidal signal. Bode plots can be created, stored for future reference and analyzed. The FRA application uses the output of the Arbitrary Wave Generator (AWG) to generate the frequency-swept signal.

Functions Bode plots.

Stores plots for future use and analysis,


Precise analysis of the measured data in a plot with the aid of cursor measurement.




Note

Please note that this Frequency Response Analyzer function only available for oscilloscope firmware version 1.34 or later version.

Display Overview

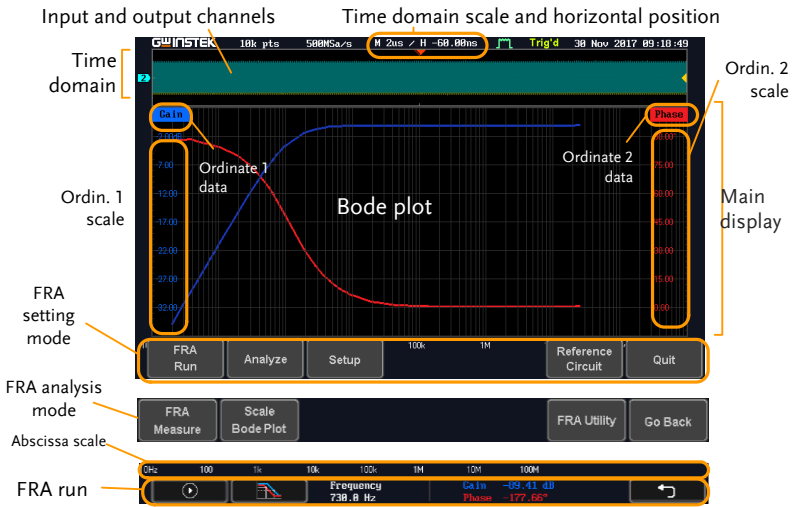

- Introduction** The FRA application is divided into two main operation modes: Setting and Analysis mode.

When in Setting mode (the  menu icon appeared), the user can setup the FRA analysis and then start it right after the FRA Run button is pressed.



- Time domain** When the FRA application is in Setting mode, the top portion of the display window shows time-domain waveforms of the input and the output channel. This window disappears when in Analysis mode.

- Main display** In either mode, the FRA main display shows a Bode plot with corresponding abscissa and ordinates scales.

Connections

Background The FRA application uses two analog channels of the DSO as well as the GEN1 output of the Arbitrary Wave Generator (AWG).

- Connection**
1. Connect the AWG output GEN1 to the input of the Device-Under-Test (DUT).
 2. Connect one DSO analog channel to the input of the DUT.
 3. Connect the output of the DUT to another DSO analog channel.

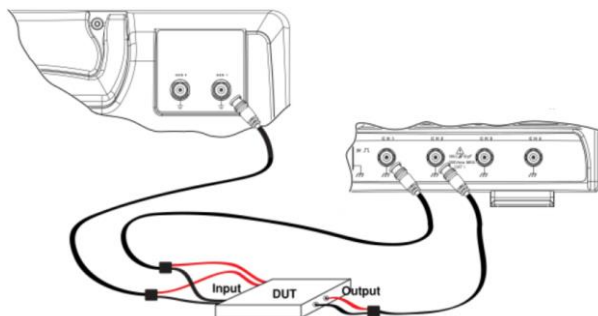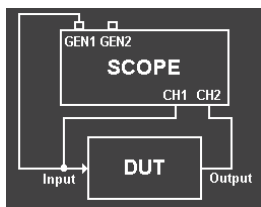

Launching the FRA application

Background The FRA application is launched from the *APP* menu.


Panel Operation 1. Press the *APP* key.




2. Press the *APP* button from the bottom menu.



3. Scroll through the applications using the *Variable* knob until the FRA application is highlighted.

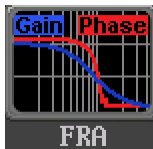

4. Launch the FRA application by pressing the *Select* key twice.



Setting mode

In Setting mode (*FRA Run* button appeared), the user can define the sources and setup the frequency-swept sinusoidal signal generated by the AWG. In addition, FRA data acquisition is launched from this mode.

FRA Run

Background Once the FRA application is fully setup and the DUT is correctly connected, data can be acquired by pressing the “*FRA Run*” button.




Note

Please be aware that the total time required for measuring the frequency response may vary according to your setup, e.g. the number of points per decade or when sweeping at lower frequencies.


Please note that the FRA application only allows a DSO record length of 10,000 points.

Panel operation 1. In Setting mode (*FRA Run* button appeared), press the *FRA Run* button to start the frequency response analysis.



2. The data acquisition will stop automatically when the stop frequency is reached. The  button is then toggled back to STOP and the data is ready for analysis.



If the user needs to cancel an on-going FRA measurement, the  button can be pressed.

- Using the second *Analyze menu* button will switch to the Analysis mode. Details regarding this mode will be explained in later sections.
- Press the icon to return to the upper-level menu.



Setup


Background Use the Setup menu to define the sources and configure the AWG output GEN1.



Note

Please make sure that the two analog channels used by the FRA application are activated first.

- Panel operation** 1. Toggle the *Setup* button.




2. Press *Input Source* from the side menu and select the channel that is connected to the input of the DUT.




Range CH1 ~ CH4 for 4-channel models
CH1 ~ CH2 for 2-channel models

3. Press *Output Source* from the side menu and select the channel that is connected to the output of the DUT.



Range CH1 ~ CH4 for 4-channel models
CH1 ~ CH2 for 2-channel models

- Each frequency decade is equally divided in a pre-set number of points. By pressing the *Points/Decade* button and using the *variable* knob, you will define the number of points per decade of frequency.

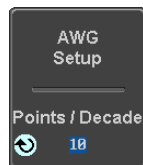

Example: for the 100-1000Hz decade and 15 points per decade, the frequency sweep step is given by $(1000-100)/15 = 60\text{Hz}$, i.e. measurements will be taken at 100Hz, 160Hz, 220Hz, 280Hz, ..., 940Hz.

Range 10, 15, 30, 45, 90


- Then press the *AWG Setup* button from the side menu to configure the frequency-swept input signal.






FREQUENCY RESPONSE ANALYZER

Start


6. Press *Start* button to configure the start frequency.




Use the arrows to select a base unit and the *variable* knob to further tune the selected base unit.



Alternatively press the *Default* button to set the Start Frequency to 100.00 Hz (default setting).




Press *Go Back* to return to the previous menu.





Range 20Hz ~ 25MHz

Stop

7. Press *Stop* to configure the stop frequency.




Use the arrows to select a base unit and the *variable* knob to further tune the selected base unit.



Alternatively press the *Default* button to set the Stop Frequency to 1.00 kHz (default setting).




Press *Go Back* to return to the previous menu.






Range 20Hz ~ 25MHz

Amplitude

8. Press *Amplitude* to configure the amplitude of the frequency-swept signal.




Use the arrows to select a base unit and the *variable* knob to further tune the selected base unit.



Alternatively press the *Default* button to set the amplitude to 200 mV.



Press *Go Back* to return to the previous menu.



Range 0.01~2.5Vpp (50 ohms load)
0.02~5Vpp (High-Z load)

Load

9. Press *Load* button to configure the load resistance.




Press repeatedly the *Load* button to select the 50Ω or High Z load resistance.

Range 50Ω, High Z

Go Back


Press *Go Back* to return to the Setup menu.




Reference Circuit

Background A diagram depicts the connectivity necessary for the FRA application to properly operate.

Panel operation 1. Toggle the *Reference Circuit* button from the bottom menu.



2. A simple diagram reminding the connections required is shown on the display.

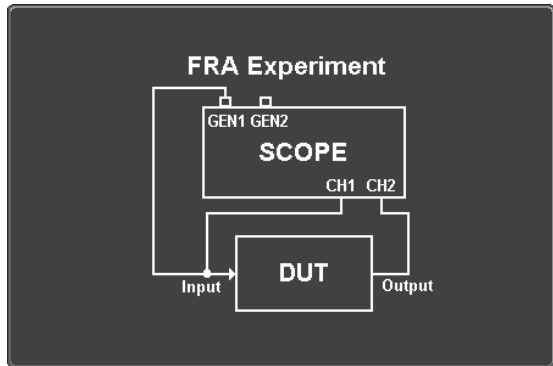

Quit

Background Quit the FRA application.

Panel operation Toggle the *Quit* button to return the APP menu.



Analysis mode

There are three main functions in the Analyze menu. Users can perform the cursor measurement, adjust the scale and the offset of the plot, and save FRA results for future recall as well as post-processing on the computer.

FRA Measure

Background FRA Measure uses cursors to precisely measure the data in absolute or relative values.

Panel operation 1. Under Analysis mode, press the *FRA Measure* button to enter the FRA measure menu.




2. Press the *Select* button and use the *Variable* knob and then the *Select* key to set the active trace, showing on top of the other trace, and refresh the cursor measurement accordingly.




Range : Gain, Phase

3. The cursor and will appear along the active trace whenever the cursor state turns on. Press Select button to change the active cursor highlighted in green color.

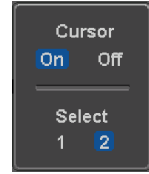

Move the active cursor along the active trace using the *Variable* knob. The corresponding frequency value in Hertz (X-axis), gain value in dB (left Y-axis) or phase value in degree (right Y-axis) will be shown along the axis.

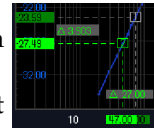






A delta measurement between the two cursor's values is also displayed along the X-axis and the left- or the right-Y axis.

Scale Bode Plot

Background The Scale Bode Plot menu allows the user to adjust the scale and the offset of the plot on the display.

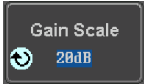- Panel operation**
1. When in Analysis mode, press the *Scale Bode Plot* button to enter the scale bode plot menu.
 2. There are four settings which can be adjusted: *Gain Scale*, *Gain Offset*, *Phase Scale*, and *Phase Offset*, respectively. Press the *Autoscale* button to automatically preset these parameters suitable for viewing the displayed traces.



| | | |
|--------------|--|---|
| Gain Scale | <p>3. Press the <i>Gain Scale</i> from the side menu and use the <i>Variable</i> knob to adjust the value.</p> <p>Range 5, 10, 15, 20dB</p> |  |
| Gain Offset | <p>4. Press the <i>Gain Offset</i> from the side menu and use the <i>Variable</i> knob to adjust the value.</p> <p>Range (-300+4*Gain Scale) ~ (300-4*Gain Scale) dB</p> |  |
| Phase Scale | <p>5. Press the <i>Phase Scale</i> from the side menu and use the <i>Variable</i> knob to adjust the value.</p> <p>Range 15°, 30°, 45°, 60°</p> |  |
| Phase Offset | <p>6. Press the <i>Phase Offset</i> from the side menu and use the <i>Variable</i> knob to adjust the value.</p> <p>Range (-720+4*Phase Scale) ~ (720-4*Phase Scale) degrees</p> |  |
| Autoscale | <p>7. Alternatively, users can press the <i>Autoscale</i> from the side menu to have the FRA App configuring these parameters automatically.</p> |  |

FRA Utility

Background With FRA Utility, the user can recall previously saved FRA files (.FRD), convert FRA files to Excel CSV files, and view FRA Info containing experimental details regarding the underlying bode plot.


Panel operation 1. When in Analysis mode, press the *FRA Utility* button to enter the FRA utility.



Recall From File (.FRD) Press the *Recall From File (.FRD)* from the side menu.



Browse through the folders and files to locate a FRA file (*file.FRD*) and press the *Select* key to recall it. A pop-up window then subsequently confirms the success of the operation. For a successful recall, the display will immediately show the newly recalled data on the current plot.

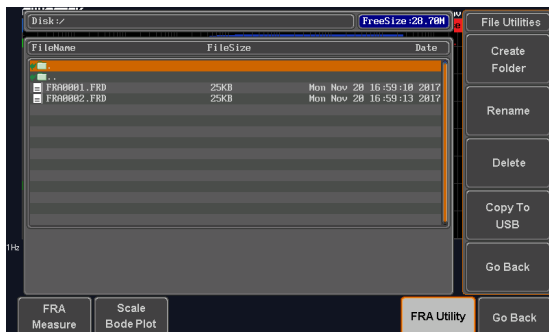

Save To File (.FRD)

2. Press the *Save To File (.FRD)* from the side menu and save the present plotted data to a file for future reference.




Save To CSV

3. Press the *Save to CSV* button to save the present plotted data in the CSV format for post-processing on the computer.




FRA Info

4. For more information regarding the current plotted data, press this *FRA Info* button.

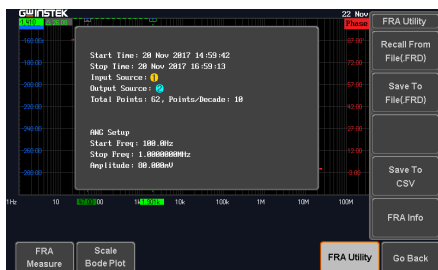


Go Back

5. Press *Go Back* button to return to the Setting menu.



Remote Control Commands

The remote control command overview chapter lists all Frequency Response Analyzer commands in functional order. The command syntax section shows you the basic syntax rules you have to apply when using commands.
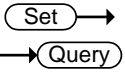
| :FRA:RUN | |  |
|------------------|---|---|
| Description | Sets or queries the FRA analysis function. | |
| Syntax | :FRA:RUN :FRA:RUN? | |
| Return parameter | RUN STOP | FRA analysis function is running. FRA analysis function is in idle state. |
| Example | : FRA : RUN Turns the FRA analysis function on. | |
| Note: | <ol style="list-style-type: none"> 1. Only the :FRA:STOP setting command and others query commands can be executed while the :FRA:RUN command running. 2. The FRA analysis function will be placed in idle state after the :FRA:RUN procedure is completed. | |

Set →
→ Query

:FRA:STOP

| | | |
|------------------|--|---|
| Description | Stops or queries the FRA analysis function. | |
| Syntax | :FRA:STOP :FRA:STOP? | |
| Return parameter | RUN | FRA analysis function is running. |
| | STOP | FRA analysis function is in idle state. |
| Example | : FRA : STOP ? >STOP Returns STOP, the FRA analysis function is in idle state now. | |

Set →
→ Query

:FRA:SOURce:INPut

| | | |
|----------------------------|--|---------------|
| Description | Sets or queries the input source of the FRA. | |
| Syntax | :FRA:SOURce:INPut {CH1 CH2 CH3 CH4} :FRA:SOURce:INPut? | |
| Parameter/Return parameter | CH1 | Channel one |
| | CH2 | Channel two |
| | CH3 | Channel three |
| | CH4 | Channel four |
| Example | : FRA : SOURce : INPut CH2 Sets the input source of FRA to channel two. | |

FREQUENCY RESPONSE ANALYZER

Set →
→ Query

:FRA:SOURce:OUTPut

| | | |
|----------------------------|---|---------------|
| Description | Sets or queries the output source of the FRA. | |
| Syntax | :FRA:SOURce:OUTPut {CH1 CH2 CH3 CH4} :FRA:SOURce:OUTPut? | |
| Parameter/Return parameter | CH1 | Channel one |
| | CH2 | Channel two |
| | CH3 | Channel three |
| | CH4 | Channel four |
| Example | :FRA:SOURce:OUTPut CH1 Sets the output source of FRA to channel one. | |

Set →
→ Query

:FRA:FREQuency:STARt

| | | |
|----------------------------|--|---|
| Description | Sets or queries the FRA start frequency. | |
| Syntax | :FRA:FREQuency:STARt {<NRf> ?} | |
| Parameter/Return parameter | <NRf> | Manually sets the FRA start frequency. (Range: 20Hz ~ 25MHz). |
| Example | :FRA:FREQuency:STARt 100 Sets the FRA start frequency to 100Hz. | |

Set →
→ Query

:FRA:FREQuency:STOP

| | | |
|----------------------------|--|--|
| Description | Sets or queries the FRA stop frequency. | |
| Syntax | :FRA:FREQuency:STOP {<NRf> ?} | |
| Parameter/Return parameter | <NRf> | Manually sets the FRA stop frequency. (Range: 20Hz ~ 25MHz). |
| Example | :FRA:FREQuency:STOP 500 Sets the FRA stop frequency to 500Hz. | |

:FRA:AWG:LOAD

Set →

→ Query

| | | |
|-----------------------------------|---|----------------|
| Description | Sets or queries the AWG load impedance. | |
| Syntax | :FRA:AWG:LOAD {FIFty HIGHZ ?} | |
| Related Commands | :FRA:AWG:AMPlitude | |
| Parameter/ Return parameter | FIFty | 50Ω |
| | HIGHZ | High impedance |
| Example | :FRA:AWG:LOAD HIGHZ Sets the AWG load impedance to high impedance. | |

:FRA:AWG:AMPlitude

Set →

→ Query

| | | |
|-----------------------------------|---|--|
| Description | Sets or queries the AWG amplitude. | |
| Syntax | :FRA:AWG:AMPlitude {<NRf> ?} | |
| Related Commands | :FRA:AWG:LOAD | |
| Parameter/ Return parameter | <NRf> | Manually sets the AWG amplitude. When AWG load impedance = 50Ω, Range: 0.01Vpp ~ 2.5Vpp. When AWG Load impedance = High impedance, Range: 0.02Vpp ~ 5Vpp |
| Example | :FRA:AWG:AMPlitude 0.2 Sets the amplitude to 0.2Vpp. | |

FREQUENCY RESPONSE ANALYZER

:FRA:POINT (Set) →
→ (Query)

| | | |
|-----------------------------------|---|--|
| Description | Sets or queries the number of processing points per decade. | |
| Syntax | :FRA:POINT {<NR1> ?} | |
| Parameter/ Return parameter | <NR1> | The number of point per decade. (Range: 10, 15, 30, 45, 90) |
| Example | :FRA:POINT 15 Sets the 15 points per decade. | |

:FRA:SAVe (Set) →

| | | |
|-------------|---|--|
| Description | Saves the present plotted data to a file (*.FRD). | |
| Syntax | :FRA:SAVe | |

:FRA:RECALL (Set) →

| | | |
|-----------------------------------|---|---|
| Description | Recalls the plotted data from internal memory or USB flash drive. | |
| Syntax | :FRA:RECALL {<file path> ("Disk:/xxx.FRD", "USB:/xxx.FRD")} | |
| Parameter/ Return parameter | <file path> | Recalls the plotted data from internal memory or USB flash drive. |
| Example | :FRA:RECALL "Disk:/FRA00001.FRD" Recall the FRA plotted data from the internal memory. | |

:FRA:DATA

→ **Query**

Description Queries the status of settings and FRA plotted data (as a header plus raw data) to computer.
 The raw data is queried in three comma-separated columns of FRA data for each step in the sweep: Frequency (Hz), Gain (dB), and Phase (°).

Syntax :FRA:DATA?

Example : FRA : DATA ?

```
Format,2.0E;Firmware,V1.34;APP Name,FRA APP;Input
Source,CH1;Output Source,CH2;Total
Points,546;Points/Decade,90;AWG Setup;Start Freq,20.0Hz;Stop
Freq,25.0000000MHz;Ampl,80.000mV;Offset,0.0V;Record
Data;Frequency,Gain,Phase;
#5294842.000000e+01,-8.862180635333e-03,-7.475754618645e-02,
2.100000e+01,-3.896592557430e-02,-6.966306567192e-01,
2.200000e+01,-2.990882843733e-02,-5.042185187340e-01,
2.300000e+01,-3.826960921288e-02,-2.487841397524e-01,
2.400000e+01,-5.097014456987e-02,-7.971150875092e-01,
.....
```

:FRA:SAVETOCsv

Set →

Description Saves the present plotted data to internal memory in CSV file format.

Syntax :FRA:SAVETOCsv

Specifications

| | |
|--------------------------|--|
| Frequency Range | 20Hz to 25MHz |
| Input and Output Sources | Channel 1 or 2 (3 or 4 for four channel models) |
| Number of Test Points | 10, 15, 30, 45, 90 points per decade selectable |
| Dynamic Range | >80dB (typical) |
| Test Amplitude | 10mVpp to 2.5Vpp into 50 Ω , 20mVpp to 5Vpp into High-Z Fixed amplitude across entire sweep |
| Test Results | Logarithmic overlaid gain and phase plot |
| Manual Measurements | Tracking gain and phase markers |
| Plot Scaling | Auto-scaled during test |