

# Multi-phase Programmable AC/DC Power Source

ASR-6000 Parallel Models Series

---

USER MANUAL

Rev. A



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

# Table of Contents

|   |           |
|---|-----------|
| <b>SAFETY INSTRUCTIONS .....</b>              | <b>4</b>  |
| <b>GETTING STARTED .....</b>                  | <b>8</b>  |
| ASR-6000 Parallel Models Series Overview..... | 9         |
| Appearance.....                               | 16        |
| <b>OPERATION.....</b>                         | <b>25</b> |
| Set Up.....                                   | 26        |
| Input Terminal Connection .....               | 28        |
| Output Terminal Connection.....               | 31        |
| <b>APPENDIX.....</b>                          | <b>36</b> |
| Firmware Update .....                         | 37        |
| Function Difference Table.....                | 40        |
| Factory Default Settings .....                | 41        |
| Error Messages & Messages .....               | 45        |
| Specifications.....                           | 50        |
| Information of Name Order .....               | 67        |
| ASR-6000 Parallel Models Dimensions .....     | 68        |
| Declaration of Conformity .....               | 71        |

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the instrument.

---



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the ASR-6000 or to other properties.



**DANGER** High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

**General Guideline** Do not place any heavy object on the ASR-6000.



**CAUTION**

Avoid severe impact or rough handling that leads to damaging the ASR-6000.

Do not discharge static electricity to the ASR-6000.

Use only mating connectors, not bare wires, for the terminals.

Do not block the cooling fan opening.

Do not disassemble the ASR-6000 unless you are qualified.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

## Power Supply



## WARNING

AC Input voltage range:

200 Vac to 240 Vac (3P3W)

380 Vac to 460 Vac (3P4W)

Frequency: 47 ~ 63 Hz

To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

The power switch that is included in the instrument is not considered a disconnecting device.

The permanently connected power input is used as the disconnecting device and shall remain readily operable.

- a. A switch or circuit-breaker must be included in the installation
- b. It must be suitably located and easily reached
- c. It must be marked as the disconnecting device for the equipment.
- d. It shall be located near the equipment

Do not position the equipment so that it is difficult to operate the disconnecting device.

Ask for professional technician for installation.

The ASR-6000 model shall be employed in rack-based applications and it shall not be connected to external cord directly. In addition, installation shall be done by a qualified person in accordance with local regulations. The ASR-6000 model is not to be used in standalone scenario.

---

## Cleaning the ASR-6000

Disconnect the circuit-breaker or permanently connected power input before cleaning.

Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.


Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

---

---

|                       |   |
|-----------------------|---|
| Operation Environment | <p>Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)</p> <p>Relative Humidity: 20%~ 80%, no condensation</p> <p>Altitude: &lt; 2000m</p> <p>Temperature: 0°C to 40°C</p> <p>(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The ASR-6000 falls under degree 2.</p> <p>Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.</p> <p>Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.</p> <p>Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.</p> <p>Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.</p> |
| Storage environment   | <p>Location: Indoor</p> <p>Temperature: -10°C to 70°C</p> <p>Relative Humidity: ≤90%, no condensation</p>   |
| Disposal              | <p>Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.</p>   |

---



# G E T T I N G   S T A R T E D

This chapter describes the ASR-6000 parallel model series in a nutshell, including its main features, operating area, accessories and front with rear panel introduction.

**ASR-6000 Parallel Model Series in 15u**

**ASR-6000 Parallel Model Series in 19u**

**ASR-6000 Parallel Model Series in 23u**



**ASR-6000 Parallel Models Series Overview .....9**

- Series lineup ..... 9
- Operating Area ..... 10
- Accessories ..... 15

**Appearance ..... 16**

- Front Panel ..... 16
- Rear Panel ..... 22



## ASR-6000 Parallel Models Series Overview

### Series lineup

The ASR-6000 parallel models series consists of 5 models, which differ in various capacity. Note that throughout the user manual, the term “ASR-6000” refers to any of the models, unless stated otherwise.

#### 1P Output Condition

| Model Name    | Power Rating | Max. Output Current | Max. Output Voltage |
|---------------|--------------|---------------------|---------------------|
| ASR-6450-09   | 9000 VA      | 90 / 45 A           | 350 Vrms / 500 Vdc  |
| ASR-6600-12   | 12000 VA     | 120 / 60 A          | 350 Vrms / 500 Vdc  |
| ASR-6450-13.5 | 13500 VA     | 135 / 67.5 A        | 350 Vrms / 500 Vdc  |
| ASR-6600-18   | 18000 VA     | 180 / 90 A          | 350 Vrms / 500 Vdc  |
| ASR-6600-24   | 24000 VA     | 240 / 120 A         | 350 Vrms / 500 Vdc  |



#### 1P3W Output Condition



| Model Name    | Power Rating | Max. Output Current | Max. Output Voltage |
|---------------|--------------|---------------------|---------------------|
| ASR-6450-09   | 6000 VA      | 30 / 15 A           | 700 Vrms / 1000 Vdc |
| ASR-6600-12   | 8000 VA      | 40 / 20 A           | 700 Vrms / 1000 Vdc |
| ASR-6450-13.5 | 9000 VA      | 45 / 22.5 A         | 700 Vrms / 1000 Vdc |
| ASR-6600-18   | 12000 VA     | 60 / 30 A           | 700 Vrms / 1000 Vdc |
| ASR-6600-24   | 16000 VA     | 80 / 40 A           | 700 Vrms / 1000 Vdc |



#### 3P Output Condition (Pre phase)



| Model Name    | Power Rating | Max. Output Current | Max. Output Voltage |
|---------------|--------------|---------------------|---------------------|
| ASR-6450-09   | 3000 VA      | 30 / 15 A           | 350 Vrms / 500 Vdc  |
| ASR-6600-12   | 4000 VA      | 40 / 20 A           | 350 Vrms / 500 Vdc  |
| ASR-6450-13.5 | 4500 VA      | 45 / 22.5 A         | 350 Vrms / 500 Vdc  |
| ASR-6600-18   | 6000 VA      | 60 / 30 A           | 350 Vrms / 500 Vdc  |
| ASR-6600-24   | 8000 VA      | 80 / 40 A           | 350 Vrms / 500 Vdc  |

## Operating Area

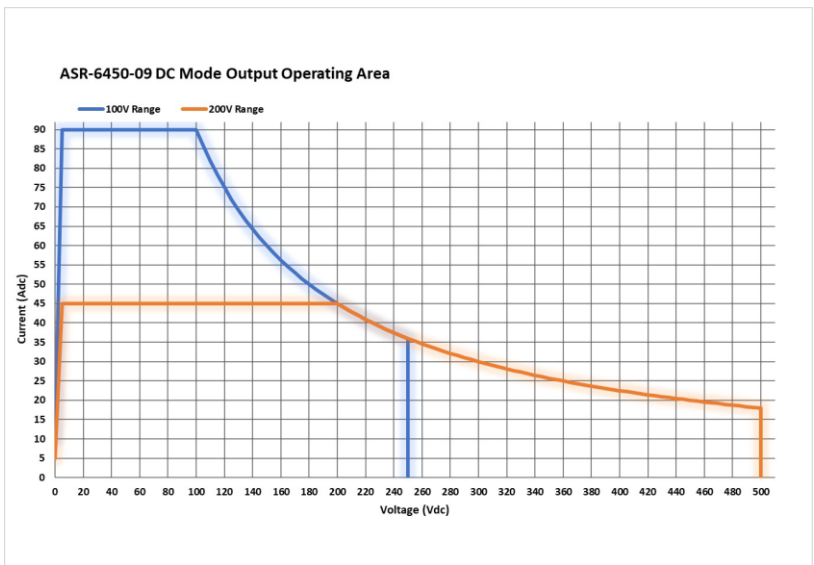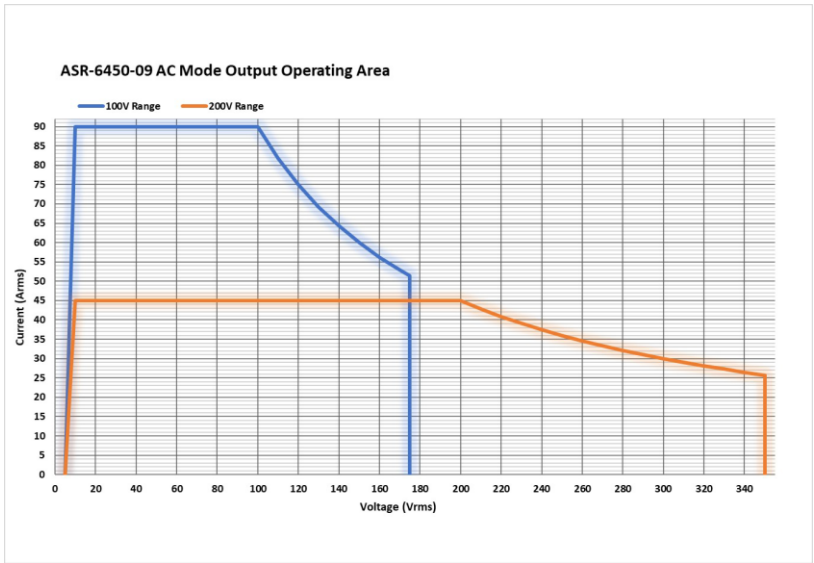


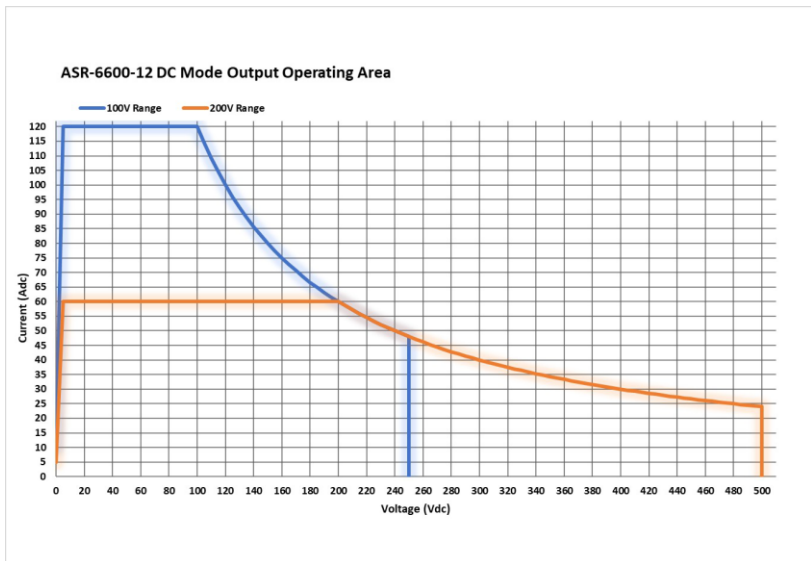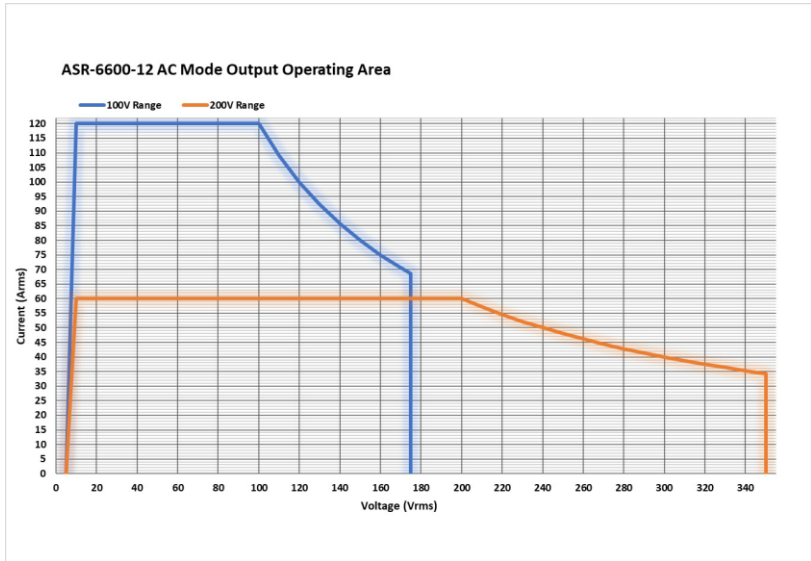

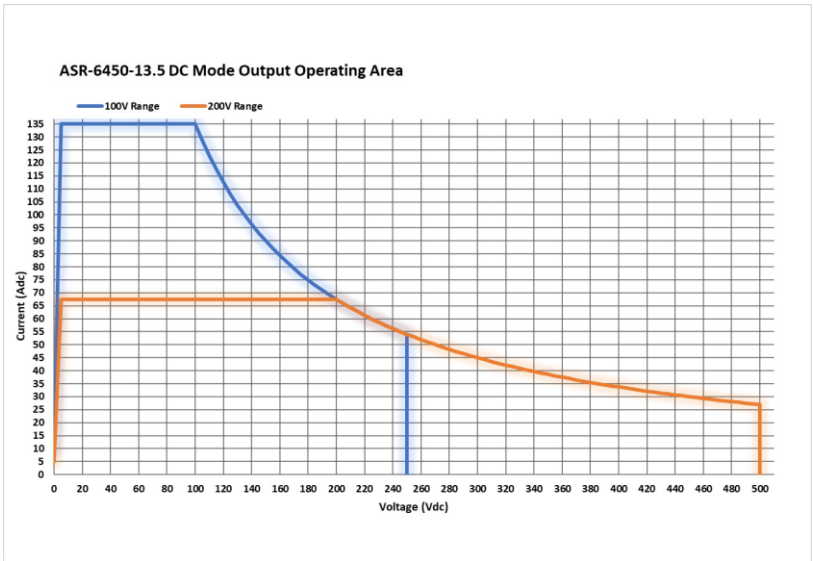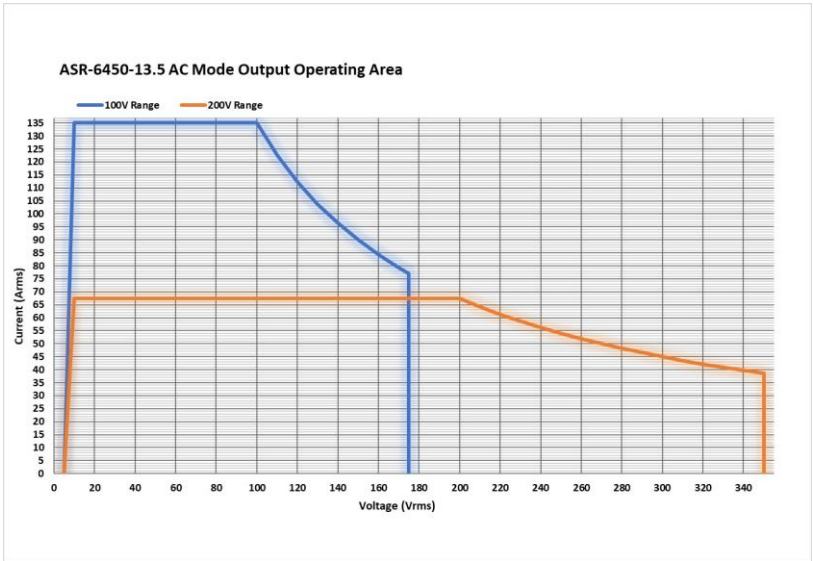


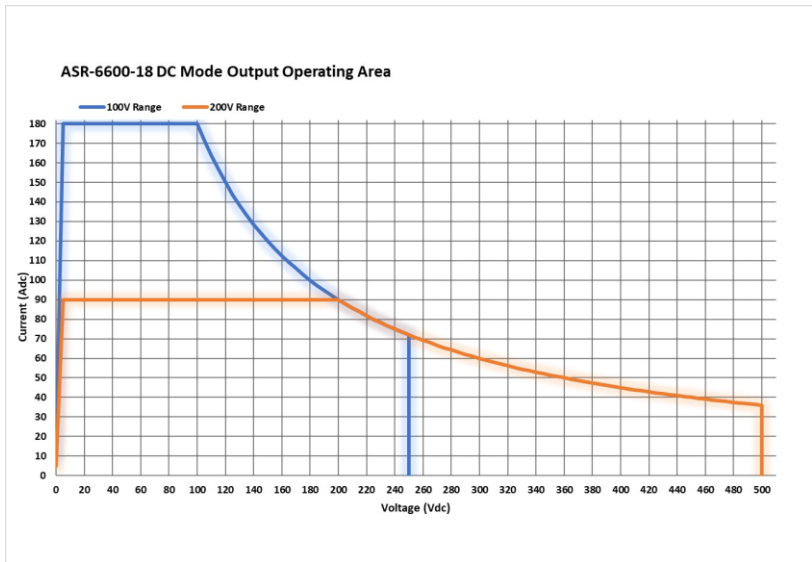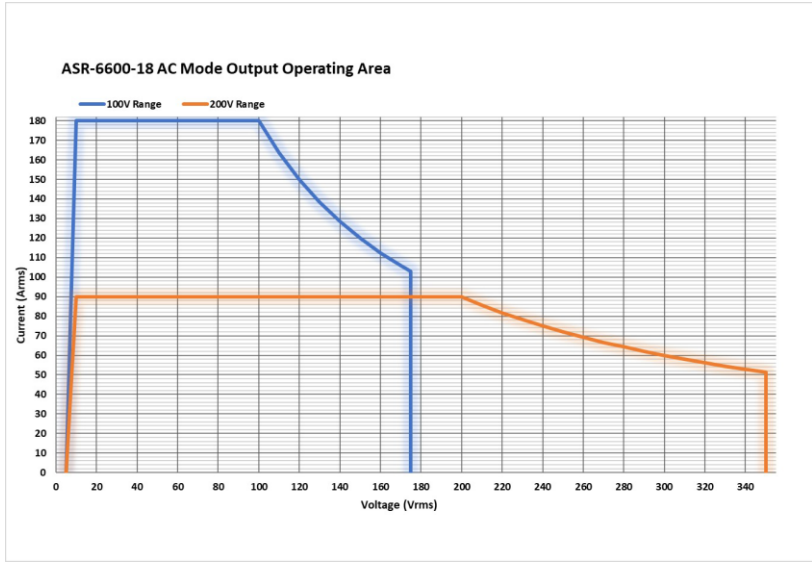

**ASR-6600-24 AC Mode Output Operating Area**

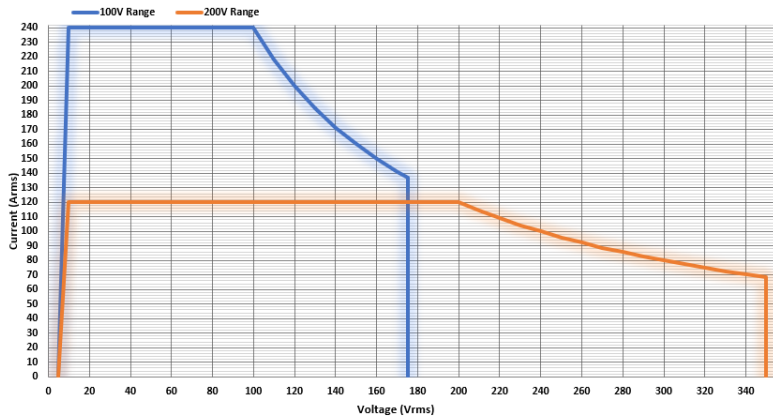

**ASR-6600-24 DC Mode Output Operating Area**

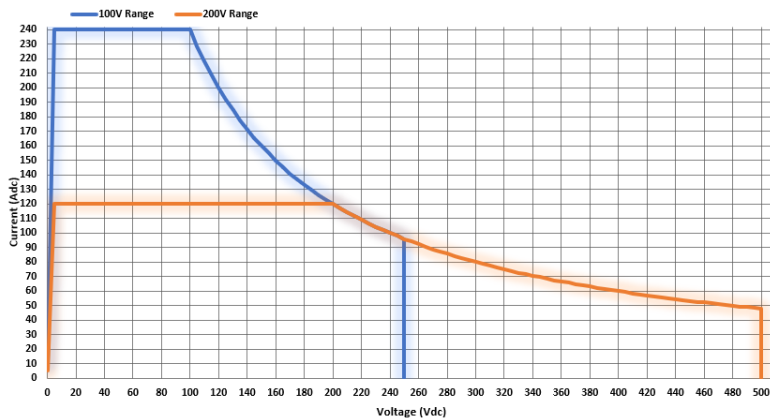


## Accessories

Before using the ASR-6000 parallel models, check the package contents to make sure all the standard accessories are included.

| Standard Accessories | Part number   | Description   |
|----------------------|---------------|---|
|                      | 82GW1SAFE0M*1 | Safety guide  |
|                      | 62SR-6KDSC201 | Input terminal cover                                    |
|                      | 62SR-6KDSC301 |   |
|                      | 62SR-6KDSC501 |   |
|                      | 62SR-6KDSC601 | Output terminal cover                                   |
|                      | GTL-246       | USB cable (USB 2.0 Type A - Type B cable, approx. 1.2M) |
| Optional Accessories | Part number   | Description   |
|                      | GTL-232       | RS232C cable, approx. 2M                                |
|                      | GTL-248       | GPIB cable, approx. 2M                                  |
|                      | ASR-003       | GPIB interface card                                     |
|                      | ASR-004       | DeviceNet interface card                                |
|                      | ASR-005       | CAN BUS interface card                                  |






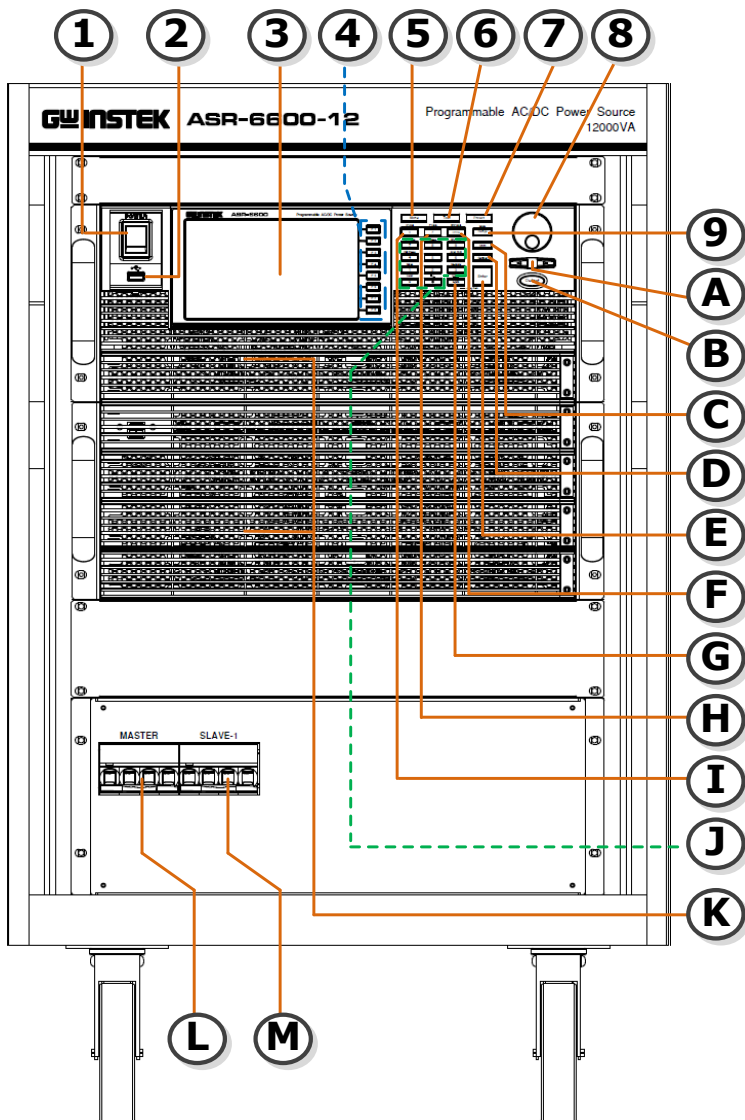


# Appearance




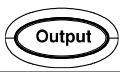



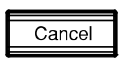

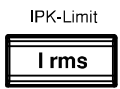
## Front Panel

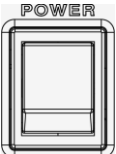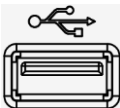
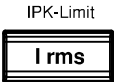


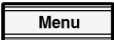
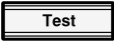



| Item Index | Description   |
|------------|---|
| 1          | Power switch button   |
| 2          | USB interface connector (A Type)  |
| 3          | LCD screen  |
| 4          | Function keys (blue zone)   |
| 5          | Menu key  |
| 6          | Test key  |
| 7          | Preset key  |
| 8          | Scroll wheel  |
| 9          | Range key/Output mode key   |
| A          | Arrow keys  |
| B          | Output key  |
| C          | Shift key   |
| D          | Cancel key  |
| E          | Enter key   |
| F          | Irms/IPK-Limit button   |
| G          | Lock/Unlock button  |
| H          | F/F-Limit button  |
| I          | V/V-Limit button  |
| J          | Numerical Keypad with additional "Shift + key"<br>shortcut functions (green zone) |
| K          | Air inlets  |
| L          | Master Circuit Breaker  |
| M          | Slave Circuit Breaker   |

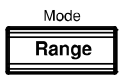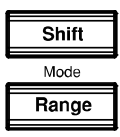
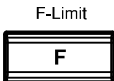
| Item          | Description  |
|---------------|--|
| Power Switch  |  Turn on the mains power  |
| USB A Port    |  The USB port is used for data transfers and upgrading software. Also, it is available for screenshot hardcopy.<br> It supports FAT32 format with maximum 32G storage. |
| LCD Screen    | Displays the setting and measured values or menu system  |
| Function Keys |  Assigned to the functions displayed on the right side of the screen.  |
| Menu Key      |  Enters the Main menu or goes back to one of the display modes.   |
| Test Key      |  Puts the instrument into the Sequence and Simulation control mode.   |
| Preset Key    |  Puts the instrument into Preset mode.  |
| Arrow Keys    |  The arrow keys are used to select the digit power of a value that is being edited.   |


|  |   |   |
|--|---|---|
| Range Key  |    | Switches between the 100V, 200V and AUTO ranges   |
| Output Mode  |    | Selects between the AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync and AC-VCA modes.  |
| Scroll Wheel   |    | Used to navigate menu items or for increment/decrement values one step at a time.   |
| Output Key   |    | Turns the output on or off.   |
| Shift Key  |    | Turns on the shift state, which enables shortcut operations with an icon  indicated on the top status bar. The shift state, which allows continuous shortcut operations, is kept until another press on shift key again. |
| <p> When performing shortcut operations, press shift key followed by another shortcut function key. Do Not press both shift key and shortcut function key simultaneously.</p> |   |   |
| Cancel Key   |  | Used to cancel function setting menus or dialogs.   |
| Enter Key  |  | Confirms selections and settings.   |
| I rms  |  | Used for setting the maximum output current.  |


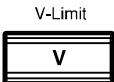
IPK-Limit  +  Used to set the peak output current limit value.

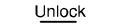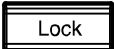

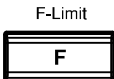Lock/Unlock Key   Used to lock or unlock the front panel keys except output key. Simply press to lock, whilst long press to unlock.  
 — : Long Push



F  Used for setting the output frequency (DC mode N/A).

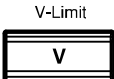
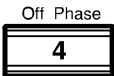
F-Limit  +  Used for setting the output frequency limit value (DC mode N/A).


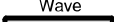
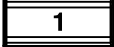
V  Used for setting the output voltage.




V-Limit  +  Used for setting the output voltage limit value.

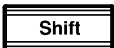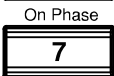

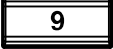
Keypad  Used to input power of a value directly. The  key is used to input decimal / plus or minus.




On Phase  +  Sets the on phase for the output voltage.



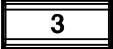
Off Phase  +  Sets the off phase for the output voltage.

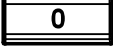

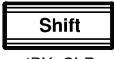
Output Waveform  + Selects between the Sine, Square, Triangle and ARB 1~253 waveforms (not available for DC-INT, AC+DC-EXT and AC-EXT).  
  


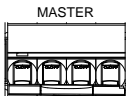
Local Mode  + Switches operation back to local mode from remote mode.  
  

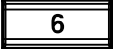
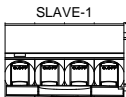
IPK CLR  + Used to clear peak output current value.  
  

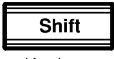
ALM CLR  + Clears alarms.  
  


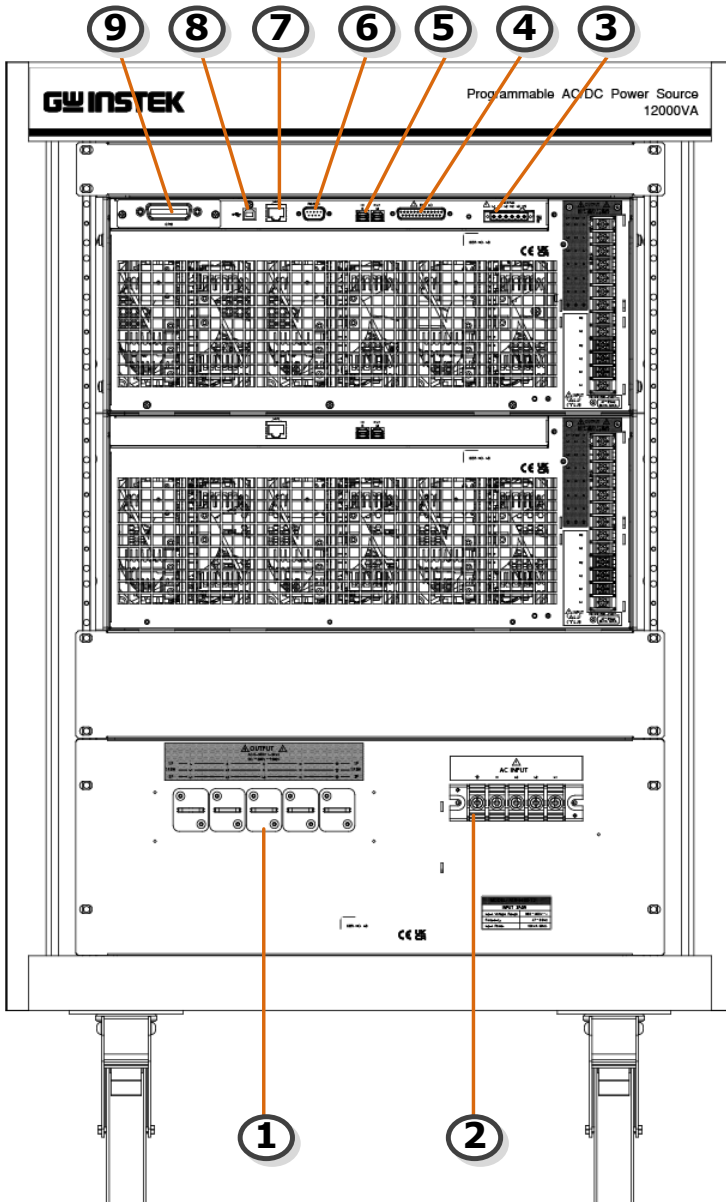
Hardcopy Key  + Used to take a screenshot. Make sure an USB flash disk is well inserted before the action.  
  


Output Phase  + Used to prompt the output phase window where 1P2W, 1P3W and 3P4W modes are available for selection.  
  


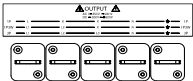
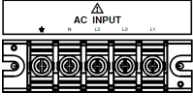
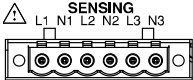
Master Circuit Breaker  Input power circuit breaker of ASR-6000 Master unit

Slave Circuit Breaker  Input power circuit breaker of ASR-6000 Slave unit


Rear Panel



| Item Index | Description   |
|------------|---|
| 1          | Output terminal   |
| 2          | AC power input terminal   |
| 3          | Remote sensing input terminal   |
| 4          | External I/O connector  |
| 5          | External IN/OUT connection in parallel function   |
| 6          | RS232 connector   |
| 7          | Ethernet (LAN) connector  |
| 8          | USB interface connector (B Type)  |
| 9          | Optional interface Slot <ul style="list-style-type: none"> <li>▪ GPIB card (ASR-003)</li> <li>▪ DeviceNet card (ASR-004)</li> <li>▪ CAN BUS card (ASR-005)</li> </ul> |


| Item                          | Description   |
|-------------------------------|---|
| Output Terminal               |  <p>Output terminal<br/>(M8 screw nut and M3 screw)</p>  |
| AC Power Input Terminal       |  <p>AC inlet (depend on models)<br/>(M5 screw type, 2 ~ 14 AWG, screw torque value: 2 ~ 2.5 N·m)<br/>(M8 screw type, 2/0 ~ 10 AWG, screw torque value: 3.5 ~ 6 N.m)</p>     |
| Remote Sensing Input Terminal |  <p>Remote sensing input terminal is for compensation of load wire voltage drop.<br/>(M2.5 screw type, 12 ~ 30 AWG, screw torque value: 0.5N*m, strip length: 7 ~ 8mm)</p> |

External Control I/O Connector




Used to control ASR-6000 externally by using the logic signal and monitor Sequence function status.

External IN/OUT Connection in Parallel Function




The IN (Slave) and OUT (Master) ports are used for connection with external unit in parallel function.

RS232C Connector




The RS232C connector for controlling the ASR-6000 remotely.

Ethernet LAN Port



The Ethernet port is used for remote control.

USB B-type Port




USB port for controlling the ASR-6000 remotely.

Optional GPIB Connector




The optional GPIB connector for controlling the ASR-6000 remotely.

Optional CAN BUS Connector



The optional CAN BUS connector for controlling the ASR-6000 remotely.

Optional DeviceNet Connector



The optional DeviceNet connector for controlling the ASR-6000 remotely.



# O PERATION

---

|  |           |
|--|-----------|
| <b>Set Up</b> .....                                  | <b>26</b> |
| Power Up and Procedure .....                         | 26        |
| <b>Input Terminal Connection</b> .....               | <b>28</b> |
| Input Terminal 3P3W Connection.....                  | 29        |
| Input Terminal 3P4W Connection.....                  | 30        |
| <b>Output Terminal Connection</b> .....              | <b>31</b> |
| 1P2W Output Connection .....                         | 31        |
| 1P3W Output Connection .....                         | 33        |
| 3P4W Output Connection .....                         | 34        |
| Remote Sensing, EXT I/O and Interface Connection ... | 35        |


## Set Up

We take the illustration of 3P4W Input Connection here for example. Please refer to page 28 of the Input Terminal Connection chapter for the detailed information covering the 2 different connection methods.

### Power Up and Procedure

Connect the AC power cords to the AC input terminals.


- ✓ Red → L3
- ✓ Green → L2
- ✓ Yellow → L1
- ✓ Blue → Neutral

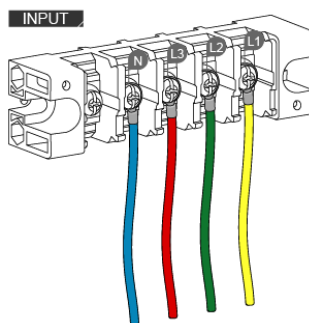


Note

- Power input cords are not included in this product.
- The input & output terminals necessitate connectivity through ring-type connectors.


Install the protective lid of power input terminals followed by fastening the single screw to fix the lid firmly into place.

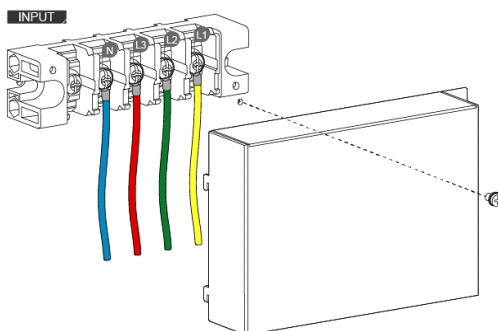


The AC power cords of 3P4W input are connected with the AC input terminals equipped with protective lid completely.

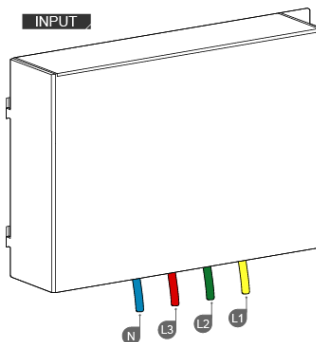

Turn ON circuit breakers in the sequence of MASTER followed by SLAVE. In the case of multiple SLAVE units in parallel connection, turn ON each circuit breaker of SLAVE in proper sequence, e.g., SLAVE-1 -> SLAVE-2, and so forth.

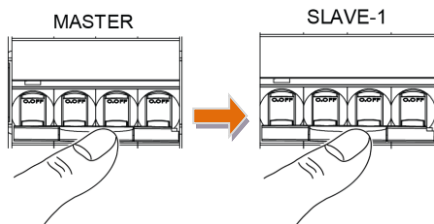

Press the **POWER** key. The welcome screen of GWINSTEK will be displayed followed by self-checking procedure before the continuous mode screen appears with the settings loaded.

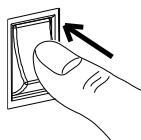

**CAUTION**

- If the warning message of “Parallel Communication Error” appears in the screen display, turn Off both *POWER* key and circuit breakers followed by repeating the appropriate power up procedure above.
  - Contact local dealer in your region if the warning message of “Parallel Communication Error” can Not be solved after repeating the power up procedure.
  - The power supply takes around 35 seconds to fully turn on and shutdown.
  - Do not turn the power on and off quickly, otherwise the unit will be damaged due to insufficient time for self-checking procedure. It is recommended to observe an interval of at least 10 seconds between power on and off.
- 

## Input Terminal Connection

---

**Background**



Basically, the input terminal, which is located in the rear panel of unit, can be connected through 2 methods: 3P4W and 3P3W connections. Depending on varied input methods, use the corresponding power cords for connection. Refer to the following chapters for details of each connection.

---

## Input Terminal 3P3W Connection

Connect the AC power cords to the AC input terminals.


- ✓ Red → L2
- ✓ Green → L1
- ✓ Yellow → L3

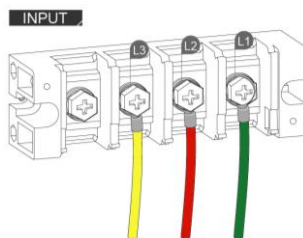


Note

- Power input cords are not included in this product.
- The input & output terminals necessitate connectivity through ring-type connectors.

Install the protective lid of power input terminals followed by fastening the single screw to fix the lid firmly into place.

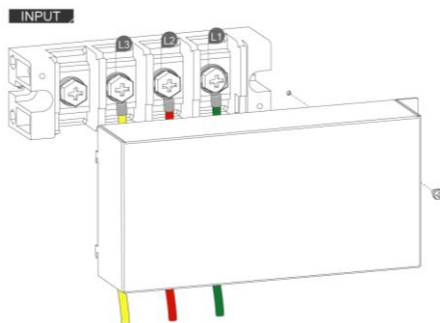

The AC power cords of 3P3W input are connected with the AC input terminals equipped with protective lid completely.

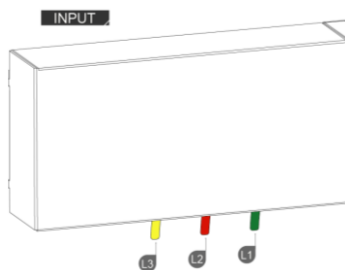



WARNING

The diagram is only for reference on wiring method. Please proceed to wiring in accordance with the color definitions in your local country.

## Input Terminal 3P4W Connection

Connect the AC power cords to the AC input terminals.


- ✓ Red → L3
- ✓ Green → L2
- ✓ Yellow → L1
- ✓ Blue → Neutral

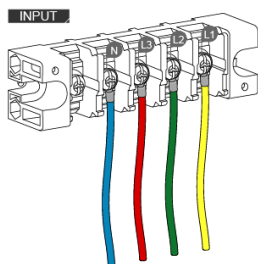


Note

- Power input cords are not included in this product.
- The input & output terminals necessitate connectivity through ring-type connectors.

Install the protective lid of power input terminals followed by fastening the single screw to fix the lid firmly into place.

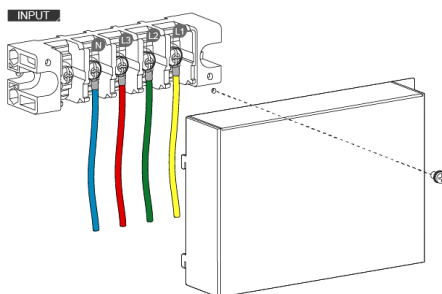

The AC power cords of 3P4W input are connected with the AC input terminals equipped with protective lid completely.

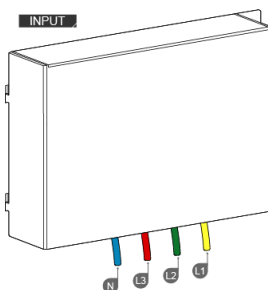

WARNING

The diagram is only for reference on wiring method. Please proceed to wiring in accordance with the color definitions in your local country.

## Output Terminal Connection

**Background** The output terminal can output power in three modes: 1P2W, 1P3W and 3P4W. Select applicable output mode, via panel configurations, in accordance with varied applications.



**WARNING**

Be aware of dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.



**CAUTION**

After configuring phase settings via the front panel, please make sure the cords connection on the rear panel is corresponding to the set configuration.


### 1P2W Output Connection

Disconnect the ASR unit from the mains power socket and turn the power switch off before wires connection.

Connect the output wires to the AC output terminals as follows:

- ✓ Red → Line (L)
- ✓ Black → Neutral (N)




Install the protective cover of power output terminals followed by fastening the 4 screws to fix the protective cover firmly into place.

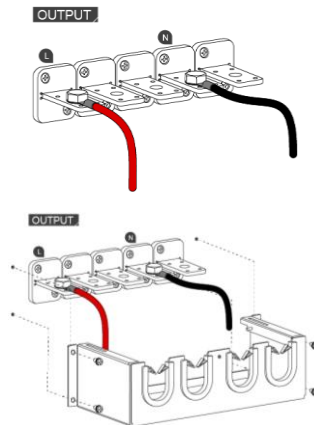

The protective cover of power output terminals is well installed and fixed on the rear panel.

Install the protective lid of power output terminals followed by fastening the single screw to fix the lid firmly into place.

The AC power cords of 1P2W output are connected with the AC output terminals equipped with protective cover and lid completely.

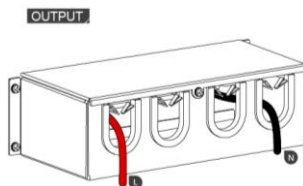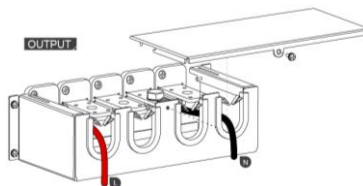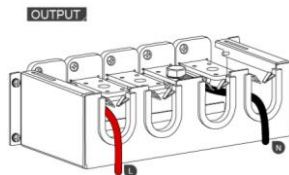**Note**

- The input & output terminals necessitate connectivity through ring-type connectors.
- Grounded Neutral Output for 1P2W output only: ASR-6000 allows for a grounded return on the neutral output. It is suit for the medical industry that required between ground with neutral is 0 V essentially. And possible to mitigate ground loops that is ideal for reduce ground noise and isolate sensitive equipment from the effects of ground loops.

**WARNING**

Because the neutral has been referenced to the chassis ground, be careful electric shock by yourself.



## 1P3W Output Connection

Disconnect the ASR unit from the mains power socket and turn the power switch off before wires connection.

Connect the output wires to the AC output terminals as follows:






- ✓ Yellow → Line (L1)
- ✓ Green → Line (L2)
- ✓ Blue → Neutral (N)

Install the protective cover of power output terminals followed by fastening the 4 screws to fix the protective cover firmly into place.

The protective cover of power output terminals is well installed and fixed on the rear panel.

Install the protective lid of power output terminals followed by fastening the single screw to fix the lid firmly into place.

The AC power cords of 1P3W output are connected with the AC output terminals equipped with protective cover and lid completely.

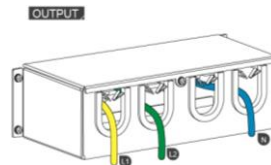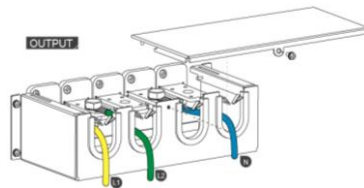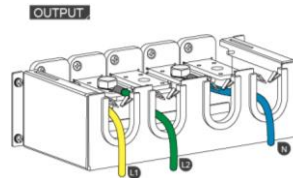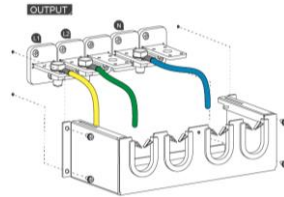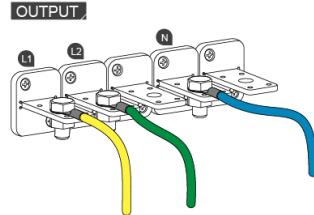


- The input & output terminals necessitate connectivity through ring-type connectors.

## 3P4W Output Connection


Disconnect the ASR unit from the mains power socket and turn the power switch off before wires connection.

Connect the output wires to the AC output terminals as follows:


- ✓ Yellow → Line (L1)
- ✓ Green → Line (L2)
- ✓ Red → Line (L3)
- ✓ Blue → Neutral (N)

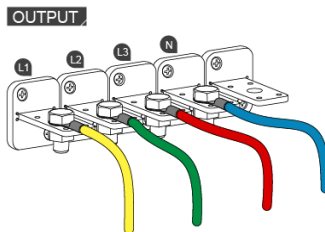


Install the protective cover of power output terminals followed by fastening the 4 screws to fix the protective cover firmly into place.

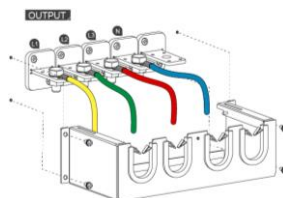


The protective cover of power output terminals is well installed and fixed on the rear panel.

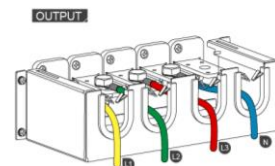

Install the protective lid of power output terminals followed by fastening the single screw to fix the lid firmly into place.

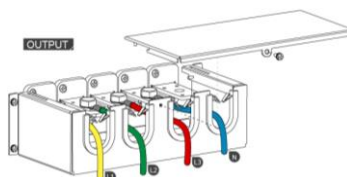

The AC power cords of 3P4W output are connected with the AC output terminals equipped with protective cover and lid completely.

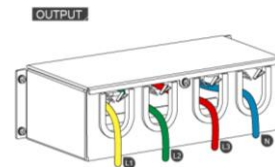



Note

- The input & output terminals necessitate connectivity through ring-type connectors.



WARNING

The diagram is only for reference on wiring method. Please proceed to wiring in accordance with the color definitions in your local country.

## Remote Sensing, EXT I/O and Interface Connection

### Remote Sensing

Remote sense is used to compensate for the voltage drop seen across load cables due to resistance inherent in the load cables. The remote sense function can compensate a maximum of 5% of the output voltage and all of output frequency. Based on different 3 output methods, the connections of remote sense vary accordingly. Refer to the following chapters of remote sense connections for each power output method.



WARNING

Dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.



Note

To minimize noise pickup or radiation, the load wires and remote sense wires should be twisted-pairs of the shortest possible length. Shielding of the sense leads may be necessary in high noise environments. Where shielding is used, connect the shield to the chassis via the rear panel ground screw. Even if noise is not a concern, the load and remote sense wires should be twisted-pairs to reduce coupling, which might impact the stability of the power supply. The sense leads should be separated from the power leads.

### EXT I/O & Interface

Since EXT I/O & Interface connections relate to several types and connectors, refer to User Manual of ASR-6000 for more details when necessary.

# APPENDIX

---

|   |           |
|---|-----------|
| <b>Firmware Update .....</b>                                | <b>37</b> |
| <b>Function Difference Table .....</b>                      | <b>40</b> |
| A Comparison between Stand Alone Type and Parallel Type ... | 40        |
| <b>Factory Default Settings .....</b>                       | <b>41</b> |
| <b>Error Messages &amp; Messages.....</b>                   | <b>45</b> |
| <b>Specifications .....</b>                                 | <b>50</b> |
| Electrical specifications – ASR-6450-09/ ASR-6600-12 .....  | 50        |
| General Specifications – ASR-6450-09/ ASR-6600-12 .....     | 55        |
| Electrical specifications – ASR-6450-13.5/ASR-6600-18 ..... | 56        |
| General Specifications – ASR-6450-13.5/ ASR-6600-18 .....   | 61        |
| Electrical specifications – ASR -6600-24 .....              | 62        |
| General Specifications – ASR-6600-24 .....                  | 66        |
| <b>Information of Name Order .....</b>                      | <b>67</b> |
| <b>ASR-6000 Parallel Models Dimensions .....</b>            | <b>68</b> |
| ASR-6000 Parallel Models in 15u Rack.....                   | 68        |
| ASR-6000 Parallel Models in 19u Rack.....                   | 69        |
| ASR-6000 Parallel Models in 23u Rack.....                   | 70        |
| <b>Declaration of Conformity .....</b>                      | <b>71</b> |

## Firmware Update

---

**Background** The ASR series firmware can be upgraded using the USB A-type port on the front panel. See your local distributor or the GWINSTEK website for the latest firmware information.

---




Note


- Both Master and Slave ASR units are required to be plugged in USB flash drives with the identical firmware version in order to complete update process simultaneously.
  - To be free from unexpected erroneous issues, please prepare, for example, 4 USB flash drives for 1 Master and 3 Slave units in parallel connection. DO NOT update partial ASR units, e.g., only update Master but without Slave units.
  - Ensure the DUT is not connected.
  - Ensure the output is surely off.
- 

**Steps**


1. Since the USB A-type port is hidden within a plastic frame in Slave unit, please identify the removable cover in the right-side corner of front panel as the figure shown below.

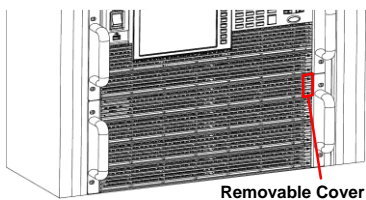


2. Loosen the two screws on the removable cover.

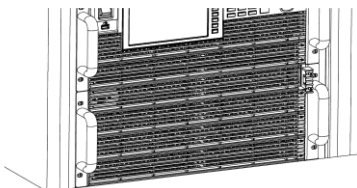


3. The removable cover is removed accordingly.

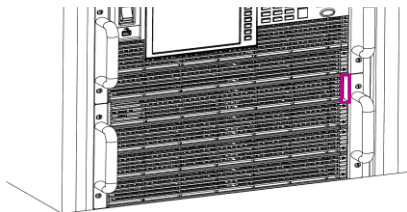

4. Pull out the plastic frame from ASR Slave unit.

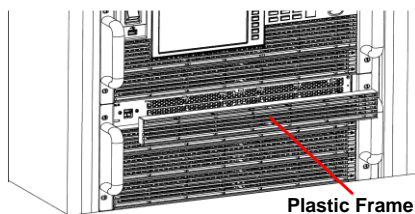


5. The plastic frame was removed and thus the USB A-type port of Slave unit appears.

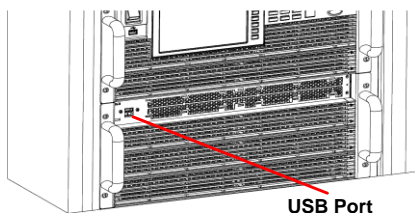

6. Repeat the previous step 1 to step 5 for each connected ASR Slave unit.
7. Insert USB flash drives into the USB A-type ports on front panel of both Master and Slave units. The USB drives should include the **gw\_sb6.upg** file in a directory name "gw" (USB\gw:).
8. Press the *Menu* key on the Master unit. and the Menu setting will appear on the display of Master unit.




- Use the scroll wheel to go to item 11, *Special Function* and press *Enter*.

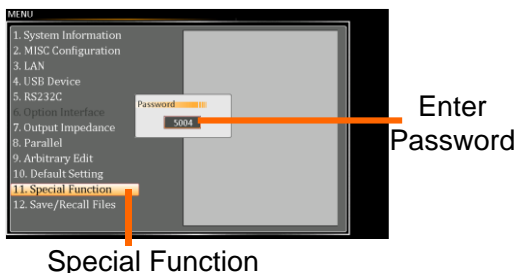

- Key in the password when prompted and then press *Enter*. The password is “5004”.

- Go to Item 1, *Update Firmware* and press *Enter*.

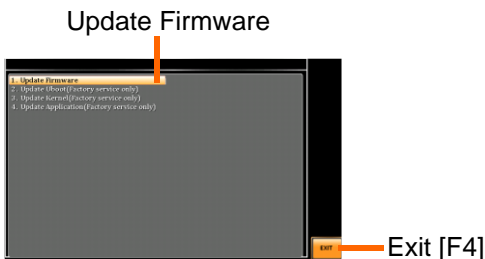

- Wait for the units to update. Upon completion the units will automatically reboot.



If the following case occurs during update process as the diagram below, it indicates failure of update and please thus contact GWINSTEK or your local dealer.



## Function Difference Table

### A Comparison between Stand Alone Type and Parallel Type

| The difference functions |                                |                                   |                          |
|--------------------------|--------------------------------|-----------------------------------|--------------------------|
| Item                     | Description                    | Stand Alone Type                  | Parallel Type            |
| 1                        | V Response                     | Fast,<br>Medium(default),<br>Slow | Medium(default),<br>Slow |
| 2                        | Output Impedance<br>Setting    | 0                                 | X                        |
| 3                        | External Parallel<br>Operation | 2~3 units flexible                | Fixed                    |



## Factory Default Settings

The following default settings are the factory configuration settings for the ASR-6000 series. For details on how to return to the factory default settings, refer to the User Manual of ASR-6000.

| Continuous Mode | ASR-6450-09    |              | ASR-6600-12  |              | ASR-6450-13.5 |              | ASR-6600-18  |              | ASR-6600-24  |              |
|-----------------|----------------|--------------|--------------|--------------|---------------|--------------|--------------|--------------|--------------|--------------|
|                 | 3P4W           | 1P2W         | 3P4W         | 1P2W         | 3P4W          | 1P2W         | 3P4W         | 1P2W         | 3P4W         | 1P2W         |
| MODE            | AC+DC-INT Mode |              |              |              |               |              |              |              |              |              |
| Range           | 100V           |              |              |              |               |              |              |              |              |              |
| ACV             | 0.00 Vrms      |              |              |              |               |              |              |              |              |              |
| DCV             | +0.00 Vdc      |              |              |              |               |              |              |              |              |              |
| FREQ            | 50.00 Hz       |              |              |              |               |              |              |              |              |              |
| IRMS            | 30.00<br>A     | 90.00<br>A   | 40.00<br>A   | 120.0<br>A   | 45.00<br>A    | 135.0<br>A   | 60.00<br>A   | 180.0<br>A   | 80.00<br>A   | 240.0<br>A   |
| ON Phs          | Fixed 0.0°     |              |              |              |               |              |              |              |              |              |
| OFF Phs         | Fixed 0.0°     |              |              |              |               |              |              |              |              |              |
| Gain            | 100            |              |              |              |               |              |              |              |              |              |
| SIG             | L1 LINE        |              |              |              |               |              |              |              |              |              |
| SRC             | L1 EXT         |              |              |              |               |              |              |              |              |              |
| Wave            | SIN            |              |              |              |               |              |              |              |              |              |
| Syc Phs         | 0              |              |              |              |               |              |              |              |              |              |
| Freq Limit      | 2000 Hz        |              |              |              |               |              |              |              |              |              |
| Vrms Limit      | 175.0 Vrms     |              |              |              |               |              |              |              |              |              |
| VPK+ Limit      | + 250 V        |              |              |              |               |              |              |              |              |              |
| VPK- Limit      | - 250 V        |              |              |              |               |              |              |              |              |              |
| IPK+ Limit      | +120.<br>0 A   | +360.<br>0 A | +160.<br>0 A | +480.<br>0 A | +180.<br>0 A  | +540.<br>0 A | +240.<br>0 A | +720.<br>0 A | +320.<br>0 A | +960.<br>0 A |
| IPK- Limit      | -120.0<br>A    | -360.0<br>A  | -160.0<br>A  | -480.0<br>A  | -180.0<br>A   | -540.0<br>A  | -240.0<br>A  | -720.0<br>A  | -320.0<br>A  | -960.0<br>A  |

| MISC Configuration   | ASR-6450-09        | ASR-6600-12        | ASR-6450-13.5        | ASR-6600-18        | ASR-6600-24        |
|----------------------|--------------------|--------------------|----------------------|--------------------|--------------------|
| T peak, hold(msec)   |                    |                    | 1                    |                    |                    |
| Phase Mode           |                    |                    | Unbalance            |                    |                    |
| Peak CLR             |                    |                    | ALL                  |                    |                    |
| Power ON             |                    |                    | OFF                  |                    |                    |
| Buzzer               |                    |                    | ON                   |                    |                    |
| Remote Sense         |                    |                    | OFF                  |                    |                    |
| V Response           |                    |                    | Medium               |                    |                    |
| Output Relay         |                    |                    | Enable               |                    |                    |
| Measure Unit         |                    |                    | RMS                  |                    |                    |
| THD Format           |                    |                    | IEC                  |                    |                    |
| External Control I/O |                    |                    | OFF                  |                    |                    |
| V Unit (TRI, ARB)    |                    |                    | rms                  |                    |                    |
| Set Change Phase     |                    |                    | OFF                  |                    |                    |
| Monitor Output1      |                    |                    | L1 Voltage           |                    |                    |
| Monitor Output2      |                    |                    | L1 Current           |                    |                    |
| Monitor Output Amp   |                    |                    | ±2.5                 |                    |                    |
| TrgOut Width (ms)    |                    |                    | 0.1                  |                    |                    |
| TrgOut Source        |                    |                    | L1                   |                    |                    |
| Re-Lock              |                    |                    | ON                   |                    |                    |
| Data Average Count   |                    |                    | 8                    |                    |                    |
| Data Update Rate     |                    |                    | Fast                 |                    |                    |
| <b>LAN</b>           | <b>ASR-6450-09</b> | <b>ASR-6600-12</b> | <b>ASR-6450-13.5</b> | <b>ASR-6600-18</b> | <b>ASR-6600-24</b> |
| DHCP                 |                    |                    | ON                   |                    |                    |
| <b>USB Device</b>    | <b>ASR-6450-09</b> | <b>ASR-6600-12</b> | <b>ASR-6450-13.5</b> | <b>ASR-6600-18</b> | <b>ASR-6600-24</b> |
| Speed                |                    |                    | Full                 |                    |                    |
| Mode                 |                    |                    | TMC                  |                    |                    |

| RS232C   | ASR-6450-09 | ASR-6600-12 | ASR-6450-13.5 | ASR-6600-18 | ASR-6600-24 |
|----------|-------------|-------------|---------------|-------------|-------------|
| Baudrate |             |             | 9600          |             |             |
| Databits |             |             | 8bits         |             |             |
| Parity   |             |             | None          |             |             |
| Stopbits |             |             | 1bit          |             |             |

| GPIB    | ASR-6450-09 | ASR-6600-12 | ASR-6450-13.5 | ASR-6600-18 | ASR-6600-24 |
|---------|-------------|-------------|---------------|-------------|-------------|
| Address |             |             | 10            |             |             |

| CAN BUS  | ASR-6450-09 | ASR-6600-12 | ASR-6450-13.5 | ASR-6600-18 | ASR-6600-24 |
|----------|-------------|-------------|---------------|-------------|-------------|
| Baudrate |             |             | 125K          |             |             |
| Node ID  |             |             | 127           |             |             |

| DeviceNet | ASR-6450-09 | ASR-6600-12 | ASR-6450-13.5 | ASR-6600-18 | ASR-6600-24 |
|-----------|-------------|-------------|---------------|-------------|-------------|
| Baudrate  |             |             | 125K          |             |             |
| MAC ID    |             |             | 63            |             |             |

| Sequence Mode | ASR-6450-09      | ASR-6600-12      | ASR-6450-13.5    | ASR-6600-18      | ASR-6600-24      |
|---------------|------------------|------------------|------------------|------------------|------------------|
| Step          | 0                |                  |                  |                  |                  |
| Time          | 0.1000 S         |                  |                  |                  |                  |
| Jump to       | OFF              |                  |                  |                  |                  |
| Jump Cnt      | 1                |                  |                  |                  |                  |
| Branch1       | OFF              |                  |                  |                  |                  |
| Branch2       | OFF              |                  |                  |                  |                  |
| Term          | CONTI            |                  |                  |                  |                  |
| Sync Code     | LL               |                  |                  |                  |                  |
| Item          | L1 L2 L3         | L1 L2 L3         | L1 L2 L3         | L1 L2 L3         | L1 L2 L3         |
| ACV           | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          |
|               | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          |
|               | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          |
| DCV           | 0.00, CT         | 0.00, CT         | 0.00, CT         | 0.00, CT         | 0.00, CT         |
|               | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          |
|               | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          | 0.00,CT          |
| Fset          | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          |
|               | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          |
|               | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          | 50.0,CT          |
| Wave          | SIN              |                  |                  |                  |                  |
| Trig Out      | LO               |                  |                  |                  |                  |
| ON Phs        | Free             |                  |                  |                  |                  |
| OFF Phs       | Free             |                  |                  |                  |                  |
| Phase         | Fixed(0) 120 240 | Fixed(0) 120 240 | Fixed(0) 120 240 | Fixed(0) 120 240 | Fixed(0) 120 240 |

| Sequence Mode | ASR-6450-09 | ASR-6600-12 | ASR-6450-13.5 | ASR-6600-18 | ASR-6600-24 |
|---------------|-------------|-------------|---------------|-------------|-------------|
| Step          | Initial     |             |               |             |             |
| Repeat        | OFF         |             |               |             |             |
| Time          | 0.1000 S    |             |               |             |             |
| Term          | Free        |             |               |             |             |
| Code          | LL          |             |               |             |             |
| Item          | L1 L2 L3    | L1 L2 L3    | L1 L2 L3      | L1 L2 L3    | L1 L2 L3    |
| ACV           | 0.00        | 0.00        | 0.00          | 0.00        | 0.00        |
| Fset          | 50.00       | 50.00       | 50.00         | 50.00       | 50.00       |
| Wave          | SIN         |             |               |             |             |
| ON Phs        | Free        |             |               |             |             |
| OFF Phs       | Free        |             |               |             |             |

## Error Messages & Messages

The following error messages or messages may appear on the ASR-6000 screen display during varied operations.

| Normal Messages                  | Description  | Protection type      |
|----------------------------------|--|----------------------|
| Keys Locked                      | All of keys are locked, except output key, long push "Lock" to disable Keys Locked                         | Display Message Only |
| Keys Unlocked                    | All of keys are unlocked   | Display Message Only |
| Invalid with Remote Control      | All of keys are locked, except Output and Shift and Local Key, press "Shift + 0" to disable Remote Control | Display Message Only |
| Invalid with Remote Lock Control | All of keys including Output and Local Keys are locked.  | Display Message Only |
| Invalid in This Meter Frozen     | Invalid Operation In This Meter Frozen, press "F8" to disable Meter Frozen                                 | Display Message Only |
| Invalid in This Page             | Invalid Operation In This Page. Valid main and simple page for preset mode.                                | Display Message Only |
| Recalled From M#                 | Recalled Preset From M0 ~ M9   | Display Message Only |
| Saved To M#                      | Saved Preset To M0 ~ M9  | Display Message Only |
| Setting Voltage Limited          | Setting voltage be limited, press "shift + V" to check allowance set range                                 | Display Message Only |
| Setting Frequency Limited        | Setting frequency be limited, press "shift + F" to check allowance set range                               | Display Message Only |
| Setting Phase Limited            | Setting ON/OFF Phase Limited   | Display Message Only |
| Setting Duty Limited             | Setting Duty be limited  | Display Message Only |
| Invalid with Output ON           | Invalid with Output ON   | Display Message Only |

|  |   |                      |
|--|---|----------------------|
| Rear USB Port Connected To PC                  | Rear USB port connected to PC   | Display Message Only |
| Rear USB Port Disconnected From PC             | Rear USB port disconnected from PC  | Display Message Only |
| Resetting...                                   | Ready For Recall Factory Default  | Display Message Only |
| Failed Factory Default                         | Recall Factory Default Failed   | Display Message Only |
| Error Password                                 | Input Error Password  | Display Message Only |
| USB Memory Unconnected                         | Could not detect USB memory, please connect a USB memory.                                       | Display Message Only |
| No File ([Filename]) in [directory]            | Not find specific file in USB specific directory  | Display Message Only |
| Saved to DEF1                                  | Saved Setting to DEF1   | Display Message Only |
| Saved to DEF2                                  | Saved Setting to DEF2   | Display Message Only |
| Preset Mode                                    | Operation at preset mode  | Display Message Only |
| Exit Preset Mode                               | Exit preset mode  | Display Message Only |
| Meter Frozen                                   | Operation at Meter Frozen mode, all measure value will stop update.                             | Display Message Only |
| Only AC-INT and 50/60Hz Active                 | Harmonic Page Limit Message   | Display Message Only |
| Configure Phase Toggle,Please wait...          | Configure Phase Toggle  | Display Message Only |
| [Filename] Saved Success                       | Save file to USB success message. [Filename] ex Preset0.Set or SEQ0.SEQ or SIM0.SIM or ARB1.ARB | Display Message Only |
| [Filename] Saved Fail                          | Save file to USB fail message   | Display Message Only |
| [Filename] Recalled Success                    | Recalled file success message   | Display Message Only |
| [Filename] Recall Fail(No File in [directory]) | Recall file fail message(not find specific file in USB specific directory)                      | Display Message Only |
| [Filename] Recall Fail(File Format Error)      | Recall file fail message(file format error)   | Display Message Only |

|  |   |                      |
|--|---|----------------------|
| [Filename] Recall Fail(File Data Error)    | Recall file fail message(file Data error(Data out of Range) )               | Display Message Only |
| Preset M# Deleted                          | Preset M0~M9 Deleted  | Display Message Only |
| ARB# Deleted                               | ARB1~ARB253 Deleted   | Display Message Only |
| Save All Data                              | Ready to save all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253)             | Display Message Only |
| All Data Saved Success                     | All data are saved successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253)    | Display Message Only |
| Recall All Data                            | Ready to recall all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253)           | Display Message Only |
| All Data Recall Success                    | All data are recalled successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253) | Display Message Only |
| Delete All Data                            | Ready to delete all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253)           | Display Message Only |
| All Data Deleted                           | All data are deleted successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~253)  | Display Message Only |
| USB Memory Connected                       | Detect USB Memory connected   | Display Message Only |
| USB Memory Access Error                    | Please check a FAT32-formatted USB memory, and Reinsert USB memory          | Display Message Only |
| USB File Write Error!                      | Can not Save File to USB  | Display Message Only |
| Screen Saved to USB:/GWDIMC###.bmp         | Screenshot be saved to USB memory successful                                | Display Message Only |
| Hardcopy Fail!(Too Many Files in USB)      | Hardcopy Fail !, Over 1000 files in USB                                     | Display Message Only |
| Valid Only AC-INT, DC-INT and AC-Sync Mode |   | Display Message Only |
| Valid Only 100V and 200V Range             | Remote Sense Setting Limit Message  | Display Message Only |
| Valid Only SIN Wave Shape                  |   | Display Message Only |

|   |   |                      |
|---|---|----------------------|
| Saved To ARB#                                     | Saved to ARB1 ~ ARB253  | Display Message Only |
| Saved To ARB#,V-Limit Invalid                     | Saved to ARB1 ~ ARB253,V-Limit Invalid  | Display Message Only |
| Saved To ARB#,V-Limit & Freq Invalid              | Saved to ARB1 ~ ARB253,V-Limit and Freq Invalid   | Display Message Only |
| Saved To ARB Fail                                 | Failed to save ARB file, please check whether the file is correct   | Display Message Only |
| Invalid in This Output Mode                       | This mode not support SEQ or SIM Valid Only AC+DC-INT, AC-INT and DC-INT Mode for SEQ Valid Only AC+DC-INT Mode for SIM | Display Message Only |
| Invalid For Auto Range                            | Auto range not allow SEQ/SIM, change the output range   | Display Message Only |
| Invalid with Output OFF, Turn ON the Output First | The output offstate does not allow the execution, turn on the output first  | Display Message Only |
| Invalid with Output ON, Turn OFF the Output First | The output onstate does not allow the execution, turn off the output first  | Display Message Only |
| Invalid in This Sequence                          | Invalid Operation In This Sequence  | Display Message Only |
| Invalid in This Simulate                          | Invalid Operation In This Simulate  | Display Message Only |
| SEQ#Deleted                                       | SEQ0~SEQ9 Deleted   | Display Message Only |
| SIM#Deleted                                       | SIM0~SIM9 Deleted   | Display Message Only |
| Cleared SEQ#                                      | Cleared SEQ0~SEQ9   | Display Message Only |
| Cleared SIM#                                      | Cleared SIM0~SIM9   | Display Message Only |
| Recalled from SEQ#                                | Recalled fromSEQ0 ~ SEQ9  | Display Message Only |
| Recalled from SIM#                                | Recalled fromSIM0 ~ SIM9  | Display Message Only |
| Recall Fail!/Recall Data Fail!                    | SEQ0 ~ SEQ9or SIM0 ~ SIM9Recall Fail!   | Display Message Only |
| Saved to SEQ#                                     | Saved toSEQ0 ~ SEQ9   | Display Message Only |



|  |   |                      |
|--|---|----------------------|
| Saved to SIM#                                    | Saved toSIM0 ~ SIM9                           | Display Message Only |
| Save Fail!                                       | SEQ0 ~ SEQ9 or SIM0 ~ SIM9 save fail!         | Display Message Only |
| Sequence preparation...                          | Sequence preparation, please wait some time   | Display Message Only |
| Sequence is ready.                               | Sequence is ready.                            | Display Message Only |
| Simulation preparation...                        | Simulation preparation, please wait some time | Display Message Only |
| Simulation is ready.                             | Simulation is ready.                          | Display Message Only |
| Alarm Clear Please Wait...                       | Alarm Clear Please Wait...                    | Display Message Only |
| Master Wait Connecting../Slave Wait Connecting.. | Master or slave waits for parallel connection | Display Message Only |
| Valid Only Standalone                            | Output Impedance Valid Only Standalone        | Display Message Only |
| CANopen Duplicate Node ID                        | CANopen Duplicate Node ID                     | Display Message Only |
| DeviceNet Duplicate Node ID                      | DeviceNet Duplicate Node ID                   | Display Message Only |
| Parallel Error/Parallel Communication Error (#)  | Parallel Communication Error (0~9)            | Display Message Only |

## Specifications

The specifications apply when the ASR-6000 is powered on for at least 30 minutes.

### Electrical specifications – ASR-6450-09/ ASR-6600-12

| Model                       | ASR-6450-09   | ASR-6600-12     |
|-----------------------------|---|-----------------|
| <b>Input ratings</b>        |   |                 |
| Power type                  | Three-phase Four-wire Y connection                                      |                 |
| Voltage range* <sup>1</sup> | 200 Vac to 240 Vac (Phase Voltage)<br>380 Vac to 460 Vac (Line Voltage) |                 |
| Frequency range             | 47 Hz to 63 Hz  |                 |
| Power factor* <sup>2</sup>  | 0.95 or higher (typ.)   |                 |
| Efficiency* <sup>2</sup>    | 80 % or higher  |                 |
| Maximum power consumption   | 12 kVA or lower   | 16 kVA or lower |

| Model                      | ASR-6450-09                 | ASR-6600-12  |                     |                             |
|----------------------------|-----------------------------|--|---------------------|-----------------------------|
| <b>AC output</b>           |                             |  |                     |                             |
| Multi-phase output         | Single-phase output         | Polyphase output   | Single-phase output | Polyphase output            |
| Output capacity            | 9 kVA                       | 1P3W: 6 kVA<br>3P4W: 9 kVA   | 12 kVA              | 1P3W: 8 kVA<br>3P4W: 12 kVA |
| Mode                       | 1P2W                        | 1P3W<br>3P4W (Y-connection)  | 1P2W                | 1P3W<br>3P4W (Y-connection) |
| Setting mode* <sup>3</sup> | ---                         | Unbalance,<br>Balance  | ---                 | Unbalance,<br>Balance       |
| Phase voltage              | Setting Range* <sup>4</sup> | 0.00 V to 175.0 V / 0.0 V to 350.0 V (sine and square wave),<br>Setting Resolution: 0.01 V / 0.1 V |                     |                             |
|                            | Accuracy* <sup>5</sup>      | ±(0.3 % of set + 0.5 V / 1 V)  |                     |                             |

|  |  |   |              |   |
|--|--|---|--------------|---|
|  |  | 1P3W: 0.00 V<br>to 350.0 V /<br>0.00 V to<br>700.0 V  |              | 1P3W: 0.00 V<br>to 350.0 V /<br>0.00 V to<br>700.0 V  |
| Line voltage setting<br>range*6        |  | 3P4W: 0.00 V<br>to 303.1 V /<br>0.00 V to<br>606.2 V<br>(sine wave<br>only)<br>Setting<br>Resolution:<br>0.01 V / 0.1 V |              | 3P4W: 0.00 V<br>to 303.1 V /<br>0.00 V to<br>606.2 V<br>(sine wave<br>only)<br>Setting<br>Resolution:<br>0.01 V / 0.1 V |
| Maximum current*7                      | 90 A / 45 A  | 30 A / 15 A   | 120 A / 60 A | 40 A / 20 A   |
| Maximum peak current*8                 | Four times of the maximum RMS current  |   |              |   |
| Load power factor*9                    | 0 to 1 (leading phase or lagging phase, 45 Hz to 65Hz)   |   |              |   |
| Frequency                              | Setting<br>range   | AC Mode: 15.00 Hz to 1000.0 Hz, AC+DC Mode: 1.00 Hz to 1000.0 Hz, Setting resolution: 0.01 Hz / 0.1 Hz                  |              |   |
|  | Accuracy   | ± 0.01% of set  |              |   |
|  | Stability*10   | ± 0.005%  |              |   |
| Output on phase<br>setting range*11    | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 1000 Hz) |   |              |   |
| Output off phase<br>setting range*11   | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 1000 Hz) |   |              |   |
| Setting range of the<br>phase angle*12 | ---  | 3P4W:<br>L2 phase: 0°<br>to 359.9°<br>L3 phase: 0°<br>to 359.9°<br>Setting<br>Resolution:<br>0.1°                       | ---          | 3P4W:<br>L2 phase: 0°<br>to 359.9°<br>L3 phase: 0°<br>to 359.9°<br>Setting<br>Resolution:<br>0.1°                       |
| Phase angle<br>accuracy*13             |  | 45 Hz to 65<br>Hz: ±1.0°<br>15 Hz to<br>1000 Hz:<br>±2.0°   | ---          | 45 Hz to 65<br>Hz: ±1.0°<br>15 Hz to<br>1000 Hz:<br>±2.0°   |
| DC offset*14                           | ± 20 mV (typ.)   |   |              |   |

| Model                                | ASR-6450-09                                     | ASR-6600-12  |  |
|--------------------------------------|---|--|--|
| DC output (only single-phase output) |   |  |  |
| Output capacity                      | 9 kW  | 12 kW  |  |
| Mode                                 | Floating output, the N terminal can be grounded |  |  |
| Voltage                              | Setting   | -250.0 V to +250.0 V / -500.0 V to +500.0 V, Setting Resolution: |  |
|                                      | Range   | 0.01 V / 0.1 V   |  |
|                                      | Accuracy*15                                     | ± ( 0.3 % of set  + 0.3 V / 0.6 V)                               |  |
| Maximum current*16                   | 90 A / 45 A                                     | 120 A / 60 A   |  |
| Maximum peak current*17              | Four times of the maximum current               |  |  |

| Model  | ASR-6450-09   | ASR-6600-12 |
|--|---|-------------|
| Output Stability, Total Harmonic Distortion, Output voltage rising time and Ripple noise |   |             |
| Line regulation  | ±0.1% or less (Phase voltage)   |             |
| Load regulation <sup>*18</sup>   | ±0.5 V / ±1.0 V (phase voltage, 0 to 100%, via output terminal)             |             |
| Distortion of Output <sup>*19</sup>  | <0.3 % @1Hz to 100Hz, <0.5 % @100.1 Hz to 500 Hz, <1 % @500.1 Hz to 1000 Hz |             |
| Output voltage response time <sup>*20</sup>  | Medium: 100 μs (typ.)<br>Slow: 300 μs (typ.)                                |             |
| Ripple noise <sup>*21</sup>  | 0.5 Vrms / 1 Vrms (TYP)   |             |

- 1) Y connection is three-phase, five-wire, Delta connection is three-phase, four-wire. (Accessories will be provided)
- 2) In the case of AC-INT mode, the rate output voltage, resistance load at maximum output current, 45 Hz to 65 Hz and sine wave output only.
- 3) Can be only set in 3P4W mode.
- 4) For phase voltage setting in polyphase output. In balance mode all phase are collectively set and in unbalance mode each phases are individually set.
- 5) For an output voltage of 10 V to 175 V / 20 V to 350 V, sine wave, an output frequency of 45 Hz to 65 Hz, no load, DC voltage setting 0V (AC+DC mode) and 23°C ± 5°C. For phase voltage setting in the polyphase output.
- 6) Line voltage only can be set in balance mode.
- 7) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the DC superimposition, the active current of AC+DC satisfies the maximum current. In the case of 40 Hz or lower or 400 Hz or higher, and that the ambient temperature is 40 degree or higher, the maximum current may decrease.
- 8) With respect to the capacitor-input rectifying load. Limited by the maximum current.
- 9) External power injection or regeneration which is over short reverse power flow capacity is not available.
- 10) \*For 45 Hz to 65 Hz, the rated output voltage, no load and the resistance load for the maximum current, and the operating temperature range.
- 11) L1, L2 and L3 phase can be set independ at independ mode in the polyphase output.
- 12) Can be set only with independ mode in polyphase output.
- 13) For an output voltage of 50V or higher, sine wave, same load and voltage condition for all phase.
- 14) In the case of the AC mode and output voltage setting to 0 V, 23°C ± 5°C
- 15) For an output voltage of -250 V to -10 V, +10 V to +250 V / -500 V to -20 V, +20 V to +500 V, no load, AC voltage set to 0V (AC+DC mode) and 23°C ± 5°C
- 16) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the AC superimposition, the active current of AC+DC satisfies the maximum current. And the ambient temperature is 40 degree or higher, the maximum current may decrease.
- 17) Instantaneous within 3 ms, limited by the maximum current at rated output voltage.
- 18) For an output voltage of 75 V to 175 V / 150 V to 350 V, a load power factor of 1, stepwise change from an output current of 0 A to maximum current (or its reverse), using the output terminal on the rear panel.
- 19) 50 % or higher of the rated output voltage, the maximum current or lower, AC and AC+DC modes, THD+N. For the polyphase output, it is a specification for phase

voltage setting.

- 20) For an output voltage of 100 V / 200 V, a load power factor of 1, with respect to stepwise change from an output current of 0 A to the maximum current (or its reverse). 10% ~ 90% of output voltage.
- 21) For 5 Hz to 1 MHz components in DC mode using the output terminal on the rear panel.

Measured value display

(All accuracy of the measurement function is indicated for 23 °C±5 °C.)

|                       |                         | Single-phase output   | Polyphase output*6  |
|-----------------------|-------------------------|---|---|
| Voltage**2            | Resolution              | 0.01 V / 0.1 V  |   |
|                       | RMS value accuracy      | 45 Hz to 65 Hz and<br>DC: ± (0.5 % of rdg +<br>0.5 V / 1 V)   | 45 Hz to 65 Hz: ±<br>(0.5 % of rdg + 0.5 V<br>/ 1 V)  |
|                       |                         | 15 Hz to 1000 Hz: ±<br>(0.7 % of rdg + 1 V /<br>2 V)          | 15 Hz to 1000 Hz: ±<br>(0.7 % of rdg + 1 V /<br>2 V)  |
|                       | AVG value accuracy      | DC: ± ( 0.5 % of rdg <br>+ 0.5 V / 1 V)                       | DC: ± ( 0.5 % of rdg <br>+ 0.5 V / 1 V)   |
|                       | PEAK value accuracy*3   | 45 Hz to 65 Hz and<br>DC: ± ( 2 % of rdg  +<br>1 V / 2 V)     | 45 Hz to 65 Hz: ±<br>( 2 % of rdg  + 1 V /<br>2 V)  |
| Current*4             | Resolution              | 0.01 A / 0.1 A  |   |
|                       | RMS value accuracy      | 45 Hz to 65 Hz and<br>DC: ± (0.5 % of rdg +<br>0.2 A / 0.1 A) | 45 Hz to 65 Hz: ±<br>(0.5 % of rdg + 0.1 A<br>/ 0.05 A)                                     |
|                       |                         | 15 Hz to 1000 Hz: ±<br>(0.7 % of rdg + 0.4 A<br>/ 0.2 A)      | 15 Hz to 1000 Hz: ±<br>(0.7 % of rdg + 0.2 A<br>/ 0.1 A)                                    |
|                       | AVG value accuracy      | DC: ± ( 0.5 % of rdg <br>+ 0.4 A / 0.2 A)                     | DC: ± ( 0.5 % of rdg <br>+ 0.2 A / 0.1 A)   |
|                       | PEAK value accuracy*5   | 45 Hz to 65 Hz and<br>DC: ± ( 2 % of rdg  +<br>2 A / 1 A)     | 45 Hz to 65 Hz: ±<br>( 2 % of rdg  + 1 A /<br>0.5 A)  |
| Power**7*8            | Active (W)              | Resolution<br>0.1 W / 1 W / 10 W                              | Accuracy*9<br>± (2 % of rdg + 6 W)  |
|                       | Apparent (VA)           | Resolution<br>0.1 VA / 1 VA / 10VA                            | Accuracy<br>± (2 % of rdg + 9 VA)   |
|                       |                         | ± (2 % of rdg + 3 VA)   |   |
|                       | Reactive (VAR)          | Resolution<br>0.1 VAR / 1 VAR / 10VAR                         | Accuracy*10<br>± (2 % of rdg + 9<br>VAR)  |
| Power factor          |                         | Range<br>0.000 to 1.000                                       | Resolution<br>0.001   |
| Harmonic voltage      | Range                   | Up to 100th order of the fundamental wave                     |   |
|                       | Full Scale              | 200 V / 400 V, 100%   |   |
| Effective value (rms) | Resolution              | 0.01 V / 0.1 V, 0.1%  |   |
|                       | Percent (%) (AC-INT and | Accuracy*12   | Up to 20th: ± (0.2 % of rdg + 0.5 V / 1 V)<br>21th to 100th: ± (0.3 % of rdg + 0.5 V / 1 V) |

50/60 Hz only) \*11

|  |             |   |   |
|--|-------------|---|---|
| Harmonic current                           | Range       | Up to 100th order of the fundamental wave     |   |
|  | Full Scale  | 126 A / 63 A, 100%                            | 42 A / 21 A, 100%                             |
| Effective value (rms)                      | Resolution  | 0.01 A / 0.1 A, 0.1%                          |   |
| Percent (%) (AC-INT and 50/60 Hz only) *11 | Accuracy*13 | Up to 20th: ± (1 % of rdg + 3 A / 1.5 A)      | Up to 20th: ± (1 % of rdg + 1 A / 0.5 A)      |
|  |             | 21th to 100th: ± (1.5 % of rdg + 3 A / 1.5 A) | 21th to 100th: ± (1.5 % of rdg + 1 A / 0.5 A) |

- 1) In the polyphase output, the specification is for phase voltage, and the DC average value display cannot be selected.
- 2) Accuracy values are in the case that the output voltage is within voltage setting range.
- 3) The accuracy is for output waveform DC or sine wave only.
- 4) Accuracy values are in the case that the output current is 5% to 100% of the maximum current.
- 5) The accuracy is for output waveform DC or sine wave only.
- 6) In the polyphase output, these are the specifications for each phase.
- 7) For an output voltage of 50 V or greater, an output current in the range of 10 % to 100 % of the maximum current, DC or an output frequency of 45 Hz to 65 Hz.
- 8) The apparent and reactive powers are not displayed in the DC mode.
- 9) For the load with the power factor 0.5 or higher.
- 10) For the load with the power factor 0.5 or lower.
- 11) The measurement does not conform to the IEC or other standard. Phase Voltage and Phase Current.
- 12) For an output voltage of 10 V to 175 V / 20 V to 350 V.
- 13) An output current in the range of 5 % to 100 % of the maximum current.

| Model           | ASR-6450-09   | ASR-6600-12       |
|-----------------|---|-------------------|
| <b>Others</b>   |   |                   |
| Protections     | UVP, OVP, OCP, OTP, OPP, Fan Fail, Peak and RMS Current Limit |                   |
| Display         | TFT-LCD, 7 inches   |                   |
| Memory function | Store and recall settings, Basic settings: 10                 |                   |
| Arbitrary Wave  | Number of memories  | 253 (nonvolatile) |
|                 | Waveform length   | 4096 words        |
|                 | Amplitude resolution  | 16 bits           |

## General Specifications – ASR-6450-09/ ASR-6600-12

| Model                 | ASR-6450-09   | ASR-6600-12   |  |
|-----------------------|---|---|--|
| Interface             | Standard  | USB   | Type A: Host, Type B: Slave, Speed: 2.0, USB-CDC / USB-TMC   |
|                       |   | LAN   | MAC Address, DNS IP Address, User Password, Gateway IP Address, Instrument IP Address, Subnet Mask |
|                       | External  |   | External Signal Input  |
|                       |   |   | External Control I/O   |
|                       |   |   | V/I Monitor Output   |
|                       |   | RS-232C   | Complies with the EIA-RS-232 specifications  |
|                       | Optional 1  | GPIB  | SCPI-1993, IEEE 488.2 compliant interface  |
| Optional 2            | CAN Bus   | Complies with CAN 2.0A or 2.0B based protocol   |  |
| Optional 3            | Device Net  | Complies with CAN 2.0A or 2.0B based protocol   |  |
| Insulation resistance | Between input and chassis, output and chassis, input and output | DC 500 V, 30 MΩ or more   |  |
| Withstand voltage     | Between input and chassis, output and chassis, input and output | AC 1500 V or DC 2130 V, 1 minute  |  |
| EMC                   |   | EN 61326-1 (Class A)<br>EN 61326-2-1/-2-2 (Class A)<br>EN 61000-3-2 (Class A, Group 1)<br>EN 61000-3-3 (Class A, Group 1)<br>EN 61000-4-2/-4-3/-4-4/-4-5/-4-6/-4-8/-4-11 (Class A, Group 1)<br>EN 55011 (Class A, Group1) |  |
| Safety                |   | EN 61010-1  |  |
| Environment           | Operating environment   | Indoor use, Overvoltage Category II   |  |
|                       | Operating temperature range                                     | 0 °C to 40 °C   |  |
|                       | Storage temperature range                                       | -10 °C to 70 °C   |  |
|                       | Operating humidity range  | 20 %rh to 80 % RH (no condensation)   |  |
|                       | Storage humidity range  | 90 % RH or less (no condensation)   |  |
|                       | Altitude  | Up to 2000 m  |  |
| Dimensions (mm)       |   | 598(W)×937(H)×906(D) (not including protrusions)  |  |
| Weight                |   | Approx. 155 kg  |  |

- A value with the accuracy is the guaranteed value of the specification. However, an accuracy noted as reference value shows the supplemental data for reference when the product is used, and is not under the guarantee. A value without the accuracy is the nominal value or representative value (shown as typ.).
- Product specifications are subject to change without notice.

**Electrical specifications – ASR-6450-13.5/ASR-6600-18**

| Model                       | ASR-6450-13.5   | ASR-6600-18     |
|-----------------------------|---|-----------------|
| <b>Input ratings</b>        |   |                 |
| Power type                  | Three-phase Four-wire Y connection                                      |                 |
| Voltage range* <sup>1</sup> | 200 Vac to 240 Vac (Phase Voltage)<br>380 Vac to 460 Vac (Line Voltage) |                 |
| Frequency range             | 47 Hz to 63 Hz  |                 |
| Power factor* <sup>2</sup>  | 0.95 or higher (typ.)   |                 |
| Efficiency* <sup>2</sup>    | 80 % or higher  |                 |
| Maximum power consumption   | 18 kVA or lower   | 24 kVA or lower |

| Model                      | ASR-6450-13.5               | ASR-6600-18  |                     |                             |
|----------------------------|-----------------------------|--|---------------------|-----------------------------|
| <b>AC output</b>           |                             |  |                     |                             |
| Multi-phase output         | Single-phase output         | Polyphase output   | Single-phase output | Polyphase output            |
| Output capacity            | 13.5 kVA                    | 1P3W: 9kVA<br>3P4W: 13.5kVA  | 18 kVA              | 1P3W: 12kVA<br>3P4W: 18kVA  |
| Mode                       | 1P2W                        | 1P3W<br>3P4W (Y-connection)  | 1P2W                | 1P3W<br>3P4W (Y-connection) |
| Setting mode* <sup>3</sup> | ---                         | Unbalance, Balanced  | ---                 | Unbalance, Balanced         |
| Phase voltage              | Setting Range* <sup>4</sup> | 0.00 V to 175.0 V / 0.0 V to 350.0 V (sine and square wave),<br>Setting Resolution: 0.01 V / 0.1 V |                     |                             |
|                            | Accuracy* <sup>5</sup>      | ±(0.3 % of set + 0.5 V / 1 V)  |                     |                             |

|  |  |  |              |             |
|--|--|--|--------------|-------------|
| Line voltage setting range* <sup>6</sup> | 1P3W: 0.00 V to 350.0 V / 0.00 V to 700.0 V                  | 1P3W: 0.00 V to 350.0 V / 0.00 V to 700.0 V                  |              |             |
|  | 3P4W: 0.00 V to 303.1 V / 0.00 V to 606.2 V (sine wave only) | 3P4W: 0.00 V to 303.1 V / 0.00 V to 606.2 V (sine wave only) |              |             |
|  | Setting Resolution: 0.01 V / 0.1 V                           | Setting Resolution: 0.01 V / 0.1 V                           |              |             |
| Maximum current* <sup>7</sup>            | 135 A / 67.5 A   | 45 A / 22.5 A  | 180 A / 90 A | 60 A / 30 A |
| Maximum peak current* <sup>8</sup>       | Four times of the maximum RMS current                        |  |              |             |
| Load power factor* <sup>9</sup>          | 0 to 1 (leading phase or lagging phase, 45 Hz to 65Hz)       |  |              |             |



|   |  |  |   |
|---|--|--|---|
| Frequency   | Setting range  | AC Mode: 15.00 Hz to 1000.0 Hz, AC+DC Mode: 1.00 Hz to 1000.0 Hz, Setting resolution: 0.01 Hz / 0.1 Hz |   |
|   | Accuracy   | ± 0.01% of set   |   |
|   | Stability <sup>*10</sup>   | ± 0.005%   |   |
| Output on phase setting range <sup>*11</sup>  | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 1000 Hz) |  |   |
| Output off phase setting range <sup>*11</sup>   | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 1000 Hz) |  |   |
| Setting range of the phase angle <sup>*12</sup>   | ---  | 3P4W:<br>L2 phase: 0° to 359.9°<br>L3 phase: 0° to 359.9°<br>Setting Resolution: 0.1°                  | ---   |
|   | ---  | ---  | 3P4W:<br>L2 phase: 0° to 359.9°<br>L3 phase: 0° to 359.9°<br>Setting Resolution: 0.1° |
|   | ---  | ---  | ---   |
|   | ---  | ---  | ---   |
| Phase angle accuracy <sup>*13</sup>   | ---  | 45 Hz to 65 Hz: ±1.0°<br>15 Hz to 1000 Hz: ±2.0°   | ---   |
|   | ---  | ---  | 45 Hz to 65 Hz: ±1.0°<br>15 Hz to 1000 Hz: ±2.0°                                      |
| DC offset <sup>*14</sup>  | ± 20 mV (typ.)   |  |   |
| Model   | ASR-6450-13.5  | ASR-6600-18  |   |
| <b>DC output (only single-phase output)</b>   |  |  |   |
| Output capacity   | 13.5 kW  | 18 kW  |   |
| Mode  | Floating output, the N terminal can be grounded  |  |   |
| Voltage   | Setting Range  | -250.0 V to +250.0 V / -500.0 V to +500.0 V, Setting Resolution: 0.01 V / 0.1 V                        |   |
|   | Accuracy <sup>*15</sup>  | ± ( 0.3 % of set  + 0.3 V / 0.6 V)   |   |
| Maximum current <sup>*16</sup>  | 135 A / 67.5 A   | 180 A / 90 A   |   |
| Maximum peak current <sup>*17</sup>   | Four times of the maximum current  |  |   |
| Model   | ASR-6450-13.5  | ASR-6600-18  |   |
| <b>Output Stability, Total Harmonic Distortion, Output voltage rising time and Ripple noise</b> |  |  |   |
| Line regulation   | ±0.1% or less (Phase voltage)  |  |   |
| Load regulation <sup>*18</sup>  | ±0.5 V / ±1.0 V (phase voltage, 0 to 100%, via output terminal)                                |  |   |
| Distortion of Output <sup>*19</sup>   | <0.3 % @1Hz to 100Hz, <0.5 % @100.1 Hz to 500 Hz, <1 % @500.1 Hz to 1000 Hz                    |  |   |
| Output voltage response time <sup>*20</sup>   | Medium: 100 μs (typ.)  |  |   |
|   | Slow: 300 μs (typ.)  |  |   |
| Ripple noise <sup>*21</sup>   | 0.5 Vrms / 1 Vrms (TYP)  |  |   |

- 1) Y connection is three-phase, five-wire, Delta connection is three-phase, four-wire. (Accessories will be provided)
- 2) In the case of AC-INT mode, the rate output voltage, resistance load at maximum

- output current, 45 Hz to 65 Hz and sine wave output only.
- 3) Can be only set in 3P4W mode.
  - 4) For phase voltage setting in polyphase output. In balance mode all phase are collectively set and in unbalance mode each phases are individually set.
  - 5) For an output voltage of 10 V to 175 V / 20 V to 350 V, sine wave, an output frequency of 45 Hz to 65 Hz, no load, DC voltage setting 0V (AC+DC mode) and 23°C ± 5°C. For phase voltage setting in the polyphase output.
  - 6) Line voltage only can be set in balance mode.
  - 7) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the DC superimposition, the active current of AC+DC satisfies the maximum current. In the case of 40 Hz or lower or 400 Hz or higher, and that the ambient temperature is 40 degree or higher, the maximum current may decrease.
  - 8) With respect to the capacitor-input rectifying load. Limited by the maximum current.
  - 9) External power injection or regeneration which is over short reverse power flow capacity is not available.
  - 10) For 45 Hz to 65 Hz, the rated output voltage, no load and the resistance load for the maximum current, and the operating temperature range.
  - 11) L1, L2 and L3 phase can be set independ at independ mode in the polyphase output.
  - 12) Can be set only with independ mode in polyphase output.
  - 13) For an output voltage of 50V or higher, sine wave, same load and voltage condition for all phase.
  - 14) In the case of the AC mode and output voltage setting to 0 V, 23°C ± 5°C
  - 15) For an output voltage of -250 V to -10 V, +10 V to +250 V / -500 V to -20 V, +20 V to +500 V, no load, AC voltage set to 0V (AC+DC mode) and 23°C ± 5°C
  - 16) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the AC superimposition, the active current of AC+DC satisfies the maximum current. And the ambient temperature is 40 degree or higher, the maximum current may decrease.
  - 17) Instantaneous within 3 ms, limited by the maximum current at rated output voltage.
  - 18) For an output voltage of 75 V to 175 V / 150 V to 350 V, a load power factor of 1, stepwise change from an output current of 0 A to maximum current (or its reverse), using the output terminal on the rear panel.
  - 19) 50 % or higher of the rated output voltage, the maximum current or lower, AC and AC+DC modes, THD+N. For the polyphase output, it is a specification for phase voltage setting.
  - 20) For an output voltage of 100 V / 200 V, a load power factor of 1, with respect to stepwise change from an output current of 0 A to the maximum current (or its reverse). 10% ~ 90% of output voltage.
  - 21) For 5 Hz to 1 MHz components in DC mode using the output terminal on the rear panel.

Measured value display

(All accuracy of the measurement function is indicated for 23 °C±5 °C.)

|                         | Single-phase output   | Polyphase output <sup>16</sup>                       |
|-------------------------|---|--|
| Resolution              | 0.01 V / 0.1 V  |  |
| Voltage <sup>11,2</sup> | 45 Hz to 65 Hz and<br>DC: ± (0.5 % of rdg +<br>0.5 V / 1 V) | 45 Hz to 65 Hz: ±<br>(0.5 % of rdg + 0.5 V<br>/ 1 V) |
|                         | 15 Hz to 1000 Hz: ±   | 15 Hz to 1000 Hz: ±                                  |

|  |                                   |  |   |   |
|--|-----------------------------------|--|---|---|
|  |                                   | (0.7 % of rdg + 1 V / 2 V)   | (0.7 % of rdg + 1 V / 2 V)  |   |
|  | AVG value accuracy                | DC: $\pm ( 0.5 \% \text{ of rdg}  + 0.5 \text{ V} / 1 \text{ V})$  | DC: $\pm ( 0.5 \% \text{ of rdg}  + 0.5 \text{ V} / 1 \text{ V})$   |   |
|  | PEAK value accuracy <sup>*3</sup> | 45 Hz to 65 Hz and DC: $\pm ( 2 \% \text{ of rdg}  + 1 \text{ V} / 2 \text{ V})$   | 45 Hz to 65 Hz: $\pm ( 2 \% \text{ of rdg}  + 1 \text{ V} / 2 \text{ V})$   |   |
|  | Resolution                        | 0.01 A / 0.1 A   |   |   |
| Current <sup>*4</sup>  | RMS value accuracy                | 45 Hz to 65 Hz and DC: $\pm (0.5 \% \text{ of rdg} + 0.3 \text{ A} / 0.15 \text{ A})$<br>15 Hz to 1000 Hz: $\pm (0.7 \% \text{ of rdg} + 0.6 \text{ A} / 0.4 \text{ A})$ | 45 Hz to 65 Hz: $\pm (0.5 \% \text{ of rdg} + 0.15 \text{ A} / 0.08 \text{ A})$<br>15 Hz to 1000 Hz: $\pm (0.7 \% \text{ of rdg} + 0.3 \text{ A} / 0.15 \text{ A})$ |   |
|  | AVG value accuracy                | DC: $\pm ( 0.5 \% \text{ of rdg}  + 0.6 \text{ A} / 0.4 \text{ A})$  | DC: $\pm ( 0.5 \% \text{ of rdg}  + 0.3 \text{ A} / 0.15 \text{ A})$  |   |
|  | PEAK value accuracy <sup>*5</sup> | 45 Hz to 65 Hz and DC: $\pm ( 2 \% \text{ of rdg}  + 3 \text{ A} / 1.5 \text{ A})$   | 45 Hz to 65 Hz: $\pm ( 2 \% \text{ of rdg}  + 1.5 \text{ A} / 0.75 \text{ A})$  |   |
|  | Active (W)                        | Resolution   | 0.1 W / 1 W / 10 W  |   |
|  |                                   | Accuracy <sup>*9</sup>   | $\pm (2 \% \text{ of rdg} + 6 \text{ W})$   | $\pm (2 \% \text{ of rdg} + 2 \text{ W})$ |
| Apparent (VA)  | Resolution                        | 0.1 VA / 1 VA / 10VA   |   |   |
|  | Accuracy                          | $\pm (2 \% \text{ of rdg} + 9 \text{ VA})$   | $\pm (2 \% \text{ of rdg} + 3 \text{ VA})$  |   |
| Reactive (VAR)   | Resolution                        | 0.1 VAR / 1 VAR / 10VAR  |   |   |
|  | Accuracy <sup>*10</sup>           | $\pm (2 \% \text{ of rdg} + 9 \text{ VAR})$  | $\pm (2 \% \text{ of rdg} + 3 \text{ VAR})$   |   |
| Power factor   | Range                             | 0.000 to 1.000   |   |   |
|  | Resolution                        | 0.001  |   |   |
| Harmonic voltage Effective value (rms) Percent (%) (AC-INT and 50/60 Hz only) <sup>*11</sup> | Range                             | Up to 100th order of the fundamental wave  |   |   |
|  | Full Scale                        | 200 V / 400 V, 100%  |   |   |
| Harmonic current Effective value (rms) Percent (%) (AC-INT and 50/60 Hz only) <sup>*11</sup> | Resolution                        | 0.01 V / 0.1 V, 0.1%   |   |   |
|  | Accuracy <sup>*12</sup>           | Up to 20th: $\pm (0.2 \% \text{ of rdg} + 0.5 \text{ V} / 1 \text{ V})$<br>21th to 100th: $\pm (0.3 \% \text{ of rdg} + 0.5 \text{ V} / 1 \text{ V})$                    |   |   |
| Harmonic voltage Effective value (rms) Percent (%) (AC-INT and 50/60 Hz only) <sup>*11</sup> | Range                             | Up to 100th order of the fundamental wave  |   |   |
|  | Full Scale                        | 189 A / 94.5 A, 100%   | 63 A / 31.5 A, 100%   |   |
| Harmonic current Effective value (rms) Percent (%) (AC-INT and 50/60 Hz only) <sup>*11</sup> | Resolution                        | 0.01 A / 0.1 A, 0.1%   |   |   |
|  | Accuracy <sup>*13</sup>           | Up to 20th: $\pm (1 \% \text{ of rdg} + 3 \text{ A} / 1.5 \text{ A})$<br>21th to 100th: $\pm (1.5 \% \text{ of rdg} + 3 \text{ A} / 1.5 \text{ A})$                      | Up to 20th: $\pm (1 \% \text{ of rdg} + 1 \text{ A} / 0.5 \text{ A})$<br>21th to 100th: $\pm (1.5 \% \text{ of rdg} + 1 \text{ A} / 0.5 \text{ A})$                 |   |

- 1) In the polyphase output, the specification is for phase voltage, and the DC average value display cannot be selected.
- 2) Accuracy values are in the case that the output voltage is within voltage setting range.

- 3) The accuracy is for output waveform DC or sine wave only.
- 4) Accuracy values are in the case that the output current is 5% to 100% of the maximum current.
- 5) The accuracy is for output waveform DC or sine wave only.
- 6) In the polyphase output, these are the specifications for each phase.
- 7) For an output voltage of 50 V or greater, an output current in the range of 10 % to 100 % of the maximum current, DC or an output frequency of 45 Hz to 65 Hz.
- 8) The apparent and reactive powers are not displayed in the DC mode.
- 9) For the load with the power factor 0.5 or higher.
- 10) For the load with the power factor 0.5 or lower.
- 11) The measurement does not conform to the IEC or other standard. Phase Voltage and Phase Current.
- 12) For an output voltage of 10 V to 175 V / 20 V to 350 V.
- 13) An output current in the range of 5 % to 100 % of the maximum current.

| Model           | ASR-6450-13.5   | ASR-6600-18       |
|-----------------|---|-------------------|
| <b>Others</b>   |   |                   |
| Protections     | UVP, OVP, OCP, OTP, OPP, Fan Fail, Peak and RMS Current Limit |                   |
| Display         | TFT-LCD, 7 inches   |                   |
| Memory function | Store and recall settings, Basic settings: 10                 |                   |
| Arbitrary Wave  | Number of memories  | 253 (nonvolatile) |
|                 | Waveform length   | 4096 words        |
|                 | Amplitude resolution  | 16 bits           |

## General Specifications – ASR-6450-13.5/ ASR-6600-18

| Model                 | ASR-6450-13.5   | ASR-6600-18   |  |
|-----------------------|---|---|--|
| Interface             | Standard  | USB   | Type A: Host, Type B: Slave, Speed: 2.0, USB-CDC / USB-TMC   |
|                       |   | LAN   | MAC Address, DNS IP Address, User Password, Gateway IP Address, Instrument IP Address, Subnet Mask |
|                       | External  |   | External Signal Input  |
|                       |   |   | External Control I/O   |
|                       |   |   | V/I Monitor Output   |
|                       |   | RS-232C   | Complies with the EIA-RS-232 specifications  |
|                       | Optional 1  | GPIB  | SCPI-1993, IEEE 488.2 compliant interface  |
| Optional 2            | CAN Bus   | Complies with CAN 2.0A or 2.0B based protocol   |  |
| Optional 3            | Device Net  | Complies with CAN 2.0A or 2.0B based protocol   |  |
| Insulation resistance | Between input and chassis, output and chassis, input and output | DC 500 V, 30 MΩ or more   |  |
| Withstand voltage     | Between input and chassis, output and chassis, input and output | AC 1500 V or DC 2130 V, 1 minute  |  |
| EMC                   |   | EN 61326-1 (Class A)<br>EN 61326-2-1/-2-2 (Class A)<br>EN 61000-3-2 (Class A, Group 1)<br>EN 61000-3-3 (Class A, Group 1)<br>EN 61000-4-2/-4-3/-4-4/-4-5/-4-6/-4-8/-4-11 (Class A, Group 1)<br>EN 55011 (Class A, Group1) |  |
| Safety                |   | EN 61010-1  |  |
| Environment           | Operating environment   | Indoor use, Overvoltage Category II   |  |
|                       | Operating temperature range                                     | 0 °C to 40 °C   |  |
|                       | Storage temperature range                                       | -10 °C to 70 °C   |  |
|                       | Operating humidity range  | 20 %rh to 80 % RH (no condensation)   |  |
|                       | Storage humidity range  | 90 % RH or less (no condensation)   |  |
|                       | Altitude  | Up to 2000 m  |  |
| Dimensions (mm)       |   | 598(W)×1116(H)×906(D) (not including protrusions)   |  |
| Weight                |   | Approx. 200 kg  |  |

- A value with the accuracy is the guaranteed value of the specification. However, an accuracy noted as reference value shows the supplemental data for reference when the product is used, and is not under the guarantee. A value without the accuracy is the nominal value or representative value (shown as typ.).
- Product specifications are subject to change without notice.

## Electrical specifications – ASR -6600-24

| Model                       |                                    | ASR-6600-24 |
|-----------------------------|------------------------------------|-------------|
| <b>Input ratings</b>        |                                    |             |
| Power type                  | Three-phase Four-wire Y connection |             |
| Voltage range <sup>*1</sup> | 380 Vac to 460 Vac (Line Voltage)  |             |
| Frequency range             | 47 Hz to 63 Hz                     |             |
| Power factor <sup>*2</sup>  | 0.95 or higher (typ.)              |             |
| Efficiency <sup>*2</sup>    | 80 % or higher                     |             |
| Maximum power consumption   | 32 kVA or lower                    |             |

| Model   |   | ASR-6600-24   |
|---|---|---|
| <b>AC output</b>                                |   |   |
| Multi-phase output                              | Single-phase output   | Polyphase output  |
| Output capacity                                 | 24 kVA  | 1P3W: 18 kVA 3P4W: 24 kVA   |
| Mode  | 1P2W  | 1P3W<br>3P4W (Y-connection)   |
| Setting mode <sup>*3</sup>                      | ---   | Unbalance, Balance  |
| Phase voltage                                   | Setting Range <sup>*4</sup>   | 0.00 V to 175.0 V / 0.0 V to 350.0 V (sine and square wave),<br>Setting Resolution: 0.01 V / 0.1 V  |
|   | Accuracy <sup>*5</sup>  | 0.00 Vpp to 500.0 Vpp / 0.00 Vpp to 1000 Vpp (triangle and arbitrary wave), Setting Resolution: 0.01 Vpp / 0.1 Vpp / 1 Vpp                        |
|   |   | ±(0.3 % of set + 0.5 V / 1 V)   |
| Line voltage setting range <sup>*6</sup>        |   | 1P3W: 0.00 V to 350.0 V / 0.00 V to 700.0 V<br>3P4W: 0.00 V to 303.1 V / 0.00 V to 606.2 V (sine wave only)<br>Setting Resolution: 0.01 V / 0.1 V |
| Maximum current <sup>*7</sup>                   | 240 A / 120 A   | 80 A / 40 A   |
| Maximum peak current <sup>*8</sup>              | Four times of the maximum RMS current   |   |
| Load power factor <sup>*9</sup>                 | 0 to 1 (leading phase or lagging phase, 45 Hz to 65Hz)  |   |
| Frequency                                       | Setting range   | AC Mode: 15.00 Hz to 550.0 Hz, AC+DC Mode: 1.00 Hz to 550.0 Hz, Setting resolution: 0.01 Hz / 0.1 Hz  |
|   | Accuracy  | ± 0.01% of set  |
|   | Stability <sup>*10</sup>  | ± 0.005%  |
| Output on phase setting range <sup>*11</sup>    | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 550 Hz) |   |
| Output off phase setting range <sup>*11</sup>   | 0.0° to 359.9° variable (Free / Fix selectable), 0.1° (1 Hz to 500 Hz), 1° (500 Hz to 550 Hz) |   |
| Setting range of the phase angle <sup>*12</sup> | ---   | 3P4W:<br>L2 phase: 0° to 359.9°<br>L3 phase: 0° to 359.9°<br>Setting Resolution: 0.1°   |

|                                     |                    |   |
|-------------------------------------|--------------------|---|
| Phase angle accuracy <sup>*13</sup> | ---                | 45 Hz to 65 Hz: $\pm 1.0^\circ$<br>15 Hz to 550 Hz: $\pm 2.0^\circ$ |
| DC offset <sup>*14</sup>            | $\pm 20$ mV (typ.) |   |

|                                      |   |  |
|--------------------------------------|---|--|
| Model                                | ASR-6600-24                                     |  |
| DC output (only single-phase output) |   |  |
| Output capacity                      | 24 kW   |  |
| Mode                                 | Floating output, the N terminal can be grounded |  |
| Voltage                              | Setting   | -250.0 V to +250.0 V / -500.0 V to +500.0 V, Setting Resolution: |
|                                      | Range   | 0.01 V / 0.1 V   |
|                                      | Accuracy <sup>*15</sup>                         | $\pm( 0.3\% \text{ of set}  + 0.3 \text{ V} / 0.6 \text{ V})$    |
| Maximum current <sup>*16</sup>       | 240 A / 140 A                                   |  |
| Maximum peak current <sup>*17</sup>  | Four times of the maximum current               |  |

|  |   |  |
|--|---|--|
| Model  | ASR-6600-24   |  |
| Output Stability, Total Harmonic Distortion, Output voltage rising time and Ripple noise |   |  |
| Line regulation  | $\pm 0.1\%$ or less (Phase voltage)   |  |
| Load regulation <sup>*18</sup>   | $\pm 1 \text{ V} / \pm 2 \text{ V}$ (phase voltage, 0 to 100%, via output terminal) |  |
| Distortion of Output <sup>*19</sup>  | $< 0.3\%$ @1Hz to 100Hz, $< 0.5\%$ @100.1 Hz to 550 Hz                              |  |
| Output voltage response time <sup>*20</sup>  | Medium: 100 $\mu\text{s}$ (typ.)<br>Slow: 300 $\mu\text{s}$ (typ.)                  |  |
| Ripple noise <sup>*21</sup>  | 0.5 Vrms / 1 Vrms (TYP)   |  |

- 1) Y connection is three-phase, five-wire, Delta connection is three-phase, four-wire. (Accessories will be provided)
- 2) In the case of AC-INT mode, the rate output voltage, resistance load at maximum output current, 45 Hz to 65 Hz and sine wave output only.
- 3) Can be only set in 3P4W mode.
- 4) For phase voltage setting in polyphase output. In balance mode all phase are collectively set and in unbalance mode each phases are individually set.
- 5) For an output voltage of 10 V to 175 V / 20 V to 350 V, sine wave, an output frequency of 45 Hz to 65 Hz, no load, DC voltage setting 0V (AC+DC mode) and 23°C  $\pm$  5°C. For phase voltage setting in the polyphase output.
- 6) Line voltage only can be set in balance mode.
- 7) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the DC superimposition, the active current of AC+DC satisfies the maximum current. In the case of 40 Hz or lower or 400 Hz or higher, and that the ambient temperature is 40 degree or higher, the maximum current may decrease.
- 8) With respect to the capacitor-input rectifying load. Limited by the maximum current.
- 9) External power injection or regeneration which is over short reverse power flow capacity is not available.
- 10) \*For 45 Hz to 65 Hz, the rated output voltage, no load and the resistance load for the maximum current, and the operating temperature range.
- 11) L1, L2 and L3 phase can be set independ at independ mode in the polyphase output.
- 12) Can be set only with independ mode in polyphase output.

- 13) For an output voltage of 50V or higher, sine wave, same load and voltage condition for all phase.
- 14) In the case of the AC mode and output voltage setting to 0 V, 23°C ± 5°C
- 15) For an output voltage of -250 V to -10 V, +10 V to +250 V / -500 V to -20 V, +20 V to +500 V, no load, AC voltage set to 0V (AC+DC mode) and 23°C ± 5°C
- 16) If the output voltage is higher than rated value, this is limited to satisfy the power capacity. If there is the AC superimposition, the active current of AC+DC satisfies the maximum current. And the ambient temperature is 40 degree or higher, the maximum current may decrease.
- 17) Instantaneous within 3 ms, limited by the maximum current at rated output voltage.
- 18) For an output voltage of 75 V to 175 V / 150 V to 350 V, a load power factor of 1, stepwise change from an output current of 0 A to maximum current (or its reverse), using the output terminal on the rear panel.
- 19) 50 % or higher of the rated output voltage, the maximum current or lower, AC and AC+DC modes, THD+N. For the polyphase output, it is a specification for phase voltage setting.
- 20) For an output voltage of 100 V / 200 V, a load power factor of 1, with respect to stepwise change from an output current of 0 A to the maximum current (or its reverse). 10% ~ 90% of output voltage.
- 21) For 5 Hz to 1 MHz components in DC mode using the output terminal on the rear panel.

Measured value display

(All accuracy of the measurement function is indicated for 23 °C±5 °C.)

|                         |                                   | Single-phase output   | Polyphase output* <sup>6</sup>   |
|-------------------------|-----------------------------------|---|--|
| Voltage* <sup>1+2</sup> | Resolution                        | 0.01 V / 0.1 V  |  |
|                         | RMS value accuracy                | 45 Hz to 65 Hz and DC:<br>±(0.5% of rdg + 0.5 V / 1 V)<br>15 Hz to 550 Hz: ±<br>(0.7% of rdg + 1 V / 2 V)         | 45 Hz to 65 Hz: ±<br>(0.5% of rdg + 0.5 V / 1 V)<br>15 Hz to 550 Hz: ±<br>(0.7% of rdg + 1 V / 2 V)          |
|                         | AVG value accuracy                | DC: ± ( 0.5% of rdg  + 0.5 V / 1 V)   | DC: ± ( 0.5% of rdg  + 0.5 V / 1 V)  |
|                         | PEAK value accuracy* <sup>3</sup> | 45 Hz to 65 Hz and DC: ±<br>( 2% of rdg  + 1 V / 2 V)   | 45 Hz to 65 Hz: ±( 2% of rdg  + 1 V / 2 V)   |
|                         | Resolution                        | 0.01 A / 0.1 A  |  |
| Current* <sup>4</sup>   | RMS value accuracy                | 45 Hz to 65 Hz and DC: ±<br>(0.5% of rdg + 0.3 A / 0.15 A)<br>15 Hz to 550 Hz: ±<br>(0.7% of rdg + 0.6 A / 0.4 A) | 45 Hz to 65 Hz: ±<br>(0.5% of rdg + 0.15 A / 0.08 A)<br>15 Hz to 550 Hz: ±<br>(0.7% of rdg + 0.3 A / 0.15 A) |
|                         | AVG value accuracy                | DC: ± ( 0.5% of rdg  + 0.6 A / 0.4 A)   | DC: ± ( 0.5% of rdg  + 0.3 A / 0.15 A)   |
|                         | PEAK value accuracy* <sup>5</sup> | 45 Hz to 65 Hz and DC: ±<br>( 2% of rdg  + 3 A / 1.5 A)   | 45 Hz to 65 Hz: ±<br>( 2% of rdg  + 1.5 A / 0.75 A)  |
|                         | Active (W)                        | Resolution  | 0.1 W / 1 W / 10 W   |
| Power* <sup>7+8</sup>   | Accuracy* <sup>9</sup>            | ± (2% of rdg + 9 W)   | ± (2% of rdg + 3 W)  |
|                         | Apparent                          | Resolution  | 0.1 VA / 1 VA / 10VA   |



|  |                         |   |   |   |
|--|-------------------------|---|---|---|
|  | (VA)                    | Accuracy  | $\pm (2 \% \text{ of rdg} + 18 \text{ VA})$   | $\pm (2 \% \text{ of rdg} + 6 \text{ VA})$  |
|  | Reactive (VAR)          | Resolution  | 0.1 VAR / 1 VAR / 10VAR   |   |
|  |                         | Accuracy* <sup>10</sup>   | $\pm (2 \% \text{ of rdg} + 18 \text{ VAR})$  | $\pm (2 \% \text{ of rdg} + 6 \text{ VAR})$ |
| Power factor   | Range                   | 0.000 to 1.000  |   |   |
|  | Resolution              | 0.001   |   |   |
| Harmonic voltage                                       | Range                   | Up to 100th order of the fundamental wave   |   |   |
|  | Full Scale              | 200 V / 400 V, 100%   |   |   |
| Effective value (rms)                                  | Resolution              | 0.01 V / 0.1 V, 0.1%  |   |   |
| Percent (%) (AC-INT and 50/60 Hz only) * <sup>11</sup> | Accuracy* <sup>12</sup> | Up to 20th: $\pm (0.2 \% \text{ of rdg} + 0.5 \text{ V} / 1 \text{ V})$<br>21th to 100th: $\pm (0.3 \% \text{ of rdg} + 0.5 \text{ V} / 1 \text{ V})$ |   |   |
| Harmonic current                                       | Range                   | Up to 100th order of the fundamental wave   |   |   |
|  | Full Scale              | 252 A / 126 A, 100%   | 84 A / 42 A, 100%   |   |
| Effective value (rms)                                  | Resolution              | 0.01 A / 0.1 A, 0.1%  |   |   |
| Percent (%) (AC-INT and 50/60 Hz only) * <sup>11</sup> | Accuracy* <sup>13</sup> | Up to 20th: $\pm (1 \% \text{ of rdg} + 3 \text{ A} / 1.5 \text{ A})$<br>21th to 100th: $\pm (1.5 \% \text{ of rdg} + 3 \text{ A} / 1.5 \text{ A})$   | Up to 20th: $\pm (1 \% \text{ of rdg} + 1 \text{ A} / 0.5 \text{ A})$<br>21th to 100th: $\pm (1.5 \% \text{ of rdg} + 1 \text{ A} / 0.5 \text{ A})$ |   |

- 1) In the polyphase output, the specification is for phase voltage, and the DC average value display cannot be selected.
- 2) Accuracy values are in the case that the output voltage is within voltage setting range.
- 3) The accuracy is for output waveform DC or sine wave only.
- 4) Accuracy values are in the case that the output current is 5% to 100% of the maximum current.
- 5) The accuracy is for output waveform DC or sine wave only.
- 6) In the polyphase output, these are the specifications for each phase.
- 7) For an output voltage of 50 V or greater, an output current in the range of 10 % to 100 % of the maximum current, DC or an output frequency of 45 Hz to 65 Hz.
- 8) The apparent and reactive powers are not displayed in the DC mode.
- 9) For the load with the power factor 0.5 or higher.
- 10) For the load with the power factor 0.5 or lower.
- 11) The measurement does not conform to the IEC or other standard. Phase Voltage and Phase Current.
- 12) For an output voltage of 10 V to 175 V / 20 V to 350 V.
- 13) An output current in the range of 5 % to 100 % of the maximum current.

Model ASR-6600-24

|                 |   |                   |
|-----------------|---|-------------------|
| Others          |   |                   |
| Protections     | UVP, OVP, OCP, OTP, OPP, Fan Fail, Peak and RMS Current Limit |                   |
| Display         | TFT-LCD, 7 inches   |                   |
| Memory function | Store and recall settings, Basic settings: 10                 |                   |
| Arbitrary Wave  | Number of memories  | 253 (nonvolatile) |
|                 | Waveform length   | 4096 words        |
|                 | Amplitude resolution  | 16 bits           |

**General Specifications – ASR-6600-24**

| Model                 |   | ASR-6600-24   |
|-----------------------|---|---|
| Interface             | Standard  | USB<br>Type A: Host, Type B: Slave, Speed: 2.0, USB-CDC / USB-TMC   |
|                       | Standard  | LAN<br>MAC Address, DNS IP Address, User Password, Gateway IP Address, Instrument IP Address, Subnet Mask   |
|                       |   | External<br>External Signal Input<br>External Control I/O<br>V/I Monitor Output   |
|                       |   | RS-232C<br>Complies with the EIA-RS-232 specifications  |
|                       | Optional 1  | GPIO<br>SCPI-1993, IEEE 488.2 compliant interface   |
|                       | Optional 2  | CAN Bus<br>Complies with CAN 2.0A or 2.0B based protocol  |
|                       | Optional 3<br>Device Net<br>Complies with CAN 2.0A or 2.0B based protocol |   |
| Insulation resistance | Between input and chassis, output and chassis, input and output           | DC 500 V, 30 MΩ or more   |
| Withstand voltage     | Between input and chassis, output and chassis, input and output           | AC 1500 V or DC 2130 V, 1 minute  |
| EMC                   |   | EN 61326-1 (Class A)<br>EN 61326-2-1/-2-2 (Class A)<br>EN 61000-3-2 (Class A, Group 1)<br>EN 61000-3-3 (Class A, Group 1)<br>EN 61000-4-2/-4-3/-4-4/-4-5/-4-6/-4-8/-4-11 (Class A, Group 1)<br>EN 55011 (Class A, Group1) |
| Safety                |   | EN 61010-1  |
| Environment           | Operating environment   | Indoor use, Overvoltage Category II   |
|                       | Operating temperature range   | 0 °C to 40 °C   |
|                       | Storage temperature range   | -10 °C to 70 °C   |
|                       | Operating humidity range  | 20 %rh to 80 % RH (no condensation)   |
|                       | Storage humidity range  | 90 % RH or less (no condensation)   |
|                       | Altitude  | Up to 2000 m  |
| Dimensions (mm)       |   | 598(W)×1294(H)×906(D)   |
| Weight                |   | Approx. 250 kg  |

- A value with the accuracy is the guaranteed value of the specification. However, an accuracy noted as reference value shows the supplemental data for reference when the product is used, and is not under the guarantee. A value without the accuracy is the nominal value or representative value (shown as typ.).
- Product specifications are subject to change without notice.

## Information of Name Order

The name order of ASR-6000 series has its rules in definition for each character by order. Refer to the following contents for details.

**Background**      The definitions below describe the meanings behind each group of alphanumeric characters, in varied colors, of naming code for ASR series models.


|                          |            |   |
|--------------------------|------------|---|
| <b>Naming Definition</b> | <b>ASR</b> | Switching Mode AC Power Source              |
|                          | <b>6</b>   | Series Name                                 |
|                          | <b>XX</b>  | Output Capacity<br>45: 4500VA<br>60: 6000VA |
|                          | <b>0</b>   | Fixed number                                |
|                          | <b>-XX</b> | Maximum Output Capacity of Parallel Models  |

|                                    |                      |                |
|------------------------------------|----------------------|----------------|
| <b>Lineup of ASR Series Models</b> | <b>ASR-6450</b>      |                |
|                                    | <b>ASR-6600</b>      |                |
|                                    | <b>ASR-6450-09</b>   |                |
|                                    | <b>ASR-6600-12</b>   |                |
|                                    | <b>ASR-6450-13.5</b> |                |
|                                    | <b>ASR-6600-18</b>   |                |
|                                    | <b>ASR-6600-24</b>   |                |
|                                    | <b>ASR-6600-30</b>   | (Release soon) |
|                                    | <b>ASR-6600-36</b>   | (Release soon) |

# ASR-6000 Parallel Models Dimensions

## ASR-6000 Parallel Models in 15u Rack


Scale = mm

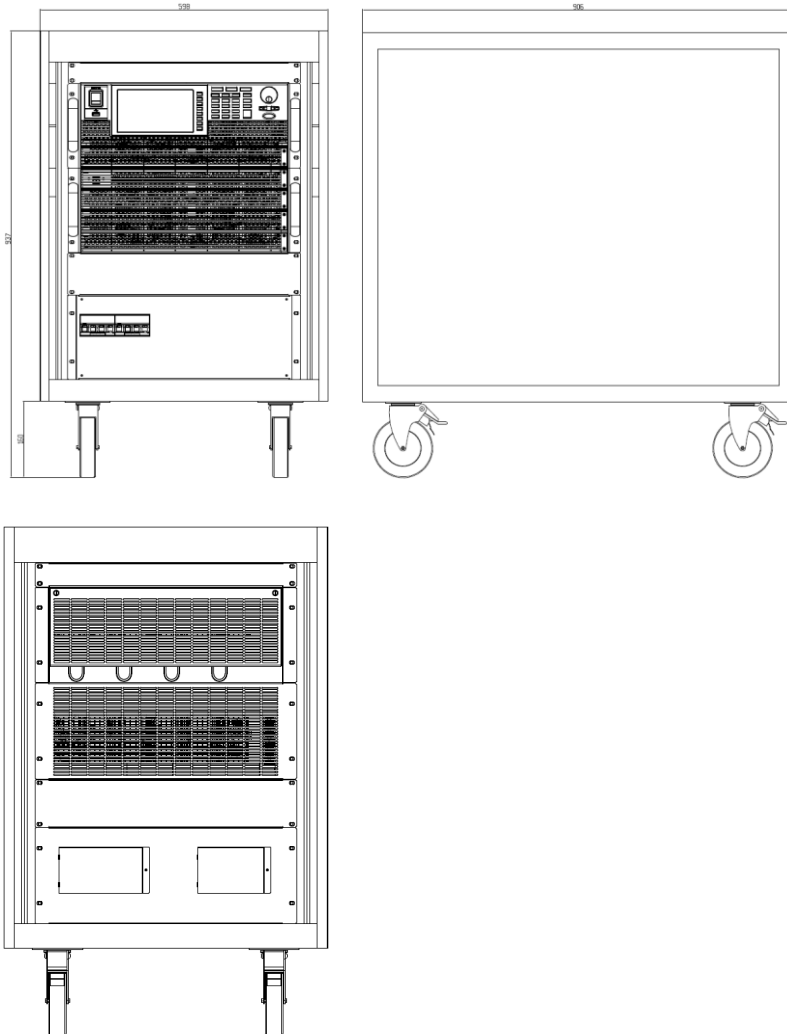

## ASR-6000 Parallel Models in 19u Rack

---


Scale = mm

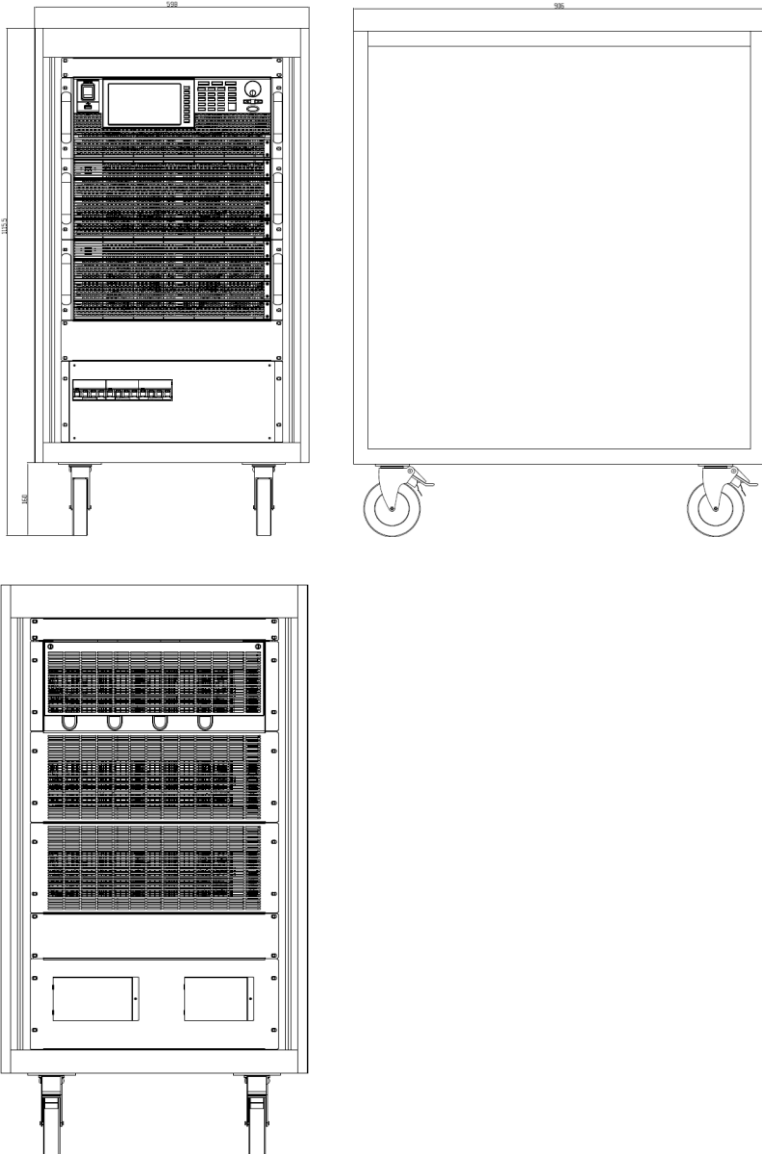

## ASR-6000 Parallel Models in 23u Rack

---

Scale = mm

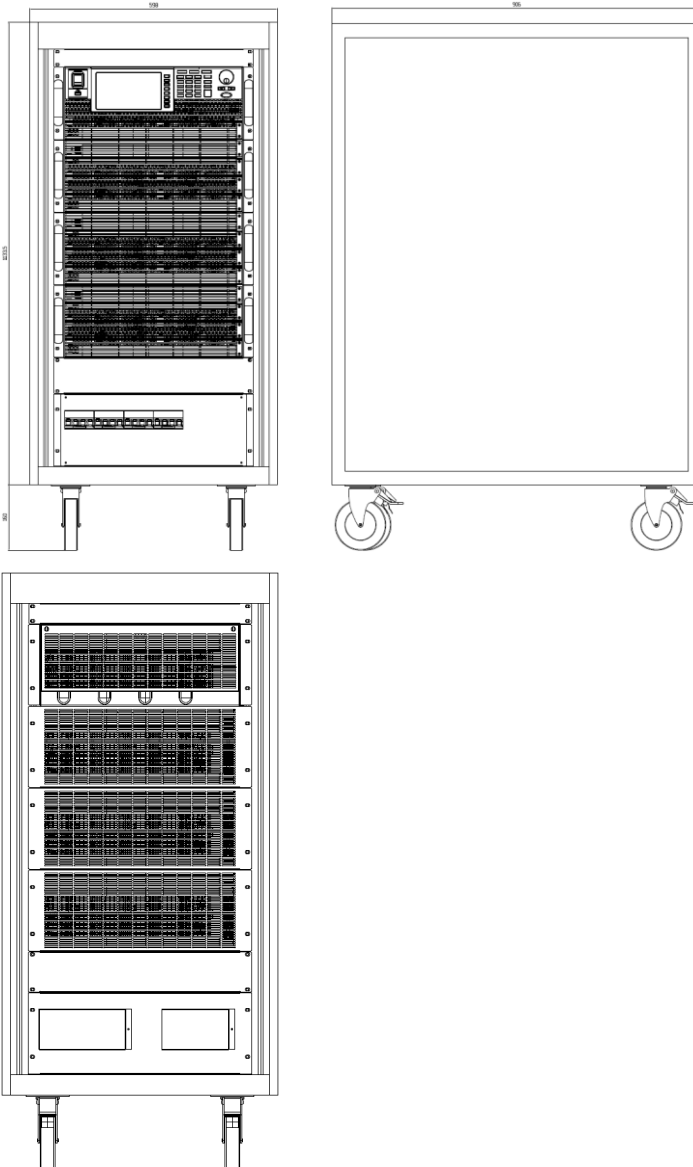

## Declaration of Conformity

We

**GOOD WILL INSTRUMENT CO., LTD.**

declare that the below mentioned product

satisfies all the technical relations application to the product within the scope of council:

Directive: EMC; LVD; WEEE; RoHS

The product is in conformity with the following standards or other normative documents:

|  |  |
|--|--|
| <b>⊙ EMC</b>   |  |
| EN 61326-1 :   | Electrical equipment for measurement, control and laboratory use — EMC requirements                                      |
| Conducted & Radiated Emission<br>EN 55011 / EN 55032 | Electrical Fast Transients<br>EN 61000-4-4   |
| Current Harmonics<br>EN 61000-3-2 / EN 61000-3-12    | Surge Immunity<br>EN 61000-4-5   |
| Voltage Fluctuations<br>EN 61000-3-3 / EN 61000-3-11 | Conducted Susceptibility<br>EN 61000-4-6   |
| Electrostatic Discharge<br>EN 61000-4-2              | Power Frequency Magnetic Field<br>EN 61000-4-8   |
| Radiated Immunity<br>EN 61000-4-3                    | Voltage Dip/ Interruption<br>EN 61000-4-11 / EN 61000-4-34   |
| <b>⊙ Safety</b>                                      |  |
| EN 61010-1 :   | Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements |

**GOODWILL INSTRUMENT CO., LTD.**

No. 7-1, Jhongsing Road, Tucheng District, New Taipei City 236, Taiwan

Tel: [+886-2-2268-0389](tel:+886-2-2268-0389)

Fax: [+886-2-2268-0639](tel:+886-2-2268-0639)

Web: <http://www.gwinstek.com>

Email: [marketing@goodwill.com.tw](mailto:marketing@goodwill.com.tw)

**GOODWILL INSTRUMENT (SUZHOU) CO., LTD.**

No. 521, Zhujiang Road, Snd, Suzhou Jiangsu 215011, China

Tel: [+86-512-6661-7177](tel:+86-512-6661-7177)

Fax: [+86-512-6661-7277](tel:+86-512-6661-7277)

Web: <http://www.instek.com.cn>

Email: [marketing@instek.com.cn](mailto:marketing@instek.com.cn)

**GOODWILL INSTRUMENT EURO B.V.**

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: [+31-\(0\)40-2557790](tel:+31-(0)40-2557790)

Fax: [+31-\(0\)40-2541194](tel:+31-(0)40-2541194)

Email: [sales@gw-instek.eu](mailto:sales@gw-instek.eu)