

Digital Oscilloscope & Multimeter

GDS-122

USER MANUAL

GW INSTEK PART NO. 82DS-12200M01



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Good Will Instrument Co., Ltd.

No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

SAFETY INSTRUCTIONS	3
GETTING STARTED	7
Package Contents	8
Main Features	9
Front Panel and Keys Overview.....	10
Manual Overview	12
USING THE OSCILLOSCOPE	13
Basic Operations	15
Configurations	21
Measurements	38
Advanced Viewings	45
Calibration	51
Saving/Recalling	54
Menu Tree / Operation Shortcuts	57
Using the Software	62
USING THE MULTIMETER	86
Activating the Multimeter	87
Measuring Voltage	88
Measuring Current	90
Measuring Impedance.....	93
Measuring Diode	95
Measuring Continuity	96
Measuring Capacitance.....	97
FAQ	99

SPECIFICATIONS 101
 Declaration of Conformity 105







INDEX 106

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you should follow when operating the instrument and when keeping it in storage. Read the following before any operation to ensure your safety and to keep the instrument in best condition.

Safety Symbols

These symbols may appear in this manual or on the instrument.

	WARNING	Warning: Identifies conditions or practices that could result in injury or loss of life.
	CAUTION	Caution: Identifies conditions or practices that could result in damage to the instrument or to other properties.
		DANGER: High Voltage
		Attention: Refer to the Manual
		Protective Conductor Terminal
		Earth (ground) Terminal

Safety Guidelines

General Guidelines



CAUTION

- Do not place heavy objects on the instrument.
- Avoid severe impacts or rough handlings that may damage the instrument.
- Avoid discharges of static electricity onto or near the instrument.
- Do not insert bare wires or metal objects into

the terminals.

- Do not apply input voltage more than 42V peak (30Vrms) to the instrument.
- Do not perform measurements at a power generating source or building installation site (see note below).
- The instrument should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. This instrument falls under category I. Measurement category IV is for measurement performed at the source of low-voltage installation. Measurement category III is for measurement performed in the building installation. Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation. Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage: 100 to 240V, 50/60Hz
- The power supply voltage should not fluctuate more than 10%.
- Always use the AC adaptor included in the package.
- Always connect the AC adaptor to the mains line first, then to the instrument.

Cleaning the instrument

- Disconnect the power cord before cleaning the instrument.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray liquid into the instrument.
- Do not use chemicals or cleaners containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, most non-conductive pollution (see note below)

-
- Relative Humidity: < 75%
 - Altitude: < 2000m
 - Temperature: 0°C to 40°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. This instrument falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.

Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.

Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Relative Humidity: < 75%
- Temperature: -10°C to 70°C

Power cord for the United Kingdom

When using the instrument in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons


 **WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth
Blue: Neutral
Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.


If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.





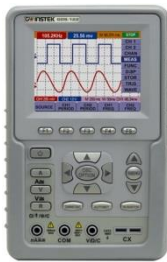





GETTING STARTED

This chapter gives you an overview of what the GDS-122 is about, what items are included in the package, and how the user manual is organized. After opening the GDS-122 package, check the contents referring to the *Package Contents* section, then learn the features and interface reading the *Main Features* and *Front Panel and Keys Overview* section. The Manual Overview section gives you an overall picture of what each chapter is about, helping you directly jump to the relevant location.



Package Contents	8
Main Features	9
Front Panel and Keys Overview	10
Manual Overview	12


Package Contents

<p>Carrying case</p> 	<p>GDS-122</p> 
<p>AC-DC adaptor</p> 	<p>Oscilloscope probe x 2</p> 
<p>Probe adjustment tool</p> 	<p>Multimeter test lead x 2</p> 
<p>Extension module for large current measurement</p> 	<p>Extension module for small capacitance measurement</p> 
<p>Serial data communication cable</p> 	<p>User Manual (this document)</p>
<p>CD-ROM (PC software)</p> 	

Main Features

Oscilloscope	<ul style="list-style-type: none">• Dual channel• 20MHz bandwidth• 100MS/s real-time sampling rate• $\leq 17.5\text{ns}$ rising time• 5ns to 5s/div horizontal scale• 5mV to 5V/div vertical scale• 6k memory points per channel• Isolated inputs between oscilloscope and multimeter• Autoset function• Trigger mode: Auto, Free run, Single shot, Edge, Video• 2 cursors• 5 automatic measurements• 4 display image memories• Self-calibration function
Multimeter	<ul style="list-style-type: none">• Volts, Amps, Ohms, Continuity, Diode, Capacitance measurement• 20A maximum amplitude• True RMS measurement• Isolated inputs between oscilloscope and multimeter
Common	<ul style="list-style-type: none">• USB interface• 3.8 inch color LCD display, 320 x 240 resolution• 4 hours running time Li-ion battery• 180mm x 113mm x 40mm compact size• 690g light weight

Front Panel and Keys Overview

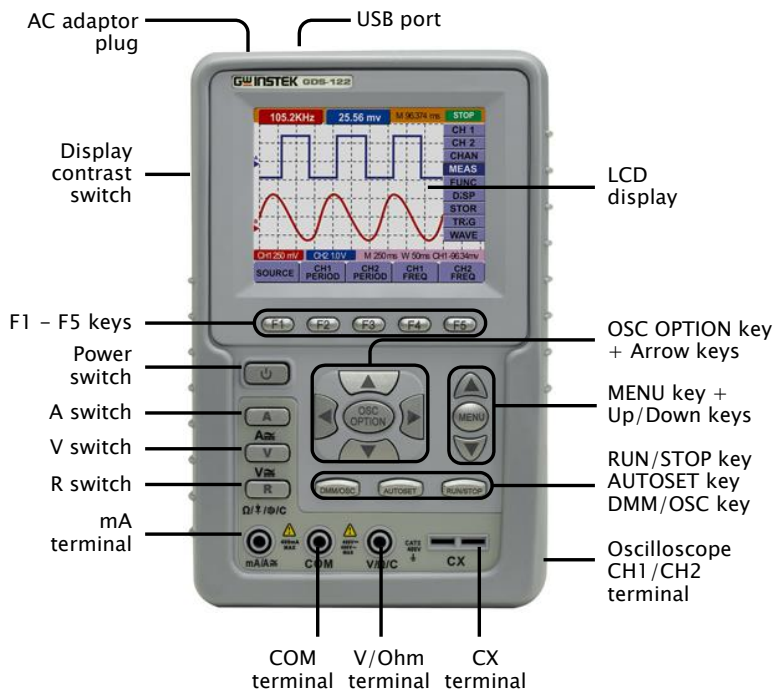

DSO : Oscilloscope function **DMM** : Multimeter function

AC adaptor plug	Accepts the AC adaptor cord. DC 8.5V, 1500mA.
USB port	Accepts the USB cable for PC connection.
LCD display	3.8 inch, 320 x 240 resolution, color LCD display.
OSC OPTION key + Arrow keys	DSO Sets the following parameters: vertical level and scale (page 21), horizontal level and scale (page 24), trigger level (page 24), and cursor position (page 41).
MENU key + Up/Down keys	DSO Activates the side menu and selects the menu items.
RUN/STOP key	DSO Manually turns on (run) or off (stop) the trigger. For details, see page 24.

DSO : Oscilloscope function DMM : Multimeter function	
RUN/STOP key	DMM Freezes (stop) or unfreezes (run) the measurement.
AUTOSET key	DSO Automatically selects the horizontal scale, vertical scale, and trigger level according to the input signal. See page 17 for details. DMM Switches the measurement modes. For details, see page 90(current), page 88(voltage), and page 93(impedance).
DMM/OSC key	Switches the operation mode between oscilloscope and multimeter.
CH1 / 2 terminal	DSO Accepts the CH1 and CH2 input signal.
CX terminal	DMM Accepts the test leads for capacitor measurement.
V/ Ω terminal	DMM Accepts the red lead for voltage, small capacitance, and impedance measurements.
COM terminal	DMM Accepts the black (ground) lead.
mA terminal	DMM Accepts the red lead for current measurement.
R switch	DMM Selects the following measurement: impedance (page 93), diode (page 95), continuity (page 96), capacitance (page 97).
V switch	DMM Selects voltage measurements (page 88).
A switch	DMM Selects current measurements (page 90).
Power switch	Turns on or off the GDS-122 power.
F1 – F5 keys	Selects menu items which appear in the bottom of the display.
Display contrast switch	Selects the display contrast: Up (bright) or Down (dark).

Manual Overview

Overview	This user manual is separated in seven chapters. If you want to jump start using the GDS-122, go directly to the <i>Using Oscilloscope</i> or <i>Using Multimeter</i> chapter.
Safety Instructions	The <i>Safety Instructions</i> gives you an overview of important safety-related issues which you should be aware of before, during, and after operations.
Getting Started (page 7)	The <i>Getting Started</i> chapter provides you with the overview of the GDS-122: main features, package contents, front panel, and user manual (this section).
Using the Oscilloscope (page 13)	The <i>Using the Oscilloscope</i> chapter describes in detail how to use the GDS-122's oscilloscope functionalities, including the PC software. The chapter starts with simple, basic operations toward more complex measurements and settings. If you are new to the GDS-122, start with the Basic Operations section. For advanced users, the <i>Menu Tree / Shortcuts</i> section shows the menu structures and all operations shortcuts.
Using the Multimeter (page 86)	The <i>Using the Multimeter</i> chapter describes how to use the GDS-122's multimeter functionalities. The most commonly used Voltage, Current, and Resistance sections are listed in the front.
Faq (page 99)	The <i>Faq</i> chapter lists major problems you might encounter during operations and how to fix or avoid them. Most issues are also listed in the relevant chapters throughout the document.
Specifications (page 101)	The GDS-122 specifications are separated in oscilloscope, multimeter, and general parts.
Declaration of conformity (page 105)	The <i>Declaration of Conformity</i> chapter lists the safety and EMI/EMC standards to which the GDS-122 conforms.
Index (page 106)	The <i>Index</i> chapter lists most of the keywords used in this manual in an alphabetical order.

U SING THE OSCILLOSCOPE

This chapter describes the oscilloscope functionalities in the GDS-122: setting it up and measuring simple waveforms, using advanced measurement functions, and configuring the system settings. The menu tree section at the end gives you an overview of all functionalities and a quick access to each of them. For the multimeter functionalities, see page 86.

Basic Operations	15
Powering up the GDS-122.....	15
Connecting an Input Signal	16
Using the Autose Function	17
Introducing the Display Contents	18
Adjusting Waveform Scales	18
Adjusting Waveform Positions	19
Configurations	21
Configuring Channel (Vertical) Settings	21
Configuring Horizontal Settings	24
Configuring Trigger Settings: General Settings.....	25
Configuring Trigger Settings: Edge Triggering	28
Configuring Trigger Settings: Video Triggering	31
Selecting the Acquisition Mode	33
Selecting the Language	34
Configuring Display Settings	34
Viewing the System Status	35
Measurements	38
Running Waveform Maths	38
Running Automatic Measurements.....	40
Running time Cursor Measurements	41
Running Voltage Cursor Measurements.....	42

Advanced Viewings	45
Zooming Waveforms Horizontally	45
Viewing Waveforms in X-Y Format	46
Viewing Signal Peaks	47
Viewing Noisy Signals	48
Viewing Variations in a Signal	49
Calibration	51
Running the Self-calibration	51
Running the Probe Calibration	52
Saving/Recalling	54
Recalling the Default Settings	54
Saving Waveforms	55
Recalling Waveforms	56
Menu Tree / Operation Shortcuts	57
Trigger	57
CH1/CH2 Setup	57
Measurement Setup 1/2	58
Wave Math	58
Cursor Measurement	58
Acquisition Mode	59
Time Mode	59
Function	59
Display	59
Wave Save	60
System Status	60
OSC OPTION Key	61
Using the Software	62
Installing the Software	63
Modifying/Reinstalling/Uninstalling the Software	65
Activating the Software and Connecting the GDS-122 ..	66
Configuring the Screen	70
Viewing the Waveforms	73
Using the Cursor Measurements	78
Saving Waveforms	80
Recalling Waveforms	82
Printing out Waveforms	83
Accessing the Help	85

Basic Operations


Operation flow The *Basic Operations* section describes how to set up the GDS-122 and observe an input signal, step-by-step.


1. Powering up the GDS-122
2. Connecting an input signal
3. Using the Autoset/ Introducing the display
4. Adjusting the scales
5. Adjusting the waveform position


Advanced operations For more advanced or detailed operations, see the following chapters.


- *Configurations* (page 21)
- *Measurements* (page 38)
- *Advanced Viewings* (page 45)
- *Calibrations* (page 51)

Powering up the GDS-122

Pressing the power switch Press the power switch. The welcome screen with the corporate logo appears on the display. 

To adjust display brightness, use the switch on the side: up (bright) or down (dark). 

Activating the oscilloscope Press any key (for example the MENU (Example) key) to enter the oscilloscope mode. See the battery level icon at the top left corner of the display and connect the power cord if the level is < 25%. 



Switching the operation mode If the multimeter screen appears, press the DMM/OSC key and change 

the mode to oscilloscope.

Tilt standing the GDS-122 Use the bar at the back of the GDS-122 to tilt stand it on a horizontal plane.




Note If pressing the power switch does not turn on the GDS-122, the battery may need recharging. Connect the GDS-122 to the AC adaptor and recharge it for at least 15 minutes.

Connecting an Input Signal


1. Connecting the probe Connect the probe(s) between the DUT (Device Under Test) and the CH1/2 inputs on the GDS-122.

2. Setting the probe attenuation To prevent excessive input voltage, we recommend you to set the probe attenuation level to the X10 position to prevent excessive voltage.

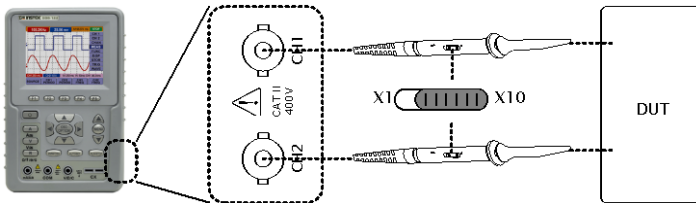

3. Setting the display magnification

1. After attenuating the probe level by x10, you need to magnify the display level by x10 to balance the signal level. Open the CH1 or CH2 SETUP menu by pressing the MENU key and using the Up/Down keys.
2. Select the probe attenuation level (10X) by pressing F3 (Probe) repeatedly. The CH1/CH2 vertical scale indicator at the bottom left corner of the display changes accordingly.

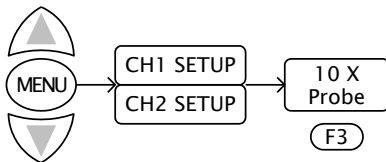

Using the Autoset Function


Overview The Autoset function automatically configures the following parameters according to the input signal.

- CH1/CH2 on/off
- Vertical scale/level
- Horizontal scale/level
- Trigger level


Using the Autoset function Press the AUTOSET key. The input signal appears in the best display condition.



Example

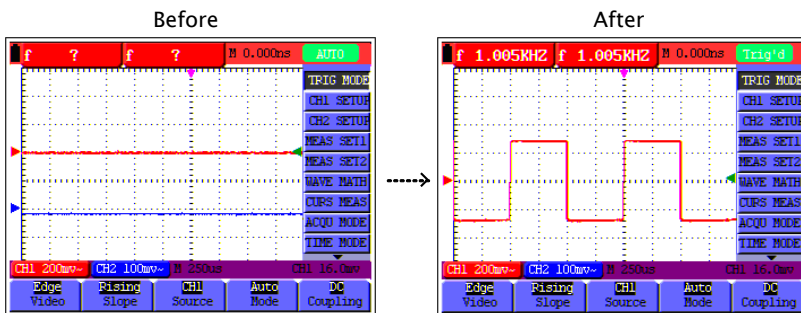



Introducing the Display Contents

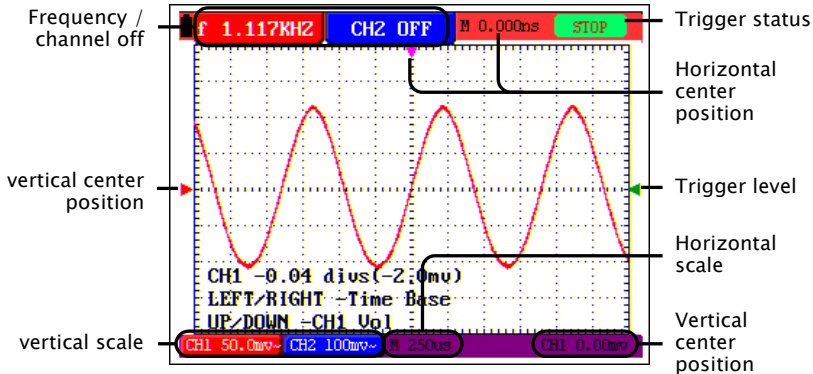


- Trigger status
- The signal is triggered Trig'd
 - Waiting for trigger conditions AUTO
 - Triggering is stopped STOP
- Press the RUN/STOP key to control trigger on/off (run/stop). RUN/STOP

Adjusting Waveform Scales

Selecting the menu Press the OSC OPTION key repeatedly until the following menu appears on the display.
 LEFT/RIGHT – Time Base
 UP/DOWN – CH1 (or CH2) Vol

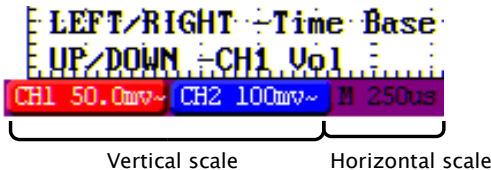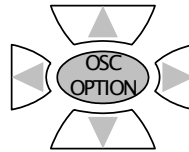


Adjusting the horizontal scale Use the Left/Right key to change the horizontal scale.

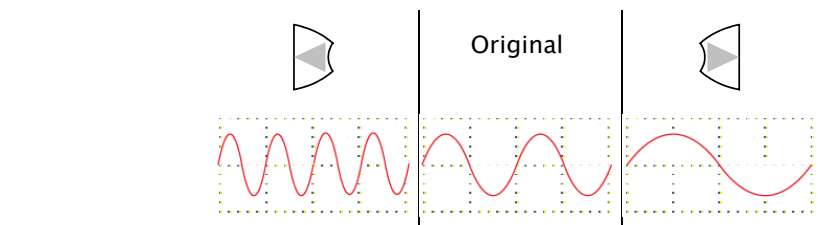

Adjusting the vertical scale

Use the Up/Down key to change the vertical scale.

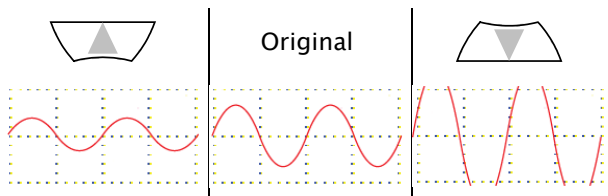



Adjusting Waveform Positions

Selecting the menu

Press the OSC OPTION key repeatedly until the following menu appears on the display.

LEFT/RIGHT – Time


UP/DOWN – CH1 (or CH2) Zero

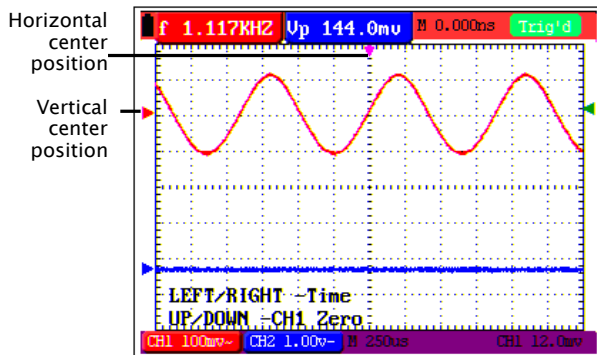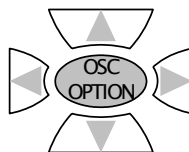

Adjusting the horizontal position


Use the Left/Right key to change the horizontal position.



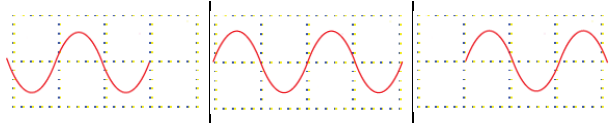

Adjusting the vertical position

Use the Up/Down key to change the vertical position.

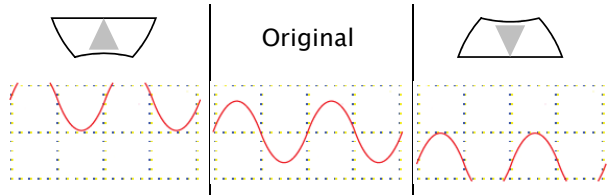

Configurations

Overview The configuration chapter describes how to change various GDS-122 internal parameters for allowing better measurement condition.

Configuration items	• Channel (vertical) settings	Page 21
	• Horizontal settings	Page 24
	• Trigger settings	Page 24
	• Acquisition modes	Page 28
	• Language	Page 34
	• Display settings	Page 34
	• System status (only for viewing)	Page 35


Configuring Channel (Vertical) Settings

Overview The channel settings configure how the waveform appears in terms of vertical or voltage scale.


- Position** Sets the vertical position of the waveform.
- Scale** Sets the vertical scale (volts per graticule). Range: 5mV/div to 5V/div
- CH on/off** Turns the channel on or off.
- Coupling** Selects AC or DC coupling. The DC coupling shows all signal elements, while the AC coupling filters out the DC component from the waveform.
- Inversion** Flips the waveform upside down.
- Magnification** Magnifies the displayed units (does not magnify the real signal). The magnification function is useful to align the displayed with probe attenuation (page 16), especially X10.

Setting the vertical position

1. Press the OSC OPTION key repeatedly until the following menu appears on the display.
LEFT/RIGHT – Time
UP/DOWN – CH1 (or CH2)
Zero

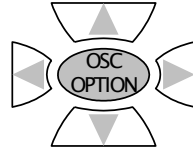


2. Use the Up/Down key to change the vertical position.

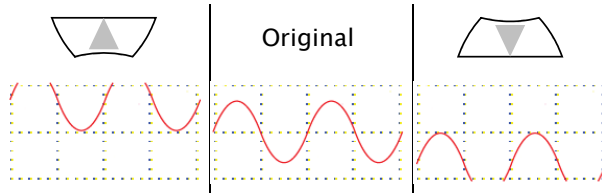


Setting the vertical scale

1. Press the OSC OPTION key repeatedly until the following menu appears on the display.
LEFT/RIGHT – Time Base
UP/DOWN – CH1 (or 2) Vol

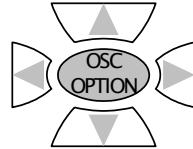


2. Use the Up/Down key to change the vertical scale.

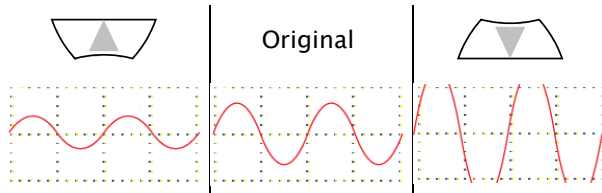

Turning the channel on/off


1. Press the MENU key and use the Up/Down keys to select the CH1(CH2) SETUP menu.
2. Press F2 (Channel) repeatedly to turn on or off the channel.

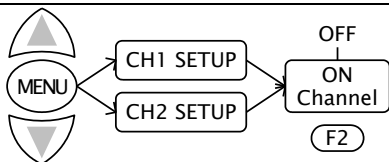

Note that when using the Autoset function (page 17), channels are automatically turned on or off.

Selecting the coupling mode

1. Press the MENU key and use the Up/Down keys to select the CH1(CH2) SETUP menu.
2. Press F1 (Coupling) repeatedly to select DC or AC coupling.

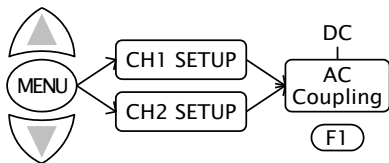


The DC coupling shows both DC and AC signal.

The AC coupling only shows the AC signal.


DC coupling

(center point is at the bottom due to DC offset)

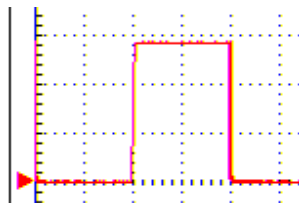



AC coupling

(center point is at the middle since the DC offset is being removed)

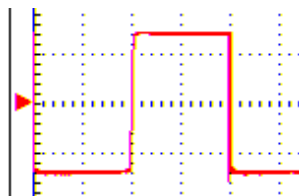


Inverting the channel

1. Press the MENU key and use the Up/Down keys to select the CH1(CH2) SETUP menu.
2. Press F4 (Inverted) to invert the waveform.

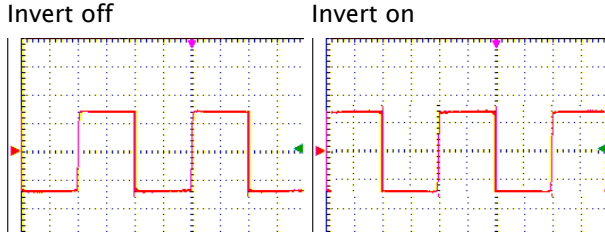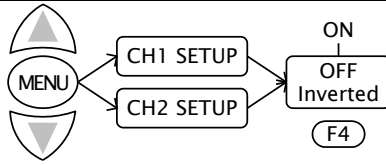

Selecting the magnification

1. Press the MENU key and use the Up/Down keys to select the CH1 (CH2) SETUP menu.
2. Press F3 (Probe) repeatedly to select the probe magnification ratio.

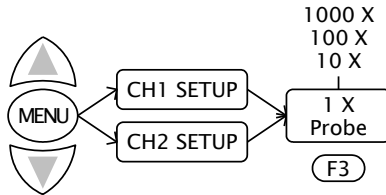

Configuring Horizontal Settings

Overview


The horizontal settings configure how the waveform appears in terms of horizontal or time scale.

Position Sets the horizontal position of the waveform.

Scale Sets the horizontal scale (time per graticule). Range: 100ms/s to 10s/s


Setting the horizontal position

1. Press the OSC OPTION key repeatedly until the following menu appears on the display.
LEFT/RIGHT – Time

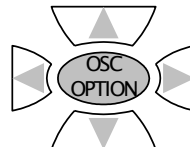




2. Use the Left/Right key to change the horizontal position.

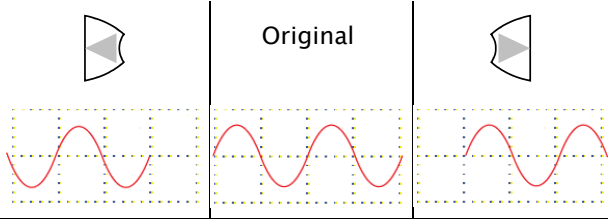


Selecting the horizontal scale

1. Press the OSC OPTION key repeatedly until the following menu appears on the display.

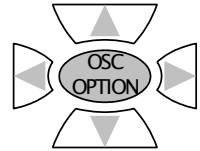

2. Use the Left/Right key to change the horizontal scale.

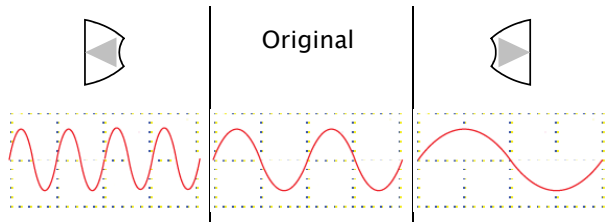

Configuring Trigger Settings: General Settings

Overview

The trigger settings configure how the incoming signal is triggered. The general settings section describes how to start and stop triggering, adjust the level, and change the trigger mode.

- For edge triggering details, see page 28.
- For video triggering details, see page 31.

Status	Shows the triggering status in the icon appearing in the upper right corner of the display.
Run/Stop	Controls starting and stopping the trigger.
Level	Adjusts the vertical and horizontal level on which the waveforms are triggered.

Trigger status The trigger status icon is located at the top right corner of the display.

Trig'd

The trigger condition is met.

AUTO

The GDS-122 is showing the input signal waveform regardless of trigger condition. Available in the Auto trigger mode in edge triggering (page 28).

Ready

The trigger condition is not met, and the GDS-122 is waiting for the next condition. Available in the Normal trigger mode in edge triggering (page 28).


Scan

The GDS-122 is showing the input signal waveform regardless of trigger condition. The waveform is gradually updated from the left side of the display. The GDS-122 automatically switches to the Scan when the horizontal scale is at 100ms/div or longer.

STOP

Triggering is stopped regardless of the trigger condition. In order to restart triggering, you have to press the RUN/STOP key again (in single trigger mode) or switch to another trigger mode.

Horizontal scale vs. trigger status

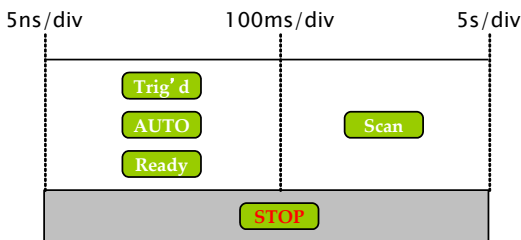

Run/Stop

Pressing the Run/Stop key once stops triggering at most situations and changes the trigger icon to STOP.



In the single trigger mode in edge triggering (page 28), pressing the RUN/STOP key works as both activating and deactivating trigger.

Trigger level


Press the OSC OPTION key repeatedly until the following menu appears on the display.




LEFT/RIGHT – Time
UP/DOWN – Trig




Trigger level indicators

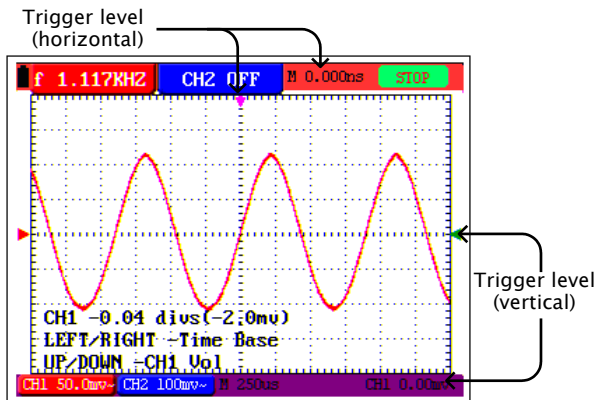


Use the arrow keys to change the triggering position.

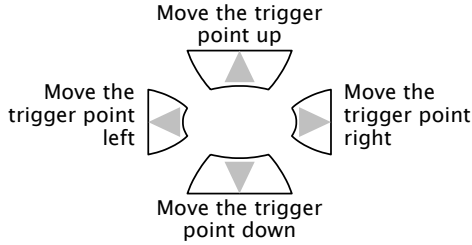

Pressing the Up and Down key together resets the vertical trigger level to zero.

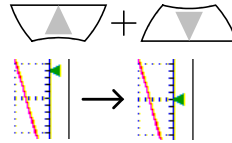

Pressing the Left and Right key together resets the horizontal trigger level to zero.

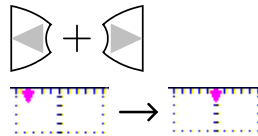


Configuring Trigger Settings: Edge Triggering

The edge trigger type triggers on the incoming signal edge. Use the edge trigger for all signals except for video related ones.

- For general trigger settings, see page 25.
- For video triggering details, see page 31.

To select edge triggering, follow these steps.

1. Press the MENU key and use the Up/Down keys to select TRIG MODE menu.
2. Press F1 (Type) to select the Edge trigger type.

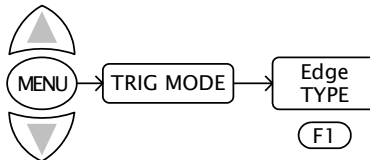


Slope Selects the slope, rising or falling, on which the GDS-122 triggers the input signals.


Source	Selects the signal source channel, CH1 or CH2.
Mode	Selects the triggering mode, Auto (acquires signal continuously), Normal (acquires signal when trigger conditions are met), and Single (manually triggers the signal).
Coupling	Selects the DC or AC coupling and rejection filters: high frequency or low frequency.

Selecting the trigger slope

Press F2 (Slope) repeatedly to select the rising or falling slope.





Example: rising edge

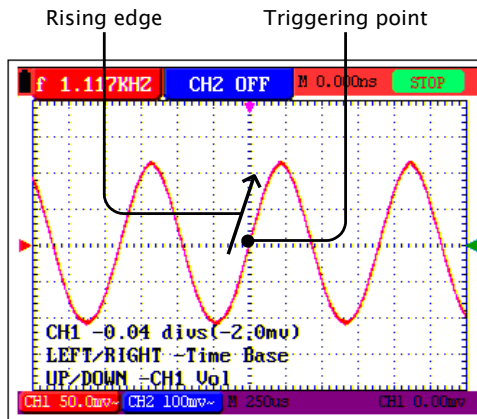


Selecting the source channel

Press F3 (Channel) repeatedly to select the trigger source channel, CH1 or CH2. The trigger channel indicator at the bottom right corner of the display changes.



Selecting the trigger mode

Press F4 (Mode) repeatedly to select the trigger mode. The trigger status icon in the upper right corner of the display changes accordingly. For the overview of trigger status in general, see page 25.



Auto mode

In the auto mode, input signals are constantly acquired and shown in the display regardless of trigger condition.

Horizontal scale (/div) 5ns 100ms 5s

Status icon when triggered	Trig'd	Scan
Status icon when not triggered	AUTO	Scan

Normal mode

In the normal mode, input signals are shown in the display only if the trigger condition is met.

Horizontal scale (/div) 5ns 100ms 5s

Status icon when triggered	Trig'd	Scan
Status icon when not triggered	Ready	Scan

Single mode

In the single mode, you manually trigger by pressing the RUN/STOP key each time you need to observe the waveform. Once the waveform is captured, the GDS-122 stops triggering and waits for the next trigger command.


Horizontal scale (/div) 5ns 100ms 5s

Status icon when triggered	STOP	STOP
Status icon when not triggered	AUTO ↕ Ready	Scan

Selecting the coupling mode

Press F5 (Coupling) repeatedly to select the trigger coupling.

- AC: triggers only on the AC portion of the waveform.
- DC: triggers on the whole waveform (AC + DC).
- LF Rjc: filters out the lower frequency when triggering.
- HF Rjc: filters out the higher frequency when triggering.




Configuring Trigger Settings: Video Triggering

The video trigger type is designed to capture the video signal format, NTSC, PAL, or SECAM. For any other signal type, use the edge trigger.

- For general trigger settings, see page 25.
- For edge triggering details, see page 28.

To select edge triggering, follow these steps.

1. Press the MENU key and use the Up/Down keys to select TRIG MODE menu.
2. Press F1 (Type) to select the video trigger type.

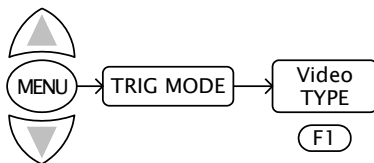


- Polarity** Selects the polarity of synchronization signal. Normal means the black level is low. Invert means the black level is high.
- Source** Selects the signal source channel, CH1 or CH2.
- Sync** Selects the part of the video signal used for synchronization: line or field.

Selecting the trigger polarity



Press F2 (Polarity) repeatedly to select the polarity of synchronization signal.

- Normal: the black level is low.
- Inverted: the black level is high.



Selecting the source channel


Press F3 (Channel) repeatedly to select the trigger source channel, CH1 or CH2. The trigger channel indicator at the bottom right corner of the display changes.



Selecting the sync


Press F4 (Polarity) repeatedly to select the synchronization point.

- Line: the video line is used for triggering.
- Field: the video field is used for triggering.




Example

Video line trigger

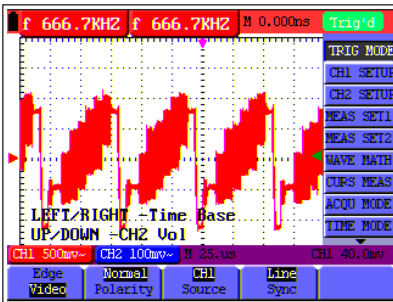


Video field trigger

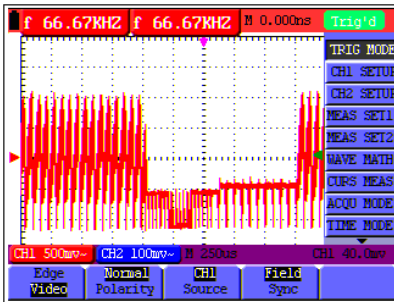

Selecting the Acquisition Mode

Overview	The acquisition mode specifies how the incoming analog signal is digitally sampled by the GDS-122.
Sample	The waveform data is sampled at an equal time interval. The sample mode accurately reconstructs the waveform, but cannot respond to rapid changes and sudden peaks.
Peak detect	The maximum and minimum data in the sampling interval are picked up. The peak detect mode captures rapid changes and sudden peaks, but the waveform becomes noisy.
Average	Multiple samples are averaged together. The average mode reduces the noise level, but the waveform must be repetitive. The number of averaging are 4, 16, 64, and 128.


Panel operations

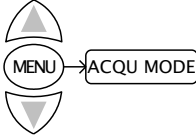- Press the MENU key and select the ACQU MODE menu using the Up/Down keys.
 
- Select the acquisition mode from F1 (Sample) to F3 (Average).



Sample	Peak Detect	Average
(F1)	(F2)	(F3)

For the Average mode, also press F4 (Averages) repeatedly to select the number of averaging: 4, 16, 64, or 128.

16 Averages
(F4)

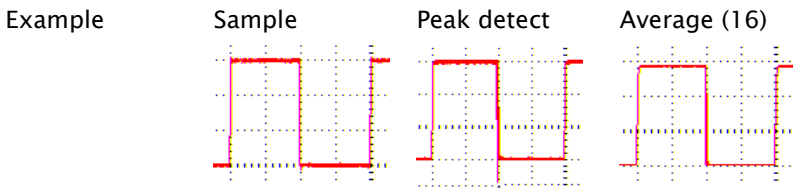

Selecting the Language
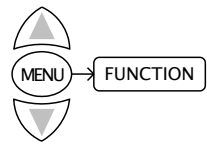
<p>Overview</p>	<p>You can switch the menu language between English and Simplified Chinese. The language settings affect the following areas.</p> <ul style="list-style-type: none"> • Menu bar (right side of the display) • F1-F5 menu (bottom of the display) • System settings screen (page 35)
<p>Parameters</p>	<p>English (default), Simplified Chinese</p>
<p>Panel operations</p>	<ol style="list-style-type: none"> 1. Press the MENU key and select the FUNCTION menu using the Up/Down keys.  2. Press F3 (Language) repeatedly to select the language from English or Simplified Chinese.  <p>For other menu items, see the following.</p> <p>F1 (Recall factory): factory settings (page 54)</p> <p>F2 (Do Self Cal): self-calibration (page 51)</p>


Note Recalling the factory settings (Function menu → F1) does not change the language selection.

Configuring Display Settings


<p>Overview</p>	<p>The display settings configure how the waveforms are drawn in the display.</p> <p>vector drawing The vector drawing mode shows the waveform as a smooth line, connecting each data point.</p> <p>dot drawing The dot drawing mode shows the waveform as a collection of independent data points.</p> <p>persistence The persistence setting sets how</p>
------------------------	---

long the old waveforms remain in the display, useful for observing the waveform variations.


- Panel operations
1. Press the MENU key and use the Up/Down keys to select the DISP SET menu.
 2. Press F1 (Type) or F2 (Persist) repeatedly to select vector drawing, dot drawing, and persistence time.

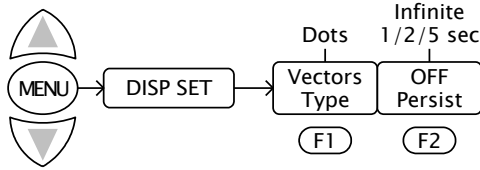

Vector/dot drawing example

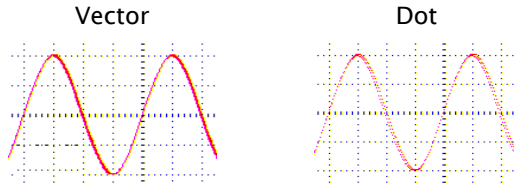


Persistence example

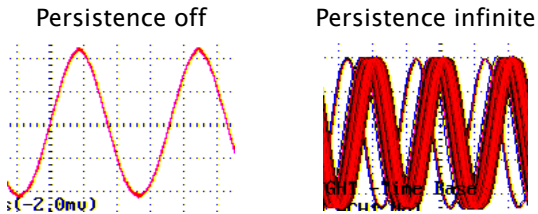

Viewing the System Status


Overview The system status menu shows the GDS-122 system settings.

- Panel operations
1. Press the MENU key and select the SYS STAT menu using the Up/Down keys.

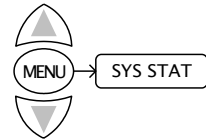

2. Select the status menu from F1 (Horizontal) to F4 (Misc) and press it. The status information

appears in the display.



- To close the system status screen, select different menus using the MENU key followed by Up/Down keys.



Horizontal status (F1)

HORIZONTAL SYSTEM STATUS	
TIME BASE	MAIN TIME BASE
MAIN SCALE	1.0ms
WINDOW SCALE	10.us
MAIN POSITION	300.0us
WINDOW POSITION	559.60us
DISPLAY FORMAT	YT
ACQUIRE MODE	SAMPLE

For details of each item, see the following pages.

Time base: page 24

Main/window scale: page 45

Main/window position: page 45

Display format: page 46 (XY)

Acquire mode: page 33

Vertical status (F2)

VERTICAL SYSTEM STATUS		
SCALE	CH1	2.00v
SCALE	CH2	50.0mv
POSITION	CH1	0.00 divs (0.0mv)
POSITION	CH2	0.00 divs (0.0mv)
COUPLING	CH1	DC
COUPLING	CH2	DC
PROBE	CH1	1X
PROBE	CH2	1X
MATH	CH1-CH2	
INVERTED	CH1	OFF
INVERTED	CH2	OFF

For details of each item, see the following pages.

CH1/CH2 scale: page 21

CH1/CH2 position: page 21

CH1/CH2 coupling: page 21

CH1/CH2 probe: page 21

Math mode: page 38

CH1/CH2 invert: page 21

Trigger status (F3): Edge trigger

For details of each item, see the following pages.

Trigger type: page 28

Trigger source: page 28

Trigger slope: page 28

```

                TRIGGER SYSTEM STATUS

TYPE           EDGE
SOURCE         CH1
SLOPE          RISING
TRIGMODE       SINGLE TRIGGER
COUPLING       DC
    
```

Trigger mode: page 28

Trigger coupling: page 28

Trigger status (F3): Video trigger

```

                TRIGGER SYSTEM STATUS

TYPE           VIDEO
SOURCE         CH1
POLARITY       NORMAL
SYNC           LINE
    
```

For details of each item, see the following pages.

Trigger type: page 31

Trigger source: page 31

Trigger polarity: page 31

Trigger sync: page 31

Misc status (F4)

```

MISC

GW INSTEK
Series Number
W102206150095
    
```

The Misc status shows the manufacturer name and the serial number.

Measurements

Overview The advanced measurement functions allow you to automatically measure various parameters in a waveform.

Measurement items	• Waveform math	Page 38
	• Automatic measurements	page 40
	• Time cursor measurement	page 41
	• Voltage cursor measurement	page 42


Running Waveform Maths

Overview The waveform math function runs mathematical operations between CH1 and CH2 waveform, and then shows the result in the display.


Math type	<ul style="list-style-type: none"> • CH1 – CH2 (subtract CH2 from CH1) • CH2 – CH1 (subtract CH1 from CH2) • CH1 + CH2 (add CH1 and CH2) • CH1 * CH2 (multiply CH1 and CH2) • CH1 / CH2 (divide CH1 by CH2)
------------------	--

Panel operations 1. Make sure that both CH1 and CH2 waveforms are shown in the display.


2. Press the MENU key and select the WAVE MATH menu using the Up/Down keys.

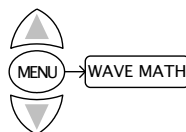

3. Select the math operation from F1 (CH1 – CH2) to F5 (CH1 / CH2) and press it.



4. The math result appears in the display (example: adding two square waveforms)

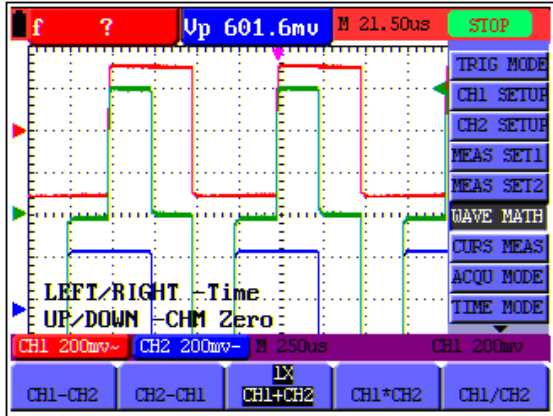

5. To cancel the math result, press the function key (F1 to F5) again.

Changing the math result position


1. Press the OSC OPTION key. Make sure the following menu appears on the display.



LEFT/RIGHT - Time
UP/DOWN - CHM Zero

LEFT/RIGHT - Time
UP/DOWN - CHM Zero

2. Use the arrow keys to move the math result position.

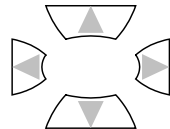

Changing the math result scale


1. Press the OSC OPTION key repeatedly until the following menu appears on the display.



LEFT/RIGHT - Time Base
UP/DOWN - CHM Vol

LEFT/RIGHT - Time Base
UP/DOWN - CHM Vol

2. Use the arrow keys to change the math result scale.

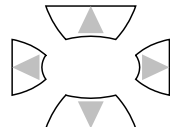

Saving or recalling the math result

The math result waveform can be saved into or recalled from one of the four GDS-122 internal memories. See page 54 for details.

Running Automatic Measurements

Overview The automatic measurement function measures the input signal's characteristics and lists them in the top left corner of the display.

Source signal CH1, CH2



Measurement set SET1, SET2

Measurement items The following measurement items are available.

- Frequency
- Period
- Mean voltage
- Peak-to-peak voltage
- Cycle voltage (true RMS)


Panel operations 1. Make sure that the waveform appears.

2. Press the MENU key and select the MEAS SET1 or SET2 menu using the Up/Down keys. SET1 and SET2 correspond to the results in the upper left corner of the display.

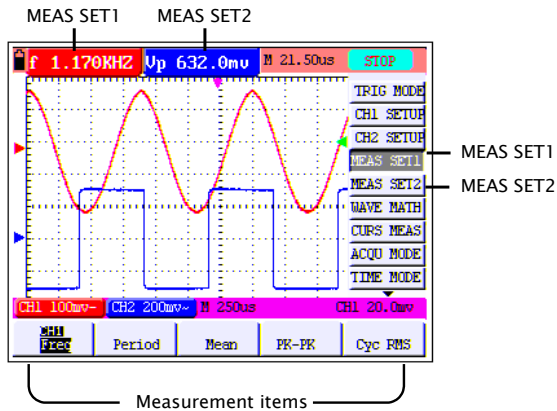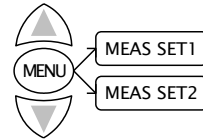

3. Select the measurement type from F1 (Freq) to

F5 (Cyc). Press it repeatedly to select CH1 or 2.

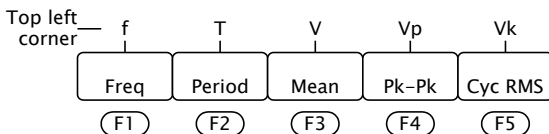

4. The measurement result appears in the top left corner of the display.

Running time Cursor Measurements


Overview

The time cursor function measures and updates the following three types of time difference.


- Between cursor 1 and cursor 2
- Between cursor 1 and center (zero) point
- Between cursor 2 and center (zero) point

Time cursor panel operations

1. Make sure that the waveform appears.
2. Press the MENU key and select the CURS MEAS menu using the Up/Down keys.

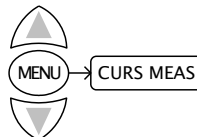

3. Press F1 (Type) repeatedly to select the Time cursor. The cursors appear as vertical purple lines located at the center of the display.




4. Press the OSC OPTION key repeatedly until the following menu appears.





LEFT/RIGHT - Time

UP/DOWN - Cursor

1(or Cursor2)



5. Use the arrow keys to move the cursor or horizontal position.

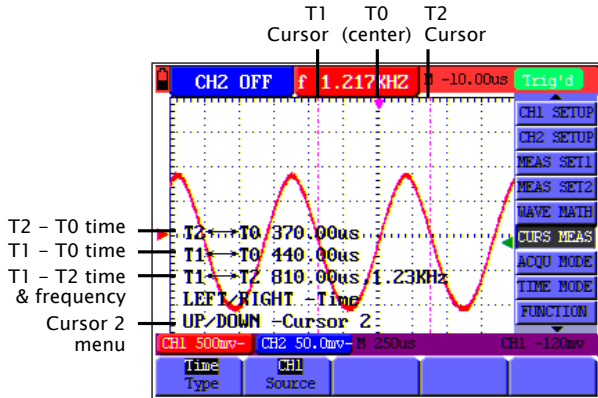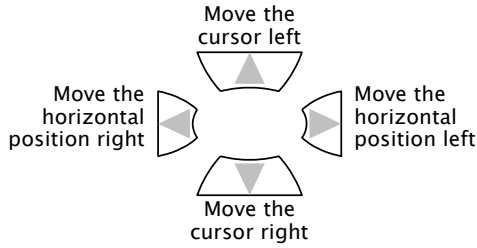

Running Voltage Cursor Measurements

Overview

The voltage cursor function measures and updates the following five types of voltage difference.

- Between cursor 1 and cursor 2
- Between cursor 1 and CH1 center point
- Between cursor 2 and CH1 center point
- Between cursor 1 and CH2 center point
- Between cursor 2 and CH2 center point


Source signal

CH1 input, CH2 input


Voltage cursor panel operations

1. Make sure the waveform appears.


2. Press the MENU key and select the CURS MEAS menu using the Up/Down keys.

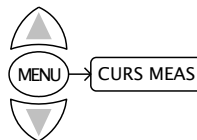

3. Press F1 (Type) repeatedly to select the Voltage cursor. The cursors appear as horizontal purple lines located at the center of the display.



4. Press F2 (Source) repeatedly to select the source channel.




5. Press the OSC OPTION key repeatedly until the following menu appears.




LEFT/RIGHT - Time


UP/DOWN - Cursor V1
(or Cursor V2)



6. Use the arrow keys to move the cursor or horizontal position.

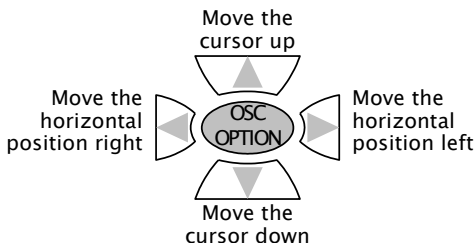

Display overview
(CH1, cursor 2)

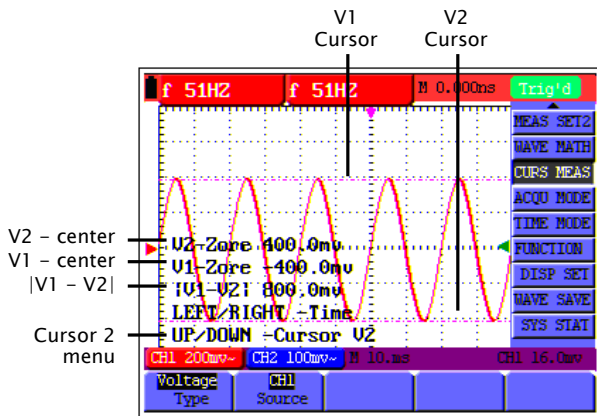

Advanced Viewings

Overview The advanced viewing functions allow you to clearly observe specific type of waveforms and/or particular characteristics in a waveform.


Viewing items	• Waveform zoom	Page 45
	• X-Y format	Page 46
	• Signal peaks	Page 47
	• Noisy signals	Page 47
	• Variations in a signal	Page 48

Zooming Waveforms Horizontally


By using the zoom function, you can magnify the waveform in the horizontal direction.


Panel operations 1. Make sure that the waveform appears in the display.

2. Press the MENU key and select the TIME MODE menu using the Up/Down keys.

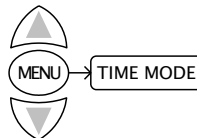


3. Press F2 (Set Window). A set of cursors appears in the center of the display.


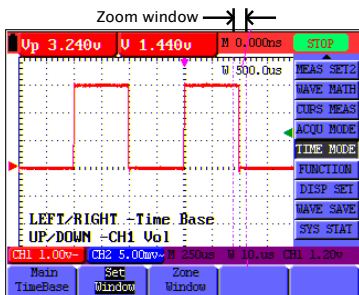


- Press the OSC OPTION key repeatedly until the Time Base menu appears. 


Cursor 1 menu 

- Use the arrow keys to change the zoom width.

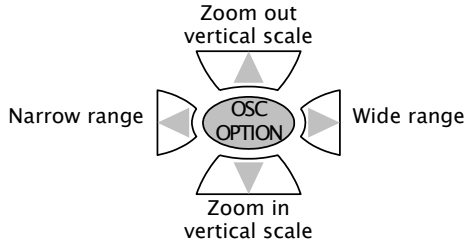

- Press F3 (Zone Window) to zoom into the window.  

Example

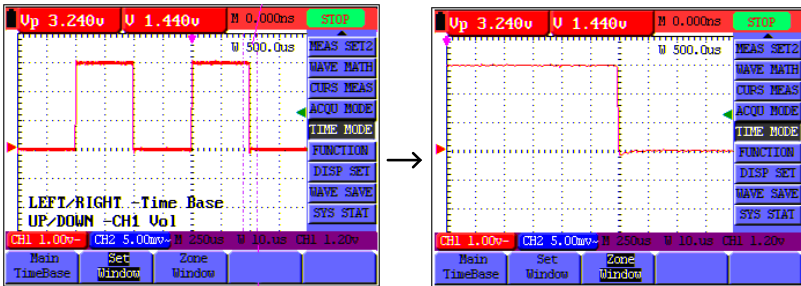


Viewing Waveforms in X-Y Format

Overview


The X-Y format plots the CH1 input as X-axis and CH2 input as Y-axis. This display mode is convenient for viewing the phase relationship between CH1 and CH2.

- Panel operations
- Make sure that both CH1 and CH2 waveforms appear in the display.

2. Press the MENU key and select the DISP SET menu using the Up/Down keys.

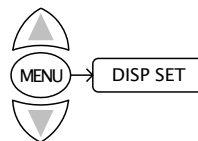

3. Press F3 (Format) and select XY. The display mode switches into the X-Y format.



Changing the scale and position

Press the OSC OPTION key repeatedly to access the menu listed below. In the X-Y mode, all scales and positions are controlled by the Up/Down keys.



- CH1 Zero: horizontal position
- CH2 Zero: vertical position
- CH1 Vol: horizontal scale
- CH2 Vol: vertical scale

Functions not applicable in the X-Y format

The following functions do not work in the X-Y format.

- Cursor measurement (page 41, page 42)
- Automatic measurement (page 40)
- Window zoom (page 45)
- Trigger settings configuration (page 24)

Viewing Signal Peaks

Overview

Using the peak detect acquisition mode, the maximum and minimum data in the sampling interval are displayed, capturing the rapid changes and sudden peaks that might spontaneously occur in a waveform.


Note

Since the peak detect mode picks up the most extreme data, the waveform becomes noisier than the normal acquisition mode (sampling mode).

Panel operations


1. Press the MENU key and use the Up/Down keys to select ACQU MODE menu.

2. Press F2 (Peak Detect) to activate the peak detect mode.

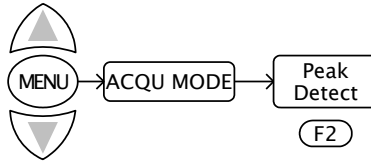

For other acquisition settings details, see page 28.

Example

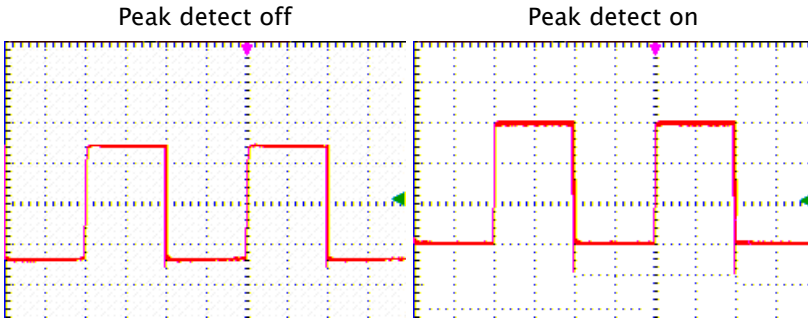


Viewing Noisy Signals

Overview Using the Average acquisition mode, you can smooth out the displayed waveform by averaging multiple data samples. The number of averaging is selectable from 4, 16, 64, and 128.


- Note**
- In order for the average mode to work in the best way, the waveform must be repetitive.
 - As the number of averaging increases, the slower the waveform update becomes.

- Panel operations**
1. Press the MENU key and use the Up/Down keys to select ACQU MODE menu.
 2. Press F3 (Average) to activate the average mode.
 3. Press F4 (Averages) repeatedly to select the number of averaging.

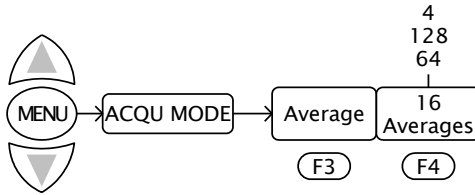

For other acquisition settings details, see page 28.

Example

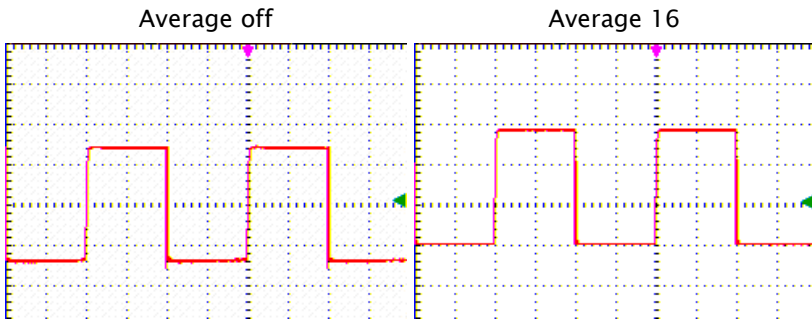


Viewing Variations in a Signal

Overview

Using the persistence display function, you can define sets how long the old waveforms remain in the display, allowing observation of waveform variations. You can select the persistence time from 1, 2, and 5 sec. When choosing the Infinite mode, the GDS-122 keeps all past traces of the displayed waveform.

Panel operations


1. Press the MENU key and use the Up/Down keys to select DISP SET menu.
2. Press F2 (Persist) repeatedly to select the persistence time.

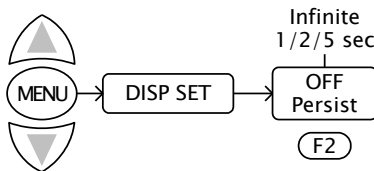


For other display settings details, see page 34.

Example

Persistence off

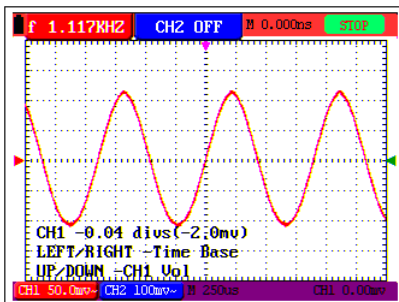

Persistence infinite

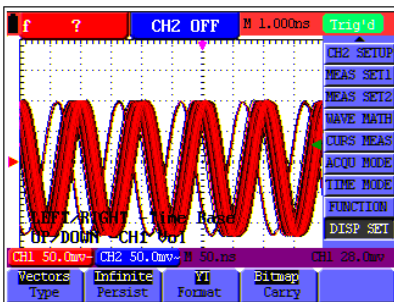



Calibration


Overview Two types of calibrations are available: self-calibration and probe calibration. The self-calibration automatically adjusts GDS-122 internal parameters. The probe calibration adjusts the probe capacitance. You should run both whenever using the GDS-122 in a new environment.

Running the Self-calibration

Overview The self-calibration function automatically configures internal parameters to maintain the sensitivity and accuracy. Run the self-calibration in the following cases.

- When the temperature fluctuates more than 5 degrees Celsius during operations
- When operating the GDS-122 in a new benchtop or field environment

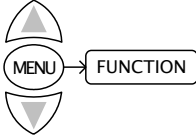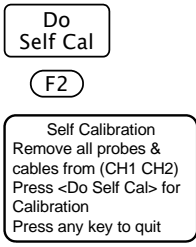- Procedures**
1. Press the MENU key and select the FUNCTION menu using the Up/Down keys.
 
 2. Press F2 (Do Self Cal). A message appears on the display, asking you to remove all cables and probes from the GDS-122.
 

Self Calibration
Remove all probes & cables from (CH1 CH2)
Press <Do Self Cal> for Calibration
Press any key to quit
 3. After removing all cables, press F2 (Do Self Cal) again. The self-calibration automatically starts and a message appears, showing that the calibration is ongoing.
 

Self calibration
....


- When the message disappears in 5 minutes, the calibration is completed.

To interrupt calibration Press any key during calibration.


Running the Probe Calibration

Overview The attached probe contains a calibration point at the end to adjust the waveform.

- Procedures
- Select a rectangular waveform as the signal input. Use the Autoset function and put the waveform in the middle of the display. AUTOSSET

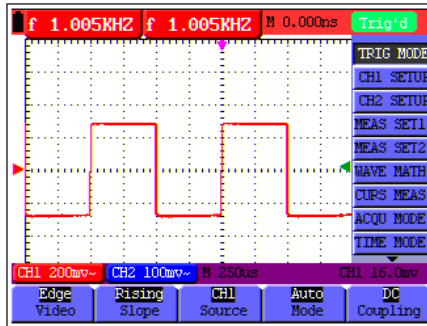


- Adjust the probe calibration point to make sure that the waveform edge remains flat.

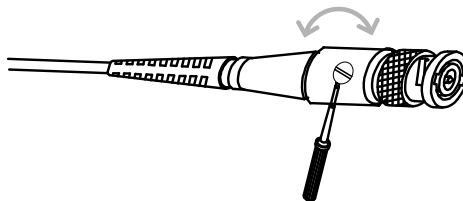

Over-

Optimum

Under-

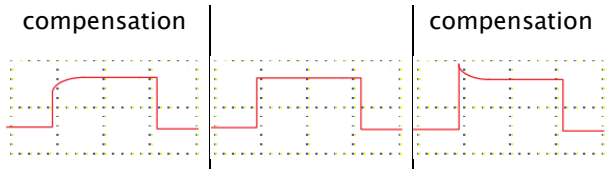


Saving/Recalling

Overview The GDS-122 can save or recall four sets of waveforms using its internal memory. When you need to reset the system, recall the default (factory installed) settings.

- Save/recall items**
- Recalling default settings Page 54
 - Saving waveforms Page 55
 - Recalling waveforms Page 56

Recalling the Default Settings

Recalling the default settings You can recall the default factory settings by pressing the MENU key, then selecting FUNCTION → F1 (Recall Factory).

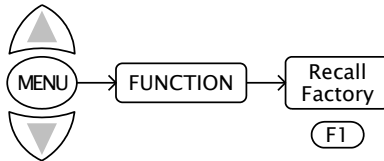

Trigger	Type: Edge Source: CH1 Coupling: AC	Slope: Rising Mode: Auto
CH1 & CH2	Coupling: AC Probe scaling: 1 X	Channel: ON Invert: OFF
Measurement 1	Item: CH1 frequency	
Measurement 2	Item: CH2 frequency	
Cursor	Cursor: OFF	Channel: CH1
Acquisition	Mode: Sample	Average number: 16
Time mode	Mode: Main timebase	
Display	Type: Vector Format: YT	Persistence: OFF Carry: Bitmap
Wave Save	Source: CH1 Display: OFF	Waveform: A

Saving Waveforms

Overview Up to four waveforms can be stored in and recalled from the GDS-122 internal memory. The stored waveform can be used for reference, comparison xxxxxxxx.


Memory Four memories: waveform A, B, C, and D.

Source CH1, CH2, Math waveform


Panel operations

1. Make sure the waveform you want to save (CH1, CH2, or Math result) appears in the display.
For Math operations details, see page 38.


2. Press the MENU key and select the WAVE SAVE menu using the Up/Down keys.

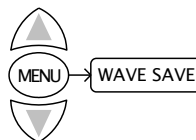


3. Press F1 (Source) repeatedly and select the waveform source.



4. Press F2 (WAVE) repeatedly and select the memory location from A to D.



5. Press F3 (Save) to confirm saving the waveform into the specified memory location. Make sure that the message "WAVE SAVE SUCCEEDED" appears in the display.





WAVE SAVE SUCCEEDED


Recalling Waveforms


Overview	Up to four waveforms can be stored in and recalled from the GDS-122 internal memory. The stored waveform can be used for reference, comparison xxxxxxxx.
Memory	Four memories: waveform A, B, C, and D.
Source	CH1, CH2, Math waveform

- Panel operations
1. Press the MENU key and select the WAVE SAVE menu using the Up/Down keys.

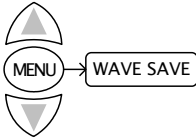
 2. Press F2 (Wave) repeatedly and select the waveform you want to recall.


 3. Press F4 and turn ON the waveform. The waveform appears in the display.



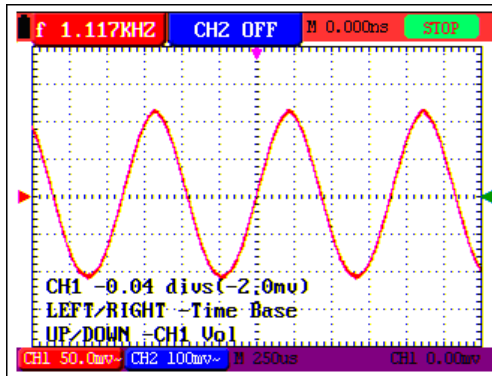

Note The recalled waveform maintains its original horizontal scale and vertical scale, which are shown in the top left corner of the display. Changing the current scale does not affect the recalled waveform's shape.


Menu Tree / Operation Shortcuts

Accessing menus

The following menu trees are accessible by pressing the MENU key followed by Up/Down keys, except for the OSC OPTION key (page 61).




Trigger

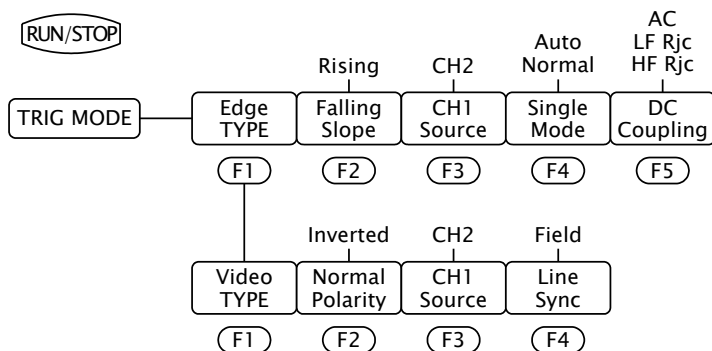


Select run or stop mode	RUN/STOP key
Select edge or video trigger	TRIG MODE→F1(TYPE)
Select trigger slope	TRIG MODE→F1(edge)→F2(Slope)
Select trigger source	TRIG MODE→F1→F3(Source)
Select trigger mode	TRIG MODE→F1(edge)→F4(Mode)
Select trigger coupling	TRIG MODE→F1(edge)→F5(Coupling)
Select video polarity	TRIG MODE→F1(video)→F2(Polarity)
Select video line sync	TRIG MODE→F1(video)→F4(Sync)

CH1/CH2 Setup

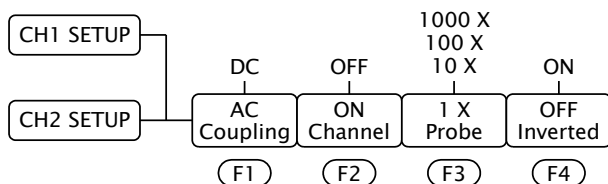


Select AC or DC coupling	CH1 /2 SETUP→F1(Coupling)
Turn CH1 on or off	CH1 /2 SETUP→F2(Channel)
Select probe scaling	CH1 /2 SETUP→F3(Probe)
Turn inversion on or off	CH1 /2 SETUP→F4(Inverted)

Measurement Setup 1/2

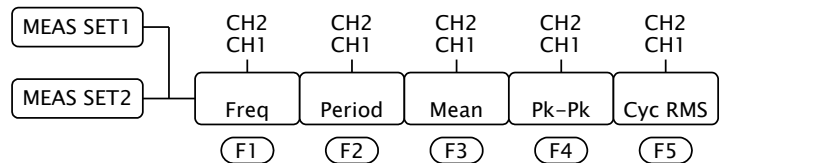


Measure CH1/CH2 frequency	MEAS SET1 /2→F1(Freq)
Measure CH1/CH2 period	MEAS SET1 /2→F2(Period)
Measure CH1/CH2 mean value	MEAS SET1 /2→F3(Mean)
Measure CH1/CH2 peak to peak time	MEAS SET1 /2→F4(Pk-Pk)
Measure CH1/CH2 cycle	MEAS SET1 /2→F5(Cyc RMS)

Wave Math




Subtract CH2 from CH1	WAVE MATH→F1(CH1-CH2)
Subtract CH1 from CH2	WAVE MATH→F2(CH2-CH1)
Add CH2 to CH1	WAVE MATH→F3(CH1+CH2)
Multiply CH2 with CH1	WAVE MATH→F4(CH1*CH2)
Divide CH1 by CH2	WAVE MATH→F5(CH1/CH2)

Cursor Measurement

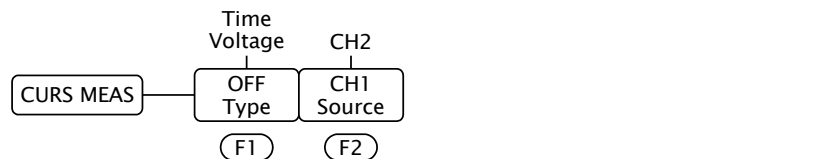


Activate cursor measurement	CURS MEAS→F1(Type)
Select source channel	CURS MEAS→F2(Source)

Acquisition Mode

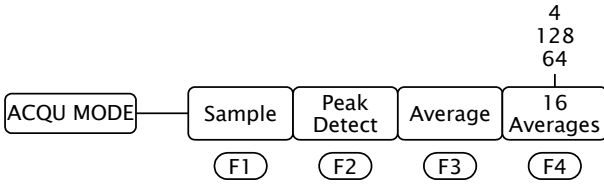

Select sampling mode	ACQU MODE→F1(Sample)
Select peak detect mode	ACQU MODE→F2(Peak Detect)
Select average mode	ACQU MODE→F3(Average)
Select average number	ACQU MODE→F3→F4(Averages)

Time Mode




Select main timebase	TIME MODE→F1(Main TimeBase)
Set window zoom width	TIME MODE→F2(Set Window)
Zoom window	TIME MODE→F3(Zone Window)

Function

Recall factory settings	FUNCTION→F1(Recall Factory)
Run self calibration	FUNCTION→F2(Do Self Cal)
Select language	FUNCTION→F3(Language)


Display

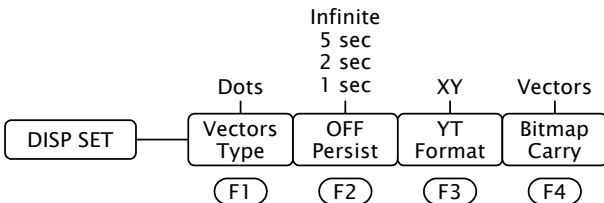

Select line display	DISP SET→F1(Type)
Select persistency	DISP SET→F2(Persist)


Select display format	DISP SET→F3(Format)
Select display save format	DISP SET→F4(Carry)

Wave Save

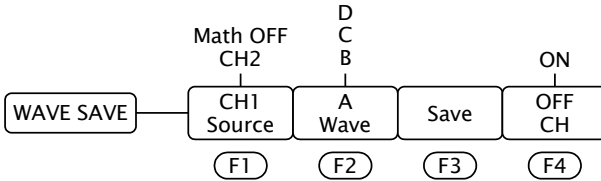


Select source channel	WAVE SAVE→F1(Source)
Select waveform ID	WAVE SAVE→F2(Wave)
Save waveform	WAVE SAVE→F3(Save)
Turn waveform display on or off	WAVE SAVE→F4(CH A/B/C/D)

System Status




Show horizontal settings	SYS STAT→F1(Horizontal)
Show vertical settings	SYS STAT→F2(Vertical)
Show trigger settings	SYS STAT→F3(Trigger)
Show serial number	SYS STAT→F4(Misc)

OSC OPTION Key

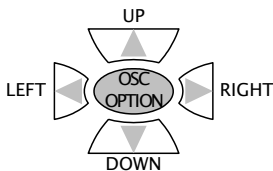

Press the OSC OPTION key repeatedly. The menu message appears in the lower half of the display and the functionalities of four keys, UP, DOWN, RIGHT, LEFT, change accordingly.

LEFT/RIGHT - Time Base
UP/DOWN - CH1 Vol

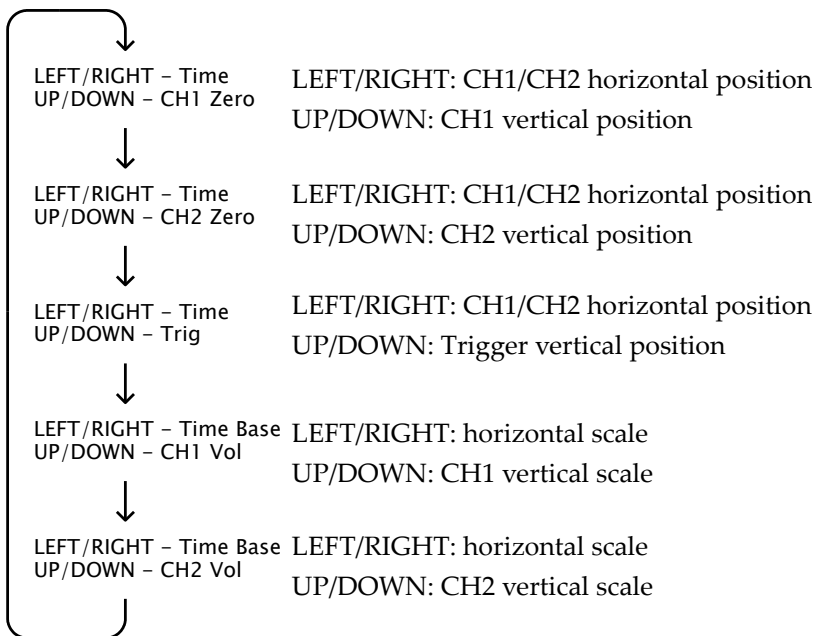

(Math mode)	(Math mode)
LEFT/RIGHT - Time	LEFT/RIGHT: Math horizontal position
UP/DOWN - CHM Zero	UP/DOWN: Math vertical position

(Cursor mode)	(Cursor mode)
LEFT/RIGHT - Time	LEFT/RIGHT: CH1/CH2 horizontal position
UP/DOWN - Cursor 1/2	UP/DOWN: Cursor 1/2 vertical position

Using the Software

Overview	The GDS-122 PC software, included in the CD-ROM, allows you to view the waveforms in your familiar PC environment – large display and mouse operation. Multiple cursors provide flexible waveform measurements.
Software functionalities	<p>The PC software can run the following measurement and actions.</p> <ul style="list-style-type: none">• Viewing real-time updated waveforms• Running up to 6 cursor measurements• Measuring period/frequency/pk-pk voltage• Printing out waveform images• Saving and recalling waveform shape and data
Software operations	<p>The following is the list of software operations described in this chapter.</p> <ul style="list-style-type: none">• Installing the software Page 63• Modifying, reinstalling, or uninstalling the software Page 65• Connecting the GDS-122 Page 66• Configuring the screen Page 70• Viewing waveforms Page 71• Measuring waveforms Page 78• Saving waveforms Page 78• Recalling waveforms Page 80• Printing out waveforms Page 83• Accessing the Help Page 85
Note	The PC software is intended for oscilloscope operations only; it does not include multimeter operations.

Installing the Software

- PC requirements
- Windows 2000 or XP
 - 20MB hard drive space
 - USB host port x 1
-

- Installation steps 1. Activate the Setup.exe file in the CD-ROM.



setup.exe


2. The language selection window appears. Select the software language and click *OK* (you can later change the language manually).

English

英語 (美国)

Simplified Chinese


Chinese (Simplified)

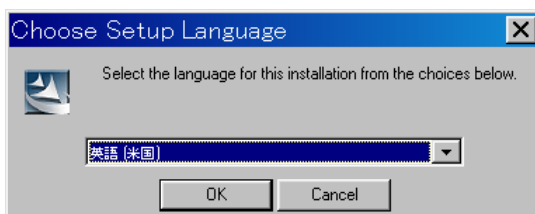


3. The software starts preparing the installation. When the welcome window is displayed, click *Next* and start installing the software to your PC.




4. The customer information window will appear. Enter the user name and organization name. Select which user will hold the right to access the software and click *Next*.

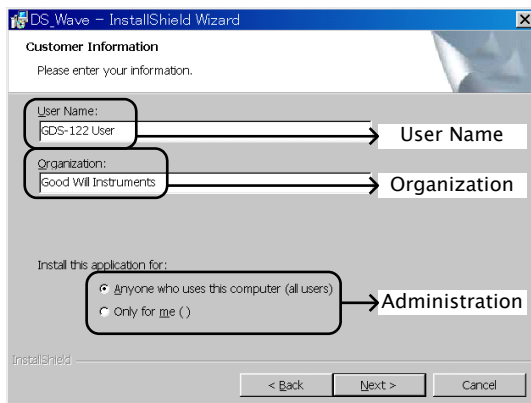


5. Change the installation directory if necessary and click *Next*.

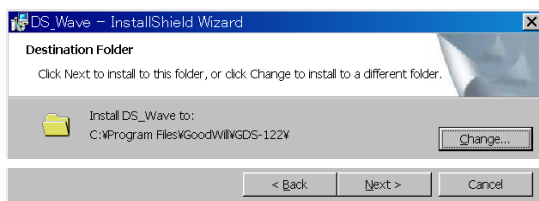

6. Click *Install* to start installing the software.

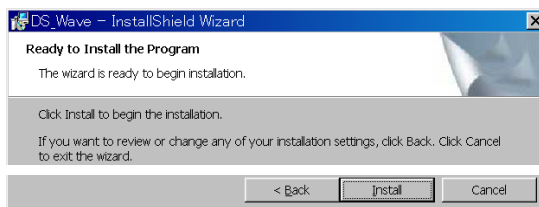

7. The software installation automatically starts and ends. Click *Finish* to complete installation.

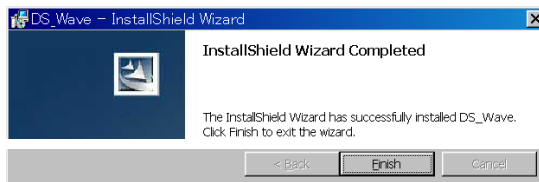

Installing the software is completed

Modifying/Reinstalling/Uninstalling the Software

Overview After installing the software, you can do the followings using the same setup file.


- Modifying the software components
- Repairing the software
- Uninstalling the software

Steps

1. Activate the Setup.exe. Follow the same procedures as installing the software until the *Program Maintenance* window appears.




setup.exe

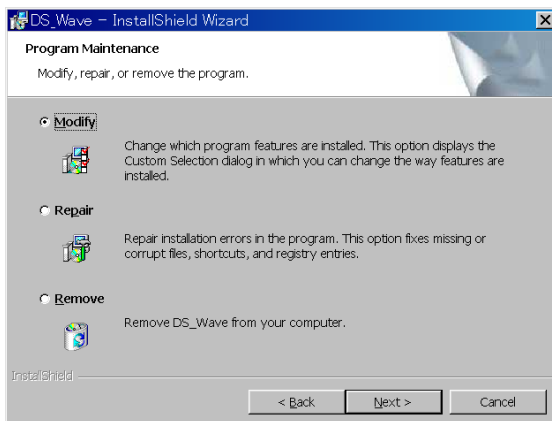

2. Select the action – *Modify* the software components, *Repair* the software, or *Remove* (uninstall) the software – and click *Next*. Proceed according to the instructions.

Shortcut for uninstall

Alternatively, you can select the Uninstall DC_Wave from the program startup menu to uninstall the software.

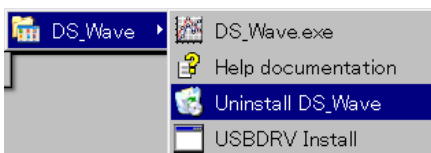


Activating the Software and Connecting the GDS-122

Overview Activate the software and connect the GDS-122 to it properly by going through these steps, described in the paragraphs that follow.


1. Activating the software and configuring the communication port
2. Activating the GDS-122 and configuring the data format
3. Connecting them together and if necessary, installing the USB driver
4. Acquiring waveform data to confirm that the communication is being secured

Activating the software


1. Open the software by selecting DS_Wave.exe from the startup menu.

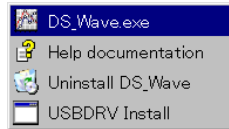

2. Select Communications – Ports Settings from the menu or click the Ports-settings icon on the Toolbar.




Make sure that USB connection is being selected. The baud rate, stop bit, data bit, and parity settings are fixed.

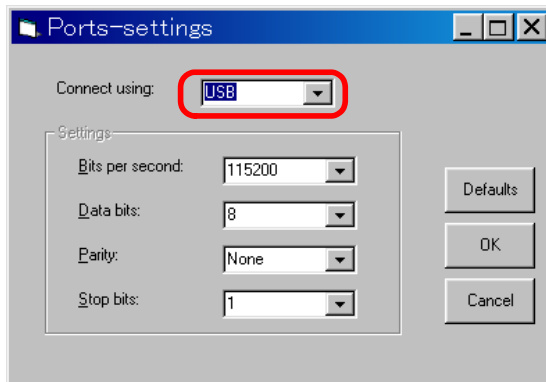

Activating the GDS-122

1. Power up the GDS-122 and activate the oscilloscope screen.
2. Connect an input signal to CH1 and make sure that the waveform is shown appropriately on the GDS-122 display.
3. Open the DISP SET menu and press F4 (Carry) to select the format of the waveform data sent from the GDS-122 to the software.

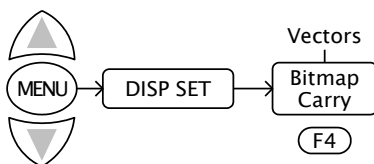


Vectors Vectored data of the waveform. Always select the vector format when viewing the waveform in the software.

Bitmap Bitmap image of the display. Select the Bitmap format only when taking the bitmap snapshot of the GDS-122 hardware screen.

Connecting the cable

1. Connect the GDS-122 to the PC (software) via the USB cable.
2. Make sure that the USB driver is installed in your PC by accessing the Device Manager (Control Panel -> System -> Hardware tab). The GDS-122 should be recognized as a USB hub.



3. If the driver has not been recognized, install it manually by selecting USBDRV Install from the startup menu.



The driver file is located in the USBDRV folder

in the software directory.

Acquiring data

In the software, select **Communications – Get Data** from the menu. Alternatively, you may click the Get data icon, or press the Ctrl + A key.




Acquiring the GDS-122 display snapshot

When the “Bitmap” format is selected in the GDS-122 display carry setting, the software acquires the display snapshot (*.bmp) at the moment. Save the file in the local folder and use a graphic software to open and edit it.


Acquiring the GDS-122 waveform

When the “Vectors” format is selected in the GDS-122 display carry setting, the software acquires the waveform data (*.bin) at the moment.

1. The waveform data will be stored in the PC memory to allow to be recalled later (page82). Edit the location and click Start.

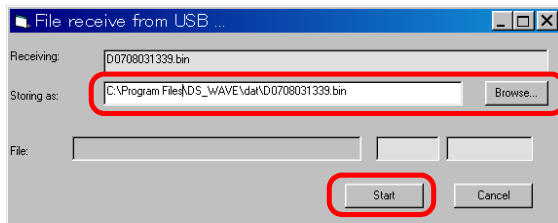

2. The waveform appears in the software screen.

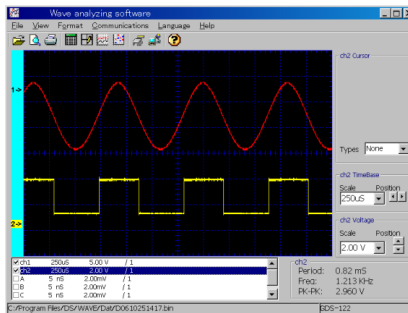

Connecting the GDS-122 to the software is completed


Configuring the Screen

Overview

This section introduces how to configure the following parameters in the software screen (waveform viewing mode) to optimize the user interface.


- Background color
- Grid color
- Grid on/off
- Drawing format
- Language
- Closing the software

Screen overview

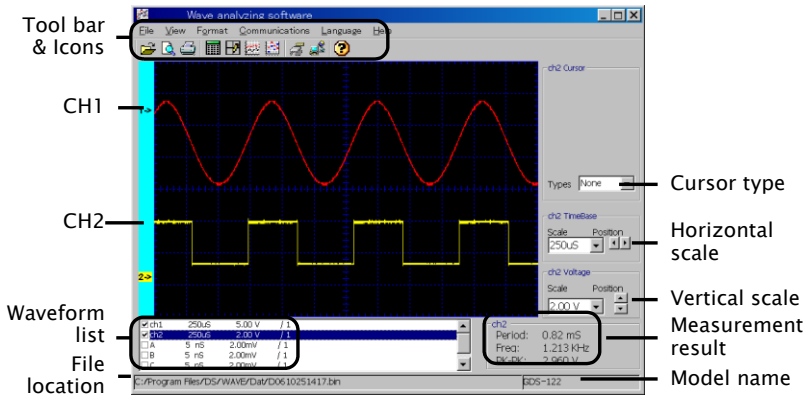


Changing the background color


To change the background color, select View > Background Color from the menu and select the new color from the color palette that appears. Alternatively, you can also double click inside the screen to call the color palette.

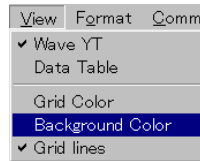

Black background

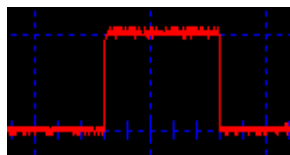


White background

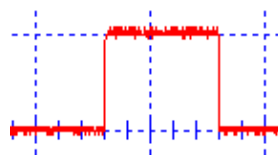


Turning the grid on or off


To turn on or off the grid, select View > Grid lines from the menu or click the Gridlines icon.

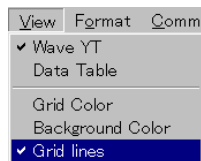

Grid on

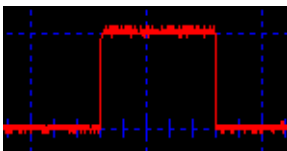


Grid off

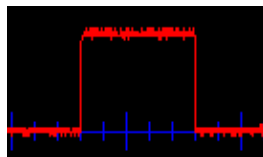


Changing the grid color


Make sure the grid is already turned on. Select View > Grid Color from the menu and select the new color from the color palette that appears.

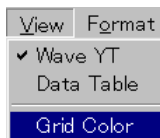

Blue grid

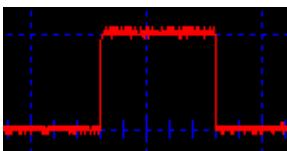



White grid

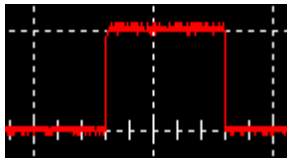



Changing the waveform drawing format

You can select how the waveform is being drawn from two formats, line and dots. Select Format > Data Line (Point) from the menu or click the icons.

Line

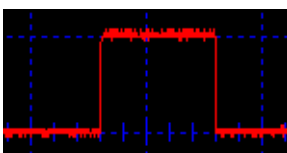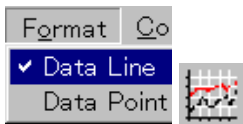

Point

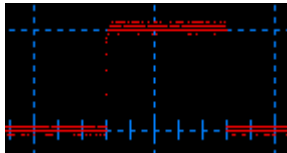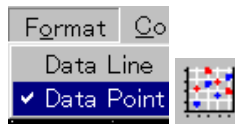

Changing the language


You can select the language from English (default) or Simplified Chinese. Select Language > English (Chinese) from the menu. The Language menu itself always stays as English.



Closing the software

You can close the software in one of the following ways. The screen configurations will be retained the next time you open the software.

- Pressing the Alt + F4 keys
- Selecting File > Exit from the menu

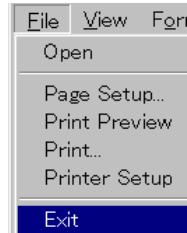

- Clicking the Close icon at the top right corner of the software




Viewing the Waveforms

Overview

This section introduces how to modify the waveform settings for better viewings.

- Selecting the displayed waveforms
- Refreshing the waveforms
- Selecting the active waveform
- Changing the waveform positions
- Changing the waveform scales
- Viewing the automatic measurement results


Screen overview

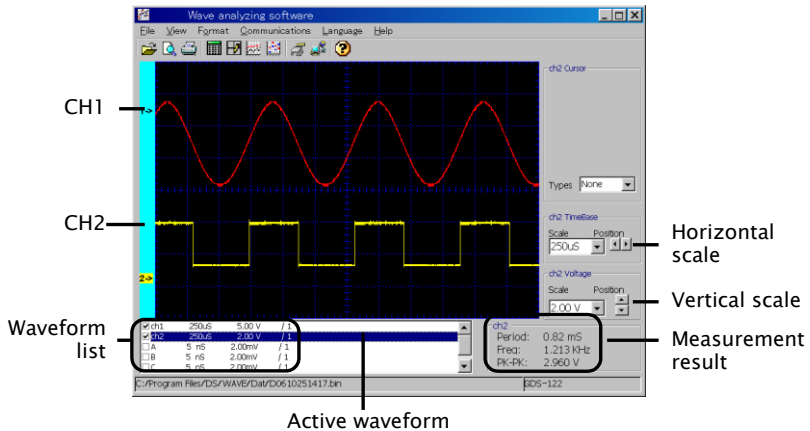

Selecting the displayed waveforms

In the left bottom corner of the screen, put a checkmark in the waveform that needs to appear. Maximum six waveforms are available: CH1, CH2, A, B, C, D. Waveforms A to D have to be stored in the GDS-122 hardware beforehand (see page 55 for details).

(CH1, CH2 selected)

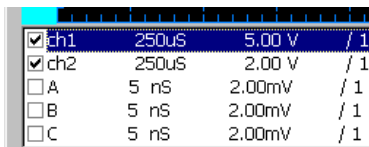

Refreshing the waveforms

In the software, select **Communications – Get Data** from the menu. Alternatively, you may click the Get data icon, or press the shortcut keys, Ctrl + A.




Selecting the active waveform

Waveform scale settings and automatic measurements are done on the active waveform.

1. Click on the waveform name in the bottom left corner of the screen.

(CH1 selected as the active waveform)

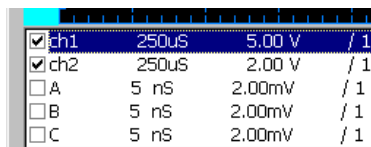

2. The following locations changes into the selected channel (example: CH1).


- Colored channel label (at the left side of the screen)



- Cursor, Time base, Voltage settings (at the right side of the screen)




- Automatic measurement results (at the bottom right corner of the display)




Changing the waveform positions

Changing the horizontal position

1. Move the mouse over the waveform until the mouse icon changes into a left-right arrow.

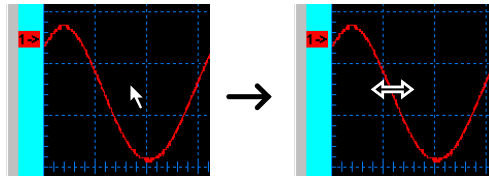


2. Hold the mouse and drag the waveform sideways.

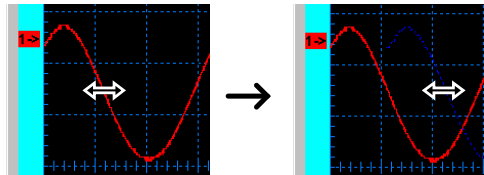

Changing the vertical position

Click the channel label at the left side of the waveform and drag the waveform up or down.

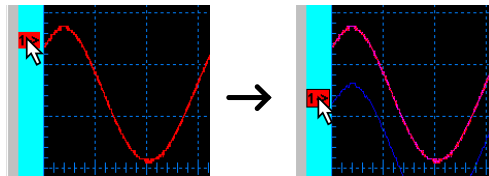


Changing the waveform scales


Before changing the scales, make sure that the correct waveform is selected (highlighted) in the lower left corner of the screen (example: CH1).

<input checked="" type="checkbox"/>	ch1	250uS	5.00 V	/ 1
<input checked="" type="checkbox"/>	ch2	250uS	2.00 V	/ 1
<input type="checkbox"/>	A	5 nS	2.00mV	/ 1

Changing the horizontal scale



Select the horizontal scale using the list at the right side of the screen. You can select the scale either by searching in the Scale column or by clicking the Position arrows.

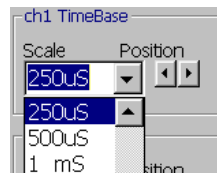

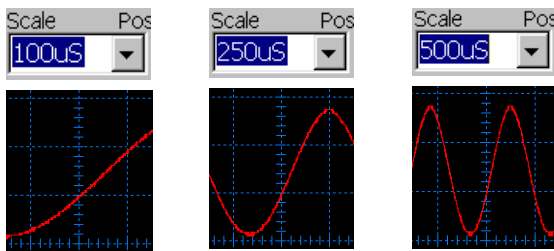

Changing the vertical scale

Select the vertical scale using the list at the right side of the screen. You can select the scale either by searching in the Scale column or by clicking the Position arrows.

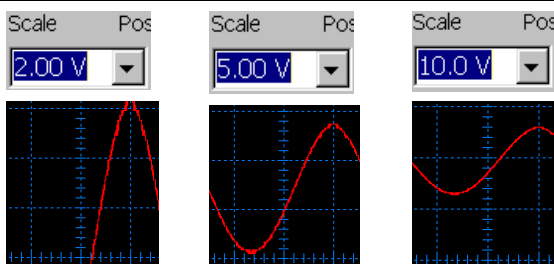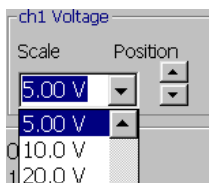

Viewing the automatic measurement results

Before viewing the measurement results, make sure that the correct waveform is selected (highlighted) in the lower left corner of the screen (example: CH1).

<input checked="" type="checkbox"/>	ch1	250uS	5.00 V	/ 1
<input checked="" type="checkbox"/>	ch2	250uS	2.00 V	/ 1
<input type="checkbox"/>	A	5 nS	2.00mV	/ 1

The measurement result is updated in the lower right corner of the screen. Three parameters are listed.

ch1	
Period:	0.82 mS
Freq:	1.213 KHz
PK-PK:	13.200 V

- Period: measures the waveform period in ms.
- Freq: measures the waveform frequency in

kHz.

- PK-PK: measures the peak to peak voltage in V.


Using the Cursor Measurements

Overview

This section introduces how to use cursor measurements in the software screen.


- Activating the cursors
- Viewing the cursor measurement results
- Moving the cursors

Screen overview

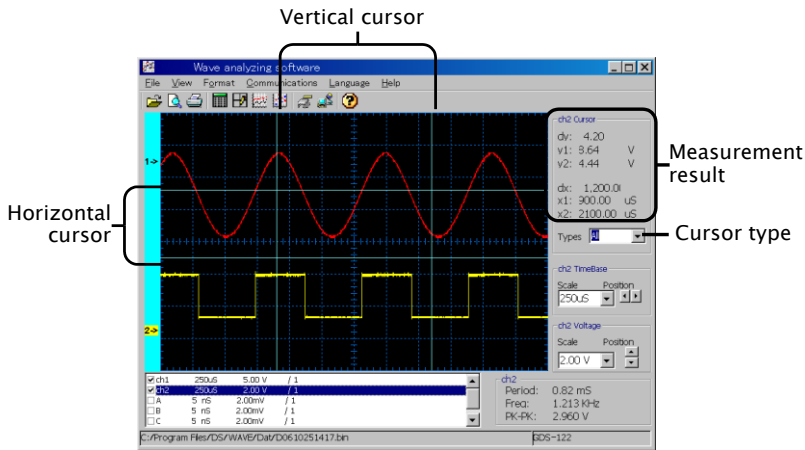

Activating the cursors

Before activating the cursors, make sure that the correct waveform is selected (highlighted) in the lower left corner of the screen (example: CH1).



Select the cursors from the list in the right side of the screen.

- None: the cursor is turned off.
- Horizontal: the horizontal cursors appear.
- Vertical: the vertical cursors



appear.



- All: both the horizontal and vertical cursors appear.



Viewing the cursor measurement results


The cursor measurement results are updated in the right side of the screen.

- dy: the voltage difference between y1 and y2 cursors
- y1, y2: voltage cursors 1 and 2
- dx: the time difference between x1 and x2 cursors
- x1, x2: time cursors 1 and 2

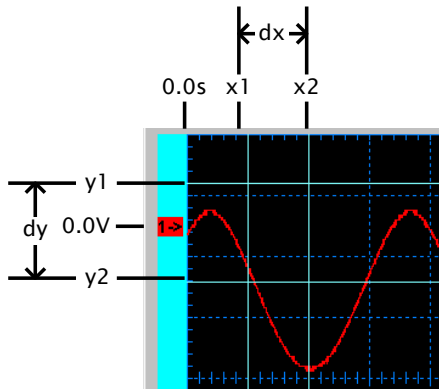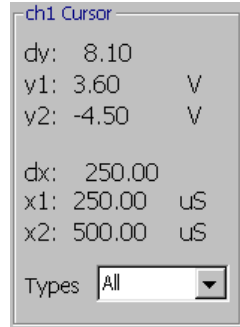

Moving the cursors

Move the mouse over the cursor until the mouse icon changes into a left-right arrow. Hold the mouse and drag the cursor sideways (horizontal cursor) or vertically (vertical cursor).

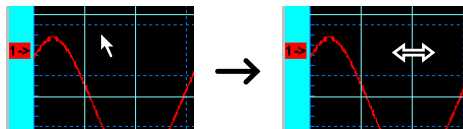

The cursor measurement result changes accordingly.

Saving Waveforms

Overview

You can save the waveforms into the PC in two ways. For details of recalling them, see page 82.

- Storing waveform data (*.bin file, for viewing in the software)
- Storing data points (*.txt file, for data analysis such as in graphs and maps)


For details of storing waveforms into the GDS-122 hardware, see page 55.

Storing waveform data

When retrieving waveform data from the GDS-122, the waveform data (*.bin format) is automatically stored. For details, see page 71.

Storing data point

1. Make sure that the waveform is being displayed in the screen. To recall waveforms that are stored in the PC, see page 82.
2. Select View > Data Table from the menu, or click the Data Table icon on the Toolbar. The Data Table dialogue appears.



Select	ch1/1	ch2/1	A/1	B/1	C/1	D/1
1	-600	3440				
2	-600	3380				
3	-600	3440				
4	-600	3380				
5	-600	3440				
6	-600	3440				
7	-600	3440				
8	-400	3380				
9	-600	3440				
10	-400	3380				
11	-600	3440				
12	-500	3380				
13	-600	3440				
14	-500	3380				
15	-600	3440				
16	-200	3380				
17	-600	3440				
18	-500	3380				
19	-400	3440				
20	-500	3380				
21	-400	3440				
22	-200	3380				
23	-400	3440				
24	-200	3380				
25	-200	3440				

Units: (mV)

Save

- Sequence
- ch1
- ch2
- A
- B
- C
- D


Save data

Save As ...

Close window

Exit


3. Select the data to be saved from the Save column.
 - sequence: the identification number for each data point
 - ch1/ch2: CH1 and CH2 waveform data
 - A/B/C/D: the waveforms stored in the GDS-122 hardware memory

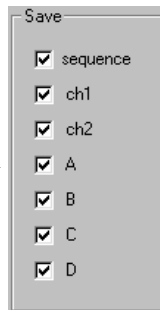


Data points stored in an Excel sheet (example)

	sequence	ch1 / ch2		A / B / C / D			
	A	B	C	D	E	F	G
1	Units: (mV)						
2		ch1 / 1	ch2 / 1	A / 1	B / 1	C / 1	D / 1
3	1	-600	3440				
4	2	-600	3360				
5	3	-600	3440				
6	4	-600	3360				

4. Click the Save As... button to save the data into a directory. The standard Save dialog appears.



5. To close the Data Point dialogue, do one of the following actions.
 - Press the Ctrl + Alt key
 - Click the Exit icon



- Click the Close icon at the top right corner of the dialogue



Recalling Waveforms

Overview



You can recall the waveforms from the PC in two ways. For details of saving them, see page 80.

- Recalling waveform data (*.bin file, for viewing in the software)
- Recalling data points (*.txt file, for data analysis such as in graphs and maps)

For details of recalling waveforms into the GDS-122 hardware, see page 56.

Recalling the waveform data

1. Select **File > Open** from the menu or press the shortcut key, **Ctrl + O**.
2. The File Open dialogue opens. Select one of the SPB bin file (*.bin) and click **OK**.
3. The waveform(s) will be recalled in the screen.

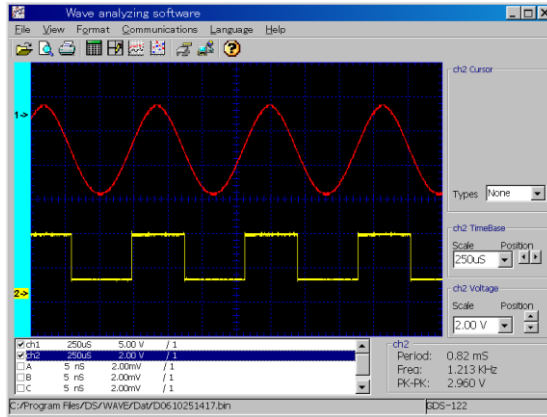

Recalling the data points

1. For recalling the data points, you need to open a text editor or a spreadsheet program like Excel, in which you can organize the data and create graphs and maps for advanced analysis.
2. Open the saved *.txt file from the application.


Printing out Waveforms

Overview You can print out the screen contents to a printer connected to the PC. When you are printing the waveform for the first time, follow all the steps in the following order.

1. Setting up the printer
2. Setting up the page format
3. Printing out

Setting up the printer


1. Select **File > Printer Setup** from the menu. The standard printer setting dialogue opens.

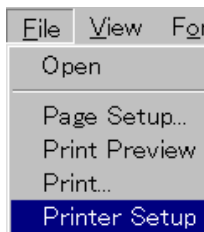

2. Select the printer and its properties, paper size, and orientation.

Setting up the page format

1. Select **File > Page Setup** from the menu. The Page Setup dialog window opens.

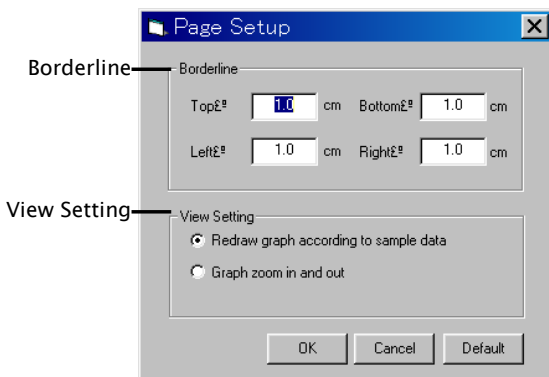

2. Set the borderlines (print margins). The range is 0 to 10.0cm each.

3. Select the View Setting.

Redraw graph according to sample data:

The GDS-122 refreshes the waveform and adjust its scale before printing. The most recent data can be taken, but might take time for refreshing.

Graph zoom in and out

The existing waveform is used with its scale adjusted. Since retrieving the data is not involved, fast printing is ensured.


4. Open the print preview by selecting File > Print Preview from the menu or clicking the Print Preview icon on the toolbar. Make sure that the waveforms are placed appropriately.



Printing out

Print out the waveform in one of the following ways.

- Selecting File > Print in the Print Preview screen menu
- Selecting File > Print from the software menu
- Pressing the shortcut keys, Ctrl + P
- Clicking the Printer icon on the Toolbar

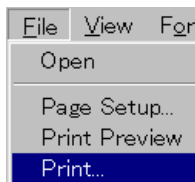


Accessing the Help

Overview The Help file describes how to install and use the software. The About screen shows the software version.

Opening the Help Open the Help in separate file using one of the following methods.


- Selecting Help > Help from the menu

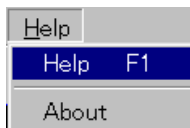


- Clicking the Help icon on the Toolbar



- Pressing the shortcut key, F1
- Selecting the Help documentation from the startup menu

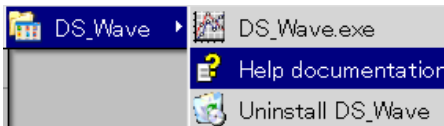

Software version To view the software version, select Help > About from the menu. The software version screen appears.

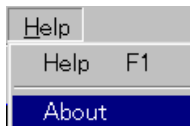





U**SING THE MULTIMETER**


This chapter describes the multimeter functionalities in the GDS-122. Functionalities includes three major items (Voltage, Current, Impedance) and three additional items (Diode, Continuity, Capacitance). The current measurement and capacitance measurement use extension modules to deal with large current and small capacitance, respectively. Delta measurement and automatic range switching features offer flexibility and convenience.




Activating the Multimeter.....	87
Measuring Voltage.....	88
Measuring Current.....	90
Measuring Impedance.....	93
Measuring Diode.....	95
Measuring Continuity.....	96
Measuring Capacitance.....	97

Activating the Multimeter

- Panel operations
1. Press the power switch. The welcome screen with the corporate logo appears on the display. 
 2. To adjust display brightness, use the switch on the side: up (bright) or down (dark). 
 3. Press any key (example: MENU (Example) key) to activate the display. The battery icon at the top left corner of the display shows the battery level. 



If the oscilloscope screen appears, press the DMM/OSC key and change the mode to multimeter. 

4. Press A (current), V (voltage), or R (impedance, diode, continuity, capacitance) switch to proceed. A warning message might appear to remind you of correct connections. 





5. Press any key to cancel the warning message and resume the measurement.

Measuring Voltage


DC voltage specifications (details: page 102)	Range	400mV, 4V, 400V
	Accuracy	$\pm(1\% + 1 \text{ digit})$
	Max input	400V

AC voltage specifications (details: page 102)	Range	4V, 40V, 400V
	Accuracy	$\pm(1\% + 3 \text{ digits})$
	Max input	400V
	Frequency	40Hz to 400Hz

Panel operations 1. Press the V switch to select the Voltage measurement. If a warning message appears, press any key to resume measurement.




2. The voltage measurement screen appears.

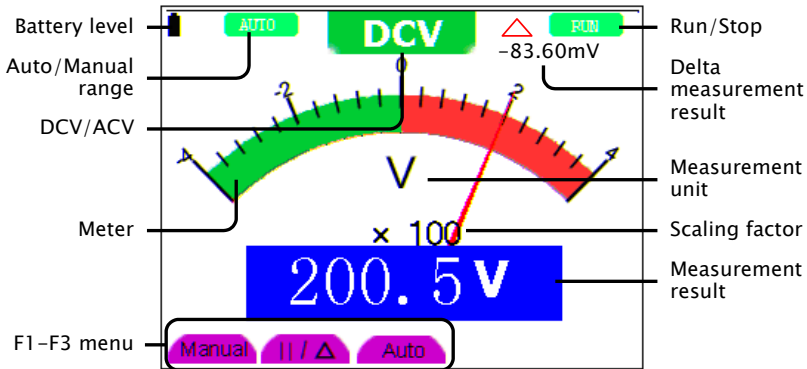

3. Press the AUTOSET key repeatedly to select DC or AC voltage measurement.



4. Connect the test leads to the terminals:
COM for the black lead
V/ Ω /C for the red lead



5. The measurement result will be constantly updated in the display. For more detailed

settings, see the following instructions.


Auto ranging To let the GDS-122 select the voltage range automatically, press F3 (Auto). The indicator at the top left corner of the display changes to AUTO.




Manual ranging To select the voltage range manually, press F1 (Manual). The indicator at the top left corner of the display changes to MANUAL.



Freezing the measurement To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.

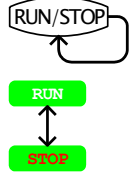


Measuring delta voltage To measure the delta value, press F2 (II/Δ). The measurement result at the moment moves to the top right corner of the display, and the measurement result becomes the difference between the original result.

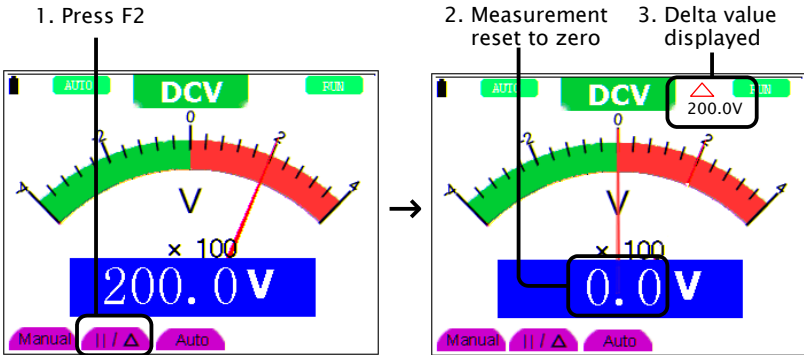

Measuring Current

DC current specifications (details: page 102)	Range & Accuracy	40mA \pm (1% + 1 digit) 400mA \pm (1.5% + 1 digit) 20A \pm (3% + 3 digits)
	Max input	400mA (direct input) 20A (via the extension module)
AC current specifications (details: page 102)	Range & Accuracy	40mA \pm (1.5% + 3 digits) 400mA \pm (2% + 1 digit) 20A \pm (5% + 3 digits)
	Max input	400mA (direct input) 20A (via the extension module)


- Panel operations 1. Press the A switch to select the current (Ampere) measurement. If a warning message appears, press any key to resume measurement.

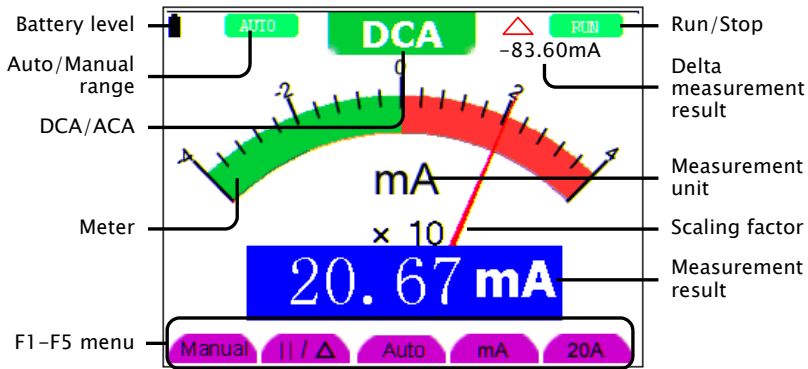


2. Press the AUTOSET key repeatedly to select DC or AC current measurement.



Measuring 0mA to 400mA 1. Connect the test leads to the terminals:
COM for the black lead
mA/A for the red lead




If the range is set at 20A, press F4 (mA) and change it



to mA range.


2. Select automatic range by pressing F3 (Auto) or manual by F1 (Manual). The indicator at the top left corner of the display changes accordingly.




Measuring 400mA to 20A



1. Connect the Current Extension module to the COM & mA/A terminals. Then, connect the test leads to the extension module.

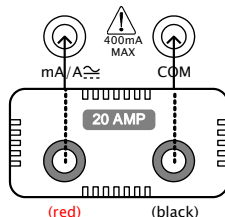

2. Press F5 (20A) and select the 20A range. The MANUAL range indicator activates. (Auto range is not available)



Freezing the measurement


To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.



Measuring delta current



To measure the delta value, press F2 (II/Δ). The measurement result at the moment moves to the top right corner of the display, and the measurement result becomes the difference between the original result.




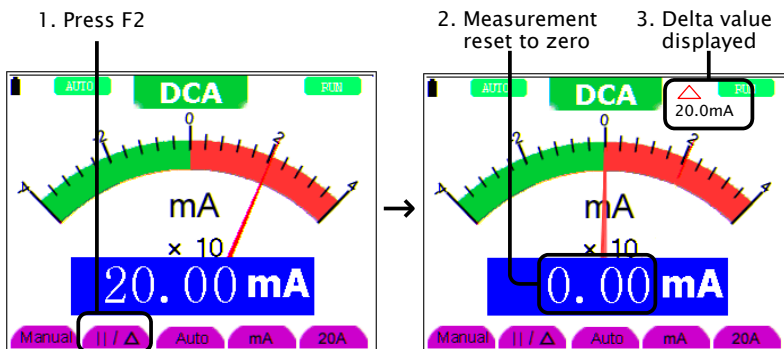





Measuring Impedance






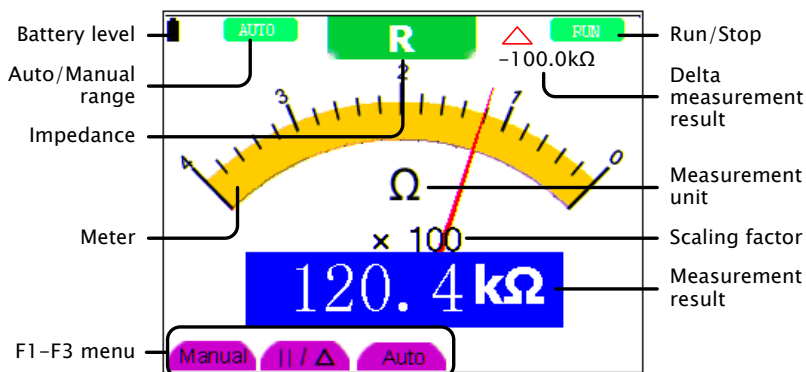


Impedance specifications (details: page 102)	Range & Resolution	400Ω ±(1% + 3 digits)
		4k, 40k, 400k, 4MΩ ±(1% + 1 digit)
		40MΩ ±(1.5% + 3 digits)


- Panel operations
1. Press the R switch. If a warning message appears, press any key to resume measurement. 
 2. Press the AUTOSET key repeatedly to select the impedance measurement. 
 3. The impedance screen appears.



4. Connect the test leads to the terminals:
COM for the black lead
V/Ω/C for the red lead 
5. The measurement result will be constantly updated in the display. For more detailed settings, see the following instructions.



Auto ranging To let the GDS-122 select the voltage range automatically, press F3 (Auto). The indicator at the top left corner of the display changes to AUTO.   


<p>Manual ranging</p>	<p>To select the voltage range manually, press F1 (Manual). The indicator at the top left corner of the display changes to MANUAL.</p>	  
<p>Freezing the measurement</p>	<p>To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.</p>	  
<p>Measuring delta impedance</p>	<p>To measure the delta value, press F2 (II/Δ). The measurement result at the moment moves to the top right corner of the display, and the measurement result becomes the difference between the original result.</p>	 

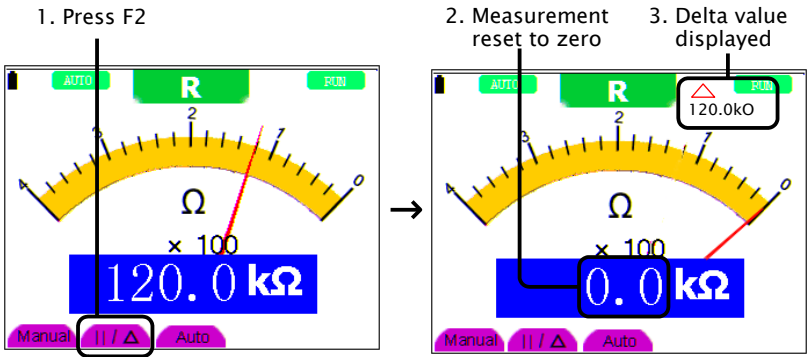


Measuring Diode




Range 0V to 1.5V

Panel operations 1. Press the R switch. If a warning message appears, press any key to resume measurement.  

2. Press the AUTOSET key repeatedly to select the diode measurement. 

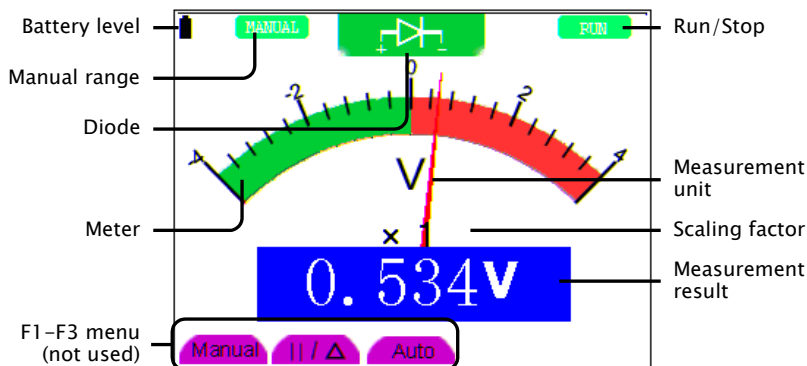3. The diode measurement screen appears.



4. Connect the test leads to the terminals: COM for the black lead and V/Ω/C for the red lead.   

5. The measurement result will be constantly updated in the display.




Freezing the measurement


To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.




Measuring Continuity

Conditions < 50Ω (beeping)

- Panel operations
1. Press the R switch. If a warning message appears, press any key to resume measurement.  
 2. Press the AUTOSET key repeatedly to select the continuity measurement. 
 3. The continuity measurement screen appears.

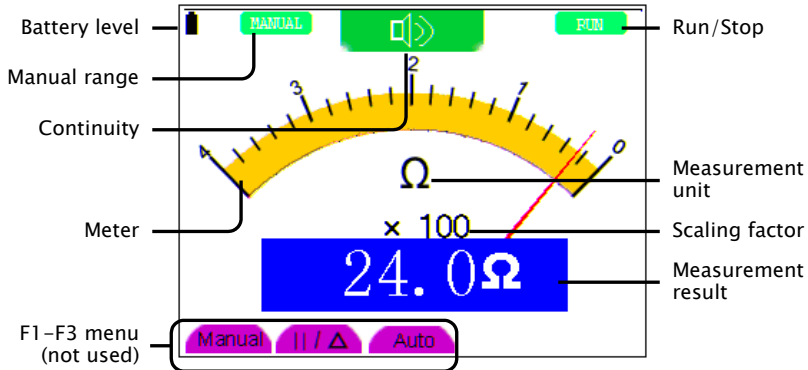

4. Connect the test leads to the terminals:
 COM for the black lead
 V/Ω/C for the red lead
 
5. If the GDS-122 confirms continuity (the impedance is less than 50Ω), the beeper sounds.




Freezing the measurement


To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.






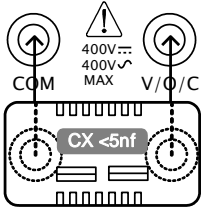
Measuring Capacitance

Continuity specifications Range 51.2nF to 100uF ±(3% + 3 digits)

- Panel operations
1. Press the R switch. If a warning message appears, press any key to resume measurement.  
 2. Press the AUTOSET key repeatedly to select the capacitance measurement. 
 3. The capacitance screen appears.

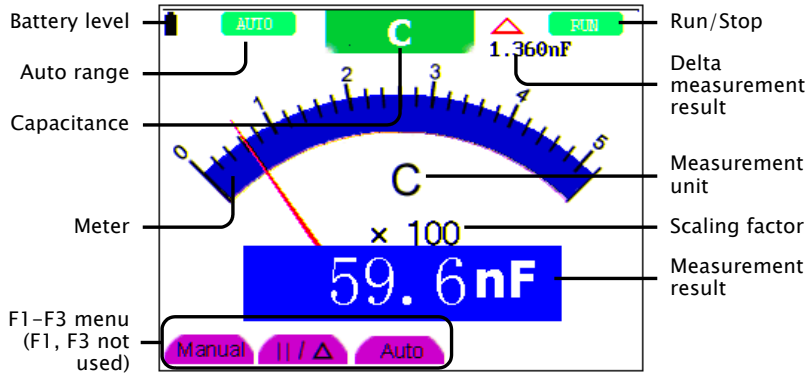

Measuring 5nF and above Connect the test leads to the CX terminals.  

Measuring less than 5nF  Connect the Capacitance Extension module to the COM & V/Ω/C terminals. Then, connect the test leads to the extension module. The measurement result will be constantly updated in the display. 


Freezing the measurement

To freeze the measurement, press the RUN/STOP key. The measurement result will be retained and the indicator at the top right corner of the display changes to STOP. To unfreeze, press the RUN/STOP key again.



Measuring delta capacitance

To measure the delta value, press F2 (II/Δ). The measurement result at the moment moves to the top right corner of the display, and the measurement result becomes the difference between the original result.

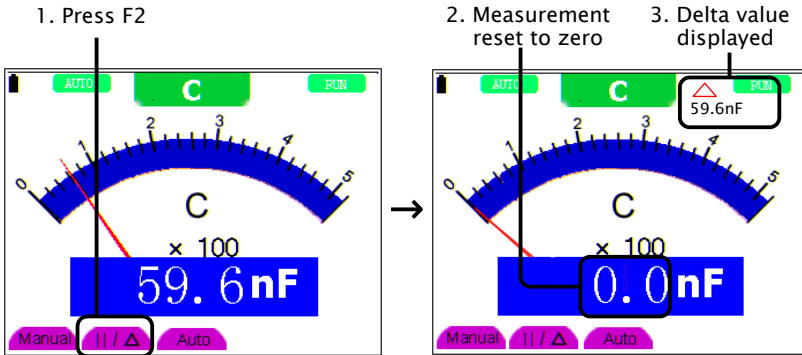

FAQ

-
- Power
- Q
- The GDS-122 does not power up.
 - The GDS-122 stopped working after a short period of time.
- A
- The battery may need recharging. Connect the GDS-122 to the AC adaptor and recharge it for at least 15 minutes. Then try powering up.
-

- ERR mode in the multimeter
- Q
- In the multimeter mode, the measurement type at the top of the display says “ERR” which looks like an error message.
- A
- The “ERR” sign appears when none of the measurement switch is pressed. Select one from the V, A, or R switch and press it.
-

- Amplitude mismatch in the oscilloscope
- Q
- The measured voltage is 10 times smaller than the real value.
- A
- The attenuation ratio on the probe is set at x10. If you switch it to x1, make sure that the input voltage does not surpass the maximum 400V.
- Q
- The measured voltage is 10/100/1000 times larger than the real value.
- A
- The probe ratio in the CH1 or CH2 setup menu is set at X10, X100, or X1000. See page 21 for details.
-

- Unstable waveform in the oscilloscope
- Q
- The waveform appears in the display but is not stable.
- A
- Configuring the trigger might help you. See page 28 for details.
- Make sure the trigger source channel matches the input signal.
-

- Make sure the correct trigger type, edge or video, is selected.
- Try changing the HF and LF repression in the trigger coupling mode and filtering out high or low frequency noise.

No waveform in the oscilloscope

Q The waveform does not appear at all in the display.

- A
- The trigger level might be out of the waveform range. Press the AUTOSET key so that the GDS-122 automatically adjusts the trigger level.
 - If the trigger mode is Single, press the RUN/STOP key to trigger the waveform or switch the trigger mode to Normal. See page 28 for trigger details.

Slow update in the multimeter

Q It takes 30 to 40 seconds for the multimeter to update the capacitor measurement.

- A
- It takes longer time to measure small capacitors. 30 to 40 seconds are normal for measuring 5nF or smaller capacitors. See page 97 for capacitance measurement details.

Slow update in the oscilloscope

Q The display response to the waveform change is unusually slow.

- A
- Slow response is normal in the following cases.
- Average sampling mode is being selected (page 21)
 - Display persistence is being selected (page 34)

Language

Q I want to switch the language from Chinese to English (or vice versa).

- A
- Press the menu key and select "FUNCTION" or "功能设置" using the Up/Down keys, then press F3 (Language/语言). See page 34 for details.

SPECIFICATIONS

Conditions for specifications	<p>The following specifications are applicable when these two conditions are met:</p> <ul style="list-style-type: none"> • The GDS-122 has been powered up for at least 30 minutes, during which temperature fluctuation is no more than 5 degrees Celsius. • The probe attenuation is set to X 10.
-------------------------------	---

Oscilloscope specifications

Sampling	Mode	Normal, Peak detection, Average
	Rate	100 MSa/s
Input	Coupling	DC, AC
	Impedance	1M Ω \pm 2% in parallel with 20pF \pm 3pF
	Probe	1X, 10X, 100X, 1000X
	Max. Input	400V (peak)
	Channel delay	150ps (typical)
Horizontal	Sampling rate	10S/s~100mS/s
	Interpolation	(sin x)/x
	Record length	6K points on each channel
	Scanning speed	5ns/div~5s/div, 1-2.5-5 step
	Sampling rate / relay time accuracy	\pm 100ppm (time interval \geq 1ms)
	Interval (Δ T) accuracy (full bandwidth)	Single: \pm (1 interval time +100ppm \times reading+0.6ns) Average >16 : \pm (1 interval time +100ppm \times reading+0.4ns)
	Vertical	A/D converter
Sensitivity		5mV/div~5V/div (at input)
Displacement		\pm 50V(500mV~5V), \pm 1V(5mV~200mV)
Bandwidth		20M
Single		Full bandwidth
Low frequency		\geq 5Hz (at input, AD coupling, -3dB)
Rise time		\leq 17.5ns (at input, typical)

	DC accuracy	±5% (DC gain)	
	DC accuracy (avg)	Avg > 16: ±(5% rdg + 0.05 div) for ΔV	
Trigger	Sensitivity	CH1 and CH2: 1 div(DC~full bandwidth) DC coupling: ≥ 50Hz.	
	Trigger level	±6 divisions from the screen center	
	Level accuracy	±0.3 div (typical, rise/fall time ≥ 20ns)	
	Displacement	655div (pre-trigger), 4div (post-trigger)	
	50% level setting	Input signal frequency ≥ 50Hz (typical)	
	Trigger sensitivity	2 div of peak-to-peak (video trigger)	
	Signal system	NTSC, PAL, SECAM (any frequency)	
Measurement	Cursor	ΔV and ΔT between cursors	
	Automatic	Peak-to-peak, average, root mean square, frequency, and cycle.	
Probe		1X position	10X position
	Bandwidth	≤ 6 MHz (DC)	Full bandwidth (DC)
	Attenuation rate	1: 1	10: 1
	Compensation	10pf~35pf	10pf~35pf
	Input impedance	1MΩ±2%	10MΩ±2%
	Input impedance	85pf~115pf	14.5pf~17.5pf
	Input voltage	150 V DC	300V DC

Multimeter specifications

VDC	Input impedance	10MΩ
	Max input	1000V (DC or AC peak-to-peak value)
	Accuracy	±1%±1 digit
	Resolution	400mV range: 100uV
		4V range: 1mV 40V range: 10mV 400V range: 100mV
VAC	Input impedance	10MΩ
	Max input	750V(AC, virtual value)
	Frequency range	40Hz~400Hz
	Display	Virtual value of sine wave
	Accuracy	±1%±3 digits
	Resolution	4V range: 1mV
40V range: 10mV		
400V range: 100mV		
DCA	Accuracy	40mA range: ±1%±1 digit
		400mA range: ±1.5%±1 digit

		20A range: $\pm 3\% \pm 3$ digits
	Resolution	40mA range: 10uA 400mA range: 100uA 20A range: 10mA
ACA	Accuracy	40mA range: $\pm 1.5\% + 3$ digits 400mA range: $\pm 2\% \pm 1$ digit 20A range: $\pm 5\% \pm 3$ digits
	Resolution	40mA range: 10uA 400mA range: 100uA 20A range: 10mA
Resistance	Accuracy	400 Ω range: $\pm 1\% \pm 3$ digits 4k Ω ~4M Ω range: $\pm 1\% \pm 1$ digit 40M Ω range: $\pm 1.5\% + 3$ digits
	Resolution	400 Ω range: 0.1 Ω 4k Ω range: 1 Ω 40k Ω range: 10 Ω 400k Ω range: 100 Ω 4M Ω range: 1k Ω 40M Ω range: 10k Ω
Capacitance	Accuracy	$\pm 3\% \pm 3$ digits
	Resolution	51.2nF range: 10pF 512nF range: 100pF 5.12uF range: 1nF 51.2uF range: 10nF 100uF range: 100nF
Diode	Reading range	0V~1.5V
Continuity	Threshold	< 30 Ω

General specifications

	Resolution	320 (horizontal) x240 (vertical) pixels
	Color	4096 colors
Power	Consumption	< 6W
	Supply	100V~240V AC, 50/60Hz
	DC input	8.5VDC, 1500mA
Environment	Operating	Temperature: 0 to 40 °C(32 to 104 °F) Relative humidity: < 75%
	Storage	Temperature: -20 to 60 °C(-4 to 140 °F) Relative humidity: < 75%
Mechanical	Dimension	18 cm x 11.5cm x 4cm

Weight	645g
--------	------

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

(1) No.7-1, Jhongsing Rd., Tucheng City, Taipei County, Taiwan

(2) No. 69, Lu San Road, Suzhou City (Xin Qu), Jiangsu Sheng, China

declare, that the below mentioned product

Type of Product: Handheld Digital Storage Oscilloscope & Multimeter

Model Number: GDS-122

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (89/336/EEC) and Low Voltage Directive (73/23/EEC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© **EMC**

EN 61326-1: Electrical equipment for measurement, control and laboratory use — EMC requirements (1997 + A1:1998 + A2:2001 + A3:2003)	
Current Harmonics	Voltage Fluctuations
EN 61000-3-2: 2000 + A2:2005	EN 61000-3-3: 1995 + A1:2001
-----	-----
-----	-----

© **Safety**

Low Voltage Equipment Directive 73/23/EEC
Safety Requirements
IEC/EN 61010-1: 2001 (2nd Edition)

INDEX

AC coupling	
trigger	31
vertical	23
ACA multimeter	90
specifications	103
AC-DC adaptor	8
acquisition	33
short cuts	59
system status	36
ACV multimeter	88
specifications	102
addition, math mode	38
auto ranging	
impedance multimeter	93
voltage multimeter	89
auto trigger mode	30
AUTO trigger status	26
automatic measurements	40
shortcuts	58
Autoset	17
capacity multimeter	97
continuity, multimeter	96
diode, multimeter	95
impedance measurement	93
voltage multimeter	88
average acquisition mode	33
application	48
background color, PC software	70
battery level	15
calibration	51
capacitance measurement,	
multimeter	97
specifications	103
carry, interface setting	67
carrying case	8
caution symbol	3
CD-ROM	8
channel	
edge trigger	29
on/off	22
video trigger source	32
Chinese, language selection	34
contents of package	8
continuity, multimeter	96
specifications	103
coupling	
system status	36
trigger	31
vertical	23
cursor measurement	
PC software	78
short cuts	58
time	41
voltage	42
cycle rms, automatic measurement	40
data point, storing	80
data table, PC software	80
DC coupling	
trigger	31
vertical	23
DCA multimeter	90
specifications	102
DCV multimeter	88
specifications	102
default settings	54
delta measurement	
capacitance multimeter	98
current multimeter	91
impedance multimeter	94
voltage multimeter	89
diode measurement, multimeter	95
specifications	103
display	
acquiring snapshot	68
brightness adjustment	15
overview	18
settings	34
shortcuts	59

division, math mode	38	help, PC software	85
dot drawing.....	34	Hf Rjc	31
edge trigger		horizontal	
auto mode.....	30	adjusting position.....	19, 24
coupling mode	31	adjusting scale.....	18, 25
mode	30	scale vs trigger status	26
normal mode.....	30	short cuts	59
single mode	30	specifications.....	101
EN61000.....	105	system status.....	36
EN61010		impedance, multimeter.....	93
declaration of conformity	105	specifications.....	103
measurement category	4	installing PC software.....	63
pollution degree.....	5	inverting channel	23
EN61326-1	105	language	34
English, language selection	34	PC software.....	72
environment		LF Rjc	31
operation.....	4	line data, PC software.....	71
specifications.....	103	line trigger, video	32
storage.....	5	list of features	9
ERR mode, multimeter	99	magnification, vertical	24
extension module		manual ranging	
capacitance multimeter.....	97	current multimeter	91
current multimeter	91	impedance multimeter.....	94
package	8	voltage multimeter.....	89
factory settings.....	54	manual, overview of	12
FAQ.....	99	math mode	38
ERR mode, multimeter	99	shortcuts	58
magnification	99	system status.....	36
no waveform	100	mean voltage, auto measurement ..	40
powering up.....	99	multimeter	
slow update, multimeter	100	activating	87
slow update, oscilloscope	100	capacitance measurement	97
unstable waveform.....	99	continuity measurement.....	96
field trigger, video.....	32	current measurement.....	90
freezing measurement		diode measurement.....	95
capacitance multimeter.....	98	ERR mode.....	99
continuity multimeter	96	impedance measurement	93
current multimeter	91	specifications.....	102
diode multimeter	95	switching to oscilloscope.....	87
impedance multimeter.....	94	voltage measurement.....	88
voltage multimeter	89	warning message.....	87
frequency, automatic measurement	40	multiplication, math mode.....	38
front panel overview.....	10	noisy signal, viewing	48
grid color, PC software	71	normal trigger mode.....	30
grid, PC software.....	71	operation environment	4
ground symbol.....	3	OSC option key.....	61

oscilloscope	
specifications.....	101
switching to multimeter	15
package contents	8
PC software	
activation.....	66
cursor measurement	78
help	85
installation.....	63
overview.....	62
package.....	8
printing out.....	83
saving waveform.....	80
screen overview.....	70
uninstall.....	65
version	85
viewing waveforms	73
peak detect acquisition mode	33
application	47
period, automatic measurement	40
persistence setting.....	34
application	49
pk-pk voltage, automatic	
measurement	40
point data, PC software	71
position	
horizontal	24
math mode	39
shortcuts	61
time cursor	42
trigger	27
vertical	22
voltage cursor	43
waveform, PC software	74
xy mode.....	47
power supply	
safety instructions	4
specifications.....	103
power up, faq.....	99
powering up	15
print out, PC software	83
probe	
adjusting display magnification	16
adjustment tool.....	8
calibration	52
package.....	8
setting attenuation	16
specifications	102
Ready trigger status.....	26
recalling	
default settings	54
waveforms from GDS-122.....	56
waveforms, PC software	82
resetting trigger level.....	28
run trigger	27
sample acquisition mode	33
saving	
shortcuts.....	60
waveforms in PC software.....	80
waveforms inside GDS-122.....	55
scale	
horizontal	25
math mode	39
vertical	22
waveform, PC software	75
xy mode.....	47
zoom	46
Scan trigger status.....	26
self calibration	51
SET1/2, automatic measurement	40
signal peak, viewing.....	47
single trigger mode.....	30
slope, trigger.....	29
snapshot, display	68
software version.....	85
specifications	
multimeter	102
oscilloscope	101
stop trigger.....	27
STOP trigger status.....	26
storage environment.....	5
subtraction, math mode	38
synchronization, video trigger	32
system status	35
shortcuts.....	60
test lead	8
threshold, continuity multimeter	96
tilt stand	16
time cursor	41
Trig'd trigger status	26
trigger	
adjusting level	27

auto mode.....	30	adjusting position.....	19, 22
channel, edge trigger.....	29	adjusting scale.....	18, 22
coupling mode	31	inverting channel.....	23
mode	30	selecting coupling mode.....	23
normal mode.....	30	selecting magnification	24
run/stop	27	shortcuts	57
shortcuts	57	specifications.....	101
single mode	30	system status.....	36
slope	29	video trigger	
source channel, video.....	32	field trigger.....	32
specifications	102	line trigger	32
status icons	26	source channel	32
status vs horizontal scale	26	sync	32
sync, video trigger	32	voltage cursor	42
system status	36	warning message, multimeter	87
UK power cord	6	warning symbol.....	3
USB driver installation.....	66	xy mode	46
variations, viewing.....	49	system status.....	36
vector drawing.....	34	zoom waveform	
vertical		system status.....	36