

Multi-Range DC Power Supply

PSW Series

PROGRAMMING MANUAL



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

Table of Contents

REMOTE CONTROL	4
Interface Configuration	6
Socket Server Examples	21
Command Syntax	25
Command List	28
Status Register Overview	93
Error List	109
APPENDIX	118
PSW Default Settings	118
Error Messages & Messages	121
LED Display Format	121
FAQ	122
INDEX	124

REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control. For a command list, refer to the programming manual, downloadable from GW Instek website, www.gwinstek.com


Interface Configuration	6
Configure USB Remote Interface.....	6
Configure GPIB Interface	6
Configure Ethernet Connection	8
Web Server Configuration	8
Sockets Server Configuration	9
USB Remote Control Function Check.....	10
Using Realterm to Establish a Remote Connection.....	11
GPIB Remote Control Function Check.....	13
Web Server Remote Control Function Check	16
Socket Server Function Check	16
Socket Server Examples	21
Visual Basic Example.....	21
C++ Example	22
LabVIEW Example.....	24
Command Syntax	25
Command List	28
Abort Command.....	32
APPLY Command	34
Display Commands	36
Initiate Command.....	39
Measure Commands.....	40
Output Commands	42
Sense Command	47
Status Commands	48
Source Commands	61
Trigger Commands.....	71
System Function Command	74

IEEE 488.2 Common Commands.....	89
Status Register Overview	93
Introduction to the Status Registers.....	93
The Status Registers.....	94
The Questionable Instrument Status Registers (PSW-Multi only)	95
The Operation Instrument Status Registers (PSW-Multi only)	96
Questionable Status Register Group.....	97
Operation Status Register Group	100
Questionable Instrument Status Register Group (PSW-Multi only).....	103
Operation Instrument Status Register Group (PSW-Multi only).....	104
Standard Event Status Register Group.....	105
Status Byte Register & Service Request Enable Register	107
Error List	109
Command Errors	109
Execution Errors	113
Device Specific Errors.....	115
Query Errors	116

Interface Configuration

Configure USB Remote Interface

USB configuration	PC side connector	Type A, host
	PSW side connector	Rear panel Type B, slave
	Speed	1.1/2.0 (full speed/high speed)
	USB Class	CDC (communications device class)

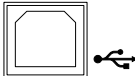
- Panel operation
1. Connect the USB cable to the rear panel USB B port. 
 2. Press the Function key to enter the Normal configuration settings.
Set the following USB settings:
F-22 = 2 Set the rear panel USB port to USB-CDC.

Configure GPIB Interface

Background To use GPIB, the optional GPIB to USB (GUG-001) adapter must be used. The GPIB to USB adapter must be connected before the PSW is turned on. Only one GPIB address can be used at a time.

- Configure GPIB
1. Ensure the PSW is off before proceeding.
 2. Connect the USB cable from the rear panel USB B port on the PSW to the USB A port on the GPIB to USB adapter.

3. Connect a GPIB cable from a GPIB controller to the GPIB port on the adapter.

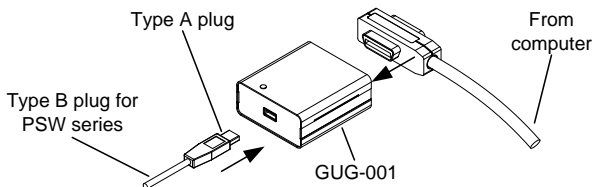

4. Turn the PSW on.
5. Press the Function key to enter the Normal configuration settings.

Set the following GPIB settings:

- F-22 = 1 Set the real panel USB port to USB Host.
F-23 = 0~30 Set the GPIB address (0~30)

- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
 - Unique address assigned to each device
 - At least 2/3 of the devices turned On
 - No loop or parallel connection

Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.


The PSW Series supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.

Ethernet configuration Parameters	MAC Address (display only)	LAN IP Address
	DHCP	Gateway
	Subnet Mask	Sockets Active
	DNS Address	Web Password Active
	Web Server Active	Web set password
	Web set password	0000~9999 (default 0000)

Web Server Configuration

Configuration This configuration example will configure the PSW as a web server and use DHCP to automatically assign an IP address to the PSW.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



2. Press the Function key to enter the Normal configuration settings.
Set the following LAN settings:

F-36 = 1	Enable LAN
F-37 = 1	Turn DHCP to enable
F-59 = 1	Turn the web server on



Note


It may be necessary to cycle the power or refresh the web browser to connect to a network.

Sockets Server Configuration

Configuration This configuration example will configure the PSW sockets server.

The following configuration settings will manually assign the PSW an IP address and enable the socket server. By default, the socket server port number is 2268 and cannot be configured.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



2. Press the Function key to enter the Normal configuration settings.

3. Set the following LAN settings:

F-36 = 1	Enable LAN
F-37 = 0	Disable DHCP
F-39 = 172	IP Address part 1 of 4
F-40 = 16	IP Address part 2 of 4
F-41 = 5	IP Address part 3 of 4
F-42 = 133	IP Address part 4 of 4
F-43 = 255	Subnet Mask part 1 of 4
F-44 = 255	Subnet Mask part 2 of 4
F-45 = 128	Subnet Mask part 3 of 4
F-46 = 0	Subnet Mask part 4 of 4
F-43 = 172	Gateway part 1 of 4
F-44 = 16	Gateway part 2 of 4
F-45 = 21	Gateway part 3 of 4
F-46 = 101	Gateway part 4 of 4
F-57 = 1	Enable Sockets



Note

The socket function is supported only in PSW firmware version V1.12 or later. However, the socket function is supported in all firmware versions of PSW-Multi.

See the user manual to check your firmware version number.

USB Remote Control Function Check

Functionality
check

Invoke a terminal application such as ReaIterm. The PSW will appear as a COM port on the PC.

To check the COM port No, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.



Note

If you are not familiar with using a terminal application to send/receive remote commands via a USB connection, please page 11 for more information.

Run this query command via the terminal after the instrument has been configured for USB remote control.

```
*idn?
```

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

```
GW-INSTEK, PSW30-36,TW123456,01.00.20110101
```

```
Manufacturer: GW-INSTEK
```

```
Model number : PSW30-36
```

```
Serial number : TW123456
```

```
Firmware version : 01.00.20110101
```

Using Realterm to Establish a Remote Connection

Background Realterm is a terminal program that can be used to communicate with a device attached to the serial port of a PC or via an emulated serial port via USB.

The following instructions apply to version 2.0.0.70. Even though Realterm is used as an example to establish a remote connection, any terminal program can be used that has similar functionality.



Note


Realterm can be downloaded on Sourceforge.net free of charge.

For more information please see <http://realterm.sourceforge.net/>

- Operation**
1. Download Realterm and install according to the instructions on the Realterm website.
 2. Connect the PSW via USB.
 3. Go to the Windows device manager and find the COM port number for the connection. For example, go to the Start menu > Control Panel > Device Manager

Double click the *Ports* icon to reveal the connected serial port devices and the COM port for the each connected device.

The baud rate, stop bit and parity settings can be viewed for the virtual COM port by right-clicking connected device and selecting the *Properties* option.

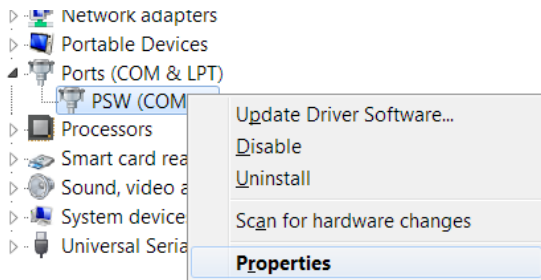

4. Start Realterm on the PC as an administrator.
Click:
Start menu>All Programs>RealTerm>realterm


Tip: to run as an administrator, you can right click the Realterm icon in the Windows Start menu and select the *Run as Administrator* option.

5. After Realterm has started, click on the *Port* tab.

Enter the *Baud, Parity, Data bits, Stop bits* and *Port* number configuration for the connection.

The *Hardware Flow Control, Software Flow Control* options can be left at the default settings.

Press *Open* to connect to the PSW.

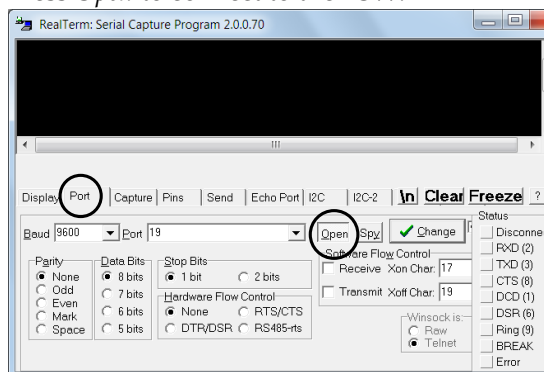


6. Click on the *Send* tab.

In the *EOL* configuration, check on the +*CR* and +*LF* check boxes.

Enter the query:

**idn?*

Click on *Send ASCII*.

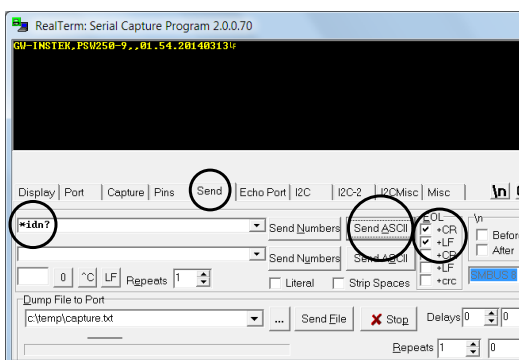

7. The terminal display will return the following:

GW-INSTEK,PSW250-9,,01.54.20140313

(manufacturer, model, serial number, version)

8. If Realterm fails to connect to the PSW, please check all the cables and settings and try again.

GPIB Remote Control Function Check

Background

To check if the GPIB connection is functioning properly, you can use the National Instruments Measurement and Automation Explorer (NI MAX). NI MAX needs to be obtained by installing NI-VISA.

You can download NI-VISA from the NI website www.ni.com. Please search for "NI-VISA download" on the NI website to obtain it.

Once NI-VISA is installed, please download NI-488.2 and complete the installation. NI-488.2 can be downloaded from the NI website www.ni.com. Please search for “NI-488.2 download” on the NI website to obtain it.

The following function check is based on version 2022 Q3.



Warning


NI-VISA is a product of NI, when you want to use NI-VISA, please abide by the NI license terms.

Steps

1. Complete the setup procedure described previously.
2. Start the Measurement and Automation Explorer (MAX) program. Using Windows, press;




Start>All Programs>National Instruments>NI MAX

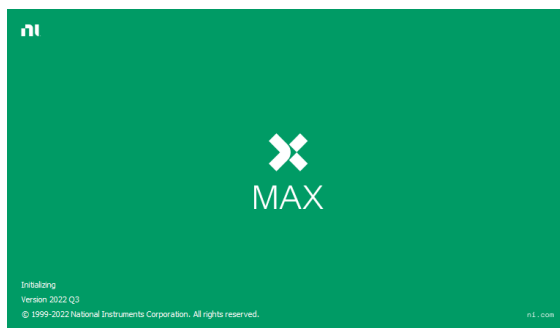

The Measurement & Automation Explorer initial splash screen.

3. From the **Configuration** panel access;
My System>Devices and Interfaces>GPIB0(GPIB-USB-HS+)
4. Press the **Scan for Instruments** button.

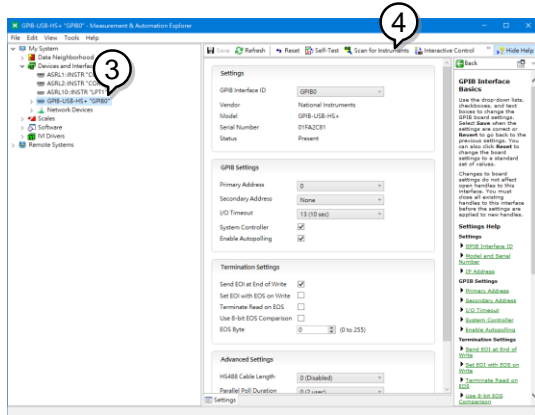


5. Click on **Communicate with Instrument**.
6. In the **NI-488.2 Communicator** window, ensure ***IDN?** is written in the **Send String:** text box.

Click on the **Query** button to send the ***IDN?** query to the oscilloscope.

7. The **String Received** text box will display the query return:

GW-INSTEK,PSW250-9,,01.54.20140313\n
(manufacturer, model, serial number, version)

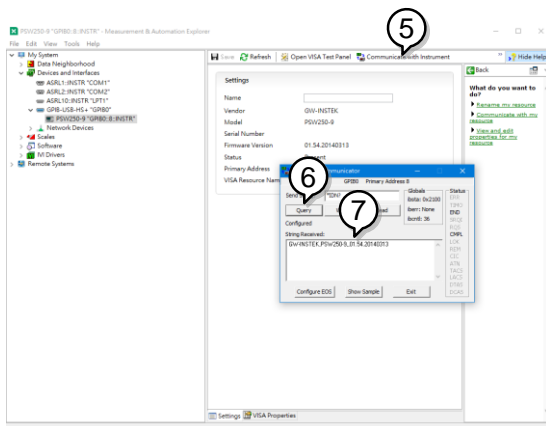

8. The function check is complete.

Web Server Remote Control Function Check

Functionality check Enter the IP address of the power supply in a web browser after the instrument has been configured as a web server (page 8).

`http:// XXX.XXX.XXX.XXX`

The web browser interface appears.

Socket Server Function Check

Background To check if the socket server connection is functioning properly, you can use the National Instruments Measurement and Automation Explorer (NI MAX). NI MAX needs to be obtained by installing NI-VISA.

You can download NI-VISA from the NI website www.ni.com. Please search for "NI-VISA download" on the NI website to obtain it.

The following function check is based on version 2022 Q3.




Warning


NI-VISA is a product of NI, when you want to use NI-VISA, please abide by the NI license terms.

Functionality check 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>National Instruments>Measurement & Automation

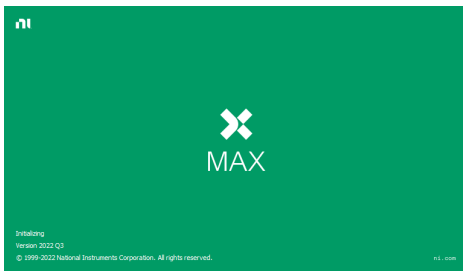


2. From the Configuration panel access; *My System>Devices and Interfaces>Network Devices*
3. Click *Create New...*
4. Select *Visa TCP/IP Resource*.

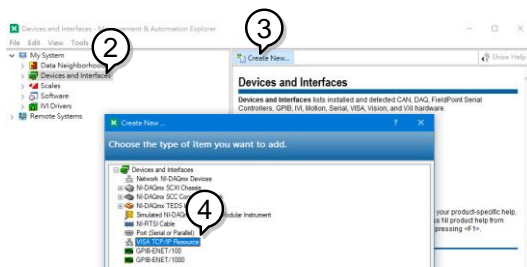


5. Select *Manual Entry of Raw Socket* from the popup window.
6. Click *Next*.

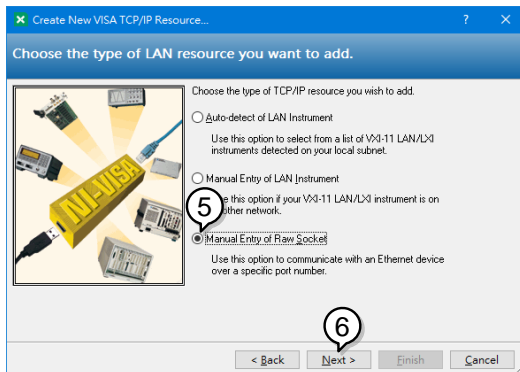

7. Enter the IP address and the port number of the PSW. The port number is fixed at 2268.
8. Click the Validate button. A popup box will appear when successful.
9. Click *Next*.

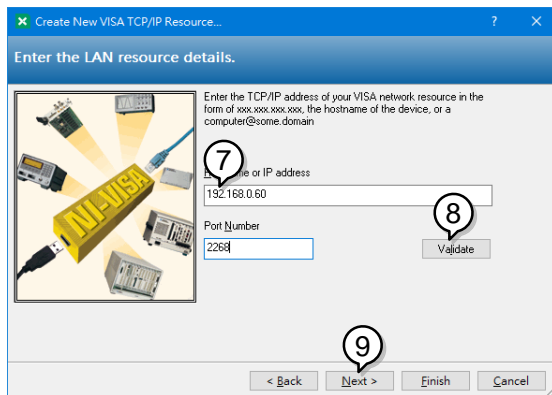


10. Next configure the Alias (name) of the PSW connection. In this example the Alias is: PSW_DC1
11. Click finish.

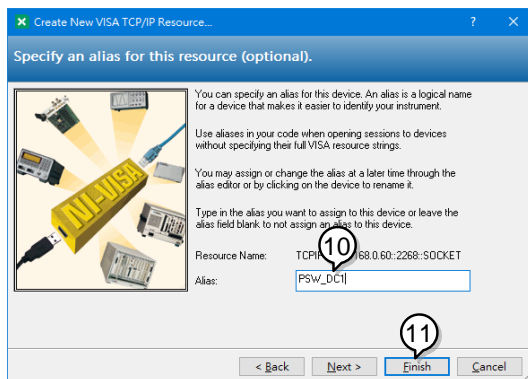

12. The IP address of the PSW will now appear under Network Devices in the configuration panel. Select this icon now.


13. Press *Open VISA Test Panel*.

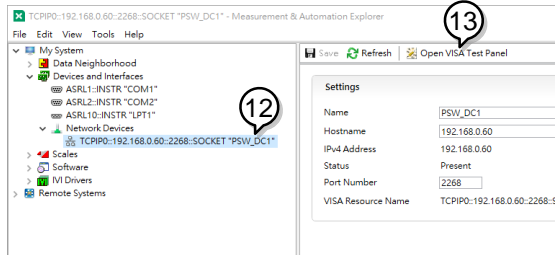

14. Click *Configuration* icon.

15. In the *I/O Settings* tab, select the *Enable Termination Character* check box. Ensure *Line Feed - \n* is selected as the line feed character.

16. Click *Apply Changes*.

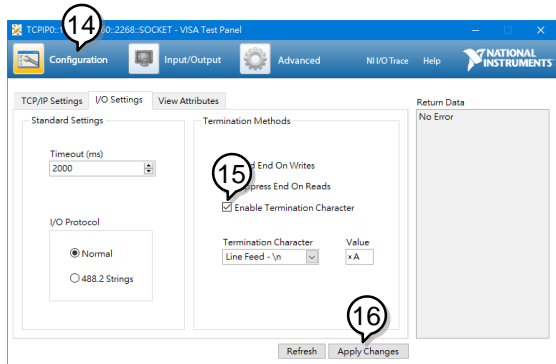


17. Click the *Input/Output* icon.

18. Ensure **IDN?\n* is selected in the *Select or Enter Command* dropdown text box.

19. Click the *Query* button.

20. The **IDN?* query should be returned to the buffer area:

GW-INSTEK,PSW250-9,,01.54.20140313 \n

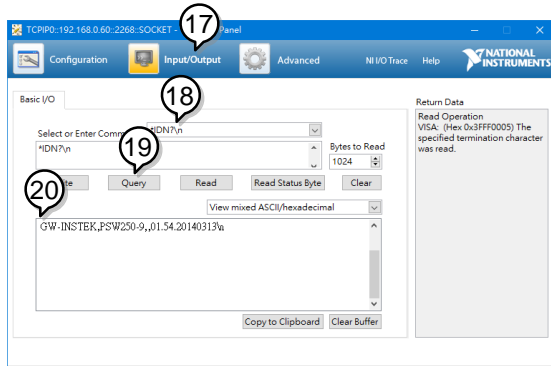


Note

For further details, please see the following programming examples.

Socket Server Examples

Visual Basic Example

Background The following visual basic programming example uses the VISA COM 3.0 Type Library. The example will connect to the PSW using the IP address of 172.15.5.133 over port 2268. The program will send the *IDN? to the PSW, print the return string and then close the connection.

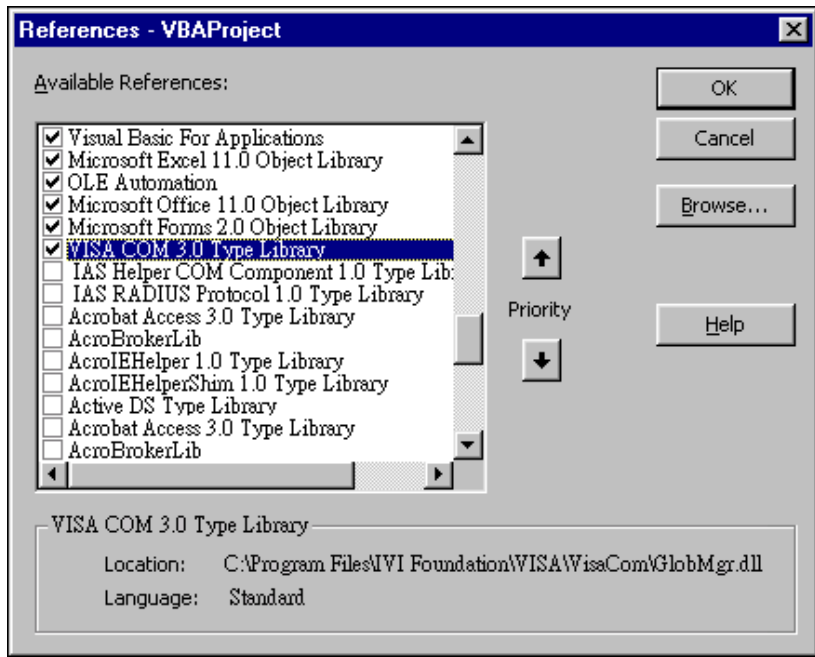

```
'Create VISA ResourceManager object
Dim rm As New VisaComLib.ResourceManager
Dim accessMode As VisaComLib.accessMode
Dim serial As String
Dim timeOut As Integer
Dim optionString As String
Dim psw As VisaComLib.IMessage
Dim pswcom As VisaComLib.FormattedIO488
Dim pswsfc As VisaComLib.IAsynchMessage
```

```
Private Sub CommandButton1_Click()
    accessMode = VisaComLib.accessMode.NO_LOCK

    timeOut = 0

    optionString = ""

    'Connect to the PSW

    Set psw = rm.Open("TCPIP0::172.16.5.133::2268::SOCKET", _
        accessMode, _
        timeOut, _
        optionString)
    Set pswsfc = psw
    pswsfc.TerminationCharacterEnabled = True

    'Query the System Identify Name
    psw.WriteString ("*IDN?" & vbCrLf)

    Worksheets("Sheet1").Cells(1, 5) = psw.ReadString(256)

    'Close the communication
    psw.Close
```

```
End Sub
```

C++ Example

Background The following program creates a connection to the PSW and sets the voltage to 3.3 volts and the current 1.5 amps. The voltage and current reading is then read back and the connection is closed.



Note

Add visa32.lib to the project library when building the following sample program.

```
#include "stdio.h"
#include "string.h"
#include "visatype.h"
#include "visa.h"
#define IPAddr "172.16.20.181"
int main(int argc, char* argv[])
{
    ViSession defaultRm, instr;
    // Create VISA ResourceManager object
    ViStatus status = viOpenDefaultRM(&defaultRm);
    if (status < VI_SUCCESS)
    {
        // Initialization error
        return -1;
    }
    ViChar rsc[256];
    sprintf(rsc, "TCPIP0::%s::2268::SOCKET", IPAddr);
    ViAccessMode accessMode = VI_NO_LOCK;
    ViUInt32 timeout = 0;
    // Connect the device
    viOpen(defaultRm, rsc, accessMode, timeout, &instr);
    /* Set the timeout for message-based communication */
    status = viSetAttribute(instr, VI_ATTR_TMO_VALUE, 5000);
    status = viSetAttribute(instr, VI_ATTR_TERMCHAR, 10);
    status = viSetAttribute(instr, VI_ATTR_TERMCHAR_EN, VI_TRUE);
    ViUInt32 count;
    // Set the Voltage to 3.3, Current to 1.5
    ViBuf buf = (ViBuf)":"volt 3.3;:curr 1.5\n";
    viWrite(instr, buf, (ViUInt32)strlen((ViPChar)buf), &count);


    // Query the Voltage, and Current
    buf = (ViBuf)":"apply?\n";
    status = viWrite(instr, buf, (ViUInt32)strlen((ViPChar)buf), &count);
    ViChar result[257];
    status = viRead(instr, (ViPBuf)result, 256, &count);
    if (status=VI_SUCCESS_TERM_CHAR)
    {
        result[count] = 0;
        printf("Voltage(V), Current(A)= %s\n", result);
    }else
        printf("Error\n");

    // Close the device
    viClose(instr);
    viClose(defaultRm);

    return 0;
}
```

LabVIEW Example

Background The following picture shows a LabVIEW programming example for the PSW.

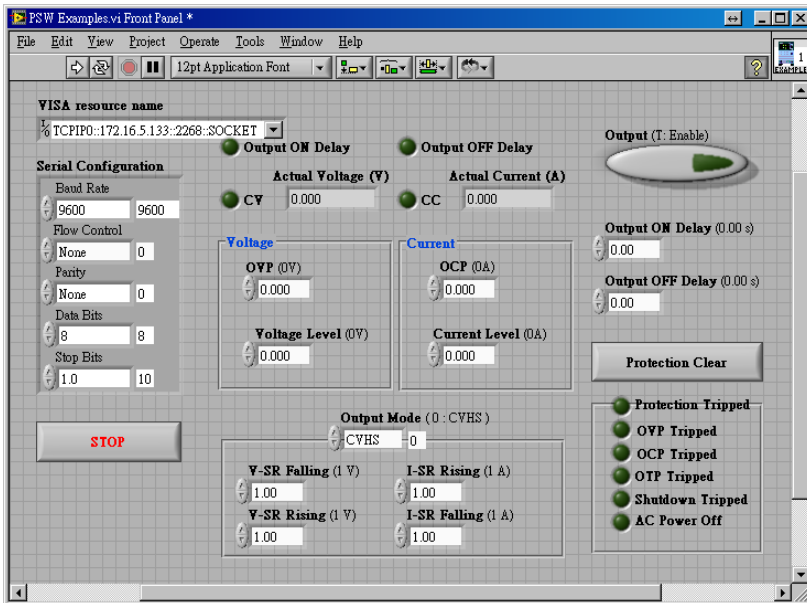


Command Syntax

Compatible Standard	IEEE488.2	Partial compatibility
	SCPI, 1999	Partial compatibility

Command Structure SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

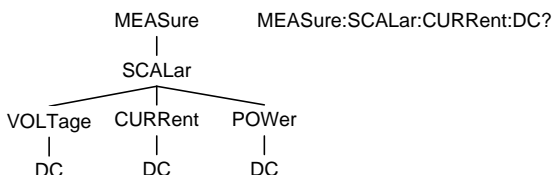

Command types There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Simple A single command with/without a parameter

Example *IDN?

Query A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.

Example meas:curr:dc?

Compound Two or more commands on the

same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).

A semi-colon is used to join two related commands, with the caveat that the last command must begin at the last node of the first command.

A semi-colon and colon are used to combine two commands from different nodes.

Example `meas:volt:dc?;:meas:curr:dc?`

Command Forms Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.

Long form `STATus:OPERation:NTRansition?`
 `STATUS:OPERATION:NTRANSITION?`
 `status:operation:ntransition?`

Short form `STAT:OPER:NTR?`
 `stat:oper:ntr?`

Square Brackets Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.

Both “DISPlay:MENU[:NAME]?” and “DISPlay:MENU?” are both valid forms.

Command Format		<ol style="list-style-type: none"> 1. Command header 2. Space 3. Parameter 1 4. Comma (no space before/after comma) 5. Parameter 2
----------------	--	---

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<(@chanlist)>	Channel list	(@1), (@1, 2), (@1:3)
	<block data>	Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow.	
Message Terminator	LF	Line feed code	

Command List

Abort Command	ABORt	33
Apply Command	APPLy	34
Display Commands	DISPlay:MENU[:NAME]	36
	DISPlay[:WINDow]:TEXT:CLEAr	36
	DISPlay[:WINDow]:TEXT[:DATA]	37
	DISPlay:BLINK	37
Initiate Command	INITiate[:IMMediate]:NAME	39
Measure Commands	MEASure[:SCALar]:ALL[:DC]	40
	MEASure[:SCALar]:CURREnt[:DC]	40
	MEASure[:SCALar]:VOLTage[:DC]	40
	MEASure[:SCALar]:POWER[:DC]	41
Output Commands	OUTPut:DELAy:ON	42
	OUTPut:DELAy:OFF	42
	OUTPut:MODE	43
	OUTPut[:STATe][:IMMediate]	43
	OUTPut[:STATe]:TRIGgered	44
	OUTPut:PROTEction:CLEAr	44
	OUTPut:PROTEction:TRIPPed	44
	OUTPut:PROTEction:SYNChronize (PSW-Multi only)	45
	OUTPut[:STATe]:SYNChronize (PSW-Multi only)	45
Sense Command	SENSe:AVERAge:COUNt	47
Status Commands	STATus:OPERation[:EVENT]	49
	STATus:OPERation:CONDition	49
	STATus:OPERation:ENABle	49
	STATus:OPERation:PTRansition	50
	STATus:OPERation:NTRansition	50

STATus:QUEStionable[:EVENt].....	50
STATus:QUEStionable:CONDition.....	51
STATus:QUEStionable:ENABle.....	51
STATus:QUEStionable:PTRansition.....	51
STATus:QUEStionable:NTRansition.....	51
STATus:OPERation:INSTrument[:EVENt] (PSW-Multi only).....	52
STATus:OPERation:INSTrument:CONDition (PSW-Multi only).....	52
STATus:OPERation:INSTrument:ENABle (PSW-Multi only).....	52
STATus:OPERation:INSTrument:PTRansition (PSW-Multi only).....	53
STATus:OPERation:INSTrument:NTRansition (PSW-Multi only).....	53
STATus:QUEStionable:INSTrument[:EVENt] (PSW-Multi only).....	53
STATus:QUEStionable:INSTrument:CONDition (PSW-Multi only).....	54
STATus:QUEStionable:INSTrument:ENABle (PSW-Multi only).....	54
STATus:QUEStionable:INSTrument:PTRansition (PSW-Multi only).....	54
STATus:QUEStionable:INSTrument:NTRansition (PSW-Multi only).....	55
STATus:OPERation:INSTrument:ISUMmary <1 2 3>[:EVENt] (PSW-Multi only).....	55
STATus:OPERation:INSTrument:ISUMmary <1 2 3>:CONDition (PSW-Multi only).....	55
STATus:OPERation:INSTrument:ISUMmary <1 2 3>:ENABle (PSW-Multi only).....	56
STATus:OPERation:INSTrument:ISUMmary <1 2 3>:PTRansition (PSW-Multi only).....	56
STATus:OPERation:INSTrument:ISUMmary <1 2 3>:NTRansition (PSW-Multi only).....	57
STATus:QUEStionable:INSTrument:ISUMmary <1 2 3>[:EVENt].....	57
STATus:QUEStionable:INSTrument:ISUMmary <1 2 3>:CONDition (PSW-Multi only).....	57
STATus:QUEStionable:INSTrument:ISUMmary <1 2 3>:ENABle (PSW-Multi only).....	58
STATus:QUEStionable:INSTrument:ISUMmary <1 2 3>:PTRansition (PSW-Multi only).....	58
STATus:QUEStionable:INSTrument:ISUMmary	

	<1 2 3>:NTRansition (PSW-Multi only).....	59
	STATus:PRESet	59
Source	[SOURce:]CURRent[:LEVel][:IMMediate]	
Commands	[:AMPLitude]	61
	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude]	62
	[SOURce:]CURRent:PROTection[:LEVel]	63
	[SOURce:]CURRent:PROTection:STATe	63
	[SOURce:]CURRent:SLEW:RISing.....	64
	[SOURce:]CURRent:SLEW:FALLing.....	65
	[SOURce:]RESistance[:LEVel][:IMMediate]	
	[:AMPLitude]	66
	[SOURce:]VOLTag[:LEVel][:IMMediate]	
	[:AMPLitude]	67
	[SOURce:]VOLTag[:LEVel]:TRIGgered[:AMPLitude]	67
	[SOURce:]VOLTag:PROTection[:LEVel]	68
	[SOURce:]VOLTag:SLEW:RISing	69
	[SOURce:]VOLTag:SLEW:FALLing.....	69
Trigger	TRIGger:TRANsient[:IMMediate]	71
Commands	TRIGger:TRANsient:SOURce	71
	TRIGger:OUTPut[:IMMediate]	72
	TRIGger:OUTPut:SOURce.....	72
System	SYSTem:BEEPer[:IMMediate]	75
Commands	SYSTem:CONFigure:BEEPer[:STATe]	76
	SYSTem:CONFigure:BLEeder[:STATe].....	76
	SYSTem:CONFigure:BTRip[:IMMediate]	76
	SYSTem:CONFigure:BTRip:PROTection.....	77
	SYSTem:CONFigure:CURRent:CONTRol	77
	SYSTem:CONFigure:VOLTag:CONTRol.....	78
	SYSTem:CONFigure:MSLave (PSW only)	78
	SYSTem:CONFigure:OUTPut:EXTernal[:MODE]	79
	SYSTem:CONFigure:OUTPut:PON[:STATe]	79
	SYSTem:COMMunicate:ENABle.....	80
	SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS	81
	SYSTem:COMMunicate:LAN:IPADdress	81
	SYSTem:COMMunicate:LAN:GATEway	81
	SYSTem:COMMunicate:LAN:SMASk	82
	SYSTem:COMMunicate:LAN:MAC	82
	SYSTem:COMMunicate:LAN:DHCP	82

SYSTem:COMMunicate:LAN:DNS	83
SYSTem:COMMunicate:LAN:HOSTname.....	83
SYSTem:COMMunicate:LAN:WEB:PACTive	83
SYSTem:COMMunicate:LAN:WEB:PASSword	84
SYSTem:COMMunicate:RLState	84
SYSTem:COMMunicate:USB:FRONT:STATe.....	85
SYSTem:COMMunicate:USB:REAR:STATe.....	85
SYSTem:COMMunicate:USB:REAR:MODE.....	86
SYSTem:ERRor	86
SYSTem:KEYLock:MODE	86
SYSTem:KLOCK	87
SYSTem:KLOCK:SYNChronize:STATe (PSW-Multi only)	87
SYSTem:INFormation.....	88
SYSTem:PRESet.....	88
SYSTem:VERSIon.....	88

Common Commands	*CLS	89
	*ESE.....	89
	*ESR.....	90
	*IDN	90
	*OPC.....	90
	*RST	91
	*SRE.....	91
	*STB.....	91
	*TRG.....	92
	*TST	92
	*WAI	92



Note

In the syntax of the command, the presence of the parameter [(@chanlist)] indicates that it must be omitted in the PSW series. However, in the PSW Series, users have the option to include or exclude (@chanlist) as desired.

If (@chanlist) is omitted in the PSW Series, the command will be interpreted as a directive for channel 1.



Note

Additional information

Differences between PSW standalone and PSW-Multi commands:

The basic principle is that the commands originally used for PSW stand-alone can be fully used by PSW-Multi. Because the original PSW stand-alone command does not have a channel parameter (@chanlist), PSW-Multi will set CH1 as the default channel when receiving the command.

Example for using in chanlist	PSW-Multi	PSW of single channle
VOLT 10	SCPI ERR	SCPI ERR
VOLT 10	CH1 Voltage setting is 10V	Voltage setting is 10V
CURR 1.5	CH1 Current setting is 1.5A	Current setting is 1.5A
OUTP ON	CH1 Output is ON	Output is ON
VOLT 10,(@1)	CH1 Voltage setting is 10V	SCPI ERR
CURR 1.5,(@2)	CH2 Current setting is 1.5A	SCPI ERR
OUTP ON,(@3)	CH3 Output is ON	SCPI ERR
VOLT 10,(@1:3)	CH1, CH2, CH3 Voltage setting10V	SCPI ERR
CURR 1.5,(@1:3)	CH1, CH2, CH3 Current setting is 1.5A	SCPI ERR
OUTP ON,(@1:3)	CH1, CH2, CH3 Output is ON	SCPI ERR
VOLT 10,(@1,2)	CH1, CH2 Voltage setting is 10V	SCPI ERR
CURR 1.5,(@2,3)	CH2, CH3 Current setting is 1.5A	SCPI ERR
OUTP ON,(@1,3)	CH1, CH3 Output is ON	SCPI ERR

Abort Command

ABORt.....	33
------------	----

ABORt




Description	The ABORt command will cancel any triggered actions.
-------------	--

Syntax	ABORt
--------	-------

APPLy Command

APPLy34

APPLy



Description The APPLy command is used to set both the voltage and current. The voltage and current will be output as soon as the function is executed if the programmed values are within the accepted range. An execution error will occur if the programmed values are not within accepted ranges.

The Apply command will set the voltage/current values but these values will not be reflected on the display until the Output is On or if the DISPlay:MENU:NAME 3 (set menu) command is used.

Syntax APPLy {<voltage>|MIN|MAX}[,<current>|MIN|MAX] [,<@chanlist>]

Query Syntax APPLy? [(<@chanlist>)]

Parameter <voltage> <NRf> 0% ~ 105% of the rated output voltage.

<current> <NRf> 0% ~ 105% of the rated output current.

MIN 0 volts/0 amps

MAX Maxium value for the present range.

Return parameter <NRf> Returns the voltage and current.

Example APPL 5.05,1.1

Sets the voltage and current to 5.05V and 1.1A.

Query Example APPL?


+5.050, +1.100

Returns voltage (5.05V) and current (1.1A) setting.

Display Commands

DISPlay:MENU[:NAME]	36
DISPlay[:WINDow]:TEXT:CLEar	36
DISPlay[:WINDow]:TEXT[:DATA]	37
DISPlay:BLINK	37

DISPlay:MENU[:NAME]



Description	The DISPlay MENU command selects a screen menu or queries the current screen menu.	
Syntax	DISPlay:MENU[:NAME] <NR1>[, (@chanlist)]	
Query Syntax	DISPlay:MENU[:NAME]? [(@chanlist)]	
Parameter/ Return parameter	<NR1>	Description
	0	Measurement-Voltage/ Measurement-Current
	1	Measurement-Voltage/ Measurement-Power
	2	Measurement-Power/ Measurement-Current
	3	Set Menu
	4	OVP / OCP Menu
	5~99	Not Used.
	100~199	F-00~99 Menu.

Example DISPlay:MENU:NAME 0
Sets the display to the Voltage/Current display screen.


DISPlay[:WINDow]:TEXT:CLEar



Description	Clears the text on the main screen from the DISPlay[:WINDow]:TEXT[:DATA] command.
-------------	---

Syntax DISP:WINDow:TEXT:CLEar [(@chanlist)]

DISP:WINDow:TEXT[:DATA]



Description Sets or queries the data text that will be written to the display. Writing to the display will overwrite data that is currently on the screen. Overwriting a display area with a shorter string may or may not overwrite the screen. The string must be enclosed in quotes: "STRING". Only ASCII characters 20H to 7EH can be used in the <string>.

Syntax DISP:WINDow:TEXT[:DATA] <string>

Query Syntax [,@chanlist]

DISP:WINDow:TEXT[:DATA]? [(@chanlist)]

**Parameter/
Return parameter**


<string> ASCII character 20H to 7EH can be used to in the string parameter. The string must be enclosed in quotes: "STRING"

Example

DISP:WIND:TEXT:DATA "STRING"
Writes STRING to the display.

Query Example

DISP:WIND:TEXT:DATA?
"STRING"
Returns the text data string on the screen.



DISP:BLINK

Description Turns blink on or off for the display.

Syntax DISP:BLINK {0|1|OFF|ON}[,@chanlist]

Query Syntax DISP:BLINK? [(@chanlist)]

Parameter

0	<NR1>Turns blink OFF
OFF	Turns blink OFF
1	<NR1> Turns blink ON
ON	Turns blink ON

Return parameter	0	<NR1>Turns blink OFF
	1	<NR1>Turns blink ON

Example DISP:BLIN 1
 Turns blink ON.

Initiate Command

INITiate[:IMMediate]:NAME39

INITiate[:IMMediate]:NAME Set →

Description The INITiate command starts the TRANsient or OUTPut trigger.
 See the trigger commands on page 71 for usage details.

Syntax INITiate[:IMMediate]:NAME {TRANsient|OUTPut} [,(@charlist)]

Parameter	<table border="0"> <tr> <td style="background-color: #e0e0e0; padding: 2px;">TRANsient</td> <td style="padding: 2px;">Starts the TRANsient trigger.</td> </tr> <tr> <td style="background-color: #e0e0e0; padding: 2px;">OUTPut</td> <td style="padding: 2px;">Starts the OUTPut trigger.</td> </tr> </table>	TRANsient	Starts the TRANsient trigger.	OUTPut	Starts the OUTPut trigger.
TRANsient	Starts the TRANsient trigger.				
OUTPut	Starts the OUTPut trigger.				

Example INITiate:NAME TRANient
 Starts the TRANsient trigger.

Measure Commands

MEASure[:SCALar]:ALL[:DC]	40
MEASure[:SCALar]:CURRent[:DC]	40
MEASure[:SCALar]:VOLTag[:DC]	40
MEASure[:SCALar]:POWer[:DC]	41

MEASure[:SCALar]:ALL[:DC] → Query

Description	Takes a measurement and returns the average output current and voltage	
Syntax	MEASure[:SCALar]:ALL[:DC]? [(@chanlist)]	
Return parameter	" +0.0000,+0.0000 "	<voltage>,<current> Returns the voltage (V) and current (A), respectively.

MEASure[:SCALar]:CURRent[:DC] → Query

Description	Takes a measurement and returns the average output current	
Syntax	MEASure[:SCALar]:CURRent[:DC]? [(@chanlist)]	
Return parameter	<NRf>	Returns the current in amps.

MEASure[:SCALar]:VOLTag[:DC] → Query

Description	Takes a measurement and returns the average output voltage.	
Syntax	MEASure[:SCALar]:VOLTag[:DC]? [(@chanlist)]	
Return parameter	<NRf>	Returns the voltage in volts.

MEASure[:SCALar]:POWer[:DC]

→ Query

Description Takes a measurement and returns the average output power.

Syntax MEASure[:SCALar]:POWer[:DC]? [(@chanlist)]

Return parameter <NRf> Returns the power measured in watts.

Output Commands

OUTPut:DElay:ON	42
OUTPut:DElay:OFF	42
OUTPut:MODE	43
OUTPut[:STATe][:IMMediate]	43
OUTPut[:STATe]:TRIGgered	44
OUTPut:PROTection:CLEar	44
OUTPut:PROTection:TRIPped.....	44
OUTPut:PROTection:SYNChronize (PSW-Multi only)	45
OUTPut[:STATe]:SYNChronize (PSW-Multi only).....	45

OUTPut:DElay:ON

Set →

→ Query

Description	Sets the Delay Time in seconds for turning the output on. The delay is set to 0.00 by default.	
Syntax	OUTPut:DElay:ON <NRf>[, (@chanlist)]	
Query Syntax	OUTPut:DElay:ON? [(@chanlist)]	
Parameter	<NRf>	0.00~99.99 seconds, where 0=no delay.
Return parameter	<NRf>	Returns the delay on time in seconds until the output is turned on.

Set →

→ Query

OUTPut:DElay:OFF

Description	Sets the Delay Time in seconds for turning the output off. The delay is set to 0.00 by default.	
Syntax	OUTPut:DElay:OFF <NRf>[, (@chanlist)]	
Return Syntax	OUTPut:DElay:OFF? [(@chanlist)]	
Parameter	<NRf>	0.00~99.99 seconds, where 0=no delay.
Return parameter	<NRf>	Returns the delay off time in seconds until the output is turned off.

OUTPut:MODE

Set →

→ Query

Description	Sets the PSW output mode. This is the equivalent to the F-03 (V-I Mode Slew Rate Select) settings.	
Syntax	OUTPut:MODE {<NR1> CVHS CCHS CVLS CCLS} [,(@chanlist)]	
Return Syntax	OUTPut:MODE? [(@chanlist)]	
Parameter	0	CV high speed priority
	CVHS	CV high speed priority
	1	CC high speed priority
	CCHS	CC high speed priority
	2	CV slew rate priority
	CVLS	CV slew rate priority
	3	CC slew rate priority
	CCLS	CC slew rate priority
Return parameter	<NR1>	Returns the output mode.

Set →

→ Query

OUTPut[:STATe][:IMMediate]

Description	Turns the output on or off.	
Syntax	OUTPut[:STATe][:IMMediate] {OFF ON 0 1} [,(@chanlist)]	
Query Syntax	OUTPut[:STATe][:IMMediate]? [(@chanlist)]	
Parameter	0	<NR1> Turns the output off.
	OFF	Turns the output off.
	1	<NR1> Turns the output on.
	ON	Turns the output on.
Return parameter	<NR1>	Returns output status of the instrument.

Set →
 → Query

OUTPut[:STATe]:TRIGgered

Description	Turns the output on or off when a software trigger is generated.	
Syntax	OUTPut[:STATe]:TRIGgered {OFF ON 0 1} [,@chanlist]	
Query Syntax	OUTPut[:STATe]:TRIGgered? [(@chanlist)]	
Parameter	0	<NR1>Turns the output off when a software trigger is generated.
	OFF	Turns the output off when a software trigger is generated.
	1	<NR1>Turns the output on when a software trigger is generated.
	ON	Turns the output on when a software trigger is generated.
Return parameter	<NR1>	Returns output trigger status of the instrument.

Set →

OUTPut:PROTection:CLEar

Description	Clears over-voltage, over-current and over-temperature (OVP, OCP, OTP) protection circuits. It also clears the shutdown protection circuit. The AC failure protection cannot be cleared.	
Syntax	OUTPut:PROTection:CLEar [(@chanlist)]	


→ Query

OUTPut:PROTection:TRIPped

Description	Returns the state of the protection circuits (OVP, OCP, OTP).	
Query Syntax	OUTPut:PROTection:TRIPped? [(@chanlist)]	
Return parameter	0	<NR1>Protection circuits are not tripped.
	1	<NR1>Protection circuits are tripped.

OUTPut:PROTection:SYNChronize (Set) →
 (PSW-Multi only) → (Query)

Description This command determines which channels have protection sync function. If two or more channels enable the protection synchronization function, the protection status of other channels will be synchronized when protection occurs on any channel.

 **Note** Trigger protection sync: OVP/OCP/SHUT DOWN.

Syntax OUTPut:PROTection:SYNChronize {0|1|OFF|ON} [, (@chanlist)]

Query Syntax OUTPut:PROTection:SYNChronize? [(@chanlist)]

Parameter	OFF	Turn off output protection sync.
	0	<NR1> Turn off output protection sync.
	ON	Turn on output protection sync..
	1	<NR1> Turn on output protection sync..

Return Parameter	0	<NR1> Turn off output protection sync.
	1	<NR1> Turn on output protection sync.

Example OUTP:PROT:SYNC ON, (@1,3)
 CH1, CH3 are set to enable the output protection synchronization function.

OUTPut[:STATe]:SYNChronize (PSW-Multi only) (Set) →
→ (Query)


Description This command determines which channels have output sync capability. If two or more channels have output sync enabled, when any channel turns its output on or off, the output status of the other channels will be synchronized.

Syntax	OUTPut[:STATe]:SYNChronize {0 1 OFF ON} [,(@chanlist)]	
Query Syntax	OUTPut[:STATe]:SYNChronize? [(@chanlist)]	
Parameter	OFF	Turn off output sync.
	0	<NR1> Turn off output sync.
	ON	Turn on output sync..
	1	<NR1> Turn on output sync..
Return Parameter	0	<NR1> Turn off output sync.
	1	<NR1> Turn on output sync.
Example	OUTP:SYNC ON,(@1,3) CH1, CH3 are set to enable the output synchronization function.	

Sense Command

SENSe:AVERAge:COUNT.....47

SENSe:AVERAge:COUNT



Description	Determines the level of smoothing for the average setting. This is the equivalent to the F-17 function setting.	
Syntax	SENSe:AVERAge:COUNT {<NR1> LOW MIDDLE HIGH},[@chanlist]	
Query Syntax	SENSe:AVERAge:COUNT? [(@chanlist)]	
Parameter	0 LOW	Low level of smoothing.
	1 MIDDLE	Middle level of smoothing.
	2 HIGH	High level of smoothing.
Return parameter	<NR1>	Returns the level of smoothing.
	0	Low level of smoothing.
	1	Middle level of smoothing.
	2	High level of smoothing.
Example	SENSe:AVERAge:COUNT 1 Sets the level of smoothing to middle.	

Status Commands

STATus:OPERation[:EVENt]	49
STATus:OPERation:CONDition	49
STATus:OPERation:ENABle	49
STATus:OPERation:PTRansition	50
STATus:OPERation:NTRansition	50
STATus:QUEStionable[:EVENt]	50
STATus:QUEStionable:CONDition	51
STATus:QUEStionable:ENABle	51
STATus:QUEStionable:PTRansition	51
STATus:QUEStionable:NTRansition	51
STATus:OPERation:INSTrument[:EVENt]	
(PSW-Multi only)	52
STATus:OPERation:INSTrument:CONDition	
(PSW-Multi only)	52
STATus:OPERation:INSTrument:ENABle	
(PSW-Multi only)	52
STATus:OPERation:INSTrument:PTRansition	
(PSW-Multi only)	53
STATus:OPERation:INSTrument:NTRansition	
(PSW-Multi only)	53
STATus:QUEStionable:INSTrument[:EVENt]	
(PSW-Multi only)	53
STATus:QUEStionable:INSTrument:CONDition	
(PSW-Multi only)	54
STATus:QUEStionable:INSTrument:ENABle	
(PSW-Multi only)	54
STATus:QUEStionable:INSTrument:PTRansition	
(PSW-Multi only)	54
STATus:QUEStionable:INSTrument:NTRansition	
(PSW-Multi only)	55
STATus:OPERation:INSTrument:ISUMmary	
<1 2 3>[:EVENt] (PSW-Multi only)	55
STATus:OPERation:INSTrument:ISUMmary	
<1 2 3>:CONDition (PSW-Multi only)	55
STATus:OPERation:INSTrument:ISUMmary	
<1 2 3>:ENABle (PSW-Multi only)	56
STATus:OPERation:INSTrument:ISUMmary	
<1 2 3>:PTRansition (PSW-Multi only)	56
STATus:OPERation:INSTrument:ISUMmary	
<1 2 3>:NTRansition (PSW-Multi only)	57

STATus:QUEStionable:INSTrument:ISUMmary
 <1|2|3>[:EVENT]57
 STATus:QUEStionable:INSTrument:ISUMmary
 <1|2|3>:CONDition (PSW-Multi only)57
 STATus:QUEStionable:INSTrument:ISUMmary
 <1|2|3>:ENABle (PSW-Multi only)58
 STATus:QUEStionable:INSTrument:ISUMmary
 <1|2|3>:PTRansition (PSW-Multi only)58
 STATus:QUEStionable:INSTrument:ISUMmary
 <1|2|3>:NTRansition (PSW-Multi only)59
 STATus:PRESet59

STATus:OPERation[:EVENT] → Query

Description Queries the bit sum of the Operation Status Event register. This query will clear the contents of the register.

Syntax STATus:OPERation[:EVENT]?

Return parameter <NR1> Returns the bit sum of the Operation Status Event register.

STATus:OPERation:CONDition → Query

Description Queries the bit sum of the Operation Status register. This query will not clear the register.

Syntax STATus:OPERation:CONDition?

Return parameter <NR1> Returns the bit sum of the Operation Condition register.

Set →


STATus:OPERation:ENABle → Query

Description Sets or queries the bit sum of the Operation Status Enable register.

Syntax STATus:OPERation:ENABle <NRF>


Query Syntax STATus:OPERation:ENABle?

Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767



STATus:OPERation:PTRansition


Description	Sets or queries the bit sum of the positive transition filter of the Operation Status register.	
Syntax	STATus:OPERation:PTRansition <NRf> STATus:OPERation:PTRansition?	
Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767



STATus:OPERation:NTRansition

Description	Sets or queries the bit sum of the negative transition filter of the Operation Status register.	
Syntax	STATus:OPERation:NTRansition <NRf>	
Query Syntax	STATus:OPERation:NTRansition?	
Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767

STATus:QUESTionable[:EVENT]



Description	Queries the bit sum of the Questionable Status Event register. This query will clear the contents of the register.	
Query Syntax	STATus:QUESTionable[:EVENT]?	
Return parameter	<NR1>	0 ~ 32767

STATus:QUEStionable:CONDition → **Query**

Description Queries the bit sum of the Questionable Status register. This query will not clear the register.

Query Syntax STATus:QUEStionable:CONDition?

Return parameter <NR1> 0 ~ 32767

→ **Set** →

STATus:QUEStionable:ENABLE → **Query**

Description Sets or queries the bit sum of the Questionable Status Enable register.

Syntax STATus:QUEStionable:ENABLE <NRf>

Query Syntax STATus:QUEStionable:ENABLE?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

→ **Set** →

STATus:QUEStionable:PTRansition → **Query**

Description Sets or queries the bit sum of the positive transition filter of the Questionable Status register.

Syntax STATus:QUEStionable:PTRansition <NRf>

Return Syntax STATus:QUEStionable:PTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

→ **Set** →

STATus:QUEStionable:NTRansition → **Query**

Description Sets or queries the negative transition filter of the Questionable Status register.

Syntax STATus:QUEStionable:NTRansition <NRf>

Query Syntax STATus:QUEStionable:NTRansition?

Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767

STATus:OPERation:INSTrument[:EVENT]
 (PSW-Multi only) → Query

Description	Queries the bit sum of the Operation Instrument Status Event register. This query will clear the contents of the register.	
Syntax	STATus:OPERation:INSTrument[:EVENT]?	
Return parameter	<NR1>	0 ~ 32767

STATus:OPERation:INSTrument:CONDition
 (PSW-Multi only) → Query

Description	Queries the bit sum of the Operation Instrument Status register. This query will not clear the register.	
Syntax	STATus:OPERation:INSTrument:CONDition?	
Return parameter	<NR1>	0 ~ 32767

STATus:OPERation:INSTrument:ENABle
 (PSW-Multi only) Set →
→ Query

Description	Sets or queries the bit sum of the Operation Instrument Status Enable register.	
Syntax	STATus:OPERation:INSTrument:ENABle <NRf>	
Query Syntax	STATus:OPERation:INSTrument:ENABle?	
Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767

STATus:OPERation:INSTrument:PTRansition (PSW-Multi only) (Set) →
→ (Query)

Description Sets or queries the bit sum of the positive transition filter of the Operation Instrument Status register.

Syntax STATus:OPERation:INSTrument:PTRansition <NRf>

Query Syntax STATus:OPERation:INSTrument:PTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

STATus:OPERation:INSTrument:NTRansition (PSW-Multi only) (Set) →
→ (Query)

Description Sets or queries the bit sum of the negative transition filter of the Operation Instrument Status register.

Syntax STATus:OPERation:INSTrument:NTRansition <NRf>

Query Syntax STATus:OPERation:INSTrument:NTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

STATus:QUESTionable:INSTrument[:EVENT] (PSW-Multi only) → (Query)

Description Queries the bit sum of the Questionable Instrument Status Event register. This query will clear the contents of the register.

Syntax STATus:QUESTionable:INSTrument[:EVENT]?

Return parameter <NR1> 0 ~ 32767

STATus:QUESTIONable:INSTRument:CONDition
 (PSW-Multi only)

→ Query

Description	Queries the bit sum of the Questionable Instrument Status register. This query will not clear the register.
Syntax	STATus:QUESTIONable:INSTRument:CONDition?
Return parameter	<NR1> 0 ~ 32767

STATus:QUESTIONable:INSTRument:ENABLE
 (PSW-Multi only)

Set →

→ Query

Description	Sets or queries the bit sum of the Questionable Instrument Status Enable register.
Syntax	STATus:QUESTIONable:INSTRument:ENABLE <NRf>
Query Syntax	STATus:QUESTIONable:INSTRument:ENABLE?
Parameter	<NRf> 0 ~ 32767
Return parameter	<NR1> 0 ~ 32767

STATus:QUESTIONable:INSTRument:PTRansition
 (PSW-Multi only)

Set →

→ Query

Description	Sets or queries the bit sum of the positive transition filter of the Questionable Instrument Status register.
Syntax	STATus:QUESTIONable:INSTRument:PTRansition <NRf>
Query Syntax	STATus:QUESTIONable:INSTRument:PTRansition?
Parameter	<NRf> 0 ~ 32767
Return parameter	<NR1> 0 ~ 32767

STATus:QUEStionable:INSTrument:NTRansition (PSW-Multi only) Set →
→ Query

Description Sets or queries the bit sum of the negative transition filter of the Questionable Instrument Status register.

Syntax STATus:QUEStionable:INSTrument:NTRansition <NRf>

Query Syntax STATus:QUEStionable:INSTrument:NTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

STATus:OPERation:INSTrument:ISUMmary<1|2|3>[:EVENT] (PSW-Multi only) → Query

Description Queries the bit sum of the Operation Instrument Isummary Status Event register. This query will clear the contents of the register.

Use <1|2|3> to specify the channel number.

Syntax STATus:OPERation:INSTrument:ISUMmary<1|2|3>[:EVENT]?

Return parameter <NR1> 0 ~ 32767

STATus:OPERation:INSTrument:ISUMmary<1|2|3>:CONDition (PSW-Multi only) → Query

Description Queries the bit sum of the Operation Instrument Isummary Status register. This query will not clear the register.

Use <1|2|3> to specify the channel number.

Syntax STATus:OPERation:INSTrument:ISUMmary<1|2|3>:CONDition?

Return parameter <NR1> 0 ~ 32767

STATus:OPERation:INSTrument:ISUMmary<1|2|3>:ENABle (PSW-Multi only) (Set) →
→ (Query)

Description	Sets or queries the bit sum of the Operation Instrument Isummary Status Enable register. Use <1 2 3> to specify the channel number.
Syntax	STATus:OPERation:INSTrument:ISUMmary<1 2 3>:ENABle <NRf>
Query Syntax	STATus:OPERation:INSTrument:ISUMmary<1 2 3>:ENABle?
Parameter	<NRf> 0 ~ 32767
Return parameter	<NR1> 0 ~ 32767

STATus:OPERation:INSTrument:ISUMmary<1|2|3>:PTRansition (PSW-Multi only) (Set) →
→ (Query)

Description	Sets or queries the bit sum of the positive transition filter of the Operation Instrument Isummary Status register. Use <1 2 3> to specify the channel number.
Syntax	STATus:OPERation:INSTrument:ISUMmary<1 2 3>:PTRansition <NRf>
Query Syntax	STATus:OPERation:INSTrument:ISUMmary<1 2 3>:PTRansition?
Parameter	<NRf> 0 ~ 32767
Return parameter	<NR1> 0 ~ 32767

STATus:OPERation:INSTrument:ISUMmary<1|2|3>:NTRansition (PSW-Multi only) → (Set) →
→ (Query)

Description Sets or queries the bit sum of the negative transition filter of the Operation Instrument Isummary Status register.
Use <1 | 2 | 3> to specify the channel number.

Syntax STATus:OPERation:INSTrument:ISUMmary<1|2|3>:NTRansition <NRf>

Query Syntax STATus:OPERation:INSTrument:ISUMmary<1|2|3>:NTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>[:EVENT] → (Query)

Description Queries the bit sum of the Questionable Instrument Isummary Status Event register. This query will clear the contents of the register.
Use <1 | 2 | 3> to specify the channel number.

Syntax STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>[:EVENT]?


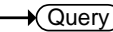
Return parameter <NR1> 0 ~ 32767

STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:CONDition (PSW-Multi only) → (Query)

Description Queries the bit sum of the Questionable Instrument Isummary Status register. This query will not clear the register.
Use <1 | 2 | 3> to specify the channel number.

Syntax `STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:CONDition?`

Return parameter `<NR1>` 0 ~ 32767

`STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:ENABLE` (PSW-Multi only)  



Description Sets or queries the bit sum of the Questionable Instrument Isummary Status Enable register.
Use <1 | 2 | 3> to specify the channel number.

Syntax `STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:ENABLE <NRf>`

Query Syntax `STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:ENABLE?`

Parameter `<NRf>` 0 ~ 32767

Return parameter `<NR1>` 0 ~ 32767

`STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:PTRansition` (PSW-Multi only)  


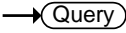
Description Sets or queries the bit sum of the positive transition filter of the Questionable Instrument Isummary Status register.
Use <1 | 2 | 3> to specify the channel number.

Syntax `STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:PTRansition <NRf>`

Query Syntax `STATus:QUESTionable:INSTrument:ISUMmary<1|2|3>:PTRansition?`

Parameter `<NRf>` 0 ~ 32767

Return parameter `<NR1>` 0 ~ 32767

STATus:QUEStionable:INSTrument:ISUMmary<  →
1|2|3>:NTRansition (PSW-Multi only) 

Description Sets or queries the bit sum of the negative transition filter of the Questionable Instrument Isummary Status register.
Use <1 | 2 | 3> to specify the channel number.

Syntax STATus:QUEStionable:INSTrument:ISUMmary<1|2|3>:
:NTRansition <NRf>

Query Syntax STATus:QUEStionable:INSTrument:ISUMmary<1|2|3>:
:NTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

STATus:PRESet 

Description This command resets the ENABLE register, the PTRansistion filter and NTRansistion filter on the Operation Status and Questionable Status Registers. The registers/filters will be reset to a default value.

Default Register/Filter Values	Setting
Questionable Status Enable	0x0000
Questionable Status Positive Transition	0x7FFF
Questionable Status Negative Transition	0x0000
Operation Status Enable	0x0000
Operation Status Positive Transition	0x7FFF
Operation Status Negative Transition	0x0000

Summary: The Questionable Status Enable registers and the Operation Status Enable registers are both reset to 0.

The Questionable Status and Operation Status

Positive Transition filters are all set high (0x7FFF) and the Negative Transition filters are all set low (0x0000). I.e., only positive transitions will be recognized for the Questionable Status and Operation Status registers.

Syntax

STATus:PRESet

Source Commands


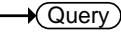
[SOURce:]CURRent[:LEVel][:IMMediate]	
[:AMPLitude]	61
[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude]	62
[SOURce:]CURRent:PROTection[:LEVel]	63
[SOURce:]CURRent:PROTection:STATe	63
[SOURce:]CURRent:SLEW:RISing	64
[SOURce:]CURRent:SLEW:FALLing	65
[SOURce:]RESistance[:LEVel][:IMMediate]	
[:AMPLitude]	66
[SOURce:]VOLTag[:LEVel][:IMMediate]	
[:AMPLitude]	67
[SOURce:]VOLTag[:LEVel]:TRIGgered[:AMPLitude]	67
[SOURce:]VOLTag:PROTection[:LEVel]	68
[SOURce:]VOLTag:SLEW:RISing	69
[SOURce:]VOLTag:SLEW:FALLing	69

[SOURce:]CURRent[:LEVel][:IMMediate] (Set) →
 [:AMPLitude] ← (Query)

Description	Sets or queries the current level in amps. For externally set current levels (from the analog control connector) the set current level is returned.
Syntax	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude] {<NRF> MIN MAX}{, (@chanlist)}
Query Syntax	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]? [MIN MAX]
Query Syntax (PSW-Multi only)	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]? {MIN MAX}{, (@chanlist)}
	or
	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]? [(@chanlist)]

[SOURce:]CURRent:PROTection[:LEVel]
 →
 → 

Description	Sets or queries the OCP (over-current protection) level in amps.	
Syntax	[SOURce:]CURRent:PROTection[:LEVel] {<NRf> MIN MAX}{, (@chanlist)}	
Query Syntax	[SOURce:]CURRent:PROTection[:LEVel]? [MIN MAX]	
Query Syntax (PSW-Multi only)	[SOURce:]CURRent:PROTection[:LEVel]? {MIN MAX}{, (@chanlist)}	
	or	
	[SOURce:]CURRent:PROTection[:LEVel]? [(@chanlist)]	
Parameter/Return	<NRf>	OCP range in Amps.
	MIN	Minimum current level.
	MAX	Maximum current level.
Example	SOUR:CURR:PROT:LEV? MIN +3.600 Returns the minimum possible current level in amps.	

[SOURce:]CURRent:PROTection:STATe
 →
 → 

Description	Turns OCP (over-current protection) on or off.	
Syntax	[SOURce:]CURRent:PROTection:STATe {0 1 OFF ON} {, (@chanlist)}	
Query Syntax	[SOURce:]CURRent:PROTection:STATe? [(@chanlist)]	
Parameter/Return	0	<NR1> Turns the buzzer off.
	OFF	Turns the OCP off.
	1	<NR1> Turns the OCP on.
	ON	Turns the OCP on.
Return parameter	<Bool>	Returns the protection status (0 or 1).

Example SOUR:CURR:PROT:STAT OFF
 Turns OCP off.

Set →

[SOURce:]CURRent:SLEW:RISing

→ Query

Description Sets or queries the rising current slew rate. This is only applicable for CC slew rate priority mode.

Syntax [SOURce:]CURRent:SLEW:RISing {<NRf>|MIN|MAX} [,(@chanlist)]

Query Syntax [SOURce:]CURRent:SLEW:RISing? [MIN|MAX]


Query Syntax [SOURce:]CURRent:SLEW:RISing?
 (PSW-Multi only) {MIN|MAX}[,(@chanlist)]

or

[SOURce:]CURRent:SLEW:RISing? [(@chanlist)]

Parameter/Return	<NRf>	0.01A/s ~ 72.00A/s (PSW 30-36)
		0.1A/s ~ 144.0A/s (PSW 30-72)
		0.1A/s ~ 216.0A/s (PSW 30-108)
		0.01A/s ~ 54.00A/s (PSW 40-27)
		0.1A/s ~ 108.0A/s (PSW 40-54)
		0.1A/s ~ 162.0A/s (PSW 40-81)
		0.01A/s ~ 27.00A/s (PSW 80-13.5)
		0.01A/s ~ 54.00A/s (PSW 80-27)
		0.01A/s ~ 81.00A/s (PSW 80-40.5)
		0.01A/s ~ 14.40A/s (PSW 160-7.2)
		0.01A/s ~ 28.80A/s (PSW 160-14.4)
		0.01A/s ~ 43.20A/s (PSW 160-21.6)
		0.001A/s ~ 9.000A/s (PSW 250-4.5)
		0.01A/s ~ 18.00A/s (PSW 250-9)
		0.01A/s ~ 27.00A/s (PSW 250-13.5)
		0.001A/s ~ 2.880A/s (PSW 800-1.44)
		0.001A/s ~ 5.760A/s (PSW 800-2.88)
		0.001A/s ~ 8.640A/s (PSW 800-4.32)
	MIN	Minimum rising current slew rate.
	MAX	Maximum rising current slew rate.

Example SOUR:CURR:SLEW:RIS 72
 Sets the rising current slew rate to 72A/s.



[SOURce:]CURRent:SLEW:FALLing

Description Sets or queries the falling current slew rate. This is only applicable for CC slew rate priority mode.

Syntax [SOURce:]CURRent:SLEW:FALLing
 {<NRf>|MIN|MAX}[, (@chanlist)]

Query Syntax [SOURce:]CURRent:SLEW:FALLing? [MIN|MAX]

Query Syntax [SOURce:]CURRent:SLEW:FALLing?
 (PSW-Multi only) {MIN|MAX}[, (@chanlist)]

or

[SOURce:]CURRent:SLEW:FALLing? [(@chanlist)]

Parameter/Return	NRf	0.01A/s ~ 72.00A/s (PSW 30-36)
		0.1A/s ~ 144.0A/s (PSW 30-72)
		0.1A/s ~ 216.0A/s (PSW 30-108)
		0.01A/s ~ 54.00A/s (PSW 40-27)
		0.1A/s ~ 108.0A/s (PSW 40-54)
		0.1A/s ~ 162.0A/s (PSW 40-81)
		0.01A/s ~ 27.00A/s (PSW 80-13.5)
		0.01A/s ~ 54.00A/s (PSW 80-27)
		0.01A/s ~ 81.00A/s (PSW 80-40.5)
		0.01A/s ~ 14.40A/s (PSW 160-7.2)
		0.01A/s ~ 28.80A/s (PSW 160-14.4)
		0.01A/s ~ 43.20A/s (PSW 160-21.6)
		0.001A/s ~ 9.000A/s (PSW 250-4.5)
		0.01A/s ~ 18.00A/s (PSW 250-9)
		0.01A/s ~ 27.00A/s (PSW 250-13.5)
		0.001A/s ~ 2.880A/s (PSW 800-1.44)
		0.001A/s ~ 5.760A/s (PSW 800-2.88)
		0.001A/s ~ 8.640A/s (PSW 800-4.32)
		MIN
	MAX	Maximum falling current slew rate

Query Syntax [SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [MIN|MAX]

Query Syntax (PSW-Multi only) {SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]? {MIN|MAX}[, (@chanlist)]

or

[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [(@chanlist)]

Parameter/Return	<NRf>	0%~105% of the rated voltage output in volts.
	MIN	Minimum current level.
	MAX	Maximum current level.

Example SOUR:VOLT:LEV:TRIG:AMPL 10
Sets the voltage level to 10 volts when a software trigger is generated.

(Set) →

[SOURce:]VOLTage:PROTection[:LEVel]

→ (Query)

Description Sets or queries the overvoltage protection level.

Syntax [SOURce:]VOLTage:PROTection[:LEVel] {<NRf>|MIN|MAX}[, (@chanlist)]

Query Syntax [SOURce:]VOLTage:PROTection[:LEVel]? [MIN|MAX]

Query Syntax (PSW-Multi only) [SOURce:]VOLTage:PROTection[:LEVel]? {MIN|MAX}[, (@chanlist)]

or

[SOURce:]VOLTage:PROTection[:LEVel]? [(@chanlist)]

Parameter/Return	<NRf>	OVP range in volts.
	MIN	Minimum OVP level
	MAX	Maximum OVP level

Example SOUR:VOLT:PROT:LEV MAX
Sets the OVP level to its maximum.

[SOURce:]VOLTage:SLEW:RISing
 →
 →

Description	Sets or queries the rising voltage slew rate. This is only applicable for CV slew rate priority mode.	
Syntax	[SOURce:]VOLTage:SLEW:RISing {<NRf> MIN MAX} [,(@chanlist)]	
Query Syntax	[SOURce:]VOLTage:SLEW:RISing? [MIN MAX]	
Query Syntax (PSW-Multi only)	[SOURce:]VOLTage:SLEW:RISing? {MIN MAX}[,(@chanlist)]	
	or	
	[SOURce:]VOLTage:SLEW:RISing? [(@chanlist)]	
Parameter/Return	<NRf>	0.01V/s ~ 60.00V/s (PSW 30-XX) 0.01V/s ~ 80.00V/s (PSW 40-XX) 0.1V/s ~ 160.0V/s (PSW 80-XX) 0.1V/s ~ 320.0V/s (PSW 160-XX) 0.1V/s ~ 500.0V/s (PSW 250-XX) 1V/s ~ 1600V/s (PSW 800-XX)
	MIN	Minimum rising voltage slew rate.
	MAX	Maximum rising voltage slew rate.
Example	SOUR:VOLT:SLEW:RIS MAX Sets the rising voltage slew rate to its maximum.	

[SOURce:]VOLTage:SLEW:FALLing
 →
 →

Description	Sets or queries the falling voltage slew rate. This is only applicable for CV slew rate priority mode.	
Syntax	[SOURce:]VOLTage:SLEW:FALLing {<NRf> MIN MAX}[,(@chanlist)]	
Query Syntax	[SOURce:]VOLTage:SLEW:FALLing? [MIN MAX]	
Query Syntax (PSW-Multi only)	[SOURce:]VOLTage:SLEW:FALLing? {MIN MAX}[,(@chanlist)]	
	or	
	[SOURce:]VOLTage:SLEW:FALLing? [(@chanlist)]	

Parameter/Return	<NRf>	0.01V/s ~ 60.00V/s (PSW 30-XX) 0.01V/s ~ 80.00V/s (PSW 40-XX) 0.1V/s ~ 160.0V/s (PSW 80-XX) 0.1V/s ~ 320.0V/s (PSW 160-XX) 0.1V/s ~ 500.0V/s (PSW 250-XX) 1V/s ~ 1600V/s (PSW 800-XX)
	MIN	Minimum voltage falling slew rate.
	MAX	Maximum voltage falling slew rate.

Example SOUR:VOLT:SLEW:FALL MIN
Sets the falling voltage slew rate to its minimum.

Trigger Commands

The trigger commands generate and configure software triggers.

TRIGger:TRANsient[:IMMEDIATE]	71
TRIGger:TRANsient:SOURce	71
TRIGger:OUTPut[:IMMEDIATE]	72
TRIGger:OUTPut:SOURce	72

TRIGger:TRANsient[:IMMEDIATE] (Set) →

Description Generates a software trigger for the transient trigger system. On a trigger, sets the voltage & current. Refer to the :CURR:TRIG and VOLT:TRIG commands on page 62 and 67, respectively.

Syntax TRIGger:TRANsient[:IMMEDIATE] [(@chanlist)]

Related Commands [SOURce:]CURREnt[:LEVel]:TRIGgered[:AMPLitude]
[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]

TRIGger:TRANsient:SOURce (Set) → → (Query)

Description Sets or queries the trigger source for the transient system.

Syntax TRIGger:TRANsient:SOURce{BUS|IMMEDIATE} [,@chanlist]

Query Syntax TRIGger:TRANsient:SOURce? [(@chanlist)]

Parameter/Return	BUS	Internal software trigger. Waits for the *TRG (or IEEE 488.1 “get” group execute trigger) command to start the trigger.
	IMMEDIATE	Starts the trigger immediately. (default)

Example TRIG:TRAN:SOUR BUS
Sets the trigger source as BUS.

TRIGger:OUTPut[:IMMediate] (Set) →

Description Generates a software trigger for the output trigger system. On a trigger, sets the output state. Refer to the :OUTP:TRIG command on page 44.

Syntax TRIGger:OUTPut[:IMMediate] [(@chanlist)]

Related commands OUTPut[:STATe]:TRIGgered

TRIGger:OUTPut:SOURce (Set) →
→ (Query)

Description Sets or queries the trigger source for the output system.

Syntax TRIGger:OUTPut:SOURce {BUS|IMMediate} [,@chanlist]

Query Syntax TRIGger:OUTPut:SOURce? [(@chanlist)]

Parameter/Return	BUS	Internal software trigger. Waits for the *TRG (or IEEE 488.1 “get” group execute trigger) command to start the trigger.
	IMMediate	Starts the trigger immediately. (default)

Example TRIG:OUTP:SOUR BUS
Sets the trigger source of the output system as BUS.

System Function Command

SYSTem:BEEPer[:IMMediate]	75
SYSTem:CONFigure:BEEPer[:STATe]	76
SYSTem:CONFigure:BLEEder[:STATe]	76
SYSTem:CONFigure:BTRip[:IMMediate]	76
SYSTem:CONFigure:BTRip:PROTEction	77
SYSTem:CONFigure:CURRent:CONTRol	77
SYSTem:CONFigure:VOLTage:CONTRol	78
SYSTem:CONFigure:MSLave (PSW only)	78
SYSTem:CONFigure:OUTPut:EXTernal[:MODE]	79
SYSTem:CONFigure:OUTPut:PON[:STATe]	79
SYSTem:COMMunicate:ENABle	80
SYSTem:COMMunicate:GPIB[:SELf]:ADDRes	81
SYSTem:COMMunicate:LAN:IPADdress	81
SYSTem:COMMunicate:LAN:GATEway	81
SYSTem:COMMunicate:LAN:SMASk	82
SYSTem:COMMunicate:LAN:MAC	82
SYSTem:COMMunicate:LAN:DHCP	82
SYSTem:COMMunicate:LAN:DNS	83
SYSTem:COMMunicate:LAN:HOSTname	83
SYSTem:COMMunicate:LAN:WEB:PACTive	83
SYSTem:COMMunicate:LAN:WEB:PASSword	84
SYSTem:COMMunicate:RLState	84
SYSTem:COMMunicate:USB:FRONt:STATe	85
SYSTem:COMMunicate:USB:REAR:STATe	85
SYSTem:COMMunicate:USB:REAR:MODE	86
SYSTem:ERRor	86
SYSTem:KEYLock:MODE	86
SYSTem:KLOCK	87
SYSTem:KLOCK:SYNChronize:STATe (PSW-Multi only)	87
SYSTem:INFormation	88
SYSTem:PRESet	88
SYSTem:VERSion	88

Set →

→ Query


SYSTem:BEEPer[:IMMediate]


Description	This command causes an audible tone to be generated by the instrument. The duration time is specified in seconds.	
Syntax	SYSTem:BEEPer[:IMMediate] {<NR1> MINimum MAXimum}	
Query Syntax	SYSTem:BEEPer[:IMMediate]? [MINimum MAXimum]	
Parameter	<NR1>	0 ~ 3600 seconds.
	MINimum	Sets the beeper time to the minimum (0 seconds)
	MAXimum	Sets the beeper time to the maximum (3600 seconds)
Return parameter	<NR1>	Returns the remaining beeper duration time in seconds or returns the maximum or minimum beeper time in seconds (for the [MINimum MAXimum] query parameters).
Example 1	SYST:BEEP 10 **after a 2 second wait** SYST:BEEP? >8	
	The first command turns the beeper on for 10 seconds. After 2 seconds the SYST:BEEP? query returns the remaining beeper time (8 seconds).	
Example 2	SYST:BEEP? MAX >3600	
	Returns the maximum settable beeper time in seconds.	

SYSTEM:CONFigure:BEEPer[:STATe]




Description	Sets or queries the buzzer state on/off.	
Syntax	SYSTEM:CONFigure:BEEPer[:STATe] {OFF ON 0 1}	
Query Syntax	SYSTEM:CONFigure:BEEPer[:STATe]?	
Parameter	0	<NR1> Turns the buzzer off.
	OFF	Turns the buzzer off.
	1	<NR1> Turns the buzzer on.
	ON	Turns the buzzer on.
Return parameter	<Boolean>	Returns the buzzer status.

SYSTEM:CONFigure:BLEeder[:STATe]




Description	Sets or queries the status of the bleeder resistor.	
Syntax	SYSTEM:CONFigure:BLEeder[:STATe] {OFF ON AUTO 0 1 2}[,@chanlist]	
Query Syntax	SYSTEM:CONFigure:BLEeder[:STATe]? [(@chanlist)]	
Parameter	0	<NR1> Turns the bleeder resistor off.
	OFF	Turns the bleeder resistor off.
	1	<NR1> Turns the bleeder resistor on.
	ON	Turns the bleeder resistor on.
	2	<NR1> Turns the AUTO mode on.
	AUTO	Turns the AUTO mode on.
Return parameter	<NR1>	Returns bleeder resistor status.

SYSTEM:CONFigure:BTRip[:IMMEDIATE]


Description	Trips the power switch trip (circuit breaker) to turn the unit off (shut down the power).
Syntax	SYSTEM:CONFigure:BTRip[:IMMEDIATE]

 →
 → 

SYSTEM:CONFigure:BTrip:PROTection

Description	Enables/Disables the power switch trip (circuit breaker) when the OVP or OCP protection settings are tripped. This setting only applies after power has been reset.	
Syntax	SYSTEM:CONFigure:BTrip:PROTection {OFF ON 0 1}	
Query Syntax	SYSTEM:CONFigure:BTrip:PROTection?	
Parameter	0	<NR1> Disables the power switch trip for OVP or OCP.
	OFF	Disables the power switch trip for OVP or OCP.
	1	<NR1> Enables the power switch trip for OVP or OCP.
	ON	Enables the power switch trip for OVP or OCP.
Return parameter	<Boolean>	Returns power switch trip setting.

 →
 → 

SYSTEM:CONFigure:CURRent:CONTRol

Description	Sets or queries the CC control mode (local control (panel), external voltage control, external resistance control). This setting is applied only after the unit is reset.	
Syntax	SYSTEM:CONFigure:CURRent:CONTRol {0 1 2 3} [, (@chanlist)]	
Query Syntax	SYSTEM:CONFigure:CURRent:CONTRol? [(@chanlist)]	
Parameter/Return	<NR1>	Description
	0	Local (Panel) control
	1	External voltage control
	2	External resistance control; 10kΩ = I _o max, 0kΩ = I _o min.

3 External resistance control; 10kΩ = I_o min, 0kΩ = I_o max.

Set →

→ Query

SYSTEM:CONFigure:VOLTage:CONTROL

Description Sets or queries the CV control mode (local control, external voltage control, external resistance control). This setting is applied only after the unit is reset.

Syntax SYSTEM:CONFigure:VOLTage:CONTROL {0|1|2|3} [,@chanlist]

Query Syntax SYSTEM:CONFigure:VOLTage:CONTROL? [(@chanlist)]

Parameter/Return	<NR1>	Description
	0	Local (Panel) control
	1	External voltage control
	2	External resistance control; 10kΩ = V _o max, 0kΩ = V _o min.
	3	External resistance control; 10kΩ = V _o min, 0kΩ = V _o max.

Set →


→ Query

SYSTEM:CONFigure:MSLave (PSW only)

Description Sets or queries the unit operation mode. This setting is only applied after the unit has been reset.

Syntax SYSTEM:CONFigure:MSLave {0|1|2|3|4}

Query Syntax SYSTEM:CONFigure:MSLave?

 **Note** Series mode is only supported for 30V, 40V, 80V and 160V models.

Parameter/Return	<NR1>	Description
	0	Master/Local
	1	Master/Parallel 1 (2 units)
	2	Master/Parallel 2 (3 units)

3	Slave/Parallel
4	Slave/Series

SYSTem:CONFigure:OUTPut:EXTernal[:MODE]  

Description Sets the external logic as active high or active low. This setting is only applied after the unit has been reset.

Syntax SYSTem:CONFigure:OUTPut:EXTernal[:MODE] {HIGH|LOW|0|1}[,(@chanlist)]

Query Syntax SYSTem:CONFigure:OUTPut:EXTernal[:MODE]? [(@chanlist)]

Parameter	0	Active high
	HIGH	Active high
	1	Active low
	LOW	Active low

Return Parameter	0	<boolean>Active high
	1	<boolean>Active low

SYSTem:CONFigure:OUTPut:PON[:STATe]  


Description Sets the unit to turn the output ON/OFF at power-up. This setting is only applied after the unit has been reset.

Syntax SYSTem:CONFigure:OUTPut:PON[:STATe] {OFF|ON|0|1}[,(@chanlist)]

Query Syntax SYSTem:CONFigure:OUTPut:PON[:STATe]? [(@chanlist)]

Parameter	0	Output off at power up
	OFF	Output off at power up
	1	Output on at power up
	ON	Output on at power up

Return Parameter	0	Output off at power up
	1	Output on at power up



SYSTem:COMMunicate:ENABLE

Description Enables/Disables LAN, GPIB or USB remote interfaces as well as remote services (Sockets, Web Server).

This setting is applied only after the unit is reset.

Syntax SYSTem:COMMunicate:ENABLE <mode>,<interface>


Query Syntax SYSTem:COMMunicate:ENABLE? <interface>

Parameter	<mode>	
	OFF	Turns the selected mode off.
	0	Turns the selected mode off.
	ON	Turns the selected mode on.
	1	Turns the selected mode on.
	<interface>	
	GPIB	Select GPIB
	USB	Select USB
	LAN	Select LAN
	SOCKETs	Select Sockets
	WEB	Select the web server

Return Parameter	0	The selected mode is off.
	1	The selected mode is on.

Example SYST:COMM:ENAB 1,USB
Turns the USB interface on.

Query Example SYST:COMM:ENAB? USB
1
Queries the USB state, returns 1 (USB is on).

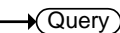SYSTEM:COMMunicate:GPIB[:SELF]:ADDRess  

Description Sets or queries the GPIB address. This setting is applied only after the unit is reset.

Syntax SYSTEM:COMMunicate:GPIB[:SELF]:ADDRess

Query Syntax

<NR1>
SYSTEM:COMMunicate:GPIB[:SELF]:ADDRess?

Parameter/Return <NR1> 0~30

Example SYST:COMM:GPIB:SELF:ADDR 15

Sets the GPIB address to 15.

SYSTEM:COMMunicate:LAN:IPAddress  

Description Sets or queries LAN IP address. This setting is applied only after the unit is reset.

Syntax SYSTEM:COMMunicate:LAN:IPAddress <string>

Query Syntax

SYSTEM:COMMunicate:LAN:IPAddress?

Parameter/Return <string> LAN IP address in string format
("address")
Applicable ASCII characters: 20H to 7EH

Example SYST:COMM:LAN:IPAD "172.16.5.111"

Sets the IP address to 172.16.5.111.

SYSTEM:COMMunicate:LAN:GATEway  

Description Sets or queries the Gateway address. This setting is applied only after the unit is reset.

Syntax SYSTEM:COMMunicate:LAN:GATEway <string>

Query Syntax

SYSTEM:COMMunicate:LAN:GATEway?

Parameter/Return <string> Gateway address in string format
("address")
Applicable ASCII characters: 20H to 7EH

Parameter	0	DHCP off
	OFF	DHCP off
	1	DHCP on
	ON	DHCP on
Return parameter	0	<boolean>DHCP off
	1	<boolean>DHCP on

Set →
→ Query

SYSTEM:COMMunicate:LAN:DNS

Description	Sets or queries the DNS address. This setting is applied only after the unit is reset.	
Syntax	SYSTEM:COMMunicate:LAN:DNS <string>	
Query Syntax	SYSTEM:COMMunicate:LAN:DNS?	
Parameter/Return	<string>	DNS in string format ("mask") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252.	

SYSTEM:COMMunicate:LAN:HOSTname → Query

Description	Queries the host name.	
Query Syntax	SYSTEM:COMMunicate:LAN:HOSTname?	
Return Parameter	<string>	Host name in string format
Query Example	SYST:COMM:LAN:HOST? P-160054 Returns the host name (P-160054).	

Set →
→ Query

SYSTEM:COMMunicate:LAN:WEB:PACTive

Description	Sets or queries whether the web password is on or off. This setting is applied only after the unit is reset.	
-------------	--	--

Syntax	SYSTem:COMMunicate:LAN:WEB:PACTive {OFF ON 0 1}	
Query Syntax	SYSTem:COMMunicate:LAN:WEB:PACTive?	
Parameter	0	Web password off
	OFF	Web password off
	1	Web password on
	ON	Web password on
Return parameter	0	<boolean> Web password off
	1	<boolean> Web password on

Set →
 → Query

SYSTem:COMMunicate:LAN:WEB:PASSword

Description	Sets or queries the web password. This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:LAN:WEB:PASSword <NR1>	
Query Syntax	SYSTem:COMMunicate:LAN:WEB:PASSword?	
Parameter/Return	<NR1>	0 ~ 9999
Example	SYST:COMM:LAN:WEB:PASS 1234 Set the web password as 1234.	

Set →
 → Query

SYSTem:COMMunicate:RLState

Description	Sets or queries the control state of the instrument.	
Note	Only applicable for software version 1.60 or above. (PSW only)	
Syntax	SYSTem:COMMunicate:RLState {LOCal REMOte RWLock}{, (@chanlist)}	
Query Syntax	SYSTem:COMMunicate:RLState? [(@chanlist)]	
Parameter	LOCal	Sets the instrument to front panel control.

	REMOte	Sets the instrument to remote interface control.
	RWLock	Disables the front panel keys and only allows the instrument to be controlled via the remote interface.
Return parameter	LOC	The instrument is set to front panel control.
	REM	The instrument is set to remote interface control.
	RWL	The front panel keys are disabled. The instrument can only be controlled via the remote interface.
Example	SYST:COMM:RLST: LOC Sets the instrument to front panel control.	

SYSTEM:COMMunicate:USB:FRONT:STATe → **Query**

Description	Queries the front panel USB-A port state.	
Query Syntax	SYSTEM:COMMunicate:USB:FRONT:STATe?	
Return parameter	0	<NR1>Absent
	1	<NR1>Mass Storage

SYSTEM:COMMunicate:USB:REAR:STATe → **Query**

Description	Queries the rear panel USB-B port state.	
Query Syntax	SYSTEM:COMMunicate:USB:REAR:STATe?	
Return parameter	0	<NR1>Absent
	1	<NR1>USB-CDC
	2	<NR1>GPIB-USB (GUG-001)

SYSTem:COMMunicate:USB:REAR:MODE



Description	Sets or queries the rear panel USB-B port mode. This command is the equivalent to the F-22 configuration setting.	
Syntax	SYSTem:COMMunicate:USB:REAR:MODE {0 1 2 3}	
Query Syntax	SYSTem:COMMunicate:USB:REAR:MODE?	
Parameter/ Return parameter	0	Disable
	1	USB Host
	2	Auto detect speed
	3	Full speed only
Example	SYST:COMM:USB:REAR:MODE 1 Sets the rear panel USB-B port mode to USB Host.	

SYSTem:ERRor 

Description	Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue.	
Query Syntax	SYSTem:ERRor?	
Paramter/Return	<NR1>,<string>	Returns an error code followed by an error message as a string. The string is returned as "string".
Example	SYSTem:ERRor? -100, "Command error"	

SYSTem:KEYLock:MODE



Description	Sets or queries the key lock mode. This setting is the equivalent of the F-19 function setting.	
Syntax	SYSTem:KEYLock:MODE {0 1}[,(@chanlist)]	
Query Syntax	SYSTem:KEYLock:MODE? [(@chanlist)]	

Parameter /	0	Panel lock: allow output off.
Return parameter	1	Panel lock: allow output on/off.

Set →

→ Query

SYSTem:KLOCK

Description	Enables or disables the front panel key lock.	
Syntax	SYSTem:KLOCK {OFF ON 0 1}[,(@chanlist)]	
Query Syntax	SYSTem:KLOCK? [(@chanlist)]	
Parameter	0	Panel keys unlocked
	OFF	Panel keys unlocked
	1	Panel keys locked
	ON	Panel keys locked
Return parameter	0	<boolean>Panel keys unlocked
	1	<Boolean>Panel keys locked

**SYSTem:KLOCK:SYNChronize:STATE
(PSW-Multi only)**

Set →

→ Query

Description	Turn on or off the front panel key “LOCK/ LOCAL” synchronization.	
Syntax	SYSTem:KLOCK:SYNChronize:STATE {0 1 OFF ON} [,(@chanlist)]	
Query Syntax	SYSTem:KLOCK:SYNChronize:STATE? [(@chanlist)]	
Parameter	OFF	Turn off “LOCK/ LOCAL” key sync.
	0	<NR1> Turn off “LOCK/LOCAL” key sync.
	ON	Turn on “LOCK/ LOCAL” key sync.
	1	<NR1> Turn on “LOCK/LOCAL” key sync.
Return Parameter	0	<NR1> Turn off “LOCK/LOCAL” key sync.
	1	<NR1> Turn on “LOCK/LOCAL” key sync.

Example	SYSTem:KLOCK:SYNChronize:STATe ON Enable the “LOCK/ LOCAL” key synchronization function.
---------	---

SYSTem:INFormation → Query

Description	Queries the system information. Returns the machine version, build date, keyboard CPLD version and analog CPLD version.
-------------	---

Query Syntax	SYSTem:INFormation?
--------------	---------------------

Return Parameter	<block data> Definite length arbitrary block response data.
------------------	---

Query Example	<p>SYST:INF?</p> <p>#3212MFRS GW-INSTEK,Model PSW80-13.5,SN TW0123456789,Firmware-Version 01.43.20130424, Keyboard-CPLD 0x30c,AnalogControl-CPLD 0x421,Kernel-BuiltON 2013-3-22,TEST-Version 01.00,TEST-BuiltON 2011-8-1,MAC 02-80-ad-20-31-b1</p> <p>Returns the system information as a block data.</p>
---------------	---

SYSTem:PRESet Set →

Description	Resets all the settings to the factory default settings. See page 118 for details.
-------------	--

Syntax	SYSTem:PRESet [(@chanlist)]
--------	-----------------------------

SYSTem:VERSion → Query

Description	Returns the version of the SCPI specifications that the unit complies with.
-------------	---

Query Syntax	SYSTem:VERSion?
--------------	-----------------

Return parameter	<1999.0> Always returns the SCPI version: 1999.0.
------------------	---

IEEE 488.2 Common Commands

*CLS	89
*ESE	89
*ESR	90
*IDN	90
*OPC	90
*RST	91
*SRE	91
*STB	91
*TRG	92
*TST	92
*WAI	92

*CLS

(Set) →

Description The *CLS command clears the Standard Event Status, Operation Status and Questionable Status registers. The corresponding Enable registers in each of the above registers are not cleared.

 If a <NL> newline code immediately precedes a *CLS command, the Error Que and the MAV bit in the Status Byte Register is also cleared.

Syntax *CLS

*ESE

(Set) →

→ (Query)

Description Sets or queries the Standard Event Status Enable register.

Syntax *ESE <NR1>

Query Syntax *ESE?

Parameter <NR1> 0~255

Return parameter <NR1> Returns the bit sum of the Standard Event Status Enable register.

***ESR** → Query

Description Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read.

Query Syntax *ESR?

Return parameter <NR1> Returns the bit sum of the Standard Event Status (Event) register and clears the register.

***IDN** → Query

Description Queries the manufacturer, model name, serial number, and firmware version of the PSW.

Query Syntax *IDN?

Return parameter <string> Returns the instrument identification as a string in the following format:
 GW-INSTEK,PSW-3036,TW123456,01.00.20110101
 Manufacturer: GW-INSTEK
 Model number : PSW-3036
 Serial number : TW123456
 Firmware version : 01.00.20110101

***OPC** → Set → Query

Description The *OPC command sets the OPC bit (bit0) of the Standard Event Status Register when all current commands have been processed.
 The *OPC? Query returns 1 when all the outstanding commands have completed.

Syntax	*OPC
Query Syntax	*OPC?
Return parameter	1 Returns 1 when all the outstanding commands have completed.

***RST** (Set) →

Description Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.

Syntax *RST

***SRE** (Set) →
→ (Query)

Description Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests.

Syntax *SRE <NR1>

Query Syntax *SRE?

Parameter <NR1> 0~255

Return parameter <NR1> Returns the bit sum of the Service Request Enable register.

***STB** → (Query)

Description Queries the bit sum of the Status Byte register with MSS (Master summary Status).

Query Syntax *STB?

Return parameter <NR1> Returns the bit sum of the Status Byte register with the MSS bit (bit 6).

***TRG** (Set) →

Description The *TRG command is able to generate a “get” (Group Execute Trigger). If the PSW cannot accept a trigger at the time of the command, an error message is generated (-211, “Trigger ignored”).

Syntax *TRG

***TST** → (Query)

Description Executes a self test.

Query Syntax *TST?

Return parameter	0	Returns “0” if there are no errors.
	<NR1>	Returns an error code <NR1> if there is an error.

***WAI** (Set) →

Description Prevents any other commands or queries from being executed until all outstanding commands have completed.

Syntax *WAI

Status Register Overview

To program the PSW power supply effectively, the Status registers need to be understood. This chapter explains in detail how the Status registers are used and how to configure them.

Introduction to the Status Registers

Overview


The status registers are used to determine the status of the power supply. The status registers maintain the status of the protection conditions, operation conditions and instrument errors.

The PSW Series have a number of register groups:


- Questionable Status Register Group
- Standard Event Status Register Group
- Operation Status Register Group
- Status Byte Register
- Service Request Enable Register
- Service Request Generation
- Error Queue
- Output Buffer
- Questionable Instrument Status Register Group (PSW-Multi only)
- Operation Instrument Status Register Group (PSW-Multi only)

The next page shows the structure of the Status registers.


The Status Registers

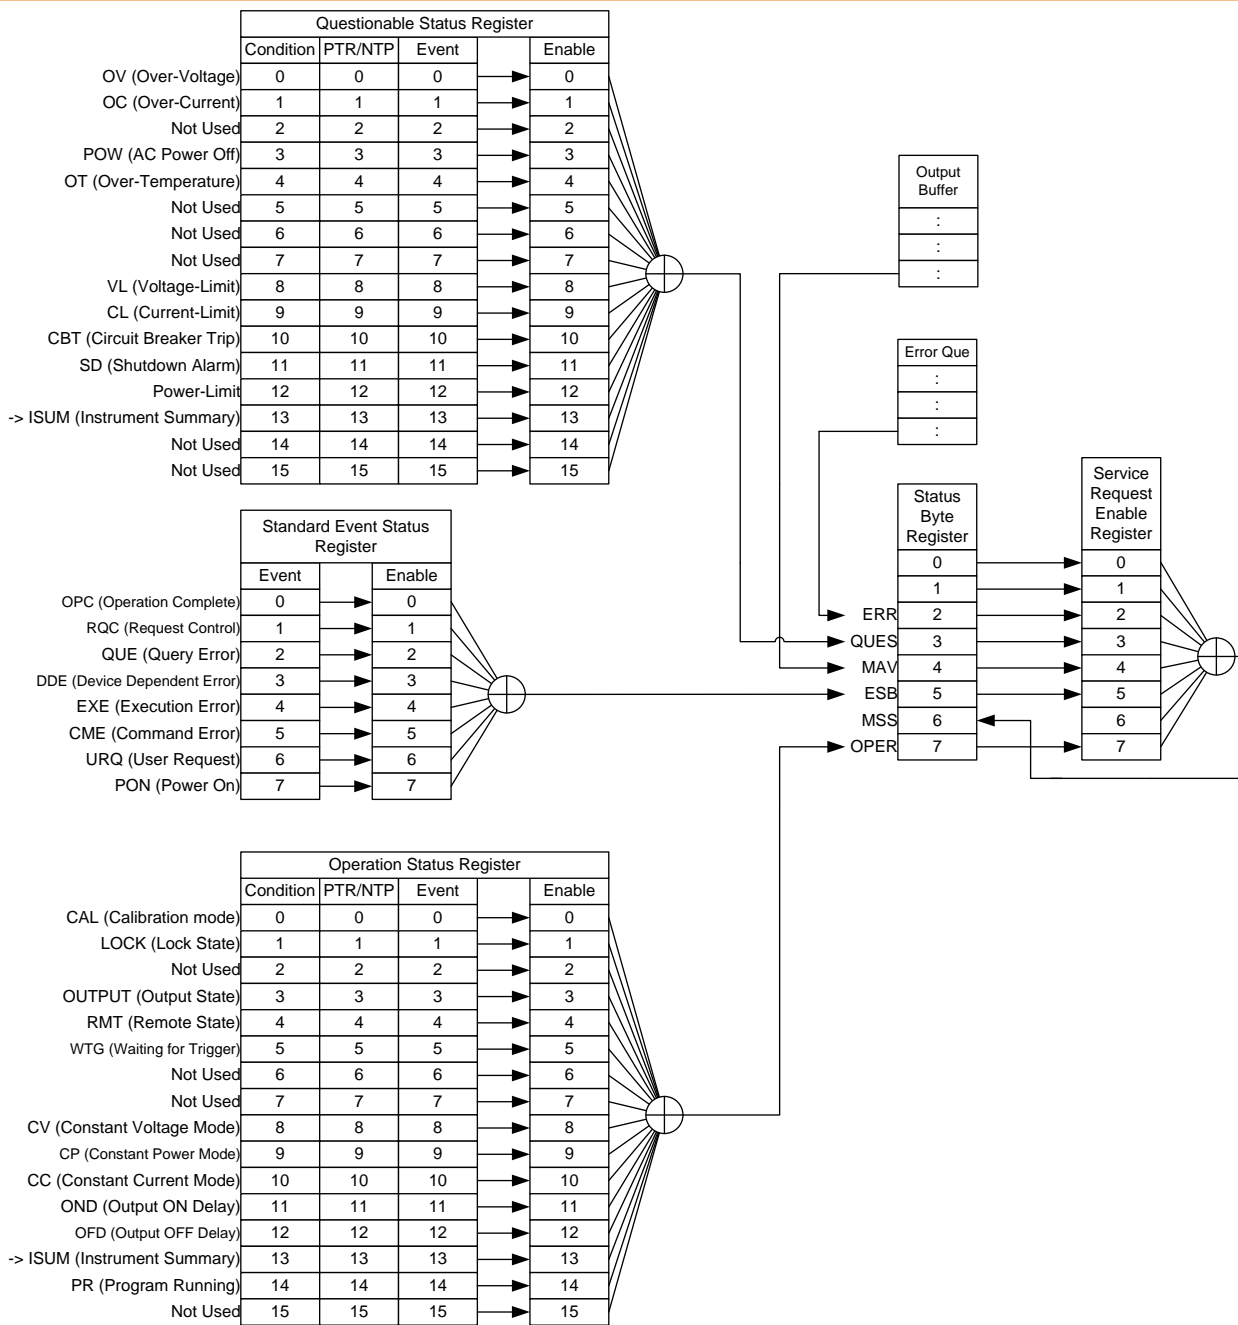

The Questionable Instrument Status Registers (PSW-Multi only)

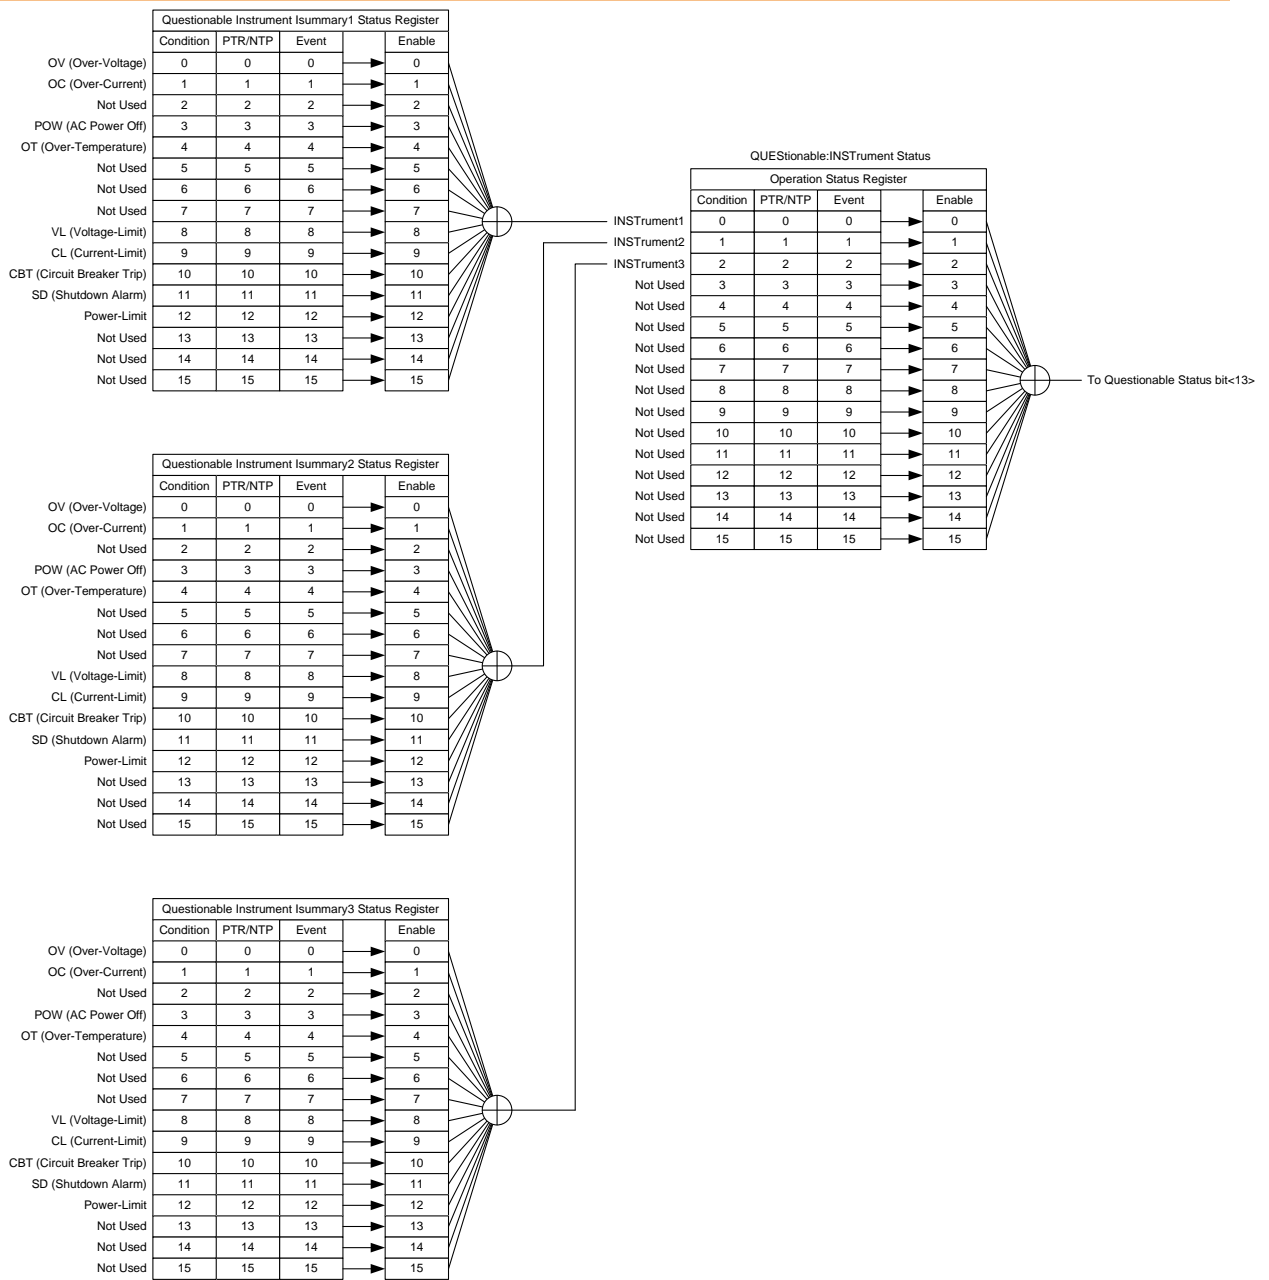



The Operation Instrument Status Registers (PSW-Multi only)

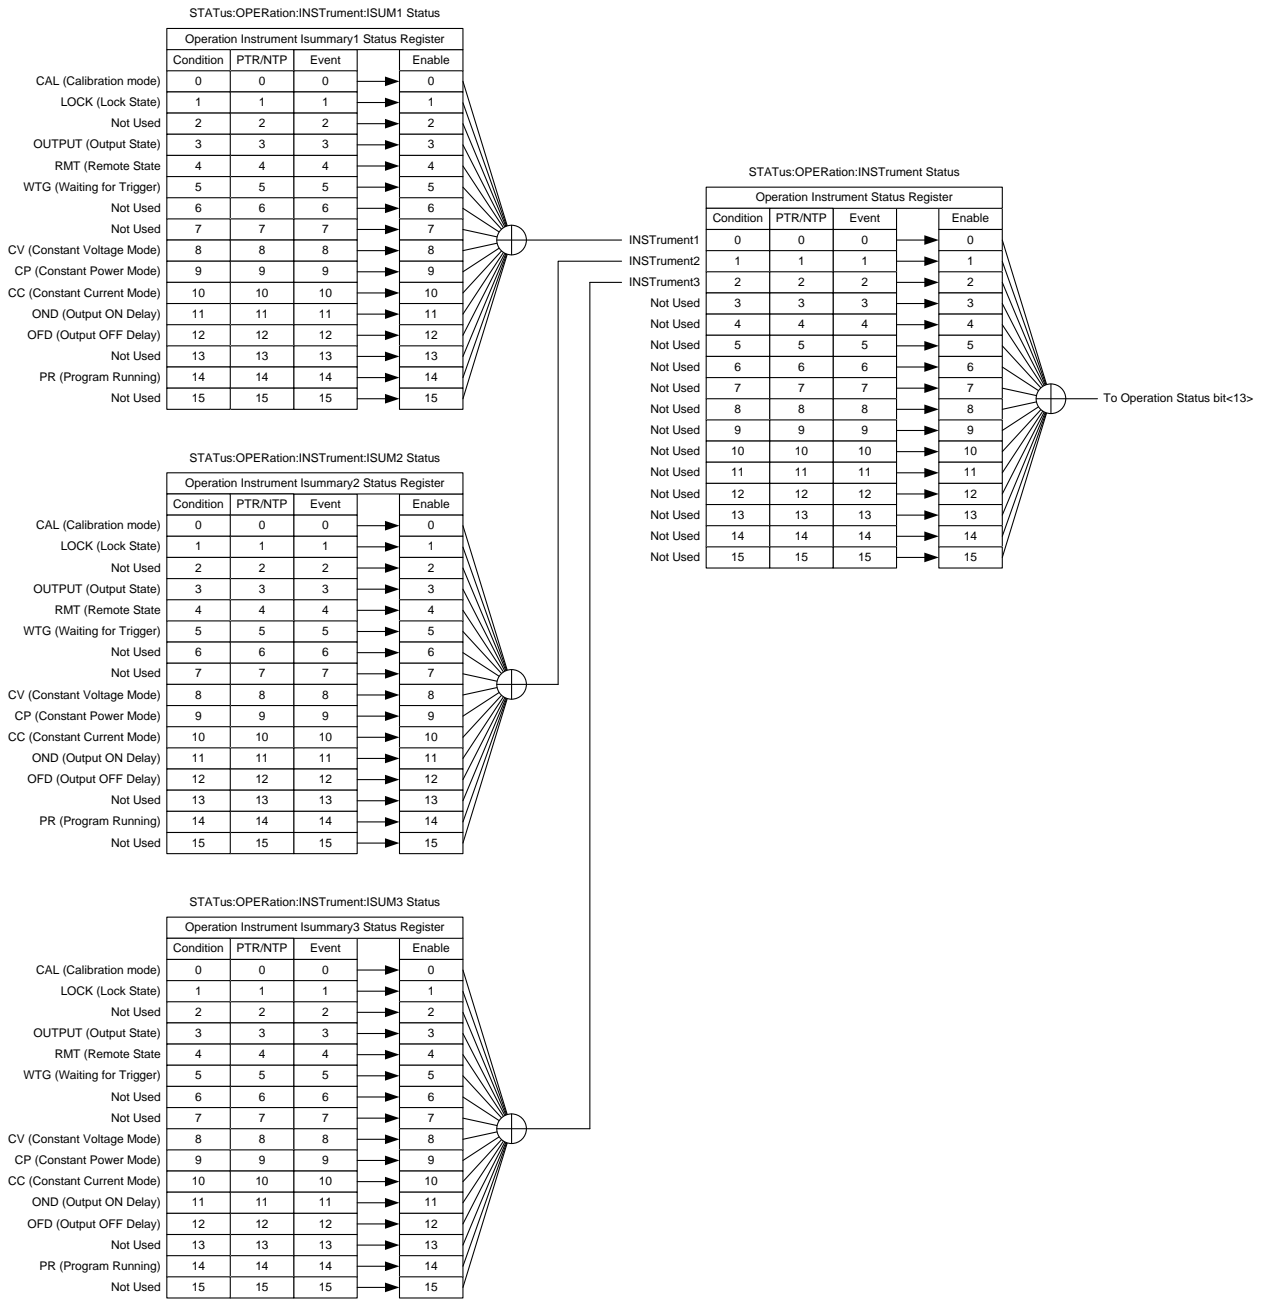

Questionable Status Register Group

Overview

The Questionable Status Register Group indicates if any protection modes or limits have been tripped.

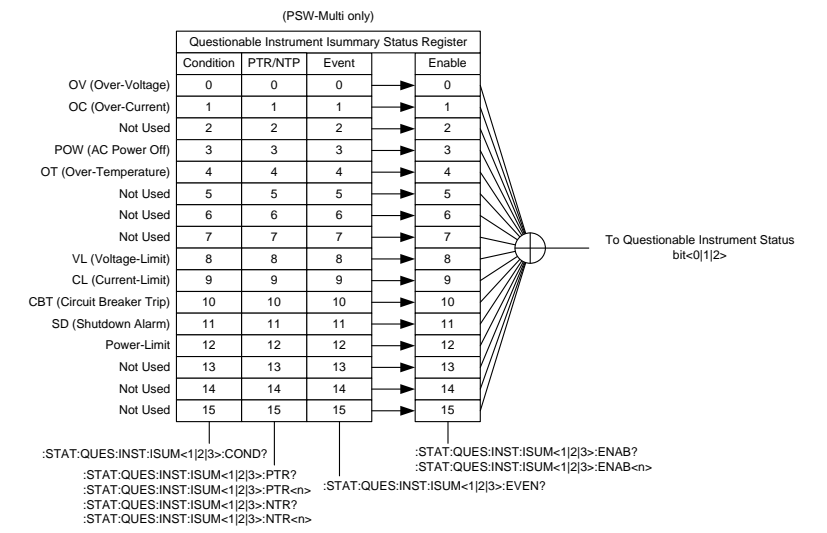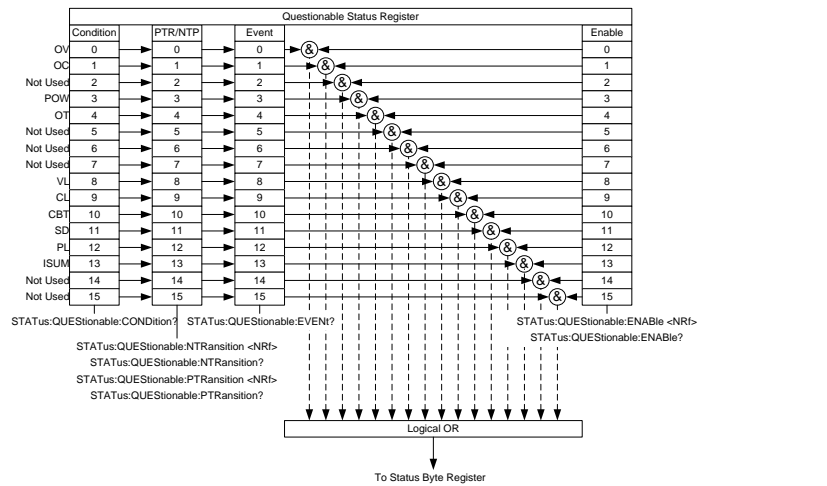

Bit Summary	Event	Bit #	Bit Weight
	OV (Over-Voltage) Over voltage protection has been tripped	0	1
	OC (Over-Current) Over current protection has been tripped	1	2
	POW (AC Power Off) AC power switch is off	3	8
	OT (Over Temperature) Over temperature protection has been tripped	4	16
	VL (Voltage Limit) Voltage limit has been reached	8	256
	CL (Current Limit) Current limit has been reached	9	512
	CBT (Circuit Breaker Trip)	10	1024
	SD (Shutdown Alarm)	11	2048
	PL (Power-Limit)	12	4096
	ISUM (Instrument Summary) (PSW-Multi only)	13	8192

Condition Register The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.

PTR/NTR Filters The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.

	Positive Transition	0→1
	Negative Transition	1→0



Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.
----------------	--

Enable Register	The Enable register determines which Events in the Event Register will be used to set the QUES bit in the Status Byte Register.
-----------------	---

Operation Status Register Group

Overview

The Operation Status Register Group indicates the operating status of the power supply.

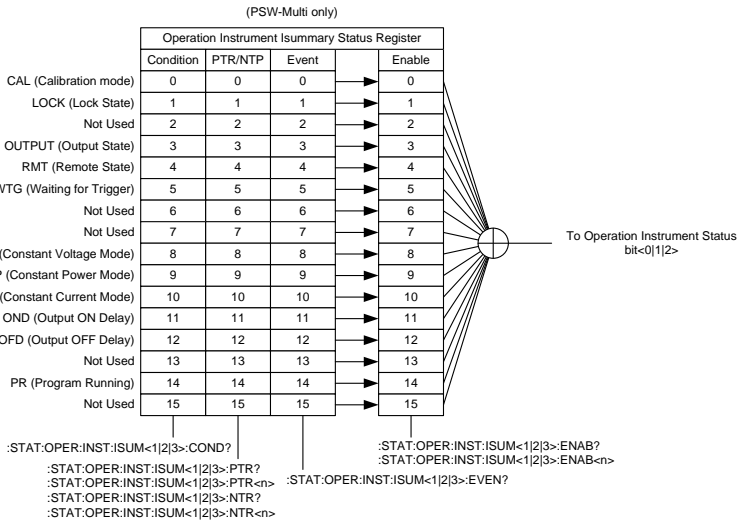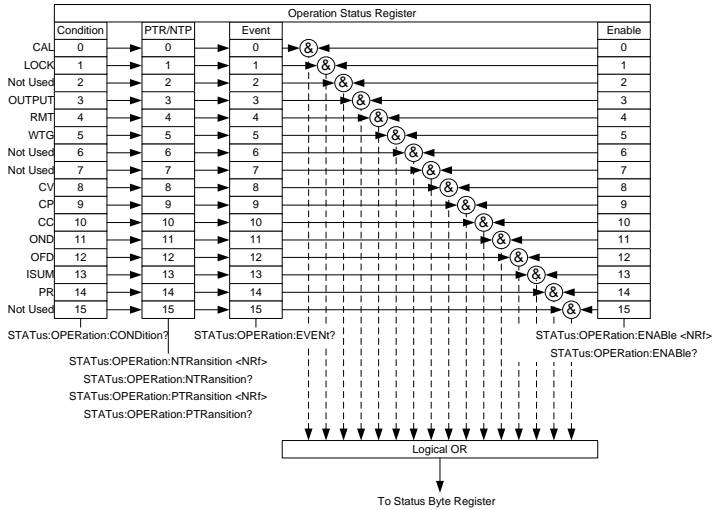

Bit Summary	Event	Bit #	Bit Weight
	CAL (Calibration mode) Indicates if the PSW is in calibration mode.	0	1
	LOCK (Lock state)	1	2
	OUTPUT (Output state)	3	8
	RMT (Remote state)	4	16
	WTG (Waiting for trigger) Indicates if the PSW is waiting for a trigger.	5	32
	CV (Constant voltage mode) Indicates if the PSW is in CV mode.	8	256
	CP (Constant power mode) Indicates if the PSW is in CP mode.	9	512
	CC (Constant current mode) Indicates if the PSW is in CC mode.	10	1024
	OND (Output ON Delay) Indicates if Output ON delay time is active	11	2048
	OFD (Output OFF Delay) Indicates if Output OFF delay time is active	12	4096
	ISUM (Instrument Summary) (PSW-Multi only)	13	8192
	PR (Program Running) Indicates if a Test is running	14	16384
Condition Register	The Operation Status Condition Register indicates the operating status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		

PTR/NTR Filters The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.


Positive Transition 0→1

Negative Transition 1→0

Event Register The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.


Enable Register The Enable register determines which registered Events in the Event Register will be used to set the OPER bit in the Status Byte Register.

Questionable Instrument Status Register Group (PSW-Multi only)

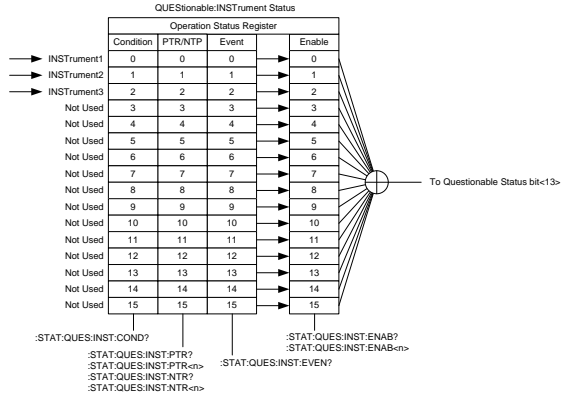

Bit Summary	Event	Bit #	Bit Weight
	Summary bit of channel 1 (QUES:INST:ISUM1)	0	1
	Summary bit of channel 2 (QUES:INST:ISUM2)	1	2
	Summary bit of channel 3 (QUES:INST:ISUM3)	2	4

Operation Instrument Status Register Group (PSW-Multi only)

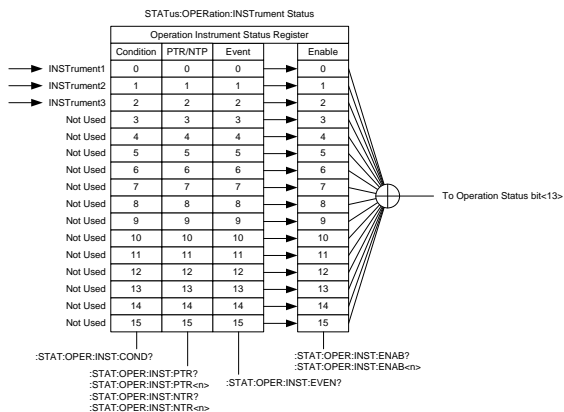


Bit Summary	Event	Bit #	Bit Weight
Summary bit of channel 1 (OPER:INST:ISUM1)		0	1
Summary bit of channel 2 (OPER:INST:ISUM2)		1	2
Summary bit of channel 3 (OPER:INST:ISUM3)		2	4

Standard Event Status Register Group

Overview

The Standard Event Status Register Group indicates if any errors have occurred. The bits of the Event register are set by the error event queue.

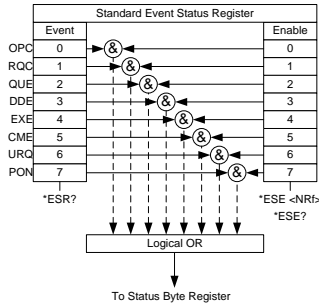

Bit Summary	Event	Bit #	Bit Weight
	OPC (Operation complete)	0	1
	The OCP bit is set when all selected pending operations are complete. This bit is set in response to the *OPC command.		
	RQC (Request control)	1	2
	QUE (Query Error)	2	4
	The Query Error bit is set in response to an error reading the Output Queue. This can be caused by trying to read the Output Queue when there is no data present.		
	DDE (Device Dependent Error)	3	8
	Device specific error.		
	EXE (Execution Error)	4	16
	The EXE bit indicates an		

execution error due to one of the following: illegal command parameter, parameter out of range, invalid parameter, the command didn't execute due to an overriding operation condition.

CME (Command Error)	5	32
---------------------	---	----

The CME bit is set when a syntax error has occurred. The CME bit can also be set when a <GET> command is received within a program message.

URQ (User Request)	6	64
--------------------	---	----

PON (Power On)	7	128
----------------	---	-----

Indicates the power is turned on.


Event Register	Any bits set in the event register indicate that an error has occurred. Reading the Event register will reset the register to 0.
----------------	--

Enable Register	The Enable register determines which Events in the Event Register will be used to set the ESB bit in the Status Byte Register.
-----------------	--

Status Byte Register & Service Request Enable Register

Overview

The Status Byte register consolidates the status events of all the status registers. The Status Byte register can be read with the *STB? query and can be cleared with the *CLS command.

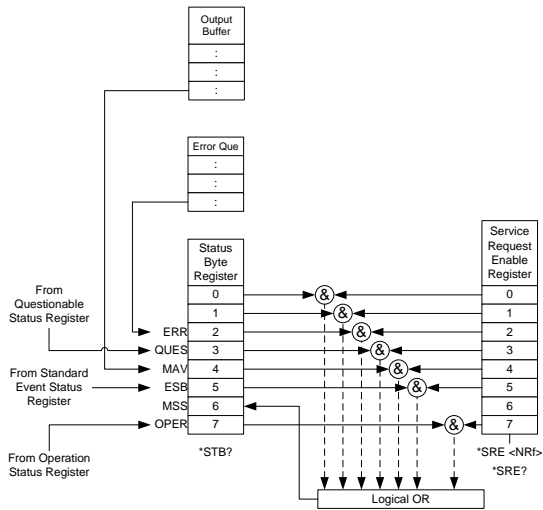

Bit Summary

Event	Bit #	Bit Weight
ERR (Error Event/Queue)	2	4
If data is present in the Error queue, the ERR bit will be set.		
QUES (Questionable Status Register)	3	8
The summary bit for the Questionable Status Register group.		
MAV (Message Available) This is set when there is data in the Output Queue waiting to be read.	4	16

(ESB) Event Summary Bit. The ESB is the summary bit for the Standard Event Status Register group.	5	32
---	---	----

MSS Bit	6	64
---------	---	----

The MSS Bit is the summary of the Status Byte Register and Service Request register (bits 1-5, 7). This will be set to 1.

OPER (Operation Status Register)	7	128
----------------------------------	---	-----

OPER bit is the summary bit for the Operation Status Register Group.

Status Byte Register	Any bits set in the Status byte register acts as a summary register for all the three other status registers and indicates if there is a service request, an error in the Error Queue or data in the Output Queue. Reading the Status Byte register will reset the register to 0.
----------------------	---

Service Request Enable Register	The Service Request Enable Register controls which bits in the Status Byte Register are able to generate service requests.
---------------------------------	--

Error List

Command Errors ---

Overview An <error/event number> in the range [-199 , -100] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.
- An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

Error Code	Description
-100 Command Error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2,11.5.1.1.4 has occurred.
-102 Syntax error	An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings.
-103 Invalid separator	The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC?
-104 Data type error	The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered.
-108 Parameter not allowed	More parameters were received than expected for the header; for example, the KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed.
-109 Missing parameter	Fewer parameters were received than required for the header; for example, the KLOCK command requires one parameter, so receiving KLOCK is not allowed.
-111 Header separator error	A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus APPL5,1 is an error.
-112 Program mnemonic too long	The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1).

- 113 Undefined header The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device.
- 114 Header suffix out of range The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid.
- 115 Unexpected number of parameters The number of parameters received does not correspond to the number of parameters expected. This is typically due an inconsistency with the number of instruments in the selected group.
- 120 Numeric data error This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the nondecimal numeric types. This particular error message should be used if the device cannot detect a more specific error.
- 121 Invalid character in number An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data.
- 128 Numeric data not allowed A legal numeric data element was received, but the device does not accept one in this position for the header.
- 131 Invalid suffix The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.
- 141 Invalid character data Either the character data element contains an invalid character or the particular element received is not valid for the header.
- 148 Character data not allowed A legal character data element was encountered where prohibited by the device.

- 151 Invalid string data A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character.
- 158 String data not allowed A string data element was encountered but was not allowed by the device at this point in parsing.
- 160 Block data error This error, as well as errors -161 through -169, is generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error.
- 161 Invalid block data A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied.
- 168 Block data not allowed A legal block data element was encountered but was not allowed by the device at this point in parsing.
- 178 Expression data not allowed A legal expression data was encountered but was not allowed by the device at this point in parsing.

Execution Errors

Overview An <error/event number> in the range [-299 , -200] indicates that an error has been detected by the instrument's execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities.
- A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Error Code	Description
-200 Execution error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred.

- 201 Invalid while in local Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message can't be executed.
- 203 Command protected Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
- 211 Trigger ignored Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error.
- 213 Init ignored Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
- 220 Parameter error Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229.
- 221 Settings conflict Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.).
- 222 Data out of range Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.).

-224 Illegal parameter value Used where exact value, from a list of possible, was expected.

Device Specific Errors

Overview An <error/event number> in the range [-399 , -300] or [1 , 32767] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer.

Note that the string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42, ""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors, or query errors; see the other error definitions in this section.

Error Code	Description
-310 System error	Indicates that some error, termed “system error” by the device, has occurred. This code is device-dependent.
-320 Storage fault	Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element.

Query Errors

Overview An <error/event number> in the range [-499 , -400] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending;
- Data in the output queue has been lost.

Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.

Error Code	Description
-400 Query error	This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred.

A PPENDIX

PSW Default Settings

The following default settings are the factory configuration settings for the power supply (Function settings/Test settings).

Initial Settings	Default Setting	
Output	Off	
LOCK	0 (Disabled)	
Voltage	0V	
Current	0A	
OVP	Maximum	
OCP	Maximum	
Normal Function Settings	Setting	Default Setting
Output ON delay time	F-01	0.00s
Output OFF delay time	F-02	0.00s
V-I mode slew rate select	F-03	0 = CV high speed priority
Rising voltage slew rate	F-04	60.00V/s (PSW 30-XX)
		80.00V/s (PSW 40-XX)
		160.0V/s (PSW 80-XX)
		320.0V/s (PSW 160-XX)
		500.0V/s (PSW 250-XX)
Falling voltage slew rate	F-05	1600V/s (PSW 800-XX)
		60.00V/s (PSW 30-XX)
		80.00V/s (PSW 40-XX)
		160.0V/s (PSW 80-XX)
		320.0V/s (PSW 160-XX)
		500.0V/s (PSW 250-XX)
		1600V/s (PSW 800-XX)

Rising current slew rate	F-06	72.00A/s (PSW 30-36)
		144.0A/s (PSW 30-72)
		216.0A/s (PSW 30-108)
		54.00A/s (PSW 40-27)
		108.0A/s (PSW 40-54)
		162.0A/s (PSW 40-81)
		27.00A/s (PSW 80-13.5)
		54.00A/s (PSW 80-27)
		81.00A/s (PSW 80-40.5)
		14.40A/s (PSW 160-7.2)
		28.80A/s (PSW 160-14.4)
		43.20A/s (PSW 160-21.6)
		9.000A/s (PSW 250-4.5)
		18.00A/s (PSW 250-9)
		27.00A/s (PSW 250-13.5)
		2.880A/s (PSW 800-1.44)
5.760A/s (PSW 800-2.88)		
8.640A/s (PSW 800-4.32)		
Falling current slew rate	F-07	72.00A/s (PSW 30-36)
		144.0A/s (PSW 30-72)
		216.0A/s (PSW 30-108)
		54.00A/s (PSW 40-27)
		108.0A/s (PSW 40-54)
		162.0A/s (PSW 40-81)
		27.00A/s (PSW 80-13.5)
		54.00A/s (PSW 80-27)
		81.00A/s (PSW 80-40.5)
		14.40A/s (PSW 160-7.2)
		28.80A/s (PSW 160-14.4)
		43.20A/s (PSW 160-21.6)
		9.000A/s (PSW 250-4.5)
		18.00A/s (PSW 250-9)
		27.00A/s (PSW 250-13.5)
		2.880A/s (PSW 800-1.44)
5.760A/s (PSW 800-2.88)		
8.640A/s (PSW 800-4.32)		
Internal resistance setting	F-08	0.000Ω
Bleeder circuit control	F-09	1 = ON
Buzzer ON/OFF control	F-10	1 = ON
Measurement Average Setting	F-17	0 = Low
Lock Mode	F-19	0 = Panel lock: allow output off

USB/GPIB setting

Rear Panel USB Mode	F-22	2 = USB CDC
GPIB address	F-23	8

LAN setting

LAN	F-36	1 = Enable
DHCP	F-37	1 = Enable
Sockets active	F-57	1 = Enable
Web Server active	F-59	1 = Enable
Web password active	F-60	1 = Enable
Web setting password	F-61	0000

Power On Configuration

CV Control	F-90	0 = Panel control (local)
CC Control	F-91	0 = Panel control (local)
Power-ON Output	F-92	0 = OFF at startup
Master/Slave	F-93	0 = Master/Local
External Out Logic	F-94	0 = High ON
Power Switch trip	F-95	0 = Enable

Multi-channel function (PSW-Multi only)

Output synchronize	F-130	0 = OFF
Protection trigger synchronous	F-131	0 = OFF
Key Lock/Local synchronize	F-132	0 = OFF

Error Messages & Messages

The following error messages or messages may appear on the PSW screen during operation.

Error Messages	Description
Err 001	USB Mass Storage is not present
Err 002	No (such) file in USB mass storage
Err 003	Empty memory location
Err 004	File access error
Err 901	Keyboard CPLD error
Err 902	Analog CPLD error
Err 920	The ADC is over range for calibration
Err 921	The DAC is over range for calibration
Err 922	Point invalid for calibration

Messages	Description
MSG 001	External control of output. Output off (F-94=0, High=on)
MSG 002	External control of output. Output off (F-94=1, Low=on)
MSG 003	F-93 is not zero. Unable to calibrate.
LOCK F-19	F-19 is not zero. Unable to turn the output on.

LED Display Format

Use the following table to read the LED display messages.

0	1	2	3	4	5	6	7	8	9	A	B	C	D
0	1	2	3	4	5	6	7	8	9	A	b	C	d
E	F	G	H	I	J	K	L	M	N	O	P	Q	R
E	F	G	H	I	J	K	L	M	N	O	P	Q	r
S	T	U	V	W	X	Y	Z	()	+	-	,	
S	T	U	V	W	X	Y	Z	()	+	-	,	

FAQ

- From where can I tell how many channels my PSW has? Is it from the model, from the instructions, or is it fixed to three channels?

From where can I tell how many channels my PSW has? Is it from the model, from the instructions, or is it fixed to three channels?

Method 1:

You can use the ***IDN** command to determine channel numbers from the reply message.

For example

If a reply for ***IDN** is "GW-INSTEK, PSW-1080H888, TW108088801, 01.02.20230717", this PSW is 3-channels models. Because **1080** in "**1080XXXX**" means 3- channels models.

If a reply for ***IDN** is "GW-INSTEK, PSW-720H88, TW108088801, 01.02.20230717", this PSW is 2-channels models. Because **720** in "**720XXXX**" means 2- channels models.

Method 2:

You can use the **SYST:INF?** command to determine channel numbers from the reply message.

For example

When typing the command **SYST:INF?**, you get the following reply
#3244MFRS GW-INSTEK,Model PSW-1080H888,SN
TW108088801,Firmware-Version 01.02.20230717,Keyboard-CPLD
0x32766564,AnalogControl-CPLD 0x31766564,Kernel-BuiltON

2023-3-10,TEST-Version 01.01,TEST-BuiltON 2011-10-31,MAC 00-22-24-00-00-11,NumberOfChannels 3

The number 3 in the end of the string “NumberOfChannels 3” means the number of channels in your PSW.

INDEX

Display format	121	Status registers	93
Ethernet		USB configuration.....	6
interface	8	Remote control function check	10
sockets	9	Realterm.....	11
web server	8	Socket server examples	
LED conversion	121	C++	22
Messages.....	121	LabVIEW.....	24
Remote control.....	4	Visual basic.....	21
Command list	28	Socket server function check	16
Command syntax	25	Web server function check	16
Error list.....	109		