


Digital Storage Oscilloscope

GDS-1000-U Series

QUICK START GUIDE

CW INSTEK PART NO. 82DS-1102UMF1



GDS-1000-U Product Packing List

No	Part	Description	Qty
1	GDS-1000-U	2 Channel, Digital Storage Oscilloscope	1
2	Probe	Switchable Passive Probe (10:1/1:1)	2
3	User Manual	CD User Manual	1
4	Quick Guide	Quick Start Guide	1
5	Power Cord	AC Power Cord	1

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd. No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.

SAFETY INSTRUCTIONS

This section contains the basic safety symbols that may appear on the accompanying user manual CD or on the instrument. For detailed safety instructions and precautions, please see the Safety Instructions chapter in the user manual CD.

Safety Symbols

These safety symbols may appear in the user manual or on the instrument.

- Warning: Identifies conditions or practices that could result in injury or loss of life.
- Caution: Identifies conditions or practices that could result in damage to the instrument or to other properties.
- DANGER High Voltage
- Attention Refer to the Manual
- Protective Conductor Terminal
- Earth (ground) Terminal
- Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Power Cord for the United Kingdom

When using the instrument in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons.

WARNING: THIS APPLIANCE MUST BE EARTHED
IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth
 Blue: Neutral
 Brown: Live (Phase)

As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:
 The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol or coloured Green/Green & Yellow.
 The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.
 The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.
 If in doubt, consult the instructions provided with the equipment or contact the supplier.
 This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.
 Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

The Getting started chapter introduces the oscilloscope's main features, appearance, and set up procedure.

Main Features

Model name	Frequency bandwidth	Input channels
GDS-1052-U	DC-50MHz (-3dB)	2
GDS-1072-U	DC-70MHz (-3dB)	2
GDS-1102-U	DC-100MHz (-3dB)	2

Performance

- 250MSa/s real-time sampling rate
- 25GS/s equivalent-time sampling rate
- 4k points record length
- Up to 10ns peak detection
- 2mV~10V vertical scale
- 1ns~50s time scale

- Features
- 5.7 inch color TFT display
 - Saving and recalling setups and waveforms
 - 19 automatic measurements
 - Multi-language menu (12 languages)
 - Math operation: Addition, Subtraction, FFT
 - Data logging
 - Go-NoGo testing
 - Edge, Video, Pulse width triggers

- Interface
- USB 2.0 full-speed interface for saving and recalling data
 - Calibration output
 - External trigger input
 - USB B type (slave) interface for remote control


Package Contents and Accessories

Standard Accessories		
Part Number	Description	
	User Manual CD	
	Quick Start Guide (this document)	
GTP-070B-4	Passive probe, 70MHz, 10x, 1x	
GTP-100B-4	Passive probe, 100MHz, 10x, 1x	
Region Dependent	Power cord x1	

Optional Accessories		
Part Number	Description	
GTL-242	USB 2.0 Cable, type A-B	
GTL-110	Test Lead (BNC-BNC)	
GSC-006	Soft carry case	

Display and Panel Overview


Display Overview

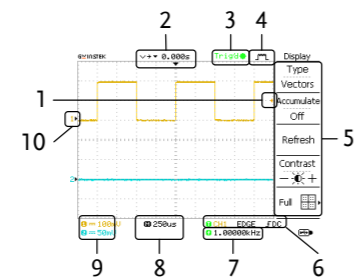

Description

- | | |
|---------------------|----------------------|
| 1. Trigger position | 2. Waveform position |
| 3. Trigger status | 4. Acquisition |
| 5. Menu | 6. Trigger condition |
| 7. Frequency | 8. Horizontal status |
| 9. Vertical status | 10. Waveform marker |


Front Panel

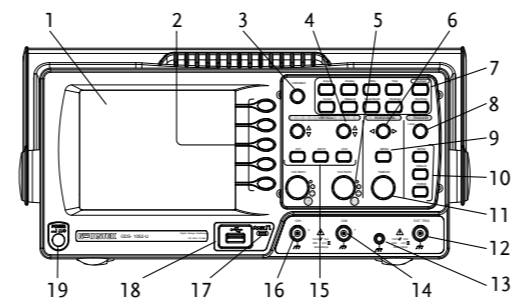

Description

- | | |
|-------------------------------|-----------------------------|
| 1. LCD display | 2. Function keys |
| 3. Variable knob | 4. Vertical position knob |
| 5. VOLTS/DIV knob | 6. Horizontal position knob |
| 7. Menu keys | 8. Trigger level knob |
| 9. Horizontal menu key | 10. Trigger keys |
| 11. TIME/DIV knob | 12. EXT TRIG |
| 13. Ground Terminal | 14. CH2 Terminal |
| 15. CH1/CH2 Math keys | 16. CH1 Terminal |
| 17. Probe Compensation output | 18. USB A type port |
| 19. Power Switch | |

Rear Panel

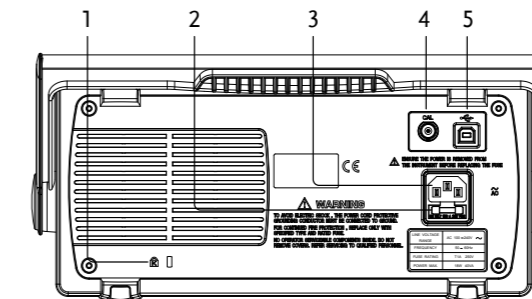


Description

- | | |
|-----------------------|----------------|
| 1. Security lock slot | 2. Fuse socket |
| 3. Power cord socket | 4. CAL output |
| 5. USB B type port | |


Setting up the Oscilloscope

This section describes how to set up the oscilloscope properly including adjusting the handle, connecting a signal, adjusting the scale, and compensating the probe. Before operating the oscilloscope in a new environment, run these steps to make sure the oscilloscope is functionally stable.


- Pull both bases of the handle out slightly.



- Turn to one of the three preset positions.

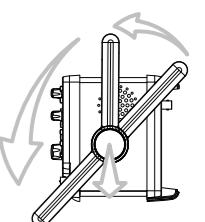


- Connect the power cord.



- Press the power switch. The display will become active in approximately 10 seconds.




- Reset the system by recalling the factory settings. Press the Save/Recall key, then Default Setup.



- Connect the probe between the Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).



- Set the probe attenuation voltage to x10.

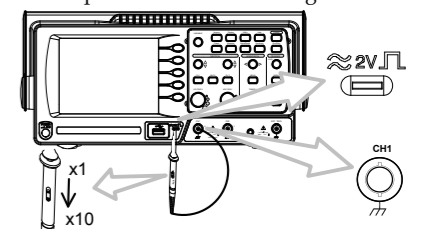



8. Press the Autoset key. A square waveform will appear in the center of the display.



9. Press the Display key, then Type and select the vector waveform type.



10. Turn the adjustment point on the probe to flatten the square waveform edge.

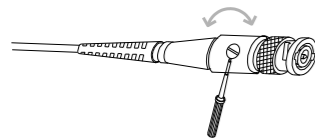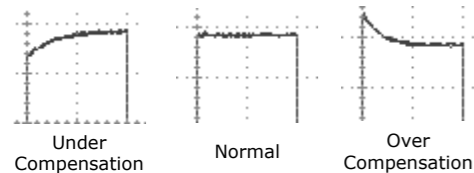

11. Setting up the oscilloscope is complete. You may start to use the oscilloscope.

SPECIFICATIONS

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C~+30°C.

Model Specific Specifications

GDS-1052-U

Bandwidth (-3dB)	DC coupling: DC ~ 50MHz AC coupling: 10Hz ~ 50MHz
Bandwidth Limit	20MHz (-3dB)
Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~50MHz)
External Trigger	~ 50mV (DC~25MHz)
Sensitivity	~ 100mV (25MHz~50MHz)
Rise Time	< 7ns approx.

GDS-1072-U

Bandwidth (-3dB)	DC coupling: DC ~ 70MHz AC coupling: 10Hz ~ 70MHz
Bandwidth Limit	20MHz (-3dB)
Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~70MHz)
External Trigger	~ 50mV (DC~25MHz)
Sensitivity	~ 100mV (25MHz~70MHz)
Rise Time	< 5ns approx.

GDS-1102-U

Bandwidth (-3dB)	DC coupling: DC ~ 100MHz AC coupling: 10Hz ~ 100MHz
Bandwidth Limit	20MHz (-3dB)

Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~100MHz)
External Trigger Sensitivity	~ 50mV (DC~25MHz) ~ 100mV (25MHz~100MHz)
Rise Time	< 3.5ns approx.

Common Specifications

Vertical

Sensitivity	2mV/div~10V/Div (1-2-5 increments)
Accuracy	± (3% x Readout + 0.1div + 1mV)
Bandwidth	See model-specific specifications
Rise Time	See model-specific specifications
Input Coupling	AC, DC, Ground
Input Impedance	1MΩ±2%, ~15pF
Polarity	Normal, Invert
Maximum Input	300V (DC+AC peak), CAT II
Math Operation	+, -, FFT
Offset Range	2mV/div~50mV/div: ±0.4V 100mV/div~500mV/div: ±4V 1V/div~5V/div: ±40V 10V/div: ±300V

Trigger

Sources	CH1, CH2, Line, EXT
Modes	Auto, Normal, Single, TV, Edge, Pulse
Coupling	AC, DC, LF rej, HF rej, Noise rej
Sensitivity	See model-specific specifications

External Trigger

Range	DC: ±15V, AC: ±2V
Sensitivity	See model-specific specifications
Input Impedance	1MΩ±2%, ~15pF
Maximum Input	300V (DC+AC peak), CATII

Horizontal

Range	1ns/div~50s/div, 1-2.5-5 increment Roll: 50ms/div - 50s/div
Modes	Main, Window, Window Zoom, Roll, X-Y
Accuracy	±0.01%
Pre-Trigger	10 div maximum
Post-Trigger	1000 div

X-Y Mode

X-Axis Input	Channel 1
Y-Axis Input	Channel 2
Phase Shift	±3° at 100kHz

Signal Acquisition

Real-Time	250M Sa/s maximum
Equivalent	25G Sa/s maximum
Vertical Resolution	8 bits
Record Length	4k points Maximum
Acquisition	Normal, Peak Detect, Average
Peak Detection	10ns (500ns/div ~ 50s/div)
Average	2, 4, 8, 16, 32, 64, 128, 256

Cursors and Measurement

Voltage	Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot
Time	Freq, Period, Rise Time, Fall Time, + Width, - Width, Duty Cycle
Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors
Auto Counter	Resolution: 6 digits, Accuracy: ±2% Signal source: All available trigger source except the Video trigger

Control Panel Function

Autoset	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
Save/Recall	Up to 15 sets of measurement conditions and waveforms

Display

LCD	5.6 inch, TFT, brightness adjustable
Resolution (dots)	234 (Vertical) x 320 (Horizontal)
Graticule	8 x 10 divisions
Display Contrast	Adjustable

Interface

USB Slave Connector	USB 2.0 full speed (CDC-ACM)
USB Host connector	Image (BMP) and waveform data (CSV)

Probe Compensation Signal

Frequency range	1kHz ~ 100kHz adjustable, 1kHz step
Duty cycle	5% ~ 95% adjustable, 5% step
Amplitude	2Vpp±3%

Power Source

Line Voltage	100V~240V AC, 47Hz~63Hz
Power Consumption	18W, 40VA maximum
Fuse Rating	1A slow, 250V

Operation Environment

Relative humidity	≤ 80%, 40°C or below ≤ 45%, 41°C~50°C
Altitude	< 2000 meters
Temperature	0°C~50°C

Storage Environment

Storage temperature	-10°C~60°C, no condensation
Relative humidity	93% @ 40°C 65% @ 41°C~60°C

Dimensions and Weight

Dimensions	310(W) x 142(H) x 140(D) mm
Weight	Approx. 2.5kg

Probe Specifications


GTP-070B-4 (GDS-1052-U, GDS-1072-U)

Probe Position	Position x10	Position x1
Attenuation Ratio	10:1	1:1
Bandwidth	DC ~ 70MHz	DC~10MHz
Input Resistance	10MΩ when used with 1MΩ input	1MΩ when used with 1MΩ input
Input Capacitance	14.5~17.5pF	85~115pF
Maximum Input Voltage	≤ 600V DC + ACpk	≤ 200V DC + ACpk
Temperature	-10°C ~ 50°C	
Relative Humidity	≤85%	

GTP-100B-4 (GDS-1102-U)

Probe Position	Position x10	Position x1
Attenuation Ratio	10:1	1:1
Bandwidth	DC ~ 100MHz	DC~10MHz
Input Resistance	10MΩ when used with 1MΩ input	1MΩ when used with 1MΩ input
Input Capacitance	14.5~17.5pF	85~115pF
Maximum Input Voltage	≤ 600V DC + ACpk	≤ 200V DC + ACpk
Temperature	-10°C ~ 50°C	
Relative Humidity	≤85%	

Dimensions

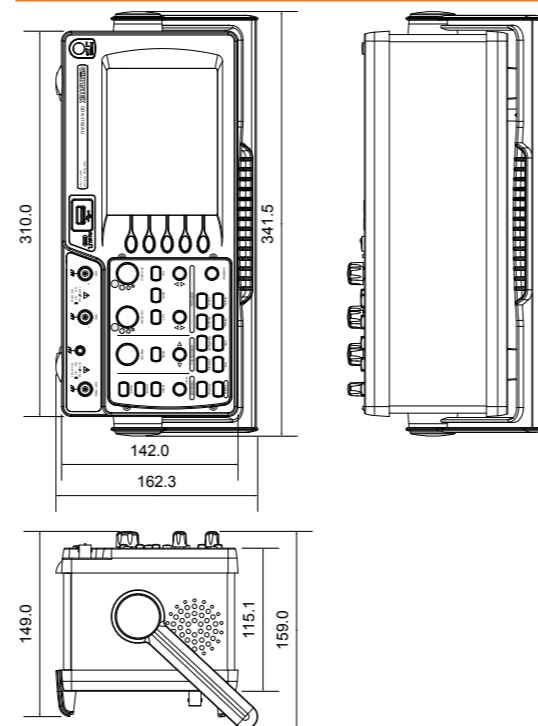

EC Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

declare that the below mentioned product

Type of Product: Digital Storage Oscilloscope

Model Number: GDS-1102U, GDS-1072U, GDS-1052U

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU) and Low Voltage Directive (2014/35/EU).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© EMC	
EN 61326-1:	Electrical equipment for measurement, control and laboratory use -- EMC requirements (2013)
Conducted & Radiated Emission EN 55011: 2009+A1: 2010	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2006
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006+A1:2008+A2:2010	Voltage Dip/ Interruption EN 61000-4-11: 2004
Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements	EN 61010-1: 2010 (Third Edition) EN 61010-2-030: 2010 (First Edition)

GOODWILL INSTRUMENT CO., LTD.

No. 7-1, Jhongsing Road, Tucheng District, New Taipei City 236, Taiwan

Tel: +886-2-2268-0389

Fax: +886-2-2268-0639

Web: <http://www.gwinstek.com>

Email: marketing@goodwill.com.tw

GOODWILL INSTRUMENT (SUZHOU) CO., LTD.

No. 521, Zhujiang Road, Snd, Suzhou Jiangu 215011, China

Tel: +86-512-6661-7177

Fax: +86-512-6661-7277

Web: <http://www.instek.com.cn>

Email: marketing@instek.com.cn

GOODWILL INSTRUMENT EURO B.V.

De Run 5427A, 5504DG Veldhoven, The Netherlands

Tel: +31-(0)40-2557790

Fax: +31-(0)40-2541194

Email: sales@gw-instek.eu